

daXa
TECHNOLOGIES

P5 Pico
Projector



User Guide

Caution!

WARNING: Please use this product as instructed. Misuse may cause injury or death.

DO NOT use while driving

DO NOT expose to water or wet surfaces. Electric shock may occur.

DO NOT expose the projected LED image to your eyes or the eyes of others

DO NOT block or restrict airflow from ventilation holes as this may cause the projector to overheat

Keep the projector, battery, or charger away from any heat sources

Caution for Battery Use

- Do not pierce or puncture the battery with sharp objects
- Do not heat the product or expose it to high temperature.
- Do not wet it or place it in any liquid

Caution for Headphone Use

- Prolonged use at high volume may impair your hearing.
- High volume during walking or driving may cause distractions and result in injury or death

Table of Contents

Chapter 1: P5 at a Glance

- P5 Introduction ••••• 1
- Remote & Keypad ••••• 2
- Accessories ••••• 3

Chapter 2: Getting Started

- Powering On / OFF ••••• 4
- Swappable Battery ••••• 5
- Focus Adjustment / Throw
Distance ••••• 7
- External Input/Outputs ••••• 8
- Connecting to a Computer VGA •• 9
- Connecting to a Computer HDMI •• 11
- Connecting to Composite Video •• 13
- Connecting to HDMI Video •••• 15
- Connecting to Speaker or
Headphones ••••• 17

- Connecting a Micro SD Card •• 18

- Connecting a USB Stick •••• 20

Chapter 3: Menu Screens

- Main menu ••••• 22
- Video Player Menu ••••• 23
- Photo Viewer Menu ••••• 27
- Music Player Menu ••••• 31
- Ebook Viewer Menu ••••• 34

Chapter 4: Setup Menu

- Settings ••••• 35
- Brightness Feature ••••• 39
- Keystone ••••• 41


Chapter 5: Technical Details

- Troubleshooting ••••• 43
- Specifications ••••• 45
- Notes ••••• 46



P5 at a Glance

Chapter 1

 Main Unit Front/Back

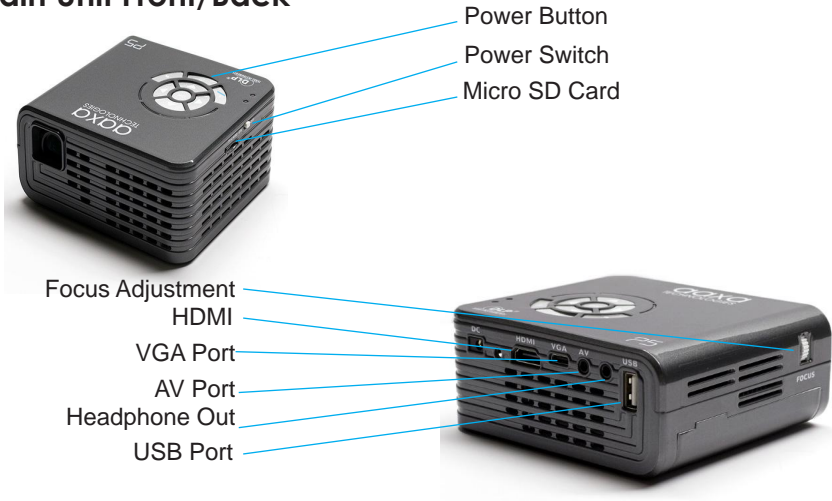

Remote & Keypad

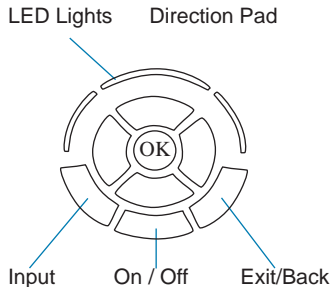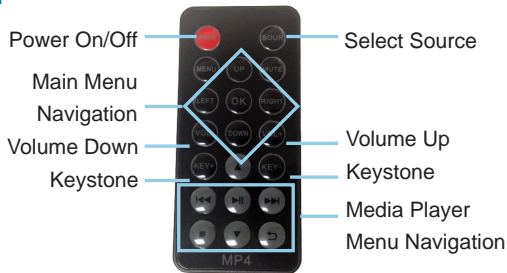  

Remote

Both the keypad and remote can be used to navigate through the menus. The Main Menu Navigation on the remote functions exactly the same as the directional pad on the P5 unit.

NOTICE: Pressing power on the remote will only put the projector in **STANDBY** mode. Toggle the “ON/OFF” switch on the side of the projector to fully turn the projector off.

 
Accessories




Tripod




Remote

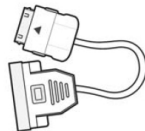

VGA Cable

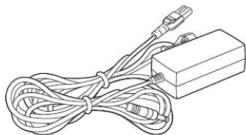 


Power Adapter

 


A/V Cable

*Under various circumstances, the actual accessories may be different from those shown in the pictures above.

Powering ON the projector

1. Connect the power cord to the P5.
2. Connect the other end of the power cord into the wall power source.
3. Toggle the On / Off switch on the side of the projector to the “ON” position --the projector should automatically turn on.
4. If the projector does not automatically turn on with the “Power Switch” toggled to the “ON” position, press the “ON/OFF POWER”  button on the keypad and hold for 2-3 seconds to start the projector

Standby Mode

1. To transition to “STANDBY” mode, press the power button  twice on the keypad or the remote control.
2. The optical engine should power off and the fan should stop spinning. The projector is now in “STANDBY” mode and can be turned on using the remote control.

***Note: Standby mode will still consume a small amount of power.**

Powering OFF the projector

1. To turn off the projector, toggle the “Power Switch” to the “OFF” position. This will fully turn off the projector.

Swappable Lithium Ion Battery

The P5 Features a 135 minute, 22 Watt, Swappable Lithium Ion Battery Pack. This battery pack is designed to be interchangeable with spare battery packs and can be removed and replaced as needed.

This battery pack can only be charged by connecting to the P5 projector while the power supply is plugged in. This battery pack does NOT charge while the projector is in operation. Additional battery packs can be purchased at www.aaxatech.com.



Shown: P5 Lithium Ion Battery

***CAUTION!** Lithium Ion Battery Packs store a lot of energy and can be dangerous. Lithium Ion Battery Packs should always be treated with care and properly disposed. Do not misuse, do not put near a heat source, do not open.

Battery Installation

Removing Battery

1. Locate the battery locking mechanisms underneath the projector
2. Slide the two locking mechanisms outwards
3. Gently slide the Battery Pack out by pushing the battery pack away from the projector



 
Installing the Battery

1. Reverse the removal instructions and ensure the battery is properly connected to the guide clips

Focus Adjustment / Throw Distance


Focus Adjustment

- Spin the focus wheel up or down until the image becomes clear.

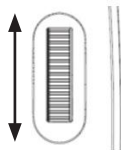

Throw Distance Chart

Throw Distance Units: Inches	Diagonal Size Units: Inches
10	8
20	16
30	23
40	31
50	39
60	47
70	55
80	62

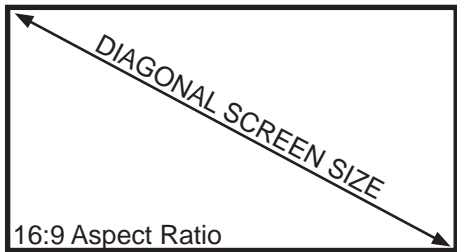 

Throw Ratio 1.47

Projection Angle: 100% Offset

*minimum throw distance: 10 inches

External Inputs and Outputs



Connecting to a Computer via VGA

Step 1:

Connect one end of the VGA Cable to your computer's VGA Adapter.



 
Step 2:

Connect the other end of the VGA Cord to your P5's VGA port.



Step 3:

In the Main Menu Select the "Inputs" icon and then the "VGA" icon.

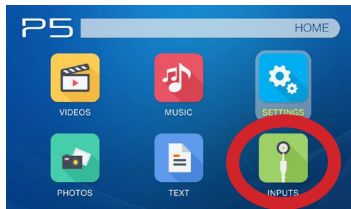

Select "INPUT" icon



Select "VGA" icon

Connecting to a Computer Cont.

Step 4:

Enabling VGA or HDMI output on your Computer – To enable VGA or HDMI output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable VGA or HDMI output. Below are standard instructions for a Windows 7 computer – not all systems are the same.

Step 5:



Press Windows+P to toggle through display settings. Select either “Duplicate” or “Extend” depending on your viewing option.

**NOTE: different operating systems may differ*

Step 6:



1. Right click on computer desktop and select “Screen Resolution”
2. Display Properties window will pop up
3. If a secondary monitor is grayed out, click on it and select “Extend these displays” in the “Multiple Displays” drop down
4. If the image is blurry or the text is not legible, adjust the screen resolution. We recommend 1280x720.

Connecting to a Computer via HDMI

Step 1:

Connect one end of the HDMI Cable to your computer's HDMI Adapter.



 
Step 2:

Connect the other end of the HDMI Cord to your P5's HDMI port.



Step 3:

In the Main Menu Select the "Inputs" icon and then the "HDMI" Icon.

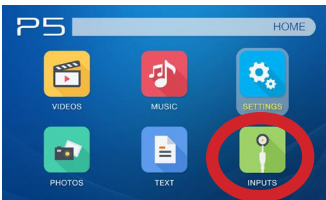

Select "INPUT" icon



Select "HDMI" icon

Connecting to a Computer Cont.

Step 4:

Enabling VGA or HDMI output on your Computer – To enable VGA or HDMI output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable VGA or HDMI output. Below are standard instructions for a Windows 7 computer – not all systems are the same.

Step 5:



Press Windows+P to toggle through display settings. Select either “Duplicate” or “Extend” depending on your viewing option.

**NOTE: different operating systems may differ*

Step 6:



1. Right click on computer desktop and select “Screen Resolution”
2. Display Properties window will pop up
3. If a secondary monitor is grayed out, click on it and select “Extend these displays” in the “Multiple Displays” drop down
4. If the image is blurry or the text is not legible, adjust the screen resolution. We recommend 1280x720.

Connecting to Composite Video

Step 1:

Connect the 3.5mm Composite A/V Cable to the back of the P5.



Step 2:

Connect the composite end of the AV Cable (Red, White, Yellow) to your device.



Connecting to Composite Video Cont.

Step 3:

In the Main Menu



Select "INPUT" icon



Select "RCA"

Step 4:

Turn on your multimedia device.

Connectivity with multimedia devices

The P5 can connect to many media devices including: iPod, iPhone, iPad, VHS players, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

*Some smart phones require video out capabilities to be displayed with the P5. Check with your phone manufacturer.

Connecting to HDMI Video

Step 1:

Connect one end of the HDMI to your P5's HDMI Adapter



Step 2:

Connect the opposite end of the HDMI cable to your device.

 


Note: Apple devices require a specialized HDMI adapter (Sold separately by Apple)


Connecting to HDMI Video Cont.

Step 3:

In the Main Menu

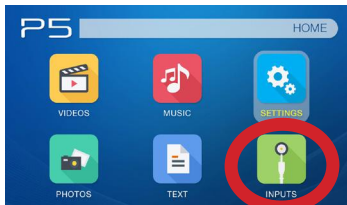

Select "INPUT" icon

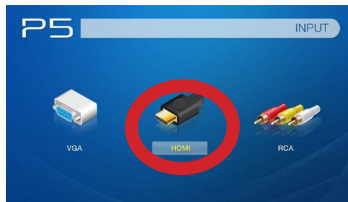 

Select "HDMI" icon

Step 4:

Turn on your multimedia device. If available select 1280x720 or 1920x1080.

Connectivity with multimedia devices

The P5 can connect to many media devices including: iPod, iPhone, iPad, VHS players, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

*Some smart phones require video out capabilities to be displayed with the P5. Check with your phone manufacturer.

Connecting Speakers / Headphones



Step 1: Connect your speakers/headphones to the projector's audio port.

Step 2: Ensure that the projector and/or the headphones are powered on.

Step 3: Place the headphones on and enjoy!



***CAUTION:** Prolonged use of headphones at a high volume may impair hearing.

Micro SD Card

How to insert your Micro SD Card

- Slide in your SD card into the SD card slot on the side of the P5.
(Facing down as shown in picture)
- Gently slide the SD card until it clicks into place.

How to access your Micro SD Card

- Once your SD Card has been inserted, you can navigate to any media content in the main menu.
- After selecting the media content, choose the SD card selection.
- You can now access the data on your SD card through the onboard media player


***Review the Specification section of this manual to read about the supported file formats.**



 Note: Microsoft Office and PDF file formats are not supported.


To view a slideshow convert your slideshow into JPEG pictures first.

Micro SD Card Cont.

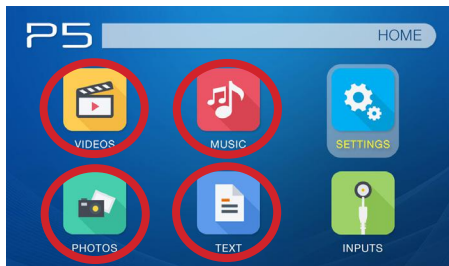

Media Player menu

 - In the main menu select the type of file you wish to play.
- Select the MicroSD icon to access your files.

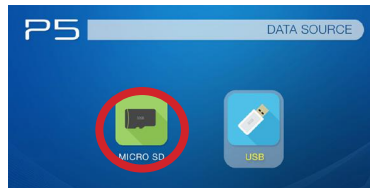

File Menu System

- The P5 will show all folders and files you have on your SD Card in the C: drive.
- Use the directional buttons to navigate to different folders or files.



Return: Brings you back to the main menu

USB Drive

How to insert your USB Drive

- Slide your USB Drive into the USB port. (as shown in picture)
- Gently slide the drive until it cannot go in any further.

How to access your USB Drive

- Insert your USB Drive into the projector.
- Use the navigation pad to choose the USB Drive icon from the main menu to access your files.
- Choose your desired file.


***Review the Specification section of this manual to read about the supported file formats.**



 Note: Microsoft Office and PDF file formats are not supported.


To view a slideshow convert your slideshow into JPEG pictures first.

USB Drive Cont.

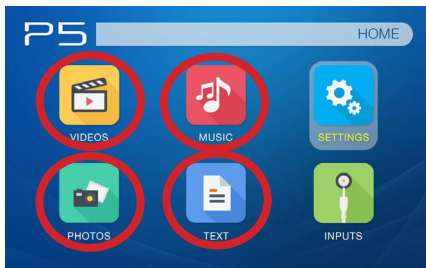

Media Player menu

 - In the main menu select the type of file you wish to play.
- Select the USB Drive icon to access your files.

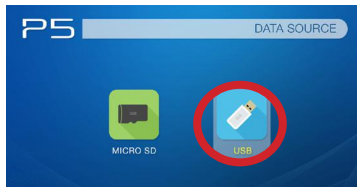

File Menu System

- The P5 will show all folders and files you have on your USB Drive.
- Use the directional buttons to navigate to different folders or files.





Return: Brings you back to the main menu

Menu Screens

Chapter 3

Main Menu

  The P5 features a built in PMP (Portable Media Player) function. This function allows the projector to play videos, pictures, music files, and text directly from your connected devices.

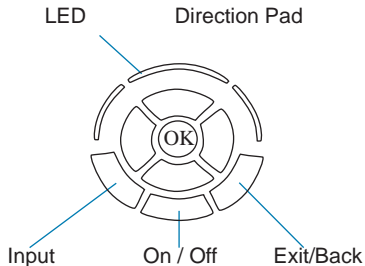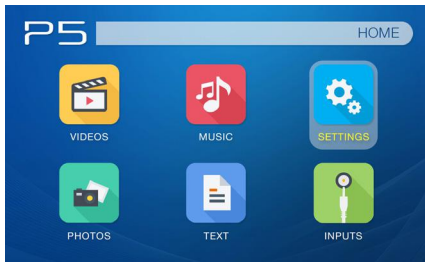

- Press the left and right directional buttons to choose an icon from the main menu.
- To select a menu option press the “OK” button in the middle of the navigation pad.
- To go back to the previous screen, press the “Back” button.
- To Jump back to the submenu press the “Menu” button once.
- To return to the main menu press and hold the “Return” button.

Video Player Menu

Opening a file:

- Select the “Video” icon (Fig. 3.1)
- From the sub menu (Fig. 3.2), select the storage media with the stored files.
- Choose which file you wish to play.

Fig. 3.1

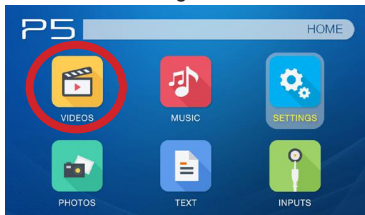 


Fig. 3.2



The P5 will show all folders and files you have on your USB or MicroSD drive. Use the navigation buttons to select folders or files.

Previewing Files:

- Press the directional keys to highlight the item of interest
- Wait 2-3 seconds and a preview of the video will show on the screen

Video Player Menu

While Playing Videos

While playing videos the volume and keystone is adjustable. Further controls are available in the video player submenu - which is accessed through the “ok” button.



Volume Up



Positive Keystone Adjustment



Volume Down



Negative Keystone Adjustment



Enter Video Player Submenu

- To open/hide the video playback menu, use the “OK” and “Back” Buttons on the projector.

Video Player Sub-Menu

Playing Videos

The Video Player Sub-Menu can be accessed by pressing “OK” during video playback. To exit the Video Player Sub-Menu press the “Back” button or wait 5 seconds. To navigate the playback menu use the directional buttons on the navigation pad or remote to highlight the option you wish to choose (Fig 3.3).

- To open/hide the video playback menu, use the “OK” and “Back” Buttons on the projector.


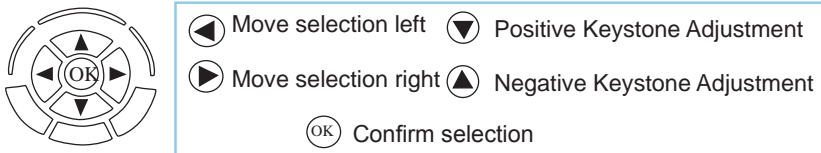 


Fig. 3.3

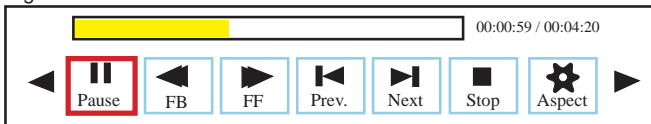 

Video Playback FAQ

How do I loop a video?

1. Choose either USB or SD Card for playback



2. Navigate the folders until you reach the file you wish to play.
3. Highlight the file you want to play, then confirm the selection.
4. Move selection on video player menu to “repeat”, and confirm the selection.
5. The video will now loop after playback is finished.

How do I preview a video?

1. Choose the “video” option from the main menu
2. Navigate using either remote or onboard buttons to the file you wish to preview.
3. Highlight the file. *Do not select the file, just highlight it.
4. Wait for 3-4 seconds.
5. A preview screen will pop up on the lower right for the video.

Photo Menu

Opening A File:

- Select the “Photo” icon (Fig. 3.4)
- From the sub menu (Fig. 3.5), select the storage media with the stored files.
- Choose which file you wish to play.

Fig 3.4

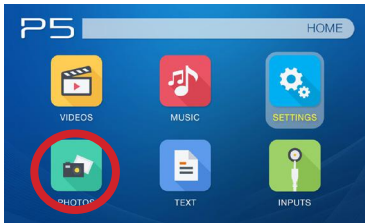 


Fig 3.5



The P5 will show all folders and files you have on your USB or MicroSD drive. Use the navigation buttons to select folders or files.

Previewing Files:


- Press the directional keys to highlight the desired file
- Wait 2-3 seconds and a preview of the picture will show on the screen

Photo Menu

While Viewing Pictures

While viewing pictures the keystone is adjustable. Further controls are available in the Photo Submenu - which is accessed through the “OK” button.



- | | |
|--|--|
|  Previous Picture |  Positive Keystone Adjustment |
|  Next Picture |  Negative Keystone Adjustment |

Enter Photo Player Submenu

- To open/hide the Photo Playback menu, use the “OK” and “Back” Buttons on the projector.

Photo Sub-Menu

Viewing Pictures:

The Photo Sub-Menu can be accessed by pressing “OK” during picture slideshow playback. To exit the Photo Sub-Menu press the “Back” button or wait 5 seconds. To navigate the playback menu use the directional buttons on the navigation pad or remote to highlight the option you wish to choose (Fig 3.6).

- To open/hide the photo playback menu, use the “OK” and “Back” button on the projector.



Fig 3.6

 


Photo Slideshow FAQ

How do I play a slideshow?

1. Choose either USB or SD Card for playback



2. Navigate to the folder that contains the pictures you wish to view in the slideshow
3. Confirm selection of the first picture.
4. Press “play” in the photo menu
5. Slideshow will now play.
6. NOTE: Selecting “repeat” will loop slideshow.

How do I manually control the slideshow?

1. After selecting the photo you wish to be displayed, you can press “play” to start the slideshow (as outlined in the previous FAQ).
2. To manually control the slideshow, you must stop the slideshow with the “stop” button.
3. You may use either the controls on your remote or on top of the projector itself to flip through the pictures in the current playlist.
4. You can change the SlideShow duration in the Settings Menu (Main Menu -> Settings -> Picture

Music Player Menu

Opening A File:

- Select the “Music” icon (Fig. 3.7)
- From the sub menu (Fig. 3.8), select the storage media with the stored files.
- Choose which file you wish to play.

Fig. 3.7



Fig. 3.8



The P5 will show all folders and files you have on your USB or MicroSD drive. Use the navigation buttons to select folders or files.

Previewing Files:

- Press the directional keys to highlight the desired file
- Wait 2-3 seconds and a preview of the audio will show on the screen

Music Player Menu

Listening To Audio:

To adjust the volume use the left and right button on the projector or the volume keys on the remote. To navigate the playback menu, push the “OK” button to open the menu and use the directional buttons on the navigation pad or remote highlight the option you wish to choose (Fig 3.9).

- To open/hide the music playback menu, use the “OK” and “Back” button on the projector.


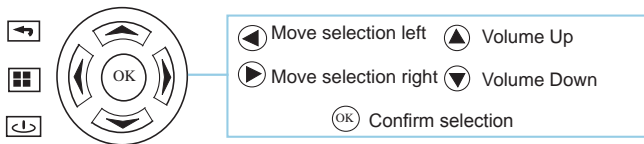 


Fig. 3.9

 

Music Playback FAQ

How do I loop a song?

1. Choose either USB or SD Card for playback



2. Navigate the folders until you reach the file you wish to play.
3. Highlight the file you want to play, then confirm the selection.
4. Move selection on music player menu to “repeat”, and confirm the selection.
5. The song will now loop after playback is finished.

How do I create a song playlist?

1. Insert your media device (either microSD card or USB) into computer.
2. Make a new folder on media device (folder name will be the name of the playlist).
3. Transfer songs from computer to the new folder, name accordingly.
4. Remove media device from computer and insert into projector.
5. Navigate to Audio section, then choose appropriate media device.
6. Navigate to your playlist folder.
7. Start at first song.
8. Playback will follow each successive song on the list.

*To create a special order for the list, add numerical numbering to the beginning of each file.

EBook Viewer Menu

Opening A File:

- Select where the files are located from the main menu.
- Select the “EBook” icon (Fig 3.10)
- Choose which file you wish to play.



Fig. 3.10

The P5 will show all folders and files you have on your USB or MicroSD Drives. Use the navigation buttons to select folders or files.

Viewing Text Files:


The P5 Pico Projector allows you to view text files. Select the file you want to view in the file menu for the particular storage device on which the file is stored. You can press the left and right arrow buttons on the directional pad or remote to flip through the pages you have in the present folder.

Note: Microsoft Office and PDF file formats are not supported. To view a slideshow convert your slideshow into JPEG pictures first.

Setup Menu

Chapter 4

 The Settings Menu can be accessed by selecting "Settings" on the main menu

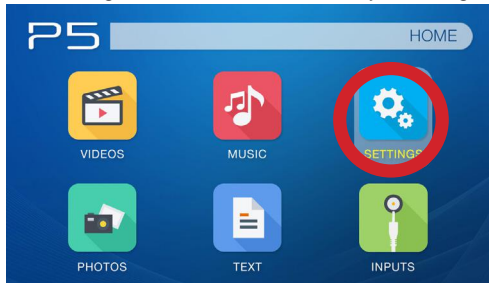

Within the settings menu there are four more submenus that allow you to customize your P5 to the settings you want.

Picture

- Picture Mode
- Color Temperature
- Power Mode
- Slideshow Time
- Projection
- Aspect Ratio

Sound

- Sound Mode
- Balance
- Auto Volume
- Surround Sound

Time

- Clock
- Off Time
- On Time
- Sleep Timer
- Auto Sleep

Option

- OSD Language
- Restore Factory Default
- OSD Duration

Picture Settings

Picture Mode

- Changes the picture mode to different settings depending on your usage.

Color Temperature

- Adjusts the color temperature from hot to cool (red to blue).

Power Mode

- Adjusts the brightness on the projector. (See Page 40)

Slideshow Time

- Changes how long the slideshow stays on a picture.

Projection

- Flips the projected image.

Aspect Ratio

- Changes the aspect ratio of the picture - 4:3, 16:9*



*Caution: Some pictures may be cut off when aspect ratio is set incorrectly

Sound Settings



Sound Mode

- Changes the sound mode depending on what is currently playing.

Balance

- Adjusts the balance of the sound, from left to right.

Auto Volume

- Sets the projector to auto-detect for the volume. The projector will auto detect the appropriate sound mode.

Surround Sound

- Adjusts the surround sound capabilities of the projector.

Time Settings

Clock

- Adjust the time/date.

Off Time

- Sets when to turn off.

On Time

- Sets when to turn on.

Sleep Timer

 
- Sets when projector goes to sleep.

Auto Sleep

- Sets auto sleep function.



Option Settings

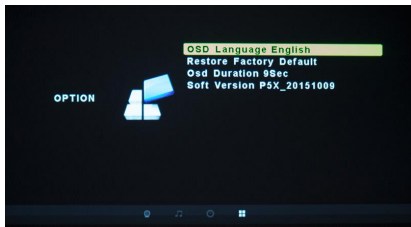

OSD Language

- Changes the language of the device. Options include English, Spanish, Chinese, German, French

Restore Factory Default

- Restores the projector to factory settings.

OSD Duration

- Allows the projector to set a duration for the selected OSD language.

 
Brightness Feature



There are 3 different power modes for the P5: Bright, Standard, and Eco.

- Bright: The brightest mode. Only available while plugged in.
- Standard: A normal mode while running on battery that's slightly less bright and enables a 90 minute battery run time.
- Eco: A battery saving mode that reduces picture brightness. 135 minute battery run time.

Keystone Adjustments

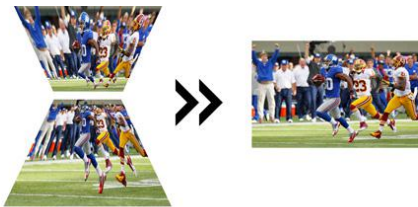

What is Keystoneing?

“Keystoneing” occurs when a projector is aligned non-perpendicularly to a screen, or when the projection screen has an angled surface. The image that results from one of these misalignments will look trapezoidal rather than square.

Digital Keystone Adjustments

By adding a special, selectable algorithm to the scaling, some new projectors are able to alter the image before it reaches the projection lens. The result is a squared image, even at an angle.

Keystone Adjustments FAQ

How to Correct Keystone

- If the image looks trapezoidal with the base larger (as pictured right), press the bottom button on the directional pad on the top of the P5 until the keystone effect corrects and the picture turns into a square projection.



- If the image looks trapezoidal with the top larger (as pictured right), press the top button on the directional pad on the top of the P5 until the keystone effect corrects and the picture turns into a square projection.



Troubleshooting

IMAGE IS BLURRED

Possible Causes	Solution
The Projector is not in focus	Adjust the focus with the focus adjustment dial until the image comes into focus
The Projector is offset from plane / angle of operation	Move the projector so that it is both 180 degrees and on an even plane with the screen.

No Sync, No Signal

1. Be sure to setup the computer to enable a video signal output. On some laptops this is done by pressing and holding Function F5 key. If using the P5 as an external monitor on Windows based systems, this can be done by selecting "extend my desktop to this monitor". The native resolution of the P5 projector is 1280x720. Depending on the video driver different resolutions may need to be selected for proper output.

Technical Details

Troubleshooting

THE PROJECTOR DOES NOT TURN ON

Possible Causes	Solution
There is no power	Check to ensure the power outlet source is good. Check the power adapter to ensure a proper connection with the wall outlet as well as the projector. Confirm that the unit is charged and has enough power
The power button was not held long enough	To power on the projector, the power button needs to be depressed for a full 3 seconds. Try holding the power button until the optical engine turns on

NO PICTURE / FILE NOT SUPPORTED

Possible Causes	Solution
The video source is not properly connected or selected	Check the video source signal to ensure that it is properly connected. Select the current input source by choosing the input desired from the main menu
Incorrect file extension / Video is encoded with incorrect codec	Please refer to "Specifications" page to see which file types and codex are supported. Verify that the file was encoded properly.

Specifications

Brightness:	300 Lumens
Native Resolution:	1280x720
Contrast Ratio:	1000:1
Aspect Ratio:	16:9
Projection Lens:	Manual Focus
Image Size:	10~120 inches
Lamp:	Triple RGB LEDs with Vibrant Color Technology Life 15,000hrs
Video in:	Composite A/V VGA(mini-VGA) HDMI
Audio Output:	1.0 W stereo speakers 3.5 mm audio jack
SD Card:	MicroSD Card Slot (32GB maximum)
USB:	5 Pin USB 2.0 (Full Size) (32GB maximum)
Dimensions:	4.5" x 4.1" x 1.8"
Weight:	0.88 lbs
Supported File Formats:	MP3, WMA, OGG, WAV, AVI, BMP, JPG, TXT



Notes

Please direct all customer service inquiries to:

AAXA Technologies, Inc.
17691 Mitchell N., Unit #B
Irvine, CA 92614
(714) 957-1999
info@aaxatech.com