

Canon

DIGITAL  
**EOS REBEL  
XT**  
**EOS 350**   
DIGITAL



 Exif Print

 DPOF

 PictBridge

 DIRECT  
PRINT

 BUBBLE JET  
DIRECT

  
INSTRUCTION  
MANUAL

Canon

EOS REBEL  
XT

EOS 350  
DIGITAL

INSTRUCTION MANUAL



# Thank you for purchasing a Canon product.

The EOS DIGITAL REBEL XT/EOS 350D DIGITAL is a high-performance, digital AF SLR camera enabling highly versatile and speedy shooting. The camera has an 8-megapixel, high-resolution CMOS sensor, and it is compatible with all Canon EF lenses (including the EF-S lenses). The camera features quick shooting at anytime, shooting modes for all types of photography from fully automatic shooting to manual shooting, direct printing, and more.

Before using the camera, read this Instruction Manual to familiarize yourself with the camera.

To prevent botched pictures and accidents, read the Safety Warnings (p.6,7) and Handling Precautions (p.8,9).

## Test the Camera Before Using

Before using the camera, take a few test shots and check that the images are being properly recorded onto the memory card. If the camera or memory card is faulty and the images cannot be recorded on the card or be read by a personal computer, Canon cannot be held liable for any data loss.

## Copyrights

Copyright laws in your country may prohibit the use of your recorded images of people and certain subjects for anything but private enjoyment. Also be aware that certain public performances, exhibitions, etc., may prohibit photography even for private enjoyment.

- Canon and EOS are trademarks of Canon Inc.
- Adobe is a trademark of Adobe Systems Incorporated.
- ArcSoft, ArcSoftlogo, ArcSoft PhotoStudio are trademarks or registered trademarks of ArcSoft, Inc.
- CompactFlash is a trademark of SanDisk Corporation.
- Windows is a trademark or registered trademark of Microsoft Corporation in the United States and other countries.
- Macintosh is a registered trademark of Apple Corporation in the United States and other countries.
- All other corporate names and trademarks mentioned in this manual are the property of their respective owners.

\* This digital camera supports Design rule for Camera File System 2.0 and Exif 2.21 (also called "Exif Print"). Exif Print is a standard that enhances compatibility between digital cameras and printers. By connecting to an Exif Print-compliant printer, the shooting information is incorporated to optimize the print output.

## Item Check List

Check that all the following items have been included with your camera. If anything is missing, contact your dealer.

- 
- EOS DIGITAL REBEL XT/EOS 350D DIGITAL** / Camera body (with eyecup, body cap and lithium backup battery for the date and time)
  - EF-S18-55mm f/3.5-5.6 II** / Lens (with lens cap and dust cap) \* Lens kit only.
  - Battery Pack NB-2LH** (with protective cover)
  - Battery Charger CB-2LW/CB-2LWE** \*CB-2LW or CB-2LWE is included.
  - Power cord for battery charger** \*For CB-2LWE.
  - Interface Cable IFC-400PCU**
  - Video Cable VC-100**
  - Wide Strap EW-100DBII** (with eyepiece cover)
- 
- EOS DIGITAL Solution Disk** (CD-ROM)
  - ArcSoft PhotoStudio Disk** (CD-ROM)
  - Software Instruction Manual** (CD-ROM, PDF)
- 
- Pocket Guide**  
Quick start guide to shooting.
  - EOS DIGITAL REBEL XT/EOS 350D DIGITAL INSTRUCTION MANUAL** (this booklet)
  - Software Guide**  
Gives an overview of the bundled software and explains the software installation procedure.
  - Battery Pack NB-2LH Instructions**
  - Lens Instructions** \*Lens Kit only.
- 
- Camera warranty card**
  - Lens warranty card** \*Lens Kit only.
- 

\* Be careful not to lose any of the above items.

\* **No CF card (for recording images) is included.** Please purchase it separately. CF cards made by Canon are recommended.

# Contents

## Introduction

Item Check List .....	3
Handling Precautions .....	8
Quick Start Guide .....	10
Nomenclature .....	12
Conventions Used in this Manual .....	18

## 1 Getting Started 19

Recharging the Battery .....	20
Installing and Removing the Battery .....	22
Using a Household Power Outlet .....	24
Mounting and Detaching a Lens .....	25
Installing and Removing the CF Card .....	26
Basic Operation .....	28
Menu Operations .....	31
Setting the Language .....	36
Setting the Date and Time .....	37
Replacing the Date/Time Battery .....	38
Cleaning the CMOS sensor .....	39
Set the power-off time/Auto power off .....	41
CF Card Reminder .....	41
Dioptric Adjustment .....	42
Holding the Camera .....	42

## 2 Fully Automatic Shooting 43

Using Full Auto .....	44
Basic Zone Modes .....	46
Self-timer Operation .....	48
Wireless Remote Control .....	49
Using the Eyepiece Cover .....	50
Silencing the Beeper .....	50

## 3 Image Settings 51

Setting the Image-recording Quality .....	52
Setting the ISO Speed .....	55
Setting the White Balance .....	56
Custom White Balance .....	57
White Balance Correction .....	59
White Balance Auto Bracketing .....	60
Setting the Color Space .....	62
Selecting the Processing Parameters .....	63
Setting the Processing Parameters .....	64
File Numbering Methods .....	67
Checking Camera Settings .....	68

## 4 Setting the AF, Metering, and Drive Modes 69

Selecting the AF Mode .....	70
-----------------------------	----

Selecting the AF Point.....	73	
Using Focus Lock.....	75	
When Autofocus Fails (Manual Focusing).....	76	
Selecting the Metering Mode.....	77	
Selecting the Drive Mode.....	78	1
<b>5 Advanced Operations</b>	<b>79</b>	
Program AE.....	80	
Shutter-Priority AE.....	82	2
Aperture-Priority AE.....	84	
Depth of Field Preview.....	85	
Manual Exposure.....	86	
Automatic Depth-of-Field AE.....	88	3
Setting Exposure Compensation.....	89	
Auto Exposure Bracketing (AEB).....	90	
AE Lock.....	92	
Bulb Exposures.....	93	4
Mirror Lockup.....	94	
<b>6 Flash Photography</b>	<b>95</b>	
Using the Built-in Flash.....	96	5
Using EOS-Dedicated, External Speedlites.....	101	
Using Non-Canon Flash Units.....	102	
LCD Panel Illumination.....	102	6
<b>7 Image Playback</b>	<b>103</b>	
Setting the Image Review Time.....	104	
Auto Image Rotation.....	105	
Setting the LCD Brightness.....	106	7
Image Playback.....	107	
Single image display, Index Display, Magnified View.....	107 - 110	
Jump Display, Auto Play, Rotating an Image.....	111 - 113	
Displaying the Images on TV.....	114	8
Protecting Images.....	115	
Erasing Images.....	116	
Formatting the CF Card.....	118	9
<b>8 Direct Printing from the Camera</b>	<b>119</b>	
Preparing to Print.....	121	
PictBridge / CP Direct / Bubble Jet Direct.....	124 - 133	
Easy Printing.....	136	10
<b>9 DPOF: Digital Print Order Format</b>	<b>137</b>	
<b>10 Customizing the Camera</b>	<b>145</b>	11
<b>11 Reference</b>	<b>151</b>	

## Safety Warnings

Follow these safeguards and use the equipment properly to prevent injury, death, and material damage.

### Preventing Serious Injury or Death

- To prevent fire, excessive heat, chemical leakage, and explosions, follow the safeguards below:
  - Do not use any batteries, power sources, and accessories not specified in this booklet. Do not use any home-made or modified batteries.
  - Do not short-circuit, disassemble, or modify the battery pack or back-up battery. Do not apply heat or apply solder to the battery pack or back-up battery. Do not expose the battery pack or back-up battery to fire or water. And do not subject the battery pack or back-up battery to strong physical shock.
  - Do not install the battery pack or back-up battery in reversed polarity (+ -). Do not mix new and old or different types of batteries.
  - Do not recharge the battery pack outside the allowable ambient temperature range of 0°C - 40°C (32°F - 104°F). Also, do not exceed the recharging time.
  - Do not insert any foreign metallic objects into the electrical contacts of the camera, accessories, connecting cables, etc.
- Keep the back-up battery away from children. If a child swallows the battery, consult a physician immediately. (Battery chemicals may harm the stomach and intestines.)
- When disposing of a battery pack or back-up battery, insulate the electrical contacts with tape to prevent contact with other metallic objects or batteries. This is to prevent fire or an explosion.
- If excessive heat, smoke, or fumes are emitted during battery pack recharging, immediately unplug the battery charger from the power outlet to stop the recharging and prevent a fire.
- If the battery pack or back-up battery leaks, changes color, deforms, or emits smoke or fumes, remove it immediately. Be careful not to get burned in the process.
- Prevent any battery leakage from contacting your eyes, skin, and clothing. It can cause blindness or skin problems. If the battery leakage contacts your eyes, skin, or clothing, flush the affected area with lots of clean water without rubbing it. See a physician immediately.
- During the recharging, keep the equipment away from the reach of children. The cord can accidentally choke the child or give an electrical shock.
- Do not leave any cords near a heat source. It can deform the cord or melt the insulation and cause a fire or electrical shock.
- Do not fire the flash at someone driving a car. It may cause an accident.
- Do not fire the flash near a person's eyes. It may impair the person's vision. When using flash to photograph an infant, keep at least 1 meter away.
- Before storing the camera or accessory when not in use, remove the battery pack and disconnect the power plug. This is to prevent electrical shock, heat generation, and fire.
- Do not use the equipment where there is flammable gas. This is to prevent an explosion or fire.

- If you drop the equipment and the casing breaks open to expose the internal parts, do not touch the internal parts due to the possibility of electrical shock.
- Do not disassemble or modify the equipment. High-voltage internal parts can cause electrical shock.
- Do not look at the sun or an extremely bright light source through the camera or lens. Doing so may damage your vision.
- Keep the camera from the reach of small children. The neck strap can accidentally choke the child.
- Do not store the equipment in dusty or humid places. This is to prevent fire and electrical shock.
- Before using the camera inside an airplane or hospital, check if it is allowed. Electromagnetic waves emitted by the camera may interfere with the plane's instruments or the hospital's medical equipment.
- To prevent fire and electrical shock, follow the safeguards below:
  - Always insert the power plug all the way in.
  - Do not handle a power plug with wet hands.
  - When unplugging a power plug, grasp and pull the plug instead of the cord.
  - Do not scratch, cut, or excessively bend the cord or put a heavy object on the cord. Also do not twist or tie the cords.
  - Do not connect too many power plugs to the same power outlet.
  - Do not use a cord whose insulation has been damaged.
- Occasionally unplug the power plug and use a dry cloth to clean off the dust around the power outlet. If the surrounding is dusty, humid, or oily, the dust on the power outlet may become moist and short-circuit the outlet to cause a fire.

## Preventing Injury or Equipment Damage

- Do not leave equipment inside a car under the hot sun or near a heat source. The equipment may become hot and cause skin burns.
- Do not carry the camera around while it is attached to a tripod. Doing so may cause injury. Also make sure the tripod is sturdy enough to support the camera and lens.
- Do not leave a lens or lens-attached camera under the sun without the lens cap attached. Otherwise, the lens may concentrate the sun's rays and cause a fire.
- Do not cover or wrap the battery-recharging apparatus with a cloth. Doing so may trap heat within and cause the casing to deform or catch fire.
- If you drop the camera in water or if water or metal fragments enter inside the camera, promptly remove the battery pack and back-up battery. This is to prevent fire and electrical shock.
- Do not use or leave the battery pack or back-up battery in a hot environment. Doing so may cause battery leakage or a shorter battery life. The battery pack or back-up battery can also become hot and cause skin burns.
- Do not use paint thinner, benzene, or other organic solvents to clean the equipment. Doing so may cause fire or a health hazard.

**If the product does not work properly or requires repair, contact your dealer or your nearest Canon Service Center.**

# Handling Precautions

## Camera Care

- This camera is a precision instrument. Do not drop it or subject it to physical shock.
- The camera is not waterproof and cannot be used underwater. If you accidentally drop the camera into water, promptly consult your nearest Canon Service Center. Wipe off any water droplets with a dry cloth. If the camera has been exposed to salty air, wipe with a well-wrung wet cloth.
- Never leave the camera near anything having a strong magnetic field such as a magnet or electric motor. Also avoid using or leaving the camera near anything emitting strong radio waves such as a large antenna. Strong magnetic fields can cause camera misoperation or destroy image data.
- Do not leave the camera in excessive heat such as in a car in direct sunlight. High temperatures can cause the camera to malfunction.
- The camera contains precision electronic circuitry. Never attempt to disassemble the camera yourself.
- Use a blower to blow away dust on the lens, viewfinder, mirror, and focusing screen. Do not use cleaners that contain organic solvents to clean the camera body or lens. For stubborn dirt, take the camera to a Canon Service Center.
- Do not touch the camera's electrical contacts with your fingers. This is to prevent the contacts from corroding. Corroded contacts can cause camera misoperation.
- If the camera is suddenly brought in from the cold into a warm room, condensation may form on the camera and internal parts. To prevent condensation, first put the camera in a sealed plastic bag and let it adjust to the warmer temperature before taking it out of the bag.
- If condensation forms on the camera, do not use the camera. This is to avoid damaging the camera. If this occurs, remove the lens, CF card and battery from the camera, then wait until the condensation has evaporated before using the camera.
- If the camera will not be used for an extended period, remove the battery and store the camera in a cool, dry, well-ventilated location. Even while the camera is in storage, press the shutter button a few times once in a while to check that the camera is still working.
- Avoid storing the camera where there are corrosive chemicals such as in a darkroom or chemical lab.
- If the camera has not been used for an extended period, test all its functions before using the camera. If you have not used the camera for some time or if there is an important shoot coming up, have the camera checked by your Canon dealer or check the camera yourself and make sure it is working properly.



## LCD Panel and LCD Monitor

- Although the LCD monitor is manufactured with very high precision technology with over 99.99% active pixels, there might be a few dead pixels among the remaining 0.01% or less pixels. Dead pixels displaying only black or red, etc., are not a malfunction. They do not affect the images recorded.
- At low temperatures, the liquid-crystal display response may become slower. And at high temperatures, the display may blacken. In either case, the display will return to normal at room temperature.

## CF Card

- The CF card is a precision device. Do not drop the memory card or subject it to vibration. Doing so could damage the images recorded on them.
- Do not store or use a memory card near anything having a strong magnetic field such as a TV set, speakers, or magnet. Also avoid places prone to having static electricity. Otherwise, the images recorded on the CF card might be lost.
- Do not leave memory cards in direct sunlight or near a heat source. Doing so can warp the cards and make them unusable.
- Do not spill any liquid onto the CF card.
- Always store your CF cards in a case to protect the data stored on them.
- Non-Canon CF cards may not be able to record and playback images. Using Canon CF cards is recommended.
- Do not bend the card or subject it to any excessive force or physical shock.
- Do not store CF cards in hot, dusty, or humid locations.


## Lens Electrical Contacts

After detaching the lens from the camera, attach the lens caps or put down the lens with the rear end up to avoid scratching the lens surface and electrical contacts.



# Quick Start Guide


1

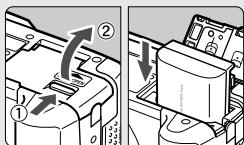

**Insert the battery.** (p.22)

To recharge the battery, see page 20.


2

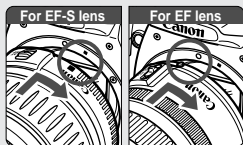

**Attach the lens.** (p.25)


When attaching an EF-S lens, align it with the white dot on the camera. For other lenses, align it with the red dot.

3

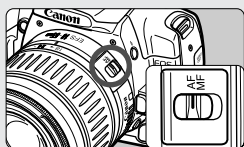

**Set the lens focus mode switch to <AF>.** (p.25)


4

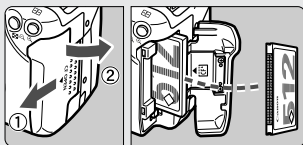

**Open the CF card slot cover and insert a CF card.** (p.26)


Face the label side toward you and insert the end with the small holes into the camera.

5

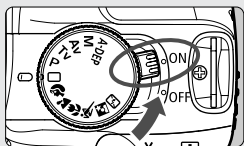

**Set the power switch to <ON>.** (p.28)

6

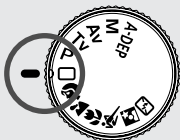

### Set the Mode Dial to (Full Auto). (p.44)

All the necessary camera settings will be set automatically.


7



### Focus the subject. (p.28)

Aim the AF point over the subject and press the shutter button halfway to autofocus.

8

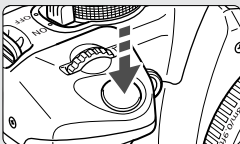

### Take the picture. (p.28)

Press the shutter button fully to take the picture.

9




### Review the picture on the LCD monitor. (p.104)


The captured image will be displayed for about 2 sec. on the LCD monitor.

- To view images captured so far, see “Image Playback” (p.107).
- To delete an image, see “Erasing Images” (p.116).


# Nomenclature

For detailed information, reference page numbers are provided in parentheses (p.\*\*).

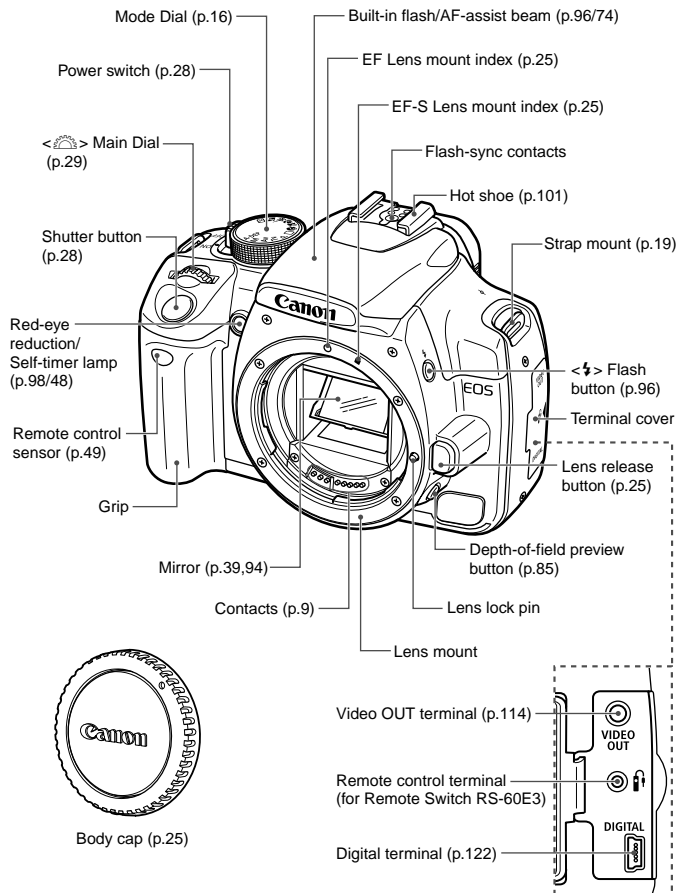

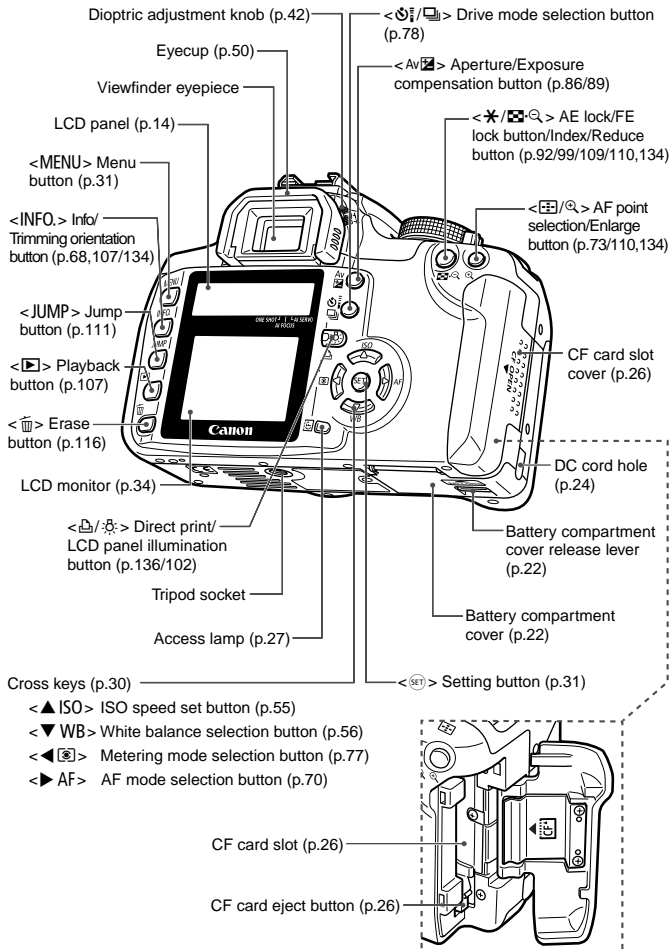


## LCD Panel

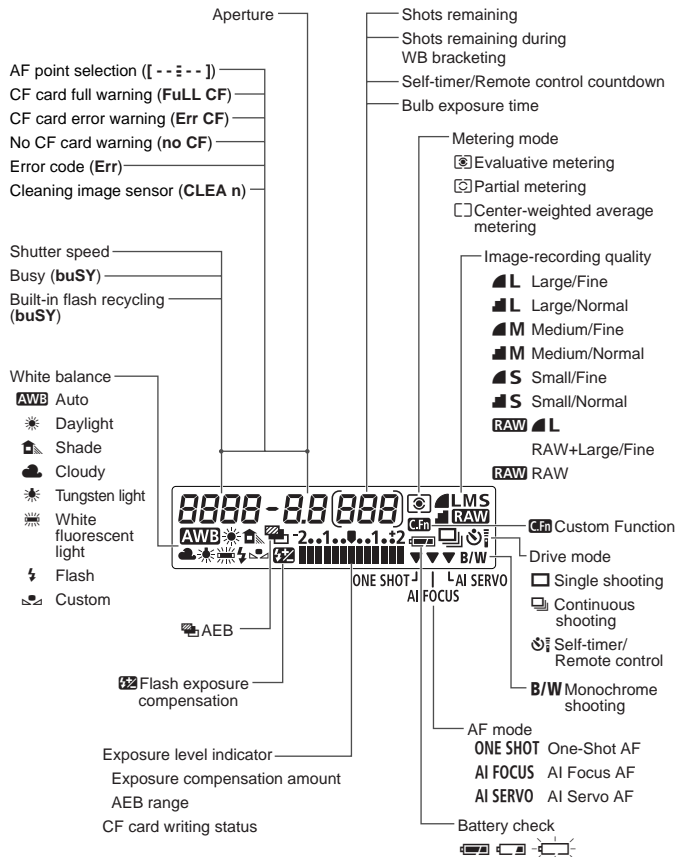

The actual display will show only the applicable items.


## Viewfinder Information

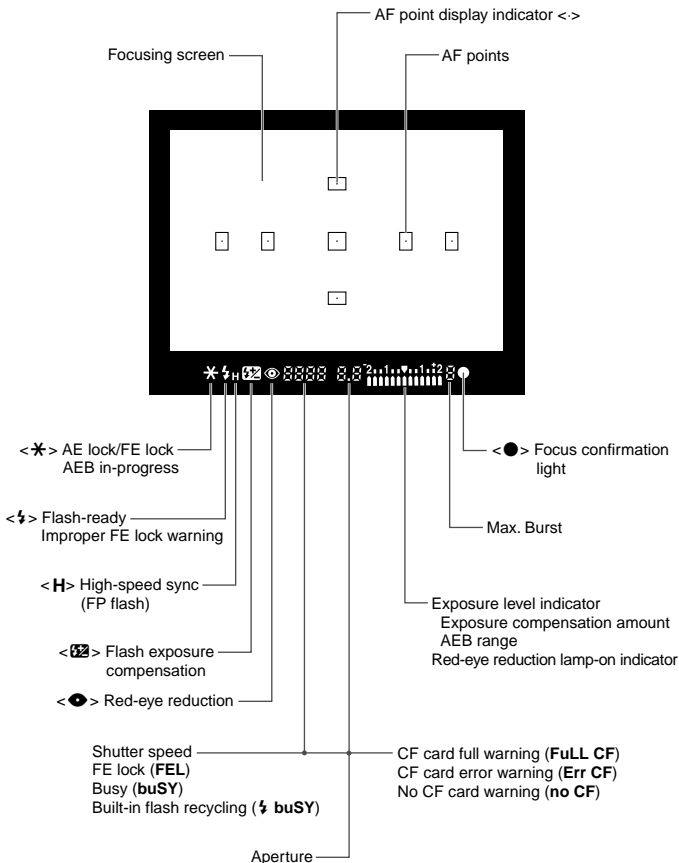

The actual display will show only the applicable items.

## Mode Dial

The Mode Dial is divided into two function zones.

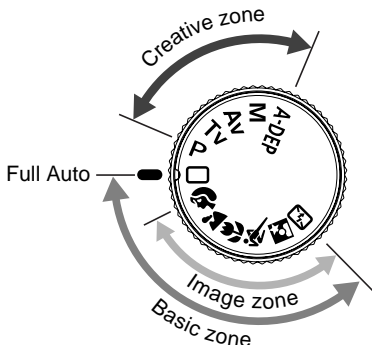

### ① Basic Zone

All you do is press the shutter button.

 : **Full Auto** (p.44)  
For fully automatic shooting.

### Image Zone

Fully automatic shooting for specific subjects.

-  : Portrait (p.46)
-  : Landscape (p.46)
-  : Close-up (p.46)
-  : Sports (p.47)
-  : Night Portrait (p.47)
-  : Flash Off (p.47)

### ② Creative Zone


Set the camera as you wish.

- P** : Program AE (p.80)
- Tv** : Shutter-priority AE (p.82)
- Av** : Aperture-priority AE (p.84)
- M** : Manual exposure (p.86)
- A-DEP** : Automatic Depth-of-field AE (p.88)




**Battery Charger CB-2LW**


This is a battery pack charger. (p.20)

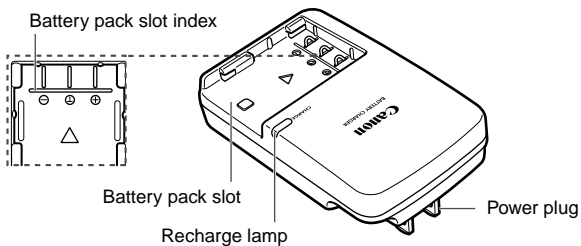**Battery Charger CB-2LWE**

 This is a battery pack charger. (p.20)

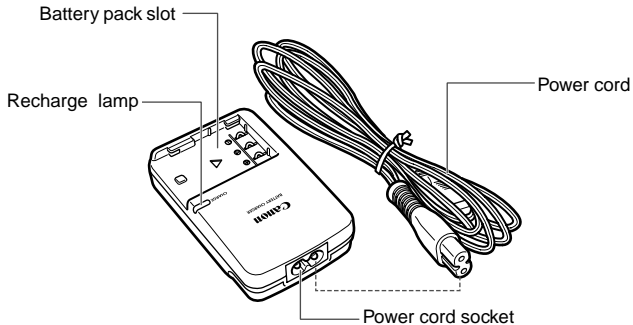
 


 

 

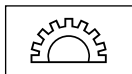
# Conventions Used in this Manual






- The  icon indicates the Main Dial.



- The , , and  icons indicate the cross keys. The , , , and  icons indicate the up, down, left, and right cross keys respectively.




- In the text, the  icon indicates the SET button. It is used for menu functions and Custom Functions.

- In this manual, the icons and markings indicating the camera's buttons, dials, and settings correspond to the icons and markings on the camera.
- For detailed information, reference page numbers are provided in parentheses (p.\*\*).
- The asterisk ★ on the right of the page title indicates that the respective feature is available only in Creative Zone modes (**P**, **Tv**, **Av**, **M**, **A-DEP**).
- All operations explained in this Instruction Manual assume that the power switch is already set to <ON>.
- The Canon EF-S18-55mm f/3.5-5.6 II lens is used as the sample lens in this Instruction Manual.
- The procedures assume that the menu settings and Custom Functions are set to the default settings.
- The **MENU** icon indicates that the setting can be changed with the menu.
- (4), (6) or (16) indicates that the respective function remains active for 4 sec., 6 sec., or 16 sec. respectively after you let go of the button.
- This manual uses the following alert symbols:
  -  :The Caution symbol indicates a warning to prevent shooting problems.
  -  :The Note symbol gives supplemental information.

# 1

## Getting Started

This chapter explains a few preliminary steps and basic camera operations.

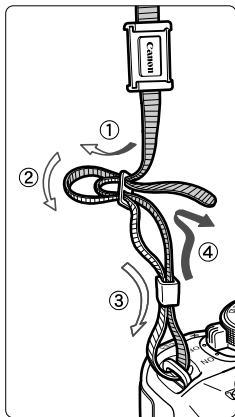

### Attaching the Strap

Pass the end of the strap through the camera's strap mount from the bottom. Then pass it through the strap's buckle as shown in the illustration. Pull the strap to take up any slack and make sure the strap will not loosen from the buckle.


- The eyepiece cover is also attached to the strap. (p.50)




Eyepiece cover

# Recharging the Battery

For details on the battery, refer to the instructions for Battery Pack NB-2LH.

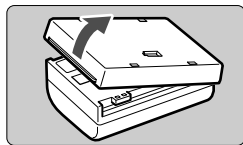

## 1 Remove the cover.

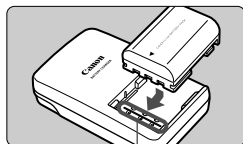


Battery pack slot index

## 2 Attach the battery.

- Align the battery's front edge with the battery charger's index line. While pressing down the battery, slide it in the direction of the arrow.
- To detach the battery, follow the above procedure in reverse.


### CB-2LW

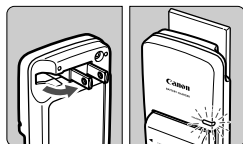

## 3 For CB-2LW Flip out the prongs and recharge the battery.

- As shown by the arrow, flip out the battery charger's prongs.
- Insert the prongs into a power outlet.

### CB-2LWE

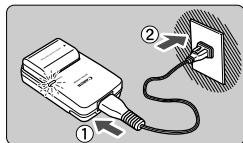

## For CB-2LWE Connect the power cord and recharge the battery.

 
- Connect the power cord to the charger and insert the plug into the power outlet.
- ▶ Recharging starts automatically and the recharge lamp turns orange.
- ▶ When the battery is fully recharged, the recharge lamp will turn green.
- **It takes about 90 minutes to fully recharge a completely exhausted battery.**



- Do not use the battery charger to recharge any battery other than Battery Pack NB-2LH.
- To prevent the battery performance from degrading, avoid recharging the battery pack for 24 consecutive hours or longer.
- If the battery is left in the camera for a prolonged period without the camera being used, a low electrical current may be discharged excessively and the battery's service life may be affected. When not using the camera, remove the battery and attach the protective cover to prevent shorting. Before using the camera again, be sure to recharge the battery.




- You can attach the protective cover to the battery and set the direction of the cover marking to indicate whether the battery has been recharged or not.
- After recharging the battery, detach it and unplug the power cord from the power outlet.
- The time required to recharge the battery depends on the ambient temperature and the battery's recharge level.
- The battery pack can operate in temperatures from 0°C to 40°C (32°F to 104°F). However, for full operating performance, using it between 10°C (50°F) and 30°C (86°F) is recommended. In cold locations such as ski areas, battery performance temporarily decreases and the effective time may be shorter.
- If effective time is sharply reduced even after normal recharging, the battery pack may have reached its service life. Replace it with a new battery.

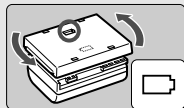

# Installing and Removing the Battery


## Installing the Battery

Load a fully-charged Battery Pack NB-2LH into the camera.

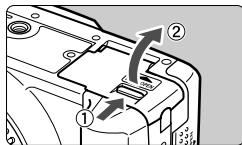


### 1 Open the battery compartment cover.

- Slide the lever as shown by the arrow and open the cover.

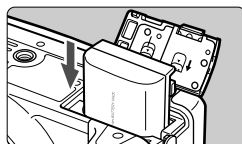

### 2 Insert the battery.

- Point the battery contacts downward.
- Insert the battery until it locks into place.

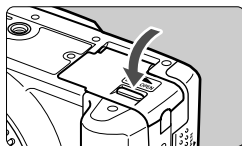


### 3 Close the cover.

- Press the cover until it snaps shut.


## Checking the Battery Level

 When the power switch is set to <ON> (p.28), the battery level will be indicated in one of three levels:

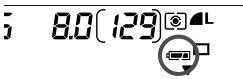

 : Battery level OK.

  : Battery level is low.

 : Battery must be recharged.

**Battery Life**


[Number of shots]

Temperature	Shooting Conditions	
	No Flash	50% Flash Use
At 20°C / 68°F	Approx. 600	Approx. 400
At 0°C / 32°F	Approx. 450	Approx. 350


- The figures above are based on a fully-charged NB-2LH and CIPA (Camera & Imaging Products Association) testing criteria.



- The actual number of shots may be fewer than indicated above depending on the shooting conditions.
- The number of possible shots will decrease with more frequent use of the LCD monitor.
- Pressing the shutter button halfway for long periods or operating only the autofocus can also reduce the number of possible shots.
- The lens operation is powered by the camera's battery. Using certain lenses can reduce the number of possible shots.

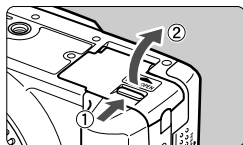**Removing the Battery****1 Open the battery compartment cover.**


- Slide the lever as shown by the arrow and open the cover.

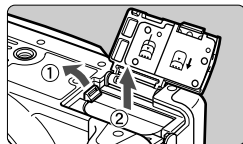**2 Remove the battery.**

- Slide the battery lock lever as shown by the arrow and remove the battery.
- To prevent shorting, be sure to attach the protective cover to the battery.


# Using a Household Power Outlet

With AC Adapter Kit ACK-DC20 (optional), you can connect the camera to a household power outlet and not worry about the battery level.

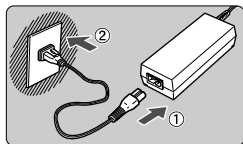


## 1 Connect the power cord.

- Connect the power cord to the compact power adapter.
- Insert the plug into a power outlet.
- When you are finished, disconnect the plug from the power outlet.

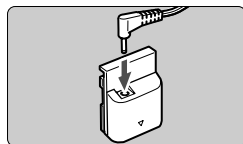


## 2 Connect the DC Coupler DR-700.

- Insert the compact power adapter's DC plug to the DC Coupler DR-700's socket.
- DC Coupler DR-20 is cannot be used with this camera.

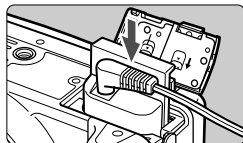

## 3 Insert the DC Coupler.

- Open the cover and insert the DC Coupler until it locks in place.

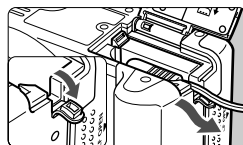

## 4 Push in the DC cord.


- Flip down the DC cord notch cover and push the cord into the notch.
- Close the cover.

**!** Do not connect or disconnect the power cord while the camera's power switch is set to <ON>.



# Mounting and Detaching a Lens


## Mounting a Lens

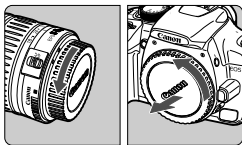

### 1 Remove the caps.

- Remove the rear lens cap and the body cap by turning them as shown by the arrow.


### EF-S lens mount index

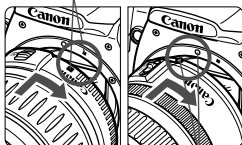

### 2 Attach the lens.

- Align the EF-S lens with the camera's white EF-S lens mount index and turn the lens as shown by the arrow until it clicks in place.
- When attaching a lens other than an EF-S lens, align the lens with the red EF lens index mark.

### EF lens mount index

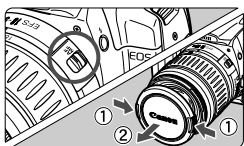


### 3 On the lens, set the focus mode switch to <AF>.

- If it is set to <MF>, autofocus will not be possible.


### 4 Remove the front lens cap.

## Detaching the Lens

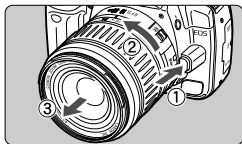

**While pressing the lens release button, turn the lens as shown by the arrow.**


- Turn the lens until it stops, then detach it.

 When attaching or detaching the lens, take care to prevent dust from entering the camera through the lens mount.

# Installing and Removing the CF Card


The captured image will be recorded onto the CF card (optional). Although the thickness is different, a Type I or Type II CF card can be inserted into the camera. The camera is also compatible with Microdrive and CF cards with 2 GB or higher capacity.

## Installing the Card

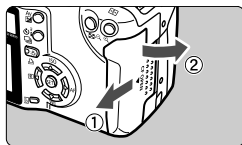

### 1 Open the cover.


- Slide the cover as shown by the arrow to open it.

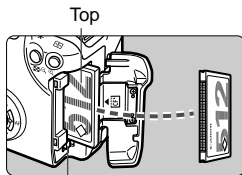

### 2 Insert the CF card.

- Using Canon CF cards is recommended.
  - **If the CF card is inserted in the wrong way, it may damage the camera. As shown in the illustration, face the label side toward you and insert the end with the small holes into the camera.**
- ▶ The CF card eject button pops up.


Top  
CF card  
eject button

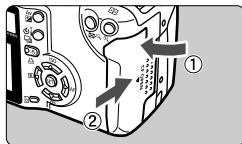


### 3 Close the cover.


- Close the cover and slide it in the direction shown by the arrow until it snaps shut.
- When you set the Power switch to <ON>, the number of remaining shots will be displayed on the LCD panel.

 Shots remaining

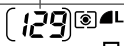

 The shots remaining depends on the remaining capacity of the CF card and the ISO speed setting.


## Removing the Card

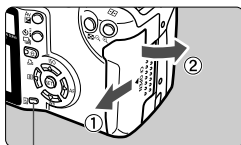

Access lamp

### 1 Open the cover.

- Set the Power switch to <OFF>.
- Check that the “buSY” message is not displayed on the LCD panel.
- Make sure the access lamp is off, then open the cover.

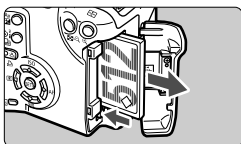

### 2 Remove the CF card.

- Press the Eject button.
- ▶ The CF card will be ejected.
- Close the cover.



- A blinking access lamp indicates that data is being transferred or read, written, or erased on the CF card. Never do the following while the access lamp is lit or blinking. Such actions may destroy the image data. It may also damage the CF card or camera.
  - Shaking or banging the camera around.
  - Opening the CF card slot cover.
  - Removing the battery.
- If you use a CF card already containing recorded images, the images recorded thereafter by the camera might be appended with a file number that continues on from the images already recorded on the CF card. If you want to start the file numbering from 0001, set [Auto reset] for the file numbering (p.67), then use a newly formatted CF card.
- If “Err CF” (Error CF) is displayed on the LCD panel, see page 118.
- If you use a low-capacity CF card, it might not be able to record large images.
- Compared to CF cards, Microdrive cards are more vulnerable to vibration and physical shock. If you use a Microdrive, be careful not to subject the camera to vibration or physical shock especially while recording or displaying images.



On the menu, if you set the [↑↑1 Shoot w/o card] to [Off], it will prevent you from shooting without a CF card. (p.41)

# Basic Operation

## Power Switch

The camera can operate only after the power switch is turned on.



<ON> : The camera operates.


<OFF>: The camera is turned off and does not operate. Set to this position when not using the camera.



- To save battery power, the camera turns off automatically after 1 minute of non-operation. To turn on the camera again, just press the shutter button.
- You can change the auto power-off time with the menu's [**1** **Auto power off**] setting. (p.41)
- If you turn the power switch to <OFF> while the captured images are being recorded onto the CF card, the remaining number of captured images to be recorded will be indicated on the top LCD panel with the number of <■> symbols displayed. When all the images are finished recording, the display will turn off and the camera will turn off.

## Shutter Button


The shutter button has two steps. You can press the shutter button halfway. Then you can further press the shutter button completely.

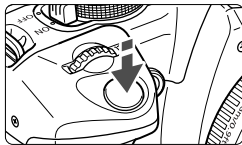

### Pressing halfway

This activates autofocus (AF) and automatic exposure (AE) that sets the shutter speed and aperture.

The exposure setting (shutter speed and aperture) is displayed on the top LCD panel and in the viewfinder. (ⓘ4)

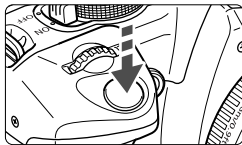


### Pressing completely


This releases the shutter and takes the picture.




- If you press the shutter button halfway and (ⓘ4) elapse, you must press it halfway again and wait a moment before pressing it completely to take a picture. If you press the shutter button completely without pressing it halfway first or if you press the shutter button halfway and then press it completely immediately, the camera will take a moment before it takes the picture.
- No matter what state the camera is in (image playback, menu operation, image recording, etc.), you can return to shooting instantly just by pressing the shutter button halfway (except during direct printing).
- Camera movement during the moment of exposure is called camera shake. To prevent camera shake, note the advice below. Also see "Holding the Camera" (p.42).
  - Hold the camera steady.
  - Put your finger tip on the shutter button, hold the camera with your right hand, then press the shutter button gently.


## Operating the < > Dial


The <  > dial is mainly used for shooting-related settings.

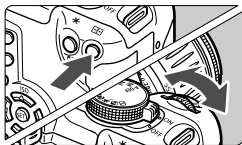


### (1) After pressing a button, turn the < > dial.

When you press a button, its function remains on for 6 seconds (ⓘ6). While turning the <  > dial, look at the setting in the viewfinder or on the top LCD panel. When the timer ends or if you press the shutter button down halfway, the camera will be ready to shoot.

- Use it to select the AF point.
- After pressing the <MENU> button, turn the <  > dial to select the desired menu item.

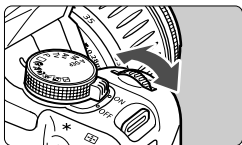


### (2) Turn the < > dial only.

 While looking at the LCD panel or viewfinder, turn the <  > dial to set the desired setting.

- In this way, you can set the shutter speed, aperture, etc.

## Operating the <⬆> Cross Keys

The <⬆> key is mainly used for shooting-related settings and selecting LCD monitor menu items.

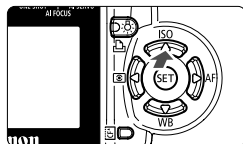


### (1) Press the <⬆> key independently.

With the camera ready to shoot, you can press any <⬆> key to quickly use the key's respective menu function.

- <▲ ISO> ISO speed
- <▼ WB> White balance
- <◀ [METERING] > Metering mode
- <▶ AF> AF mode

Press the <⬆> key to select the desired setting, then press <⊙ SET >.

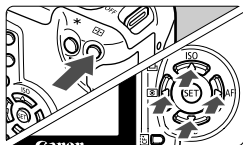

### (2) Press a button, then press the <⬆> key.



When the camera is ready to shoot and you press a button, the button's function remains on for 6 seconds (⌚6). While the function remains on, press the <⬆> key while looking in the viewfinder or at the LCD panel.

When the function timer ends or if you press the shutter button halfway, the camera will be ready to shoot.

- Use it to select the AF point.
- When using the LCD monitor (which has no display timer), you can select menu items or select images for playback.

# Menu Operations

With the menus, you can set various settings such as the image recording quality, processing parameters, the date/time, and Custom Functions. While looking at the LCD monitor, you use the <MENU> button, <↔> Cross keys, and <SET> button on the camera back.

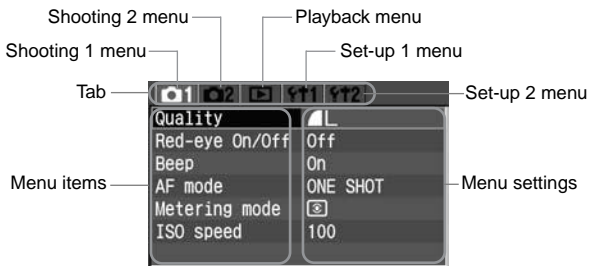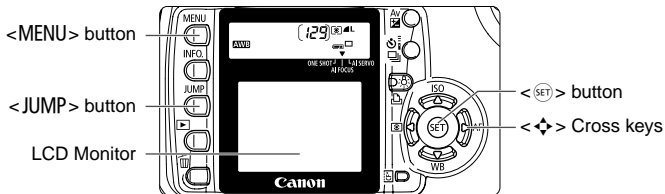

Icon	Color	Category	Description
	Red	Shooting menu	Shooting-related menu.
	Blue	Playback menu	Image playback-related menu.
	Yellow	Set-up menu	Camera's basic settings.




- To change the menu tab, press the <JUMP> button.
- When a Basic Zone mode is set, there are menu items which will not be displayed. (p.33)
- You can also use the <☀> dial to select menu items or playback images.
- Even while the menu is displayed, you can instantly go back to shooting by pressing the shutter button halfway.

## Menu Setting Procedure

### 1 Display the menu.

- Press the <MENU> button to display the menu. To turn off the menu, press the button again.

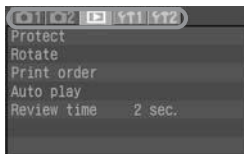

### 2 Select a tab.

- Press the <JUMP> button to select a menu tab.
- If the five tabs are highlighted, you can also press the <◀▶> keys to select a tab.



### 3 Select a menu item.

- Press the <▲▼> key to select the menu item, then press <SET>.
- If you press the <JUMP> button now, another tab will be selected.



### 4 Select the menu setting.

- Press the <▲▼> or <◀▶> key to select the setting. (Some settings require you to press either the <▲▼> or <◀▶> key to select it.)



### 5 Set the desired setting.

- Press <SET> to set it.

### 6 Exit the menu.

- Press the <MENU> button to exit the menu display.



- The explanation of menu functions hereinafter assumes that you have pressed the <MENU> button to display the menu screen.
- Menu operation will also work after the picture is taken while the image is being recorded to the CF card (access lamp blinks).



## Menu Settings (1)

### < 1 > Shooting 1 menu (Red)

Reference  
pages

Quality	L /  L /  M /  M /  S /  S / RAW+  L / RAW	52
Red-eye On/Off	Off / On	98
Beep	On / Off	50
AF mode	ONE SHOT / AI FOCUS / AI SERVO	70
Metering mode	: Evaluative / : Partial / : Center-weighted average metering	77
ISO speed	100 / 200 / 400 / 800 / 1600	55

### < 2 > Shooting 2 menu (Red)

AEB	1/3-stop increments, $\pm 2$ stops	90
Flash exp comp	1/3-stop increments, $\pm 2$ stops	100
White balance	AWB /  /  /  /  /  /  /	56
WB SHIFT/BKT	WB correction: B/A/M/G bias, 9 levels each WB-BKT: B/A and M/G bias 1 level, $\pm 3$ levels	59 60
Custom WB	Manual setting of white balance	57
Color space	sRGB / Adobe RGB	62
Parameters	Parameter 1, 2 / Set 1, 2, 3 / B/W	63 64

### < > Playback menu (Blue)

Protect	Erase-protect image	115
Rotate	Rotate vertical image	113
Print order	Specifies images to be printed (DPOF).	137
Auto play	Auto playback of images	112
Review time	Off / 2 sec. / 4 sec. / 8 sec. / Hold	104



- < 2 > Shooting 2 menu screen/tubs are not displayed in Basic Zone modes.
- These shaded menu items are not displayed in Basic Zone modes.
- In Basic Zone modes, the RAW+ L and RAW recording quality modes are not displayed.

## Menu Settings (2)

### <fT1> Set-up 1 menu (Yellow)

Reference  
pages

<b>Auto power off</b>	1 min. / 2 min. / 4 min. / 8 min. / 15 min. / 30 min. / Off	41
<b>Auto rotate</b>	On / Off	105
<b>LCD brightness</b>	5 levels	106
<b>Date/Time</b>	Setting the date/time	37
<b>File numbering</b>	Continuous / Auto reset	67
<b>Format</b>	Initializes and erases card	118
<b>Shoot w/o card</b>	On / Off	41

### <fT2> Set-up 2 menu (Yellow)

<b>Language</b>	15 languages (English, German, French, Dutch, Danish, Finnish, Italian, Norwegian, Swedish, Spanish, Simplified Chinese, Russian, Traditional Chinese, Korean, and Japanese.)	36
<b>Video system</b>	NTSC / PAL	114
<b>Communication</b>	Print/PTP / PC connection	121
<b>Custom Functions (C.Fn)</b>	Customize the camera	146
<b>Clear settings</b>	Clear all camera settings (Resets the camera to the default settings.)	35
	Clear all Custom Functions (Resets all Custom Function settings to the default.)	147
<b>Sensor cleaning</b>	Select to clean the sensor.	39
<b>Firmware Ver.</b>	Select to update the firmware.	-




These shaded menu items are not displayed in Basic Zone modes.

## About the LCD Monitor


- The LCD monitor cannot be used as a viewfinder for shooting.
- Adjust the LCD monitor's brightness to one of five levels with the [**fT1 LCD brightness**] menu. (p.106)

## Restoring the Camera's Default Settings ★

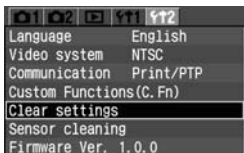


### 1 Select [Clear settings].

- Select the [F12] tab.
- Press the <▲▼> key to select [Clear settings], then press <SET>.

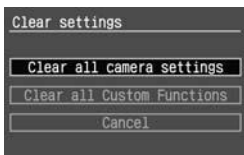

### 2 Select [Clear all camera settings].

- Press the <▲▼> key to select [Clear all camera settings], then press <SET>.

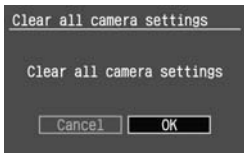

### 3 Select [OK].

- Press the <◀▶> key to select [OK], then press <SET>. The camera's default settings will be restored.
- ▶ The camera's default settings will be as shown below.

#### Shooting Settings

AF mode	ONE SHOT
AF point selection	Automatic AF point selection
Metering mode	☉ (Evaluative metering)
Drive mode	□ (Single shooting)
Exposure compensation	0 (Zero)
AEB	Off
Flash exposure compensation	0 (Zero)
Custom Functions	Current settings retained

#### Image-Recording Settings


Quality	▲ L
ISO speed	100
Color space	sRGB
White balance	AWB (Auto WB)
WB correction	Off
WB bracketing	Off
Parameters	Parameter 1



In Basic Zone modes, the camera settings cannot be reset to the default.

## MENU Setting the Language

The LCD monitor's interface language can be set to one of fifteen languages.

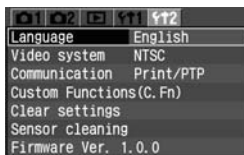

### 1 Select [Language].

- Select the [F12] tab.
- Press the <▲▼> key to select [Language], then press <SET>.
- ▶ The Language screen will appear.




### 2 Set the desired language.

- Press the <◀▶> key to select the desired language, then press <SET>.
- ▶ The interface language will change.

English	English
Deutsch	German
Français	French
Nederlands	Dutch
Dansk	Danish
Suomi	Finnish
Italiano	Italian
Norsk	Norwegian
Svenska	Swedish
Español	Spanish
简体中文	Simplified Chinese
Русский	Russian
繁体中文	Traditional Chinese
한국어	Korean
日本語	Japanese

## MENU Setting the Date and Time

Set the date and time as shown below.

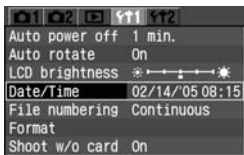

### 1 Select [Date/Time].

- Select the [**4**] tab.
- Press the <▲▼> key to select [Date/Time], then press <SET>.
- ▶ The date/time screen will appear.



### 2 Set the date and time.

- Press the <▲▼> key to select the digit, then press <SET>.
- The selection will then shift to the next item.



### 3 Set the date display format.

- Press the <▲▼> key to set the date format to [mm/dd/yy], [dd/mm/yy], or [yy/mm/dd].

### 4 Press <SET>.

- ▶ The date and time will be set and the menu will reappear.




Each captured image is recorded together with the date and time it was taken. If the date and time are not properly set, the wrong date/time will be recorded with the images. Make sure you set the date and time correctly.

## Replacing the Date/Time Battery


The date/time (back-up) battery maintains the camera's date and time. The battery's service life is about 5 years. If the date/time is reset when the battery is replaced, replace the back-up battery with a new CR2016 lithium battery as described below.

**The date/time setting will also be reset, so you must set the correct date/time.**


**1** Set the power switch to <OFF>.

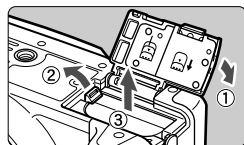

**2** Open the cover and remove the battery.

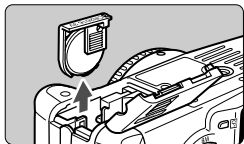


**3** Take out the battery holder.

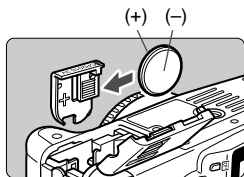


**4** Replace the battery.

- Make sure the battery is in the proper + - orientation.

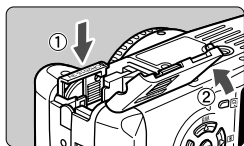

**5** Insert the battery holder and close the cover.


 For the date/time battery, be sure to use a CR2016 lithium battery.

## MENU Cleaning the CMOS sensor★

The image sensor is like the film in a film camera. If any dust or other foreign matter adheres to the image sensor, it may show up as a dark speck in the images. To avoid this, follow the procedure below to clean the image sensor. Note that the image sensor is a very delicate component. If possible, you should have it cleaned by a Canon Service Center.


While you clean the image sensor, the camera must be turned on. Using the AC Adapter Kit ACK-DC20 (optional, see page 158) is recommended. If you use a battery, make sure the battery level is sufficient. Before cleaning the sensor, detach the lens from the camera.

### 1 Install the DC Coupler (p.24) or a battery and set the power switch to <ON>.

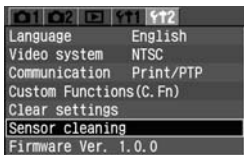


### 2 Select [Sensor cleaning].

- Select the [**F12**] tab.
- Press the <▲▼> key to select [**Sensor cleaning**], then press <Ⓢ>.
- ▶ If you are using a battery with sufficient power, the screen shown in step 3 will appear.
- If the battery is exhausted, a warning message will appear and you will not be able to proceed further. Either recharge the battery or use a DC coupler and start from step 1 again.

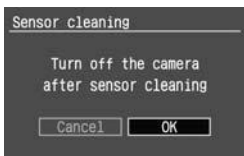

### 3 Select [OK].

- Press the <◀▶> key to select [**OK**], then press <Ⓢ>.
- ▶ In a moment, the mirror will lockup and the shutter will open.
- ▶ “**CLEA n**” will blink on the LCD panel.

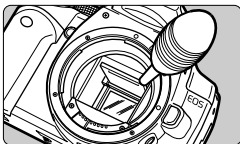

## 4 Clean the image sensor.

- Use a rubber blower (commercially available) to carefully blow away any dust on the surface of the CMOS sensor.

## 5 Stop the cleaning.

- Set the power switch to <OFF>.
- ▶ The camera will turn off, the shutter will close, and the mirror will go back down.
- Set the power switch to <ON>. You can start shooting again.

- ⚠ **During the sensor cleaning, never do any of the following that would turn off the power. If the power is cut off, the shutter will close and it may damage the shutter curtains and image sensor.**
  - Set the power switch to <OFF>.
  - Opening the CF card slot cover.
  - Opening the battery compartment cover.
- Do not insert the blower tip inside the camera beyond the lens mount. If the power goes out, the shutter will close and the shutter curtains and image sensor may be damaged.
- Use a blower not attached with a brush. A brush can scratch the sensor.
- Never use canned air or gas to clean the sensor. The blowing force can damage the sensor or the spray gas can freeze on the sensor.
- When the battery is exhausted, the beeper will sound and the <[ ]> icon will blink on the LCD panel. Set the power switch to <OFF>, replace the battery, and start over.
- You cannot clean the sensor if Battery Grip BG-E3 (optional) is attached to the camera and size-AA batteries supply the power. Use AC Adapter Kit ACK-DC20 (optional) or use a battery having sufficient power.




## MENU Set the power-off time/Auto power off

You can set the auto power-off time for the camera to turn off automatically after a set time of idle operation. If you do not want the camera to turn off automatically, set this to [Off]. If the camera turns off automatically, just press the shutter button halfway to turn it on again.

### 1 Select [Auto power off].

- Select the [**fT1**] tab.
- Press the <▲▼> key to select [Auto power off], then press <SET>.

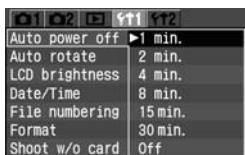

### 2 Set the desired time.


- Press the <▲▼> key to select the desired time, then press <SET>.

## MENU CF Card Reminder

This prevents shooting if there is no CF card in the camera. This can be set in all shooting modes.

### 1 Select [Shoot w/o card].

- Select the [**fT1**] tab.
- Press the <▲▼> key to select [Shoot w/o card], then press <SET>.

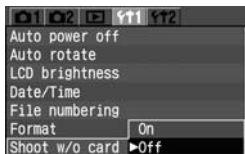


### 2 Select [Off].

- Press the <▲▼> key to select [Off], then press <SET>.

If [Off] has been set and you press the shutter button while there is no CF card in the camera, "no CF" will be displayed in the viewfinder.

## Dioptric Adjustment

You can adjust the sharpness of the viewfinder image. By adjusting the diopter to suit your eyesight, you can see a sharp viewfinder image even without eyeglasses. The camera's adjustable dioptic range is -3 dpt to +1 dpt.

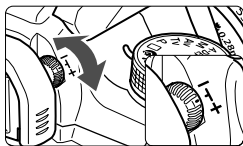


### Turn the dioptic adjustment knob.

- Turn the knob left or right until the AF points in the viewfinder look sharp.
- The illustration shows the knob at the standard setting (-1 dpt).

If the camera's dioptic adjustment still cannot provide a sharp viewfinder image, using Dioptic Adjustment Lens E (10 types, optional) is recommended.

## Holding the Camera

To obtain sharp images, hold the camera still to minimize camera shake.

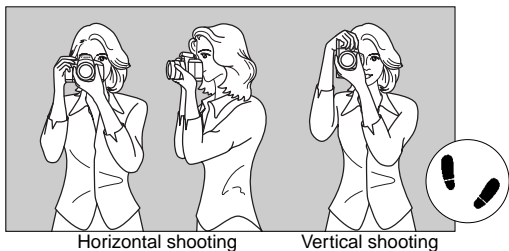

Horizontal shooting


Vertical shooting

- Firmly grasp the camera grip with your right hand, and press your both elbows lightly against your body.
- Hold the lens bottom with your left hand.
- Press the camera against your face and look through the viewfinder.
- To maintain a stable stance, place one foot in front of the other instead of lining up both feet.

# 2

## Fully Automatic Shooting

This chapter explains how to use the Basic Zone modes on the Mode Dial for quick and easy shooting. In each mode <□> <👤> <🏔️> <🌻> <🏹> <📷> <📷>, the AF mode, metering mode, ISO speed, etc., are set automatically to suit the subject. In these modes, all you do is point and shoot. In addition, to help prevent mistakes caused by operating the camera improperly, shooting-related buttons like <ISO> <WB> <📷> <AF> <📷> <✳️> <Av📷> are disabled in these modes. So you need not worry about accidental errors.

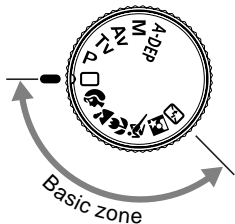

**Set the Mode Dial to one of the following modes:** <□>

<👤> <🏔️> <🌻> <🏹> <📷> <📷>

- The shooting procedure is the same as for “□ Using Full Auto” (p.44).
- To see what is set automatically in the Basic Zone modes, see “Function Availability Table” (p.152).


## □ Using Full Auto

All you do is point the camera and press the shutter button. Everything is automatic so it is easy to photograph any subject. With seven AF points to focus the subject, anyone can easily take nice pictures.




### 1 Set the Mode Dial to <□>.

- ▶ The AF mode will be set to <AI FOCUS>, the drive mode will be set to <□>, and the metering mode will be set to <☉> automatically.

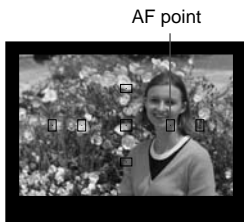


### 2 Aim any AF point over the subject.

- Out of the seven AF points, the one covering the closest subject is selected automatically to achieve focus.

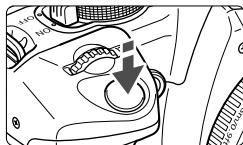

### 3 Focus the subject.

- Press the shutter button halfway to focus.
- ▶ The dot < · > inside the AF point achieving focus flashes briefly in red. At the same time, the beeper will sound and the focus confirmation light < ● > will light.
- ▶ The shutter speed and aperture value will be set automatically and displayed in the viewfinder and on the LCD panel. (⊙4)
- ▶ If necessary, the built-in flash will pop-up automatically.
- ▶ Under low-light conditions, if the focus cannot be achieved with the AF, AF-assist beam is fired automatically. (p.74)

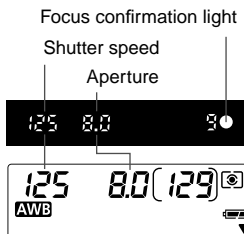

### 4 Check the display.



## 5 Take the picture.

- Compose the shot and press the shutter button completely.
- ▶ The captured image will be displayed for about 2 sec. on the LCD monitor.
- To view the images recorded on the CF card, press the <▶> button. (p.107)



- While focusing with <AF>, do not touch the focusing ring at the front of the lens.
- If you want to zoom, do it before focusing. Turning the zoom ring after achieving focus may throw off the focus.
- When the CF card becomes full, the CF Full warning "**FuLL CF**" will appear in the viewfinder and on the LCD panel and shooting will be disabled. Replace the CF card with one that is not full.
- If something obstructs the built-in flash from popping up, "**Err 05**" will blink on the LCD panel. If this happens, set the power switch to <OFF> and <ON> again.
- Using a non-Canon lens with an EOS camera may not result in proper camera or lens operation.



- When focus is achieved, the focus and exposure setting will also be locked.
- If the focus confirmation light <●> blinks, the picture cannot be taken. (p.76)
- The dot <·> in multiple AF points may flash in red at the same time. This indicates that focus has been achieved at all those AF points.
- In the Basic Zone modes (except <📷> <📷> <📷>), the built-in flash will pop up and fire automatically in low-light or backlit conditions. To retract the flash, push it back down.
- You can disable the beeper from sounding when focus is achieved. Set the [📷1 Beep] menu item. (p.50)
- The image review time after image capture can be changed with the menu's [▶ Review time] setting. (p.104)
- If you want to freely select the AF point for focusing, set the Mode Dial to <P>, then follow "Selecting the AF Point" (p.73) to select the AF point.

## Basic Zone Modes

Just select a shooting mode suiting the target subject, and you can easily obtain the best results.



### Portrait



This mode blurs the background to make the human subject stand out.

- Holding down the shutter button executes continuous shooting.
- To increase the background blur, use a telephoto lens and fill the frame with the subject from the waist up. Or have the subject stand farther away from the background.
- ▶ The AF mode will be set to **<ONE SHOT>**, the drive mode will be set to **<□>**, and the metering mode will be set to **<☉>** automatically.



### Landscape



This is for wide scenic views, night scenes, etc.

- Using a wide-angle lens will further enhance the depth and breadth of the image.
- ▶ The AF mode will be set to **<ONE SHOT>**, the drive mode will be set to **<□>**, and the metering mode will be set to **<☉>** automatically.



### Close-up



Use this mode to take close-up shots of flowers, insects, etc.

- Focus the subject at the lens' closest focusing distance as much as possible.
- To obtain a larger magnification, use the telephoto end of a zoom lens.
- For better close-ups, an EOS-dedicated macro lens and Macro Ring Lite (both optional) are recommended.
- ▶ The AF mode will be set to **<ONE SHOT>**, the drive mode will be set to **<□>**, and the metering mode will be set to **<☉>** automatically.



## Sports



This is for fast-moving subjects when you want to freeze the action.

- The camera will first track the subject with the center AF point. Focus tracking will then continue with any of the seven AF points covering the subject.
- While you press the shutter button, focusing will continue for continuous shooting.
- Using a telephoto lens is recommended.
- When focus is achieved, the beeper will sound softly.
- ▶ The AF mode will be set to **<AI SERVO>**, the drive mode will be set to **<CL>**, and the metering mode will be set to **<☉>** automatically.



## Night Portrait



This mode is for shooting people outside at twilight or at night. The flash illuminates the subject and a slow sync speed captures a natural-looking exposure of the background.

- If you want to shoot a night scene without people, use the **<🌃>** mode instead.
- Tell the subject to keep still even after the flash fires.
- ▶ The AF mode will be set to **<ONE SHOT>**, the drive mode will be set to **<□>**, and the metering mode will be set to **<☉>** automatically.



## Flash off



You can disable the flash when you do not want it to fire.


- The built-in flash or any external Speedlite will not fire.
- ▶ The AF mode will be set to **<AI FOCUS>**, the drive mode will be set to **<□>**, and the metering mode will be set to **<☉>** automatically.



In the **<🌃>** mode, use a tripod to prevent camera shake. In the **<🌃>** or **<📷>** mode, if the shutter speed display blinks, be aware that camera shake may occur.

## ☺ Self-timer Operation

Use the self-timer when you want to be in the picture. You can use self-timer in any Basic Zone mode or Creative Zone mode.

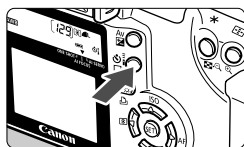


### 1 Select <☺>.

- Look at the LCD panel and press the <☺> button to select <☺>.



### 2 Focus the subject.

- Look in the viewfinder and press the shutter button halfway to check that the focus confirmation light <●> is on and the exposure setting is displayed.

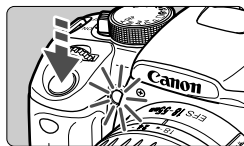

### 3 Take the picture.

- Look through the viewfinder and press the shutter button completely.
- ▶ The beeper will sound, the self-timer lamp will start blinking, and the shot will be taken about 10 sec. later.

During the first 8 sec., the beeper beeps slowly and the lamp blinks slowly. Then during the final 2 sec., the beeper beeps faster and the lamp stays lit.

- ▶ During the self-timer operation, the LCD panel counts down the seconds until the picture is taken.


⚠ Do not stand in front of the camera when you press the shutter button to start the self-timer. Doing so will throw off the focus.

- Use a tripod when you use the self-timer.
- To cancel the self-timer after it starts, press the <☺> button.
- When using the self-timer to shoot only yourself, use focus lock (p.75) for an object at about the same distance as where you will be.
- You can also silence the beeper. (p.50)





## Wireless Remote Control

With Remote Controller RC-1 or RC-5 (optional), you can shoot remotely up to about 5 meters/16.4 ft. directly in front of the camera.

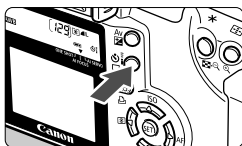

### 1 Select <Remote Control>.

 - Look at the LCD panel and press the <Remote Control> button to select <Remote Control>.

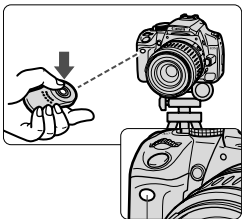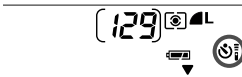

### 2 Take the picture.


- Point the remote controller toward the camera's remote control sensor and press the transmit button.
  - ▶ The camera will autofocus.
  - ▶ When focus is achieved, the self-timer lamp will light and the picture will be taken.



Camera misoperation may occur near certain types of fluorescent light. During wireless remote control, try to keep the camera away from fluorescent light.


## Using the Eyepiece Cover

During self-timer or remote control operation when your eye does not cover the viewfinder eyepiece, stray light may enter the eyepiece and throw off the exposure. To prevent this, use the eyepiece cover (attached to the neck strap) to cover the eyepiece.

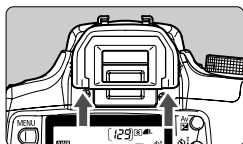

### 1 Remove the eyecup.

- From the bottom of the eyecup, push it upward to remove.

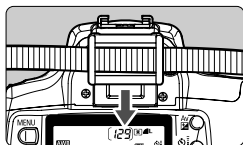

### 2 Attaching the Eyepiece Cover

- Slide the eyepiece cover down into the eyepiece groove to attach it.

## MENU Silencing the Beeper

You can disable the beeper so it does not sound in any shooting mode.

### 1 Select [Beep].

- Select the [CAMERA] tab.
- Press the <▲▼> key to select [Beep], then press <SET>.

### 2 Select [Off].

 
- Press the <▲▼> key to select [Off], then press <SET>.



# 3

## Image Settings

This chapter explains the digital image settings for the image-recording quality, ISO speed, white balance, color space, and processing parameters.

- For Basic Zone modes, only the image-recording quality (except RAW and RAW+L), file numbering, and camera setting check will apply in this chapter.
- The asterisk ★ on the right of the page title indicates that the respective feature is available only in Creative Zone modes (**P**, **Tv**, **Av**, **M**, **A-DEP**).


## MENU Setting the Image-recording Quality

The **L**/**L**/**M**/**M**/**S**/**S** modes record the image in the widely-used JPEG. In the **RAW** mode, the captured image will require post-processing with the software provided. In the **RAW+L** (**RAW+JPEG**) mode, the image is recorded in both the RAW and JPEG simultaneously. **Note that **RAW** and **RAW+L** cannot be selected in the Basic Zone modes.**



### 1 Select [Quality].

- Select the [**Q1**] tab.
- Press the <▲▼> key to select [**Quality**], then press <SET>.
- ▶ The recording quality screen will appear.

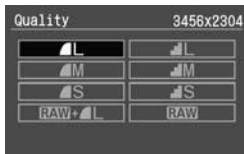

### 2 Set the desired recording quality.








- Press the <⬅➡> key to select the desired recording quality, then press <SET>.
- When you press the shutter button halfway, the image-recording quality will be displayed on the LCD panel.

## Image-recording Quality Settings

Image-recording Quality	Image Type (extension)	Pixels	Print Size
<b>L</b> (Large Fine)	JPEG (.JPG)	3456 x 2304 (Approx. 8 million)	A3 or larger
<b>L</b> (Large Normal)			
<b>M</b> (Medium Fine)			
<b>M</b> (Medium Normal)		2496 x 1664 (Approx. 4.15 million)	A5 - A4
<b>S</b> (Small Fine)			
<b>S</b> (Small Normal)			
<b>RAW</b> (RAW)	RAW (.CR2)	3456 x 2304 (Approx. 8 million)	A3 or larger

- The **L** (Fine) and **L** (Normal) icons indicate the image's compression rate. For better image quality, select **L** for low compression. To record more images on the memory card, select a higher compression **L**.
- With **RAW+L**, the RAW and JPEG images will be saved under the same file No. in the same folder.

## Image File Size and CF Card Capacity According to Image-Recording Quality

Image-recording Quality	Image File Size (Approx. MB)	Possible Shots
 L	3.3	145
 L	1.7	279
 M	2.0	245
 M	1.0	466
 S	1.2	419
 S	0.6	790
RAW +  L	-	41
RAW	8.3	58

- The number of possible shots and maximum burst (p.54) apply to a Canon 512MB CF card.
- The single image size, number of possible shots, and maximum burst during continuous shooting are based on Canon's testing standards (ISO 100 with [Parameter 1] set). The actual single image size, number of possible shots, and maximum burst will vary depending on the subject, shooting mode, ISO speed, parameters, etc.
- In the case of monochrome images (p.65), the file size will be smaller so the number of possible shots will be higher.
- On the top LCD panel, you can check the remaining number of images the CF card can record.
- A different image-recording quality can be set separately for the Basic Zone modes and Creative Zone modes.

### About the RAW

The RAW assumes that the image will undergo post-processing with a personal computer. Special knowledge is required, but you can use the bundled software to obtain the optimum effect.

Image processing refers to adjusting the RAW image's white balance, contrast, etc., to create the desired image.


Note that RAW images will not work with direct printing or DPOF.

## Max. Burst During Continuous Shooting

The maximum burst during continuous shooting depends on the image-recording quality. The approx. maximum burst during continuous shooting is indicated below for each image-recording quality.

Note that with high-speed CF cards, the maximum burst may be higher than shown in the table below depending on the shooting conditions.

Image-recording Quality	L	L	M	M	S	S	RAW	RAW +  L
Max. Burst	14	36	27	110	80	780	5	4

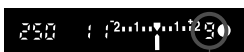 

Max. Burst

- The number of shots remaining during the maximum burst is displayed on the lower right of the viewfinder.

- If “9” is displayed, it indicates that the maximum burst is nine or more shots. If “5” is displayed, it is five shots.
- While you are shooting and the remaining maximum burst is fewer than 9, the viewfinder will display “8”, “7”, etc. If you stop the continuous shooting, the maximum burst will increase.

The above table's figures for the maximum burst apply when all the captured images have been processed internally and written to the CF card.

- With white balance bracketing (p.60), the maximum burst will be 2 shots.
- The maximum burst is displayed even when the drive mode is set to (Single) or . The maximum burst is displayed even when a CF card is not in the camera. Therefore, before shooting, make sure that a CF card is installed in the camera.

# ISO Setting the ISO Speed★


The ISO speed is a numeric indication of the sensitivity to light. A higher ISO speed number indicates a higher sensitivity to light. Therefore, a high ISO speed is suited for low light and moving subjects. However, the image may look more grainy with noise, etc. On the other hand, a low ISO speed is not suited for low light or action shots, but the image will look finer. The camera can be set between ISO 100 and 1600 in 1-stop increments.

## ISO Speed in the Basic Zone Modes

The ISO speed is set automatically within ISO 100-400.

## ISO Speed in the Creative Zone Modes

You can set the ISO speed to [100] [200] [400] [800] [1600].

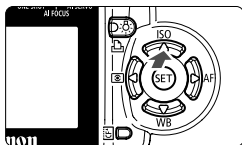

### 1 Press the <▲ISO> button.

- ▶ The [ISO speed] menu will be displayed.



### 2 Set the ISO speed.


- Press the <▲▼> key to select the desired setting, then press <SET>.



- At higher ISO speeds and higher ambient temperatures, the image will look more grainy.
- High temperatures, high ISO speeds, or long exposures may cause irregular colors in the image.

# WB Setting the White Balance★

Normally, the <AWB> setting will set the optimum white balance automatically. If natural-looking colors cannot be obtained with <AWB>, you can set the white balance manually to suit the respective light source. In the Basic Zone modes, <AWB> will be set automatically.

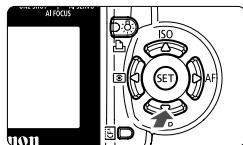

## 1 Press the <▼ WB> button.

- ▶ The [White balance] menu will appear.

## 2 Select the white balance setting.

- Press the <◀▶> key to select the desired setting, then press <SET>.
- When you press the shutter button halfway, the white balance setting will be displayed on the LCD panel.



Display	Mode	Color temperature (Approx. K)
AWB	Auto	3000 - 7000
☀	Daylight	5200
🏠	Shade	7000
☁	Cloudy, twilight, sunset	6000
☀	Tungsten	3200
💡	White fluorescent light	4000
⚡	Flash	6000
🎨	Custom*	2000 - 10000

\* Set the optimum white balance manually to suit the lighting. (p.57)


## About White Balance

The three RGB (red, green, and blue) primary colors exist in the light source in varying proportions depending on the color temperature. When the color temperature is high, there is more blue. And when the color temperature is low, there is more red. To the human eye, a white object looks white regardless of the type of lighting. With a digital camera, the color temperature can be adjusted with software so that the colors in the image look more natural. The subject's white color is used as the criteria for adjusting the other colors. The camera's <AWB> setting uses the image sensor for auto white balance.



## MENU Custom White Balance ★

With custom white balance, you shoot a white object that will serve as the basis for the white balance setting. By selecting this image, you import its white balance data for the white balance setting.

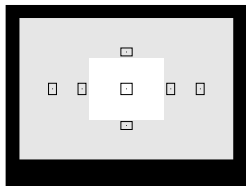

### 1 Photograph a white object.

- The plain, white object should fill the viewfinder center.
- Set the lens focus mode switch to <MF>, then focus manually. (p.76)
- Set any white balance setting (p.56).
- Shoot the white object so that a standard exposure is obtained.



### 2 Select [Custom WB].

- Select the [**W**] tab.
- Press the <▲▼> key to select [**Custom WB**], then press <SET>.
- ▶ The custom WB screen will appear.



### 3 Select the image.

- Press the <◀▶> key to select the image that was taken in step 1, then press <SET>.
- ▶ The image's white balance data will be imported and the menu will reappear.
- ▶ The caution screen highlighted in orange frame will appear.



### 4 Select [White balance].

- Select the [**W**] tab.
- Press the <▲▼> key to select [**White balance**], then press <SET>.
- ▶ The white balance screen will appear.



## 5 Select the custom white balance.

- Press the <⬅️➡️> key to select <⬅️➡️>, then press <SET>.
- When you press the shutter button halfway, the <⬅️➡️> icon will be displayed on the LCD panel.

- ⚠️ If the exposure obtained in step 1 is underexposed or overexposed, a correct white balance might not be obtained.
- If an image was captured while the processing parameter was set to **[B/W]** (p.65), it cannot be selected in step 3.

📄 Instead of a white object, an 18% gray card (commercially available) can produce a more accurate white balance.


## MENU White Balance Correction ★

You can correct the standard color temperature for the white balance setting. This adjustment will have the same effect as using a color temperature conversion or color compensating filter. Each color can be corrected to one of nine levels. Users familiar with using color temperature conversion or color compensating filters will find this feature handy.



### 1 Select [WB SHIFT/BKT].


- Select the [2] tab.
- Press the <▲▼> key to select [WB SHIFT/BKT], then press <SET>.
- ▶ The WB correction/WB bracketing screen will appear.

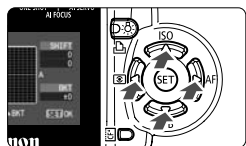

### 2 Set the white balance correction.

- Press the <◆> key to move the "■" mark to the desired position.
- B is blue, A is amber, M is magenta, and G is green. The color in the respective direction will be corrected.
- On the upper right, the "SHIFT" indicator shows the bias direction and correction amount.
- To cancel the white balance correction, press the <◆> key to move the "■" to the center so that "SHIFT" indicates "0, 0."
- Press <SET> to exit the setting and return to the menu.

Sample setting: A2, G1

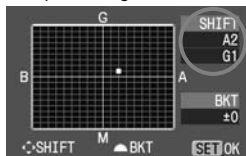


- One level of the blue/amber correction is equivalent to 5 mireds of a color temperature conversion filter. (Mired: A measurement unit indicating the density of a color temperature conversion filter.)
- You can also set white balance bracketing and AEB in combination with white balance correction.
- In step 2, if you turn the <ISO/AF> dial, WB bracketing will be set. (p.60)

# MENU White Balance Auto Bracketing★

With just one shot, three images having a different color hue can be recorded simultaneously. Based on the white balance mode's color temperature, the image will be bracketed with a blue/amber bias or magenta/green bias. This is called white balance bracketing. It can be set up to  $\pm 3$  levels in single-level increments.

## 1 Set the image-recording quality to a setting other than RAW and RAW+ L. (p.52)


## 2 Select [WB SHIFT/BKT].

- Select the [2] tab.
- Press the  $\langle \blacktriangle \blacktriangledown \rangle$  key to select [WB SHIFT/BKT], then press  $\langle \text{SET} \rangle$ .
- ▶ The WB correction/WB bracketing screen will appear.




## 3 Set the bracketing amount.


- Turn the  $\langle \text{gear} \rangle$  dial to set the bracketing direction and bracketing level.
- When you turn the  $\langle \text{gear} \rangle$  dial, the “■” mark on the screen will change to “■ ■ ■” (3 points). Turning the  $\langle \text{gear} \rangle$  dial to the right sets the B/A bracketing, and turning it to the left sets the M/G bracketing.
- Set the bracketing level for the B/A or M/G bias up to  $\pm 3$  levels in single-level increments. (The bracketing level cannot be set for both the B/A and M/G bias at the same time.)
- ▶ On the right side of the screen, “BKT” indicates the bracketing direction and bracketing level.
- Press  $\langle \text{SET} \rangle$  to exit the setting and return to the menu.

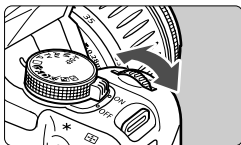

B/A bias  $\pm 3$  levels

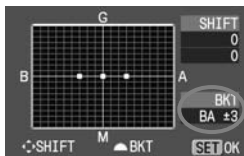


M/G bias  $\pm 3$  levels

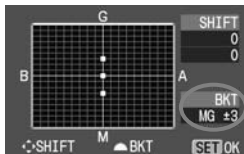

## 4 Take the picture.

- ▶ If B/A bracketing has been set, the three images will be recorded onto the CF card in the following sequence: Normal white balance, blue bias, and amber bias. If M/G bracketing has been set, the sequence will be normal white balance, magenta bias, and green bias.

### Canceling White Balance Auto Bracketing

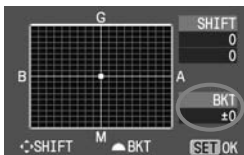

- In step 3, set “BKT” to “±0” (set “■ ■ ■” to “■”, 1 point).



- If the image-recording quality is set to RAW or RAW+**L**, white balance bracketing cannot be used.
- With white balance bracketing set, the maximum burst will be 2 shots.



- When you set white balance bracketing, the possible number of shots displayed on the LCD panel will decrease to one-third the normal number.
- Since three images are recorded for one shot, the CF card will take longer to record the shot.
- You can also set white balance correction and AEB in combination with white balance bracketing. If you set AEB in combination with white balance bracketing, a total of nine images will be recorded for a single shot.
- “BKT” stands for bracketing.

## MENU Setting the Color Space★

The color space refers to the range of reproducible colors. With this camera, you can set the color space for captured images to sRGB or Adobe RGB. For normal images, sRGB is recommended. In the Basic Zone modes, sRGB will be set automatically.

### 1 Select [Color space].

- Select the [CAMERA 2] tab.
- Press the <▲▼> key to select [Color space], then press <SET>.



### 2 Set the desired color space.

- Press the <▲▼> key to select [sRGB] or [Adobe RGB], then press <SET>.

### About Adobe RGB

This is mainly used for commercial printing and other industrial uses. This setting is not recommended if you do not know about image processing, Adobe RGB, and Design rule for Camera File System 2.0 (Exif 2.21).


Since the image will look very subdued in an sRGB personal computer environment and with printers not compatible with Design rule for Camera File System 2.0 (Exif 2.21), post-processing of the image with software will be required.



- If the image is captured with the color space set to Adobe RGB, the file name will start with “\_MG\_” (first character is an underscore).
- The ICC profile is not appended. The ICC profile is explained in the Software Instruction Manual (PDF).

## MENU Selecting the Processing Parameters★


The image you capture can be processed internally by the camera to look more vivid and sharp or more subdued. The processing parameters can be set according to the preset Parameter 1 or Parameter 2 or to Set 1, 2, or 3 that you can set yourself. There is also a B/W parameter for black-and-white photos. In the Basic Zone modes, Parameter 1 will be set automatically.

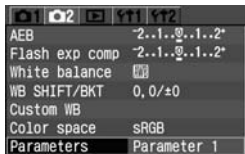

### 1 Select [Parameters].

- Select the [2] tab.
- Press the <▲▼> key to select [Parameters], then press <SET>.
- ▶ Processing parameter setting screen will appear.

### 2 Press <SET>.

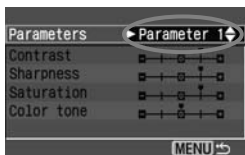

### 3 Select the desired parameter.

- Press the <▲▼> key to select the desired setting, then press <SET>.
- Press the <MENU> button to return to the menu.

## About Processing Parameters

Parameter	Description
Parameter 1	The image will look vivid and sharp. In the Basic Zone modes, all images will be processed in this way.
Parameter 2	The colors will be more subdued than Parameter 1, making the colors look more natural.
Set 1, 2, 3	You can set and register the following settings: [Contrast], [Sharpness], [Saturation], and [Color tone]. (p.64)
B/W	You can capture black-and-white images.



- With Parameter 1, the [Contrast], [Sharpness], and [Saturation] are set to the +1 level. With Parameter 2, all the parameters are set to neutral at 0.
- In Creative Zone modes, [Parameter 1] is set by default.

# MENU Setting the Processing Parameters ★

The image you capture can be processed automatically by the camera in accordance with the parameter settings you set (five levels each for [Contrast], [Sharpness], [Saturation], and [Color tone]). You can register and save up to three sets of processing parameters.




## 1 Select [Parameters].

- Select the [📷2] tab.
- Press the <▲▼> key to select [Parameters], then press <SET>.
- ▶ The parameter setting screen will appear.

## 2 Press <SET>.


## 3 Select the set number.

- Press the <▲▼> key to select [Set 1], [Set 2], or [Set 3] then press <SET>.
- The default parameter settings for [Set 1], [Set 2], and [Set 3] are all “0” (Standard).

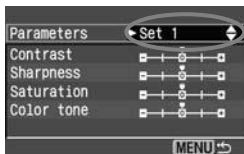

## 4 Select the item to be set.


- Press the <▲▼> key to select the desired setting, then press <SET>.

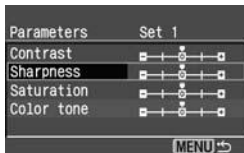

Parameter	Minus	Plus
Contrast	Low contrast	High contrast
Sharpness	Less sharp outline	Sharper outline
Saturation	Low saturation	High saturation
Color tone	Reddish skin tone	Yellowish skin tone

## 5 Set the desired setting.


- Press the <◀▶> key to select the desired effect, then press <SET>.
- Press the <MENU> button to return to the menu.

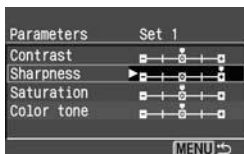




## Black-and-White Shooting

When you capture images with the processing parameter set to B/W, the camera will process and record the images as black-and-white images onto the CF card.

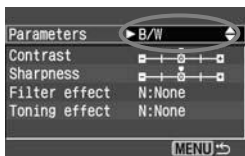


### 1 Select [B/W].

- In step 3 on page 64, select [B/W], then press <SET>.

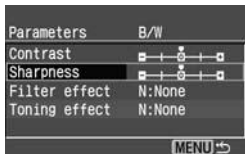

### 2 Select the item to be set.

- Press the <▲▼> key to select the desired setting, then press <SET>.
- The [Contrast] and [Sharpness] will be the same as in the table in step 4 on page 64.
- For details on [Filter effect] and [Toning effect], see page 66.

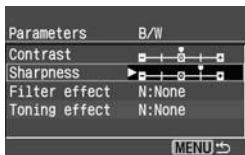

### 3 Set the desired setting.

- Press the <◆> key to select the desired effect, then press <SET>.
- Press the <MENU> button to return to the menu.
- When you press the shutter button halfway, the <B/W> icon will be displayed on the LCD panel.




- To obtain natural-looking, black-and-white images, set a suitable white balance.
- JPEG images captured with the parameter set to [B/W] cannot be converted to color. Not even with any personal computer software.




If the image-recording quality is RAW and the parameter is [B/W], the image can be converted to color with the bundled software.

## Filter Effects

The same effect as using filters with black-and-white film can be obtained with digital images. A color can be brightened by using a filter having a similar or same color. At the same time, the complementary colors will be darkened.

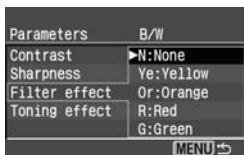


Filter	Effect
N: None	Normal black-and-white image with no filter effects.
Ye: Yellow	The blue sky will look more natural, and the white clouds will look more crisp.
Or: Orange	The blue sky will look slightly darker. The sunset will look more brilliant.
R: Red	The blue sky will look quite dark. Fall leaves will look crisper and brighter.
G: Green	Skin tones and lips will look fine. Tree leaves will look crisper and brighter.

 Setting the **[Contrast]** to the plus side will make the filter effect more pronounced.

## Toning Effect


When color toning is set, the selected color toning will be applied to the black-and-white image before being recorded to the CF card. It can make the image look more impressive.

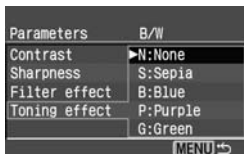

Select one of the following: **[N:None]**  
**[S:Sepia]** **[B:Blue]** **[P:Purple]** **[G:Green]**

## MENU File Numbering Methods

The file number is like the frame number on film. There are two file numbering methods: **[Continuous]** and **[Auto reset]**. The images you take are automatically assigned a file number from 0001 to 9999 and saved in a folder (created automatically) that can hold up to 100 images.

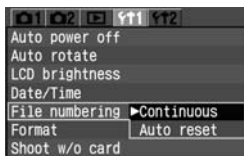

- 1 Select [File numbering].**
  - Select the [**1**] tab.
  - Press the <▲▼> key to select **[File numbering]**, then press <SET>.
- 2 Select the file numbering method.**
  - Press the <▲▼> key to select **[Continuous]** or **[Auto reset]**, then press <SET>.

### Continuous

The file numbering continues in sequence even after you replace the CF card. This prevents images from having the same file number, so image management with a personal computer is easier. Note that if the replacement CF card already contains images captured with the camera, the file numbering will start after the highest file number in that CF card or after the last captured image's file number, whichever is higher.

#### File numbering after changing the CF card



Next sequential file number

### Auto reset

Each time you replace the CF card, the file numbering will be reset to the first file number (**100-0001**). Since the file number starts from **0001** in each CF card, you can organize images according to CF card. Note that if the replacement CF card already contains images, the file numbering will start after the highest file number in that CF card.

#### File numbering after changing the CF card




File number is reset

When folder No. 999 is created, **[Folder number full]** will appear on the LCD monitor. If file No. 9999 is created, “**Err CF**” will be displayed on the LCD panel and in the viewfinder. Replace the CF card with a new one.

For both JPEG and RAW images, the file name will start with “IMG\_”. The extension will be “.JPG” for JPEG images and “.CR2” for RAW images.


## INFO. Checking Camera Settings

When the camera is ready to shoot, press the <INFO.> button to view the current camera settings on the LCD monitor.

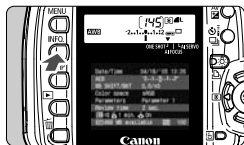

### Display the camera settings.


- Press the <INFO.> button.
- ▶ The current camera settings will appear on the LCD monitor.
- To turn off the settings display, press the <INFO.> button again.

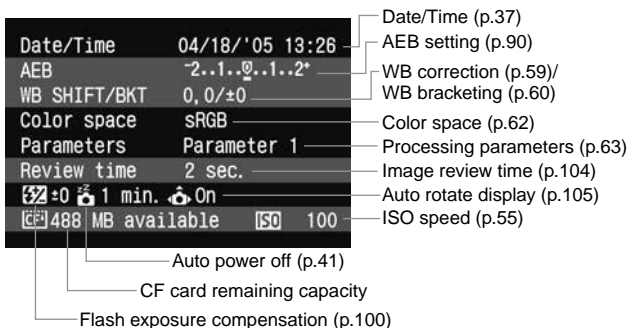


For details on the image info during playback, see “Shooting Information Display” (p.108).

# 4

## Setting the AF, Metering, and Drive Modes

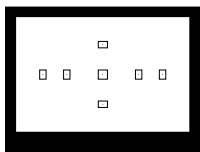

The viewfinder has seven AF points. By selecting a suitable AF point, you can shoot with autofocus while framing the subject as desired. You can also set the AF mode to suit the subject or obtain the desired effect.

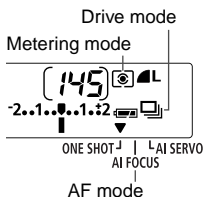


Evaluative, partial, and center-weighted average metering modes are provided. Single, continuous, and self-timer drive modes are provided. Select the metering mode that suits the subject or your photographic intention.

- The asterisk ★ on the right of the page title indicates that the respective feature is available only in Creative Zone modes (**P**, **Tv**, **Av**, **M**, **A-DEP**).
- In the Basic Zone modes, the AF mode, AF point, metering mode, and drive mode are set automatically.

# AF Selecting the AF Mode★


The AF mode is the autofocus operation method. Three AF modes are provided. One-Shot AF is suited for still subjects, while AI Servo AF is for moving subjects. And AI Focus AF switches from One-Shot AF to AI Servo AF automatically if the still subject starts moving. In the Basic Zone modes, the optimum AF mode is set automatically.

**1 Set the lens focus mode switch to <AF>.** (p.25)

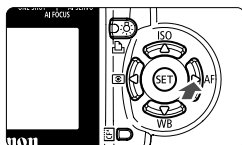

**2 Press the <▶ AF> button.**

▶ The [AF mode] menu will appear.

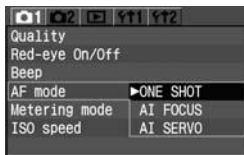

**3 Select the AF mode.**

- Press the <▲▼> key to select the desired setting, then press <SET>.

**ONE SHOT** : One-Shot AF

**AI FOCUS** : AI Focus AF

**AI SERVO** : AI Servo AF

- When you press the shutter button halfway, the LCD panel will display an arrow <▼> next to the current AF mode.



 
- Although you can still set the AF mode while the lens focus mode switch is set to <MF>, the AF mode will not take effect during manual focus.
- If an Extender (optional) is attached and the maximum aperture of the lens is f/5.6 or smaller, AF will not be possible. For details, see the Extender's instructions.

<AF> stands for Auto Focus, and <MF> is Manual Focus.

## One-Shot AF for Still Subjects



AF point

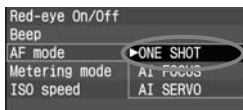Focus  
confirmation  
light


### Pressing the shutter button halfway activates the autofocus and achieves focus once.

 - ▶ The dot < · > inside the AF point achieving focus flashes briefly in red. Also, the focus confirmation light < ● > in the viewfinder lights.
- ▶ With evaluative metering, the exposure setting (shutter speed and aperture) will also be set when focus is achieved. The exposure setting and focus will be locked as long as the shutter button is pressed halfway. (p.75) You can then recompose the shot while retaining the exposure setting and point of focus.



If focus cannot be achieved, the focus confirmation light < ● > in the viewfinder will blink. If this occurs, a picture cannot be taken even if the shutter button is pressed fully. Recompose the picture and try and focus again. Or see "When Autofocus Fails (Manual Focusing)" (p.76).

## AI Servo AF for Moving Subjects

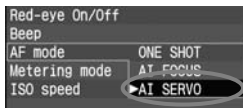

### While you press the shutter button halfway, the camera focuses continuously.

- This AF mode is for moving subjects when the focusing distance keeps changing.
- ▶ With predictive AF\*, the camera can also focus track a subject which steadily approaches or retreats from the camera.
- ▶ The exposure is set at the moment the picture is taken.



 
In a Creative Zone mode (except < A-DEP >), the beeper will not sound even when focus is achieved. Also, the focus confirmation light < ● > in the viewfinder will not light.

### \* About Predictive AF

If the subject approaches or retreats from the camera at a constant rate, the camera tracks the subject and predicts the focusing distance immediately before the picture is taken. This is for obtaining correct focus at the moment of exposure.


- When the AF point selection is automatic, the camera first uses the center AF point to focus. During autofocusing, if the subject moves away from the center AF point, focus tracking continues as long as the subject is covered by another AF point.
- With a manually selected AF point, the selected AF point will focus track the subject.

### AI Focus AF for Automatic Switching of AF Mode

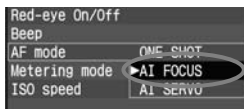

AI Focus AF switches the AF mode from One-Shot AF to AI Servo AF automatically if the still subject starts moving.

After the subject is focused in the One-Shot AF mode, if the subject starts moving, the camera will detect the movement and change the AF mode automatically to AI Servo AF.

 When focus is achieved in the AI Focus AF mode with the Servo mode active, the beeper will sound softly. The focus confirmation light <●> in the viewfinder will not light.



## Selecting the AF Point <sup>★</sup>

The AF point is used for focusing. The AF point can be selected automatically by the camera or manually by you.

In Basic Zone modes and the **<A-DEP>** mode, the AF point is selected automatically. In the **<P>** **<Tv>** **<Av>** **<M>** modes, you can switch between automatic and manual AF point selection.


### Automatic AF Point Selection

The camera selects the AF point automatically to suit the shooting conditions. **All the AF points **<·>** in the viewfinder will light in red.**

### Manual AF Point Selection


**You can select any of the seven AF points manually.** This is best when you want to focus a particular subject, or autofocus quickly while composing the shot.

### Selecting with the Cross Keys

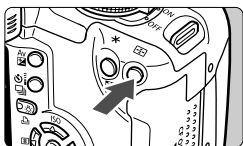


#### 1 Press the **<AF-ON>** button. (6)

- ▶ The selected AF point will be displayed in the viewfinder and on the LCD panel.

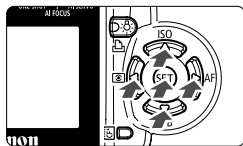


#### 2 Select the AF point.

- Press the **<◇>** key while looking in the viewfinder or at the LCD panel.
- ▶ Press the **<◀▶>** key to select a horizontal AF point, or press the **<▲▼>** key to select a vertical AF point.
- By pressing **<SET>**, you can toggle between the center AF point and automatic AF point selection.
- To return to shooting, press the shutter button halfway or press the **<AF-ON>** button again.

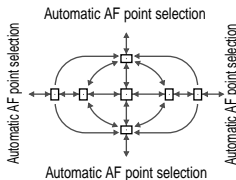


### • Automatic AF point selection

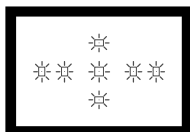

All of the AF points < · > will light in red.


- Selecting an AF point beyond a peripheral AF point will set the automatic selection mode.

### • Manual AF point selection

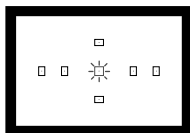

Select the desired AF point so the < · > lights in red.

### Selecting with the Dial

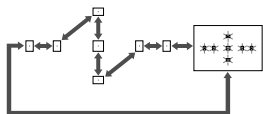 

- Press the < ☰ > button, then turn the < ☀ > dial.
- When you turn the dial, the selection will go in the looping sequence shown on the left.

- When looking at the LCD panel to select the AF point, note the following: Automatic selection [ ---☰--- ], center [ - - ], right [ - - - ], top [ - - - ]
- If focus cannot be achieved with an EOS-dedicated, external Speedlite's AF-assist beam, select the center AF point.

### About AF-Assist beam with the Built-in Flash

Under low-light conditions, when you press the shutter button halfway, the built-in flash fires a brief burst of flashes. It illuminates the subject to enable easier autofocusing.

- In the < 🏔 > < 🏞 > < 📷 > modes, the AF-assist beam does not light.
- The built-in flash's AF-assist beam is effective up to about 4 meters/13.2 feet.
- In the Creative Zone modes when you pop-up the built-in flash with the < ⚡ > button, the AF-assist beam will be fired when necessary.

# Using Focus Lock

After achieving focus, you can lock the focus on a subject and recompose the shot. This is called “focus lock.” Focus lock works only in the One-Shot AF mode.

**1 Set the Mode Dial to a Creative Zone mode.**

**2 Select the desired AF point. (p.73)**




**3 Focus the subject.**


- Move the AF point over the subject and press the shutter button halfway.



**4 Keep pressing the shutter button halfway and recompose the picture as desired.**

**5 Take the picture.**

 If the AF mode is AI Servo AF (or AI Focus AF set to Servo mode), focus lock will not work.

 Focus lock is also possible in Basic Zone modes (except <img alt="Basic Zone modes" data-bbox="245 895 275 915"/>). In this case, start from step 3.

## When Autofocus Fails (Manual Focusing) ■

Autofocus can fail to achieve focus (the focus confirmation light <●> blinks) with certain subjects such as the following:


### Subjects Difficult to Focus

- (a) Low-contrast subjects  
Example: Blue sky, solid-color walls, etc.
- (b) Subjects in low light
- (c) Extremely backlit and reflective subjects  
Example: Car with a reflective body, etc.
- (d) Overlapping near and far objects  
Example: Animal in a cage, etc.
- (e) Repetitive patterns  
Example: Skyscraper windows, computer keyboards, etc.

In such cases, do one of the following:

- (1) Focus an object at the same distance as the subject and lock the focus before recomposing. (p.75)
- (2) Set the lens focus mode switch to <MF> and focus manually.

### Manual Focusing

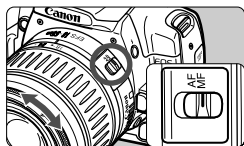


Focusing ring

**1 Set the lens focus mode switch to <MF>.**


**2 Focus the subject.**

- Focus by turning the lens focusing ring until the subject is in focus in the viewfinder.

 If you press the shutter button halfway during manual focusing, the AF point(s) achieving focus and the focus confirmation light <●> in the viewfinder will light when focus is achieved.

## Selecting the Metering Mode ★

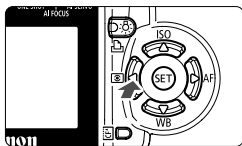

The camera has three metering modes: Evaluative, partial, and center-weighted average metering. In the Basic Zone modes, evaluative metering will be set automatically.



### 1 Press the button.

- ▶ The [Metering mode] menu will appear.

### 2 Select the metering mode.

- Press the  key to select the desired setting, then press .

 


 : **Evaluative Metering**

 : **Partial Metering**


 : **Center-weighted Averaged Metering**


- When you press the shutter button halfway, the selected metering mode will be displayed on the LCD panel.

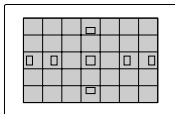

### **Evaluative Metering**

 
This is the camera's standard metering mode suited for most subjects even under backlit conditions. After detecting the main subject's position, brightness, background, front and back lighting, etc., the camera sets the proper exposure.

 - During manual focusing, evaluative metering is based on the center AF point.
- If the subject brightness and background light level are very different (there is a strong backlight or spotlight), use partial metering  instead.

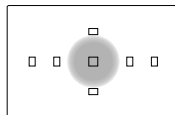

### **Partial Metering**

 Effective when the background is much brighter than the subject due to backlighting, etc. Partial metering covers about 9% of the viewfinder area at the center. The area covered by partial metering is shown on the left.

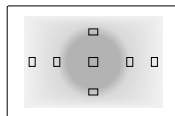


### **Center-weighted Average Metering**



The metering is weighted at the center and then averaged for the entire scene.

## Selecting the Drive Mode

Single and continuous drive modes are provided. In the Basic Zone modes, the optimum drive mode is set automatically.

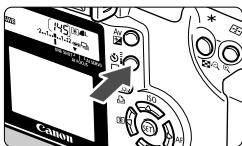

### Press the button.

 - Look at the LCD panel and press the   button to select the drive mode.

#### : **Single shooting**


When you press the shutter button completely, one shot will be taken.

#### : **Continuous shooting**

(Max. 3 shots per sec.)


While you press the shutter button completely, shots will be taken continuously.

#### : **Self-timer/Remote control** (p.48/49)

- During continuous shooting, the captured images are first stored in the camera's buffer memory and then successively transferred to the CF card. When the buffer memory becomes full during continuous shooting, "buSY" will be displayed on the LCD panel and in the viewfinder and the camera cannot take any more shots. As the captured images are transferred to the CF card, you will be able to capture more images. Press the shutter button halfway to check in the viewfinder's bottom right the current remaining shots of the maximum burst.
- 
- Max. Burst
- If "FuLL CF" is displayed in the viewfinder and on the LCD panel, wait until the access lamp stops blinking, then replace the CF card.
  - When the battery level is low, the maximum burst will be slightly lower.

# 5

## Advanced Operations

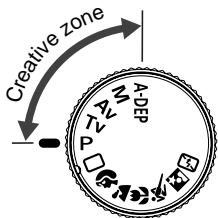

With Creative Zone modes, you can set the desired shutter speed or aperture value to obtain the result you want. You take control of the camera.

- The asterisk ★ on the right of the page title indicates that the respective feature is available only in Creative Zone modes (**P**, **Tv**, **Av**, **M**, **A-DEP**).
- After you press the shutter button halfway and let go, the timer operation will keep the LCD panel and viewfinder information displayed for about 4 sec. (⌚4).
- To see what can be set in the Creative Zone modes, see “Function Availability Table” (p.152).

# P Program AE



Like <□> (Full Auto) mode, this is a general-purpose shooting mode. The camera automatically sets the shutter speed and aperture value to suit the subject's brightness. This is called Program AE.


\* <P> stands for Program

\* AE stands for Auto Exposure



## 1 Set the Mode Dial to <P>.

AF point


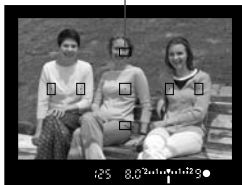


## 2 Focus the subject.

- Look through the viewfinder and aim any AF point over the subject. Then press the shutter button halfway.


Shutter speed

  Aperture

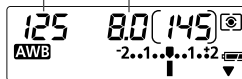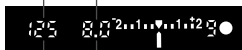

## 3 Check the display.

- ▶ The shutter speed and aperture value will be set automatically and displayed in the viewfinder and on the LCD panel.
- A correct exposure will be obtained as long as the shutter speed and aperture value display do not blink.

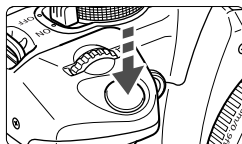

## 4 Take the picture.

- Compose the shot and press the shutter button completely.





- If “30” and the maximum aperture blink, it indicates that the subject is too dark. Increase the ISO speed or use flash.
- If “4000” and the minimum aperture blink, it indicates that the subject is too bright. Decrease the ISO speed or use an ND filter (optional) to reduce the amount of light entering the lens.



## Differences Between <P> and <□> (Full Auto)

- In both modes, the automatically-set shutter speed and aperture combination are the same.
- In the <P> mode, you can set or use the functions below, but not in the <□> mode.

### Shooting Settings

- AF mode selection
- AF point selection
- Drive mode selection
- Metering mode selection
- Program Shift
- Exposure compensation
- AEB
- AE lock with <★> button
- Depth-of-field preview
- Clear all camera settings
- Custom Function (C.Fn)
- Clear all Custom Functions
- Sensor cleaning


### Flash Settings (Built-in flash)

- Flash On/Off
- FE lock
- Flash exposure compensation

### Flash Settings (EX-series Speedlite)

- Manual/stroboscopic flash
- High-speed sync (FP flash)
- FE lock
- Flash ratio control
- Flash exposure compensation
- FEB
- 2nd-curtain sync
- Modeling flash

### Image-Recording Settings

- RAW, RAW+  L selection
- ISO speed setting
- White balance selection
- Custom white balance selection
- White balance correction
- WB bracketing
- Color space selection
- Processing parameter setting

## About Program Shift

- In Program AE mode, you can freely change the shutter speed and aperture value combination (program) set by the camera while maintaining the same exposure value. This is called program shift.
- To do this, press the shutter button down halfway, then turn the <☀> dial until the desired shutter speed or aperture value is displayed.
- Program shift is canceled automatically after the image is captured.
- If you use flash, you cannot use program shift.

# Tv Shutter-Priority AE

In this mode, you set the shutter speed and the camera automatically sets the aperture value to suit the subject's brightness. This is called shutter-priority AE. A fast shutter speed can freeze the motion of a fast-moving subject, and a slow shutter speed can blur the subject to give the impression of motion.

\* <Tv> stands for Time value.




Fast shutter speed



Slow shutter speed




## 1 Set the Mode Dial to <Tv>.

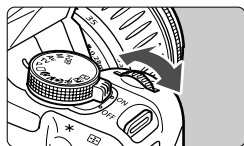


## 2 Set the desired shutter speed.

 - While looking at the LCD panel, turn the <gear> dial.
- It can be set in 1/3-stop increments.

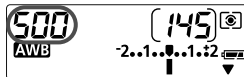

## 3 Focus the subject.

 - Press the shutter button halfway.
- ▶ The aperture value is set automatically.

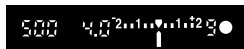

## 4 Check the viewfinder display and shoot.

- As long as the aperture value is not blinking, the exposure will be correct.



- If the maximum aperture blinks, it indicates underexposure. Turn the dial to set a slower shutter speed until the aperture value stops blinking or set a higher ISO speed.
- If the minimum aperture blinks, it indicates overexposure. Turn the dial to set a faster shutter speed until the aperture value stops blinking or lower the ISO speed.



### Shutter Speed Display

The shutter speeds from “4000” to “4” indicate the denominator of the fractional shutter speed. For example, “125” indicates 1/125 sec. Also, “0”6” indicates 0.6 sec. and “15”” is 15 sec.

4000	3200	2500	2000	1600	1250	1000	800	640	500				
400	320	250	200	160	125	100	80	60	50	40	30		
25	20	15	13	10	8	6	5	4	0'3	0'4	0'5	0'6	0'8
1'	1'3	1'6	2'	2'5	3'2	4'	5'	6'	8'	10'	13''		
15''	20''	25''	30''										

## Av Aperture-Priority AE

In this mode, you set the desired aperture and the camera sets the shutter speed automatically to suit the subject brightness. This is called aperture-priority AE.

A larger aperture opening (lower f/number) will result in a blurred background ideal for portraits. This occurs because a lower f/number decreases the depth of field (range of acceptable focus). On the other hand, a smaller aperture opening (higher f/number) will make more of the foreground and background fall within acceptable focus. A smaller aperture opening increases the depth of field.

\* <Av> stands for Aperture value.




With a large aperture opening




With a small aperture opening



**1 Set the Mode Dial to <Av>.**

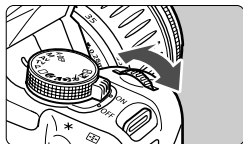


**2 Set the desired aperture value.**

- While looking at the LCD panel, turn the <  > dial.
- It can be set in 1/3-stop increments.



**3 Focus the subject.**

 - Press the shutter button halfway.
- ▶ The shutter speed is set automatically.

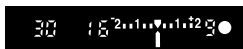

**4 Check the viewfinder display and shoot.**

- As long as the shutter speed is not blinking, the exposure will be correct.



- If the “30” shutter speed blinks, it indicates underexposure. Turn the <img alt="Aperture dial icon" data-bbox="628 128 668 148"/> dial to set a larger aperture (lower f/number) until the blinking stops or set a higher ISO speed.
- If the “4000” shutter speed blinks, it indicates overexposure. Turn the <img alt="Aperture dial icon" data-bbox="628 218 668 238"/> dial to set a smaller aperture (higher f/number) until the blinking stops or set a lower ISO speed.




### Aperture Value Display

The higher the f/number, the smaller the aperture opening will be. The aperture values displayed will differ depending on the lens. If no lens is attached to the camera, “00” will be displayed for the aperture value.

1.0	1.1	1.2	1.4	1.6	1.8	2.0	2.2	2.5	2.8	3.2	3.5	4.0
4.5	5.0	5.6	6.3	7.1	8.0	9.0	10	11	13	14	16	18
20	22	25	29	32	36	40	45	51	57	64	72	81
91												

## Depth of Field Preview ★

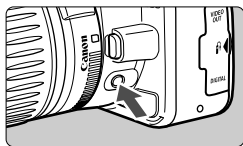

Press the depth-of-field preview button to stop down to the current aperture setting. The diaphragm in the lens will close to the current aperture and you can check the depth of field (range of acceptable focus) through the viewfinder.



- The higher the f/number, the darker the viewfinder will look.
- In the <img alt="A-DEP mode icon" data-bbox="218 838 258 858"/> mode, press the shutter button halfway to focus, then press the depth-of-field preview button while still pressing the shutter button halfway.
- The exposure is locked (AE lock) while you press the depth-of-field preview button.

# M Manual Exposure

 


In this mode, you manually set both the shutter speed and aperture value as desired. To determine the correct exposure, refer to the exposure level indicator in the viewfinder or use a handheld exposure meter. This method is called manual exposure.

\* <M> stands for Manual.




1 Set the Mode Dial to <M>.

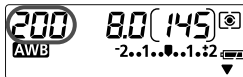


2 Set the desired shutter speed.

- While looking at the LCD panel, turn the <⚙️> dial.

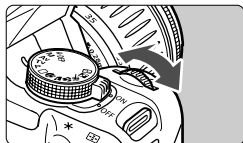

3 Set the desired aperture value.

- Hold down the <Av [ ]> and turn the <⚙️> dial.

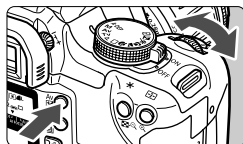


Standard exposure index



Exposure level mark


## 4 Focus the subject.

 
- Press the shutter button halfway.
- ▶ The exposure setting will be displayed on the LCD panel and in the viewfinder.
- The exposure level icon <|> shows you how far you are from the standard exposure level.

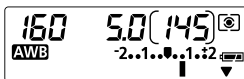


## 5 Set the exposure.

- Check the exposure level and set the desired shutter speed and aperture value.

 : Standard exposure level.

 : To set it to the standard exposure level, set a slower shutter speed or a larger aperture opening.

 : To set it to the standard exposure level, set a faster shutter speed or a smaller aperture opening.

## 6 Take the picture.



If the exposure level mark <|> blinks at the <+2> or <-2> level, it indicates that the exposure level exceeds the standard exposure by  $\pm 2$  stops.


# A-DEP Automatic Depth-of-Field AE

This mode is for obtaining a wide depth of field automatically between a near subject and far subject. It is effective for group photos and landscapes. The camera uses the seven AF points to detect the nearest and farthest subjects to be in focus.

\* <A-DEP> stands for Auto-depth of field.



## 1 Set the Mode Dial to <A-DEP>.

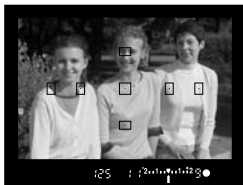

## 2 Focus the subject.

- Move the AF point over the subject and press the shutter button halfway. (ⓘ4)
- All the subjects covered by the AF points flashing in red will be in focus.
- Hold down the shutter button halfway and press the depth-of-field preview button to see the depth of field (range of acceptable focus). (p.85)

## 3 Take the picture.

- The <A-DEP> mode cannot be used if the lens' focus mode switch is set to <MF>. The result will be the same as using the <P> mode.
- If the "30" shutter speed blinks, it indicates that the subject is too dark. Increase the ISO speed.
- If the "4000" shutter speed blinks, it indicates that the subject is too bright. Decrease the ISO speed.

 
- If the aperture value blinks, it indicates that the exposure level is correct but the desired depth of field cannot be obtained. Either use a wide-angle lens or move further away from the subjects.
- In this shooting mode, you cannot freely change the shutter speed and aperture value. If the camera sets a slow shutter speed, hold the camera steady or use a tripod.
- If you use flash, the result will be the same as using <P> with flash.



# Setting Exposure Compensation★


Exposure compensation is used to alter the standard exposure setting set by the camera. You can make the image look lighter (increased exposure) or darker (decreased exposure). You can set the exposure compensation up to  $\pm 2$  stops in 1/3-stop increments.

**1 Turn the Mode Dial to any Creative Zone mode except <M>.**

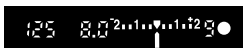

**2 Check the exposure level indicator.**


- Press the shutter button halfway and check the exposure level indicator.

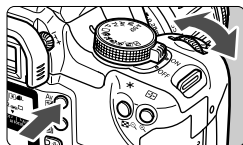


**3 Set the exposure compensation amount.**

- Hold down the <Av [ ]> and turn the < [ ]> dial.
- To cancel the exposure compensation, set the exposure compensation amount back to < [ ]>.

 
Increased exposure

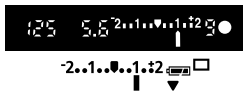

Decreased exposure

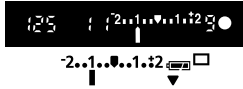 

Standard exposure index

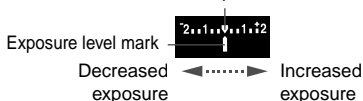 

**4 Take the picture.**



- The exposure compensation amount will remain in effect even after the power switch is set to <OFF>.
- If the standard exposure setting is 1/125 sec. and f/8.0, setting the exposure compensation amount to plus or minus one stop will be the same as setting the shutter speed or aperture value as follows:

	-1 stop ← 0 → +1 stop
Shutter Speed	250 ← 125 → 60
Aperture Value	11 ← 8.0 → 5.6

## MENU Auto Exposure Bracketing (AEB)★

By changing the shutter speed or aperture automatically, the camera can bracket the exposure up to  $\pm 2$  stops in 1/3-stop increments for three successive shots. This is called Auto Exposure Bracketing (AEB).



Standard exposure



Decreased exposure



Increased exposure

### 1 Select [AEB].

- Select the [CAMERA] tab.
- Press the  $\langle \blacktriangle \blacktriangledown \rangle$  key to select [AEB], then press  $\langle \text{SET} \rangle$ .



AEB amount

### 2 Set the AEB amount.

- Press the  $\langle \blacktriangleleft \blacktriangleright \rangle$  key to set the AEB amount, then press  $\langle \text{SET} \rangle$ .
- When you press the shutter button halfway, the  $\langle \text{AEB} \rangle$  icon and AEB amount will appear on the LCD panel.



Standard exposure



Decreased exposure



Increased exposure



### 3 Take the picture.

- ▶ The three bracketed shots will be exposed in the following sequence: standard exposure, decreased exposure, and increased exposure.
- ▶ As shown on the left, the respective bracketing amount will be displayed as each bracketed shot is taken.
- ▶ The current drive mode (p.78) will be used for the shooting.

## Canceling AEB





- Follow steps 1 and 2 to set the AEB amount to < **-2..1..0..1..2\*** >.
- AEB will also be canceled automatically if you turn the power switch to <OFF>, change lenses, obtain flash-ready, replace the battery, or replace the CF card.



AEB cannot be used with flash or bulb exposures.




- If the drive mode is set to continuous (  ), the three bracketed shots will be taken continuously and then the shooting will stop automatically. If the drive mode is set to single image (  ), you must press the shutter button three times.
- If the self-timer/remote control has been set, the three bracketed shots will be taken continuously.
- If C.Fn-7 [**Mirror lockup**] is set to [**1:Enabled**] (p.150), the drive mode for AEB will be single even if it is set to continuous.
- AEB can be combined with exposure compensation.

## \* AE Lock ★

AE lock enables you to lock the exposure at a different place from the point of focus. By locking the exposure, you can recompose the shot while maintaining the same exposure setting. This is called AE lock. It is effective for backlit subjects.

### 1 Focus the subject.

- Press the shutter button halfway.
- ▶ The exposure setting will be displayed.

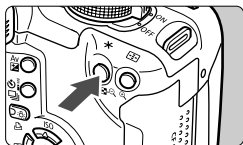

### 2 Press the < \* > button. (⓪4)

- ▶ The < \* > icon lights in the viewfinder to indicate that the exposure setting is locked (AE lock).
- Each time you press the < \* > button, it locks the current exposure setting.



AE lock indicator

### 3 Recompose and take the picture.

- If you want to maintain the AE lock while taking more shots, hold down the < \* > button and press the shutter button to take another shot.




- If the AF mode is One-Shot AF or AI Focus AF (when not AI Servo AF) and the metering mode is < [E] > (Evaluative), pressing the shutter button halfway will automatically set AE lock at the same time when focus is achieved.
- The AE lock effect will differ depending on the AF point and metering mode. For details, see “AE Lock” (p.153).


# Bulb Exposures


When bulb is set, the shutter stays open while you hold down the shutter button fully, and closes when you let go of the shutter button. This is called bulb exposure. Use bulb exposures for night scenes, fireworks, the heavens, and other subjects requiring long exposures.

## 1 Set the Mode Dial to <M>.

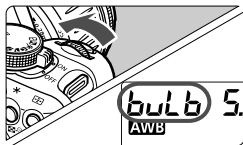



## 2 Set the shutter speed to "bulb."

- Look at the LCD panel and turn the <  > dial to select "bulb."
- The next setting after "30" is "bulb."

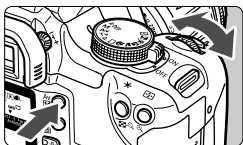



## 3 Set the desired aperture value.

 - Hold down the <  > button and turn the <  > dial.

## 4 Take the picture.

  - Press the shutter button completely.
- ▶ The elapsed exposure time will be displayed on the LCD panel. (Displays 1 sec. to 999 sec.)
- The exposure continues as long as you hold down the shutter button.

Elapsed exposure time (sec.)

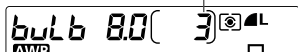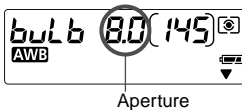


Since bulb exposures will have more noise than usual, the image will look grainy.



- Bulb exposures may result in grainy images due to picture noise. You can reduce noise by setting C.Fn-2 [Long exposure noise reduction] to [1: On] (p.148).
- For bulb exposures, using Remote Switch RS-60E3 (optional) is recommended.
- Remote Controller RC-1/RC-5 (optional) can also be used for bulb exposures. When you press the transmit button, the exposure will start 2 sec. later. To stop the exposure, press the button again.

## Mirror Lockup★

Mirror lockup is enabled with C.Fn-7 [**Mirror lockup**] set to [1: **Enable**] (p.150). The mirror can be swung up separately from when the exposure is made. This prevents mirror vibrations which may blur the image during close-ups or when a super telephoto lens is used. Set Custom Functions with [**Fn2 Custom Functions (C.Fn)**].

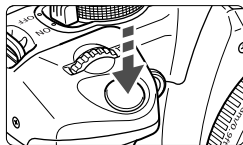

### 1 Press the shutter button completely.

- ▶ The mirror will swing up.

### 2 Again press the shutter button completely.

- ▶ The picture is taken and the mirror goes back down.

- In very bright places such as at the beach or ski ground on a sunny day, take the picture promptly after mirror lockup.
- During mirror lockup, do not point the camera lens at the sun. The sun's heat can scorch and damage the shutter curtains.
- If you use bulb exposures, the self-timer, and mirror lockup in combination, keep pressing the shutter button completely (2 sec. self-timer + bulb exposure time). During the 2-sec. self-timer countdown, if you let go of the shutter button, there will be a shutter-release sound. This is not the shutter being released (no picture is taken).

- During mirror lockup, the drive mode will be set to single shooting regardless of the current drive mode setting (single or continuous).
- If you use the self-timer and mirror lockup, press the shutter button completely and the shot will be taken 2 sec. after the mirror goes up.
- The mirror locks up, and after 30 seconds, it will go back down automatically. Pressing the shutter button completely again locks up the mirror again.
- For mirror lockup shots, using Remote Switch RS-60E3 (optional) is recommended.
- Remote Controller RC-5 (optional) can also be used for mirror lockup shots. Press the transmit button and the mirror locks up before the shot is taken 2 sec. later.

# 6

## Flash Photography



 


The built-in flash or an EOS-dedicated, EX-series Speedlite enables E-TTL II autofocus (evaluative flash metering with preflash), making flash photography as easy as normal shooting. The result is natural-looking flash photos. In the Basic Zone modes (except <img alt="P mode icon" data-bbox="660 638 685 660"/> <img alt="Tv mode icon" data-bbox="745 638 770 660"/> <img alt="Av mode icon" data-bbox="825 638 850 660"/> <img alt="M mode icon" data-bbox="905 638 930 660"/>), flash photography is fully automatic. In Creative Zone modes, flash can be used whenever necessary.


# Using the Built-in Flash


E-TTL II autoflash obtains high-precision and consistent flash shots.

## Using the Built-in Flash in the Basic Zone

If necessary, **the built-in flash will pop-up automatically** in low-light or backlit conditions. (except in the <  > <  > <  > modes)

## Using the Built-in Flash in the Creative Zone

Regardless of the light level, **you can press the <  > button to pop-up and fire the built-in flash whenever desired.**

**P** : **For fully automatic flash photography.** The shutter speed (1/60 sec. - 1/200 sec.) and aperture value are set automatically, just as in <  > (Full Auto) mode.

**Tv** : **Enables you to set the desired shutter speed (30 sec. - 1/200 sec.).** The camera then **automatically sets the flash aperture value** to obtain the proper exposure at the shutter speed you have set.

**Av** : **Enables you to set the desired aperture value.** The camera then **automatically sets the shutter speed (30 sec. - 1/200 sec.)** to obtain the proper exposure at the aperture you have set.

Against dark backgrounds such as the night scenes, slow-sync shooting will be set so that both the subject and background are exposed correctly. The main subject is exposed with the flash, and the background is exposed with a slow shutter speed.

- Because automatic slow-sync shooting uses a slow shutter speed, always use a tripod.
- If you do not want a slow shutter speed to be set, set C.Fn-3 [**Flash sync. speed in Av mode**] to [**1: 1/200sec. (fixed)**]. (p.148)

**M** : **You can set both the shutter speed (bulb or 30 sec. - 1/200 sec.) and aperture value.** The main subject is exposed properly by the flash. The background exposure will vary depending on the shutter speed and aperture.

**A-DEP**: The flash result will be the same as the < **P** > mode.



## Built-in Flash Range

With EF-S18-55mm f/3.5-5.6 II

[m / ft]

ISO speed	Wide angle: 18mm	Telephoto: 55mm
100	Approx. 1 - 3.7 / 3.3 - 12.1	Approx. 1 - 2.3 / 3.3 - 7.5
200	Approx. 1 - 5.3 / 3.3 - 17.4	Approx. 1 - 3.3 / 3.3 - 10.8
400	Approx. 1 - 7.4 / 3.3 - 24.3	Approx. 1 - 4.6 / 3.3 - 15.1
800	Approx. 1 - 10.5 / 3.3 - 34.4	Approx. 1 - 6.6 / 3.3 - 21.7
1600	Approx. 1 - 14.9 / 3.3 - 48.9	Approx. 1 - 9.3 / 3.3 - 30.5

With EF-S17-85mm f/4-5.6 IS USM

[m / ft]

ISO speed	Wide angle: 17mm	Telephoto: 85mm
100	Approx. 1 - 3.3 / 3.3 - 10.8	Approx. 1 - 2.3 / 3.3 - 7.5
200	Approx. 1 - 4.6 / 3.3 - 15.1	Approx. 1 - 3.3 / 3.3 - 10.8
400	Approx. 1 - 6.5 / 3.3 - 21.3	Approx. 1 - 4.6 / 3.3 - 15.1
800	Approx. 1 - 9.2 / 3.3 - 30.2	Approx. 1 - 6.6 / 3.3 - 21.7
1600	Approx. 1 - 13.0 / 3.3 - 42.7	Approx. 1 - 9.3 / 3.3 - 30.5



- Use the built-in flash at least 1 m/3.3 ft away from the subject. Closer distances will cause the lens barrel to partially obstruct the flash.
- When using the built-in flash, detach any hood attached to the lens. A lens hood will partially obstruct the flash.
- A super telephoto lens or fast, large-aperture lens may partially obstruct the built-in flash coverage. In such a case, using an EX-series Speedlite (optional) is recommended.
- The built-in flash's coverage is effective with lens focal lengths as short as 17mm. If the lens is shorter than 17mm, the periphery of the flash photo will look dark.



- To retract the flash, push it back down.
- In the <Tv> <M> modes, even if you set the shutter speed to one faster than 1/200 sec., it will be set automatically to 1/200 sec.
- If autofocus cannot be achieved, the AF-assist beam (small flashes fired by the built-in flash) will be fired automatically (except in the <▲> <👁> <📷> modes). (p.74)

## Using Red-eye Reduction

When flash is used in a low-light environment, the subject's eyes may look red in the image. "Red eye" happens when the light from the flash reflects off the retina of the eyes. The camera's red-eye reduction feature turns on the red-eye reduction lamp to shine a gentle light into the subject's eyes to narrow the pupil diameter or iris. A smaller pupil reduces the chances of red eye from occurring. Red-eye reduction can be set in any shooting mode except <img alt="Movie mode icon" data-bbox="205 285 225 305"/> <img alt="Macro mode icon" data-bbox="235 285 255 305"/> <img alt="Image area mode icon" data-bbox="265 285 285 305"/>.

### 1 Select [Red-eye On/Off].

- Select the <img alt="Camera icon" data-bbox="355 355 375 375"/> 1 tab.
- Press the <img alt="Up/Down arrow key" data-bbox="375 375 395 395"/> key to select [Red-eye On/Off], then press <img alt="Set key" data-bbox="395 395 415 415"/>.




### 2 Set the red-eye reduction.

- Press the <img alt="Up/Down arrow key" data-bbox="455 465 475 485"/> key to select [On], then press <img alt="Set key" data-bbox="475 485 495 505"/>.
- When you press the shutter button halfway, the <img alt="Red-eye reduction lamp icon" data-bbox="515 515 535 535"/> icon will be displayed in the viewfinder.





- When you press the shutter button down halfway, the red-eye reduction lamp indicator appears in the viewfinder.
- Red-eye reduction will not work unless the subject looks at the red-eye reduction lamp. Tell the subject to look at the lamp.
- To increase the effectiveness of red-eye reduction, press the shutter button down fully after the red-eye reduction lamp (which lights for approximately 1.5 seconds) indicator goes off.
- You can shoot anytime by pressing the shutter button down fully, even while the red-eye reduction lamp is still on.
- The effectiveness of red-eye reduction varies from subject to subject.
- Red-eye reduction is more effective in brighter rooms or when the camera is closer to the subject.

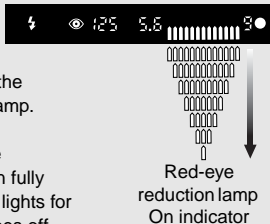

## \* FE lock \*

 FE (flash exposure) lock obtains and locks the correct flash exposure reading for any part of a subject.

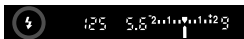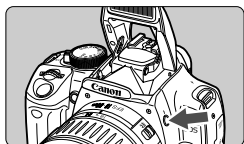


### 1 Check that the $\lt; \text{lightning bolt} >$ icon is lit.

- Press the  $\lt; \text{lightning bolt} >$  button to pop-up the built-in flash.
- Press the shutter button halfway and look in the viewfinder to check that the  $\lt; \text{lightning bolt} >$  icon is lit.

### 2 Focus the subject.

- Press the shutter button halfway. Keep pressing the shutter button halfway until step 4.

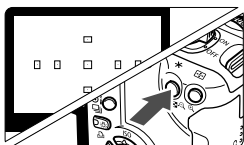

### 3 Press the $\lt; * >$ button. (16)

- Aim the viewfinder center over the subject where you want to lock the flash exposure, then press the  $\lt; * >$  button.
  - ▶ The Speedlite will fire a preflash and the required flash output is calculated and retained in memory.
  - ▶ In the viewfinder, "FEL" is displayed for a moment and  $\lt; * >$  will light.
- Each time you press the  $\lt; * >$  button, a preflash is fired and the required flash output is calculated and retained in memory.

### 4 Take the picture.

- Compose the shot and press the shutter button fully.
  - ▶ The flash is fired to take the picture.

 
 


If the subject is too far away and beyond the effective range of the flash, the  $\lt; \text{lightning bolt} >$  icon will blink. Get closer to the subject and repeat steps 2 to 4.

## Flash Exposure Compensation ★

In the same way as normal exposure compensation, you can set exposure compensation for flash. You can set flash exposure compensation up to  $\pm 2$  stops in 1/3-stop increments.

### 1 Select [Flash exp comp].


- Select the [2] tab.
- Press the <▼> key to select [Flash exp comp], then press <SET>.




### 2 Set the flash exposure compensation amount.

 - Press the <◀▶> key to set the desired amount, then press <SET>.

Standard exposure index

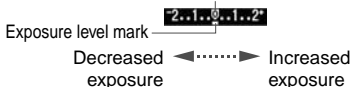

- To cancel the flash exposure compensation, set the flash exposure compensation amount back to <◻>.
- When you press the shutter button halfway, the <2> icon will be displayed in the viewfinder and on the LCD panel.

### 3 Take the picture.

- The flash exposure compensation amount will remain in effect even after you turn the power switch to <OFF>.
- The procedure is the same with EX-series Speedlites. The flash exposure compensation amount can be set with the camera.

# Using EOS-Dedicated, External Speedlites

## With EX-series Speedlites

An EOS-dedicated, EX-series Speedlite (optional) makes flash photography as easy as normal shooting. You can easily do the flash operations below. For detailed procedures, see the Speedlite's instruction manual.

- **E-TTL II Autoflash**

E-TTL II is a new autoflash exposure system incorporating improved flash exposure control and lens focusing distance information, making it more precise than the previous E-TTL (evaluative flash metering with preflash) system. The camera can execute E-TTL II autoflash with any EX-series Speedlite.

- **High-Speed Sync (FP flash)**

With high-speed sync, you can set a sync speed faster than 1/200 sec.

- **FE (Flash Exposure) Lock**

Press the camera's **< \* >** button to lock the flash exposure at the desired part of the subject.

- **Flash Exposure Compensation**

In the same way as normal exposure compensation, you can set exposure compensation for flash. The flash exposure compensation amount can be set with the camera up to  $\pm 2$  stops in 1/3-stop increments. With Speedlites which you can set the flash exposure compensation, it can be set up to  $\pm 3$  stops in 1/3-stop increments.

- **FEB (Flash Exposure Bracketing)**

The flash output is changed automatically for three successive shots (only with FEB-compatible Speedlites). Set flash exposure bracketing up to  $\pm 3$  stops in 1/3-stop increments.

- **E-TTL II Wireless Autoflash with Multiple Speedlites**

As with wired, multiple Speedlites, wireless E-TTL II autoflash with multiple Speedlites provides all the above features. Since connection cords are unnecessary, flexible and sophisticated lighting setups are possible (only with wireless-compatible Speedlites).

## About EZ/E/EG/ML/TL-series Speedlites

**The flash cannot be fired with an EZ/E/EG/ML/TL-series Speedlite set in the TTL or A-TTL autoflash mode. Use the Speedlite's manual flash mode instead if provided.**

- Before attaching an external Speedlite, retract the built-in flash if it is popped up.
- If the EX-series Speedlite's firing mode is set to TTL autoflash with the Custom Function, the Speedlite will not fire.


- If autofocus cannot be achieved, the external, EOS-dedicated Speedlite's AF-assist beam (if the Speedlite has an AF-assist beam) will be emitted automatically (except in the <📷> <📷> <📷> modes).
- The camera is a Type-A camera that can use all the features of EX-series Speedlites.

## Using Non-Canon Flash Units

The camera can synchronize with compact, non-Canon flash units at 1/200 sec. or slower. Be sure to test the flash unit beforehand to make sure it synchronizes properly with the camera.

- If the camera is used with a flash unit or flash accessory dedicated to another camera brand, the camera may not operate properly and malfunction may result.
- Do not attach a high-voltage flash unit on the camera's hot shoe. It might not work.

## LCD Panel Illumination

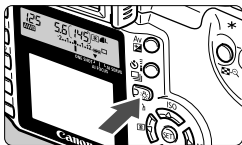

The LCD panel is provided with illumination.

To illuminate the LCD panel, press the <📷> button (📷). To turn off the illumination, press the button again. Use it to read the LCD panel in the dark.

- Pressing any shooting-related button or turning the Mode Dial while the LCD panel is illuminated prolongs the illumination.
- When the camera is connected to a printer and the <📷> button turns blue, the button functions as a Direct print button. (p.136)

# 7

## Image Playback

---

This chapter explains image playback operations such as how to view and erase captured images and how to connect the camera to a TV monitor.

**For images taken with another camera:**

The camera might not be able to properly display images captured with a different camera or edited with a personal computer or whose file name was changed.

## MENU Setting the Image Review Time

You can set how long the image is to be displayed on the LCD monitor right after it is captured. To keep the image displayed, set **[Hold]**. To not have the image displayed, set **[Off]**.

### 1 Select **[Review time]**.

- Select the **[▶]** tab.
- Press the **<▲▼>** key to select **[Review time]**, then press **<SET>**.

### 2 Set the desired review time.

- Press the **<▲▼>** key to select the desired setting, then press **<SET>**.



- If you press the **<INFO.>** button during the image review right after shooting, you can change the display format.
- The **[Hold]** setting keeps displaying the image until you press the shutter button halfway. However, if auto power off has been set, the camera will turn off automatically after the auto power off time elapses.
- During the image review for single-shooting, you can delete the displayed image by pressing the **<⏏>** button and selecting **[OK]**.
- To view the images captured so far, see “Image Playback” (p.107).




## MENU Auto Image Rotation

Vertical shots can be rotated automatically so that they are displayed upright during playback.

### 1 Select [Auto rotate].

- Select the [**1**] tab.
- Press the <▲▼> key to select [**Auto rotate**], then press <Ⓢ>.

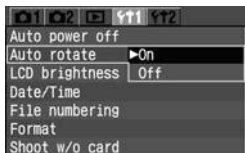

### 2 Select [On].

- Press the <▲▼> key to select [**On**], then press <Ⓢ>.

### 3 Take a vertical shot.

- The image review right after image capture will not display the image vertically on the LCD monitor.



### 4 Playback the image.

- Press the <▶> button.
- ▶ The vertical shot will be displayed vertically as shown on the left.



- Auto rotate will work only if [**Auto rotate**] has been set to [**On**]. Auto rotate will not work with vertical images captured while [**Auto rotate**] was [**Off**]. It will not rotate even if you later switch it to [**On**] for playback.
- If the vertical image is taken while the camera is pointed up or down, the image might not rotate automatically for playback.



When you change the camera's orientation between horizontal and vertical, the camera orientation sensor will make a small sound. This is normal and not a defect.

## MENU Setting the LCD Brightness

You can adjust the brightness of the LCD monitor to one of five levels.




### 1 Select [LCD brightness].

- Select the [**f1**] tab.
- Press the <▲▼> key to select [**LCD brightness**], then press <SET>.
- ▶ The LCD Brightness screen will appear.



### 2 Adjust the brightness.


- While looking at the gray chart on the left, press the <◀▶> key to adjust.
- Press <SET> to exit the setting and return to the menu.

 To check the image's exposure, look at the histogram (p.108).

# Image Playback


You can select any captured image to view. You can view a single image, the shooting information, an index display, or a magnified view.

## ▶ Single image display

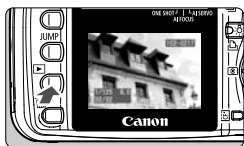


### 1 Playback the image.

- Press the <▶> button.
- ▶ The last captured image will appear on the LCD monitor.

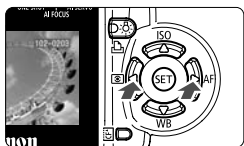


### 2 Select the image.

- To view images starting with the last image, press the <◀> key. To view images starting with the first image, press the <▶> key.
- Press the <INFO.> button to switch the display format.

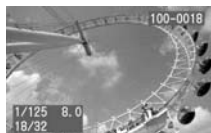

Single image display  
(with basic info)

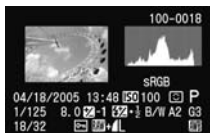

Shooting information




Single image display  
(no shooting info)

- To quit the playback, press the <▶> button. The LCD monitor will turn off.



- Even in display formats other than single image (index display, magnified view, etc.), you can press the <INFO.> button to display or hide the basic info.
- After continuous shooting while data is being written to the CF card (access lamp blinking), press the <▶> button to display the last image which has been written to the CF card so far. Press the <◀> key to select the image. You can view in sequence the images whose writing to the CF card has been completed.

## Shooting Information Display

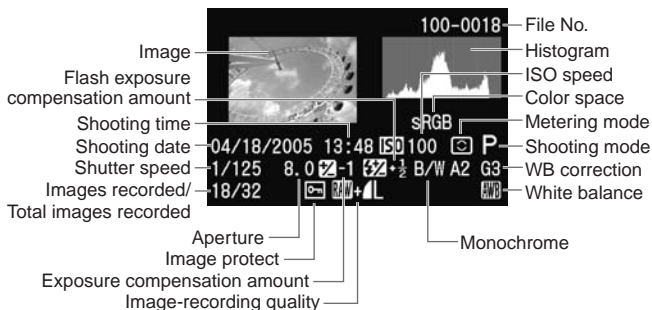

## Histogram

A histogram is a graph indicating the image's brightness distribution. The horizontal axis indicates the brightness level (darker on the left and brighter on the right), while the vertical axis indicates how many pixels exist for each brightness level.

The more pixels there are toward the left, the darker the image. And the more pixels there are toward the right, the brighter the image.

If there are too many pixels on the left, the shadow detail will be lost. And if there are too many pixels on the right, the highlight detail will be lost. The tones in-between will be reproduced.

With the image's histogram, you can check how accurate or lopsided the exposure is and how rich the overall tonal range is.

### Sample Histograms



## Highlight Alert


When the shooting information is displayed, any overexposed areas of the image will blink. To obtain more image detail in the overexposed areas, set the exposure compensation to a negative amount and shoot again.

## Index Display

Nine thumbnail images are displayed on one screen.

### 1 Playback the image.

- Press the <▶> button.
- ▶ The last captured image will appear on the LCD monitor.

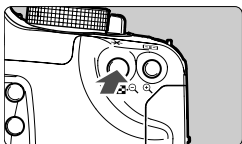


### 2 Display the index images.

- Press the <☐·☐> button.
- ▶ The selected thumbnail will be highlighted within a green frame.



### 3 Select the image.

- Press the <◀▶> keys to move the green frame in the respective direction.

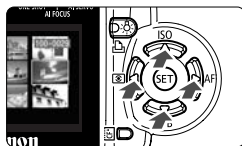

## Switching from the index display to another display mode

- To display a single image, press the <▶> button.
- Pressing the <☐·☐> button switches to the single image display and pressing it again switches to magnified view.


While the index is displayed, press the <JUMP> button, then press the <◀▶> key to jump nine images forward or back. (p.111)

## Magnified View

You can magnify the image by 1.5x to 10x on the LCD monitor.

### 1 Playback the image.

- Display the image in the single-image or image info display mode.

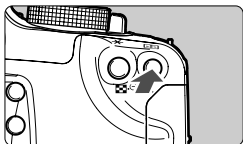

### 2 Magnify the image.



- Press the  $\langle \text{MAGNIFY} \rangle$  button.
- ▶ At first, the center of the image will be magnified.
- To increase the magnification, hold down the  $\langle \text{MAGNIFY} \rangle$  button.
- Press the  $\langle \text{RESET} \cdot \text{MAGNIFY} \rangle$  button to reduce the magnification. If you hold down the button, the magnification will decrease until it reaches the size in step 1.



Magnified area

### 3 Scroll around the image.

- Press the  $\langle \text{DIRECTIONAL KEYS} \rangle$  to scroll around in the respective direction.
- Repeat steps 2 and 3 to magnify other areas of the image.
- To exit the magnified display, press the  $\langle \text{EXIT} \rangle$  button and the single image display will return.

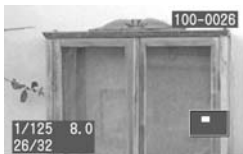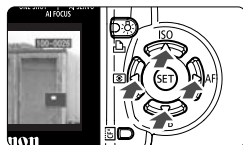


 While in the magnified view, you can maintain the same magnified area and magnification when you turn the  $\langle \text{DIAL} \rangle$  to view another image.

## JUMP Jump Display

During the single image, image with shooting information, index, or magnified image display, you can jump forward or back to images stored on the CF card.

How to use Jump function

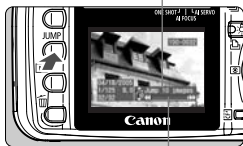


Jump bar

### 1 Playback the image.

### 2 Go to the jump display.

- Press the < JUMP > button.
- ▶ On the lower right of the screen, you can see the jump bar.
- During the single image or image with shooting information display, you can switch the jump method (10 images/100 images/Date) by pressing the < ▲▼ > key.

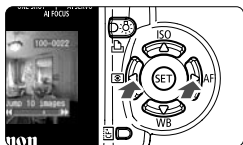

### 3 Jump forward or back.

- Press the < ◀ ▶ > key.
- To quit the image jump, press the < JUMP > button. The jump bar will disappear.

#### Jumping during the single image or image with shooting information display

Jump by 10 images or 100 images

Press the < ◀ > key to jump back by 10 images/100 images. Or press the < ▶ > key to jump forward by 10 images/100 images.

Jump by date

You can jump to a picture taken on a specific date. (If there are multiple pictures taken on the same date, the display will jump to the first picture taken on that date.) Press the < ◀ > key to jump back to an older picture. Or press the < ▶ > key to jump forward to a newer picture.

#### Jumping in the magnified view


Turn the < > dial counterclockwise to jump ten images backward, or turn it clockwise to jump ten images forward. The magnified position and magnification will be maintained during the image jump.

#### Jumping in the index display mode

Press the < ◀ > key to jump back by 9 images. Or press the < ▶ > key to jump forward by 9 images.

**MENU Automated Playback of Images (Auto Play)**

You can playback the CF card's images in an automatic slide show. Each image will be displayed for about 3 sec.

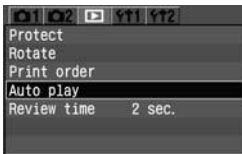**1 Select [Auto play].**

- Select the [▶] tab.
- Press the <▲▼> key to select [Auto play], then press <SET>.
- ▶ The Auto play screen will appear.

**2 Start the auto play.**

- ▶ After [Loading image...] is displayed for a few seconds, auto play will start.
- To pause the auto play, press <SET>.
- During pause, [||] will be displayed on the upper left of the image. Press <SET> again to resume the auto play.

**3 Stop the auto play.**

- To stop the auto play and return to the menu, press the <MENU> button.


- During auto play, auto power off will not work.
- The display time may vary depending on the image.

- During auto play, you can press the <INFO.> button to change the display format.
- During pause, you can press the <◀▶> key to view another image.




## MENU Rotating an Image

You can rotate an image by 90° or 270° clockwise. The image can then be displayed in the correct orientation during playback.

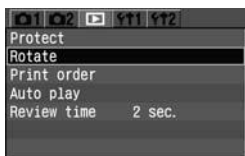

### 1 Select [Rotate].

- Select the [▶] tab.
- Press the <▲▼> key to select [Rotate], then press <SET>.
- ▶ The Rotate screen will appear.

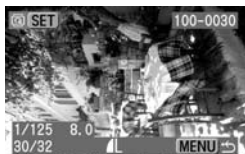

### 2 Rotate the image.


- Press the <◀▶> key to select the image to be rotated, then press <SET>.
- ▶ Each time you press <SET>, the image will rotate clockwise.
- To rotate another image, repeat step 2.
- To exit the Rotate screen and return to the menu, press the <MENU> button.



- If you have set [▶▶ Auto rotate] to [On] (p.105) before taking the vertical shots, you need not rotate the image as described above.
- You can rotate the image even after you change the display format to shooting info display, magnified view, or index display after step 1.

# Displaying the Images on TV

By connecting the camera to a TV set with the video cable (provided), you can view the captured images on a TV set. Always turn off the camera and the television before connecting or disconnecting them.

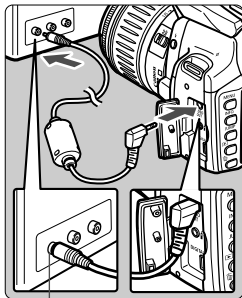

Video IN terminal

## 1 Connect the camera to the TV.


- Open the camera's terminal cover.
- Use the video cable (provided) to connect the camera's <VIDEO OUT> terminal to the TV monitor's VIDEO IN terminal.
- Insert the cable plug all the way in.

## 2 Turn on the TV and switch the TV's line input to Video IN.

## 3 Turn the power switch to <ON>.

## 4 Press the <▶> button.


- ▶ The image will appear on the TV screen. (The camera's LCD monitor will display nothing.)
- After you finish, set the power switch to <OFF>, turn off the TV, then disconnect the video cable.

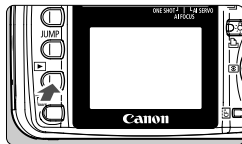

- If the proper video system format is not set, the image will not be displayed properly. Set the proper video system format with [**1** **2** Video system].
- Do not use any video cable other than the one provided. Images might not be displayed if you use a different video cable.
- Depending on your TV or monitor, part of the image might be truncated.

## MENU Protecting Images

This prevents the image from being erased accidentally.

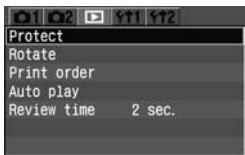

### 1 Select [Protect].

- Select the [] tab.
- Press the <▲▼> key to select [Protect], then press <SET>.
- ▶ The Protect screen will appear.



Image protect icon

### 2 Protect the image.

- Press the <◀▶> key to select the image to be protected, then press <SET>.
- ▶ When an image is protected, the <◻> icon will appear below the image.
- To cancel the image protection, press the <SET> button again. The <◻> icon will disappear.
- To protect another image, repeat step 2.
- To exit the Protect screen and return to the menu, press the <MENU> button.




- Once an image is protected, it cannot be erased by the camera's Erase function. To erase a protected image, you must first cancel the protection.
- If you erase all the images (p.117), only the protected images will remain. This is convenient when you want to erase unnecessary images all at once.
- You can protect the image even after you change the display format to shooting info display, magnified view, or index display after step 1.

## Erasing Images

You can erase images individually or erase all the images at one time in the CF card. Protected images (p.115) will not be erased.

- ⚠** Once an image is erased, it cannot be recovered. Make sure you no longer need the image before erasing it. To prevent important images from being erased accidentally, protect them.

### Erasing a Single Image

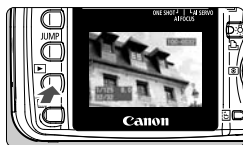


#### 1 Playback the image.

- Press the <▶> button.

#### 2 Select the image to be erased.

- Press the <◀▶> key to select the image to be erased.

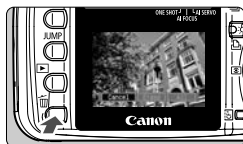

#### 3 Display the Erase menu.

- Press the <🗑> button.
- ▶ The Erase menu will appear at the bottom of the screen.




#### 4 Erase the image.

- Press the <◀▶> key to select [Erase], then press <SET>.
- ▶ The access lamp will blink and the image will be erased.
- If there are other images you want to select, repeat steps 2 to 4.

## Erasing All Images

### 1 Playback the image.

- Press the <▶> button.

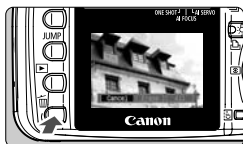


### 2 Display the Erase menu.

- Press the <🗑️> button.
- ▶ The Erase menu will appear at the bottom of the screen.



### 3 Select [All].

- Press the <◀▶> key to select [All], then press <SET>.
- ▶ The confirmation dialog will appear.

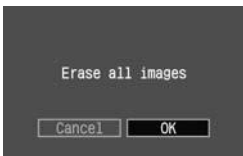

### 4 Erase the image.

- Press the <◀▶> key to select [OK], then press <SET>.
- ▶ All unprotected images will be erased.
- While the images are being erased, you can cancel the erasure by pressing <SET>.




After continuous shooting, while data is being written to the CF card (access lamp blinking), you can press the <▶> button and then press the <🗑️> button to erase the displayed image or all images. If you select [All] and press <SET>, the images captured during continuous shooting (including those not yet processed) and all the images on the CF card will be erased.

## MENU Formatting the CF Card


Format the CF card before using it in the camera.

- ⚠ **Formatting a CF card will erase everything in the card. It will also erase any protected images, so make sure the card has nothing you need to keep. If necessary, transfer the images to a personal computer before formatting the card.**

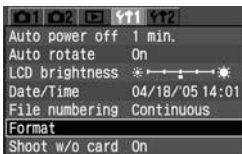

### 1 Select [Format].

- Select the [**1/1**] tab.
- Press the <▲▼> key to select [**Format**], then press <SET>.
- ▶ The confirmation dialog will appear.

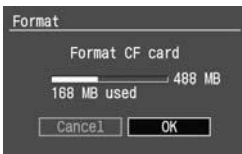

### 2 Format the CF card.

- Press the <◀▶> key to select [**OK**], then press <SET>.
- ▶ The CF card will be formatted (initialized).
- ▶ When the formatting is completed, the menu will reappear.

- ⓘ • A non-Canon CF card or a CF card formatted with another camera or personal computer might not work properly with the camera. If this happens, format the card with the camera first. Then it might work with the camera.
- The CF card's capacity displayed on the Format screen may be lower than the capacity indicated on the card.

### ⓘ Handling "Err CF"


"Err CF" (CF error) displayed on the LCD panel indicates a problem with the CF card that prevents images from being recorded or read. Use another CF card instead.

Or, if you have a commercially-available CF card reader that can read the CF card, use it to transfer all the images in the card to a personal computer. After transferring all the images to a personal computer, format the CF card. It may then return to normal.

# 8


## Direct Printing from the Camera

You can connect the camera directly to a printer and print out the images in the CF card. The camera enables direct printing with printers compatible with “<img alt="PictBridge icon" data-bbox="345 520 375 545"/> PictBridge”, Canon “<img alt="CP Direct icon" data-bbox="415 520 445 545"/> CP Direct”, and Canon “<img alt="Bubble Jet Direct icon" data-bbox="485 520 515 545"/> Bubble Jet Direct.”

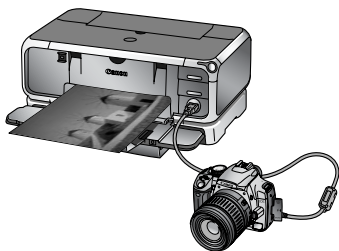

## Conventions Used in this Chapter

This chapter includes procedures for various types of printers. After “Preparing to Print” on the next page, follow the instructions applicable to your printer on the pages indicated.

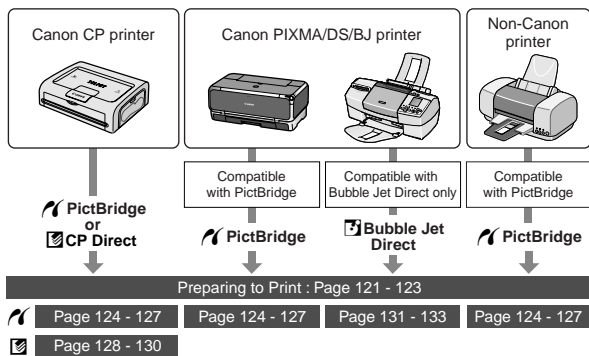

## Canon's PictBridge Web Site

The Web site below gives more information about using your Canon camera with various printers such as which paper types to use.

<http://canon.com/pictbridge/>




# Preparing to Print

You do the direct printing procedure entirely through your camera's LCD monitor.

## Setting the Camera

### 1 Select [Communication].

- Select the [**fT2**] tab.
- Press the <▲▼> key to select [**Communication**], then press <SET>.

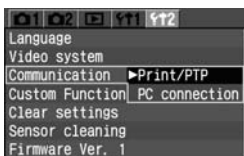


### 2 Select [Print/PTP].

- Press the <▲▼> key to select [**Print/PTP**], then press <SET>.

⚠ When connecting the camera to a personal computer, set [**Communication**] to [**PC connection**]. Communication between the camera and personal computer will not work if [**Print/PTP**] is set.

## Connecting the Camera to the Printer

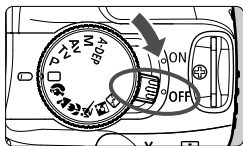

### 1 Turn the camera's power switch to <OFF>.

### 2 Set up the printer.

- For details, refer to the printer's manual.








⚠


- RAW images are not compatible with direct printing.
- Do not disconnect the cable during direct printing.

### 3 Connect the camera to the printer.

- Refer to the table (Printers and Cables) below to select the proper cable to connect the camera to printer.


#### Printers and Cables

Printer Compatibility		Suitable Cable
	PictBridge only	Interface cable provided with camera The plug at both ends have the <img alt="PictBridge icon" data-bbox="385 385 415 415"/> icon.
 	PictBridge and CP Direct	
 	PictBridge and Bubble Jet Direct	
	CP Direct only	Cable provided with printer Only one plug has the <img alt="PictBridge icon" data-bbox="385 505 415 535"/> icon.
	Bubble Jet Direct only	

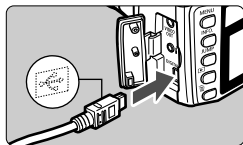

- When connecting the cable plug to the camera's <DIGITAL> terminal, the cable plug's <img alt="PictBridge icon" data-bbox="385 605 415 635"/> icon must face the front side of the camera.
- To connect to the printer, refer to the printer's instruction manual.

### 4 Turn on the printer.

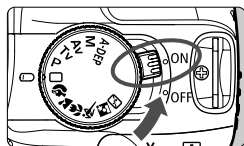

### 5 Turn the camera's power switch to <ON>.

- Some printers may have a beeping sound.

## PictBridge



## CP Direct






## Bubble Jet Direct



## 6 Playback the image.

- Press the <▶> button.
- ▶ The image will appear and one of three icons <👉 / 🖨️ / 📄> will appear on the upper left to indicate that the camera is connected to the respective type of printer.
- ▶ The Direct print button lamp will light in blue.
- The procedure will be different depending on the icon displayed. See the applicable pages below.

Icon	Reference pages
	124 - 127, 136
	128 - 130, 136
	131 - 133, 136



- If the camera is running by battery power, make sure it is fully charged. During direct printing, keep checking the battery level.
- If there is a long beeping sound in step 5, it indicates a problem with the PictBridge printer. To find out what's wrong, do the following:  
Press the <▶> button to playback the image and follow the steps below.
  1. Press <SET>.
  2. On the print setting screen, select **[Print]**.
 The error message will be displayed on the LCD monitor. See "Error Messages" on page 127.
- Before disconnecting the cable, turn off the camera and printer. Pull out the cable while holding the plug, not the cord.
- When connecting the camera to the printer, do not use any cable other than the dedicated interface cable.



For direct printing, using AC Adapter Kit ACK-DC20 (optional) to power the camera is recommended.

# Printing with PictBridge

The setting options will differ depending on the printer. Some settings might be disabled. For details, refer to your printer's instruction manual.

Printer-connected icon



## 1 Select the image(s) to be printed.

- Check that the <img alt="printer with lightning bolt icon" data-bbox="65 215 105 235"/> icon is displayed on the upper left of the LCD monitor.
- Press the <img alt="left and right arrow keys" data-bbox="425 280 465 300"/> key to select the image to be printed.

## 2 Press <img alt="SET key" data-bbox="335 335 375 355"/>.

- ▶ The Print setting screen will appear.

### Print setting screen



Set the date imprinting to on or off.

Set the printing effects.

Set the quantity to be printed.

Set the trimming area.

Set the paper size, type, and layout.

Returns to the screen in step 1.

Starts the printing.

The paper size, type, and layout you have set will be displayed.


\* Depending on your printer, certain settings like date imprinting and trimming might not be available.



## 3 Select [Paper Settings].


- Press the <img alt="up and down arrow keys" data-bbox="425 710 465 730"/> key to select [Paper settings], then press <img alt="SET key" data-bbox="335 735 375 755"/>.
- ▶ The Paper settings screen will appear.

## Setting the Paper Size

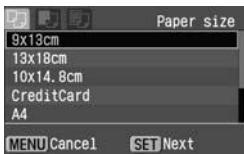

- Press the <▲▼> key to select the size of the paper loaded in the printer, then press <SET>.
- ▶ The Paper Type screen will appear.

## Setting the Paper Type

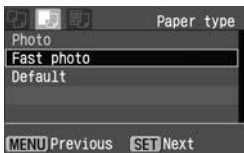

- Press the <▲▼> key to select the type of the paper loaded in the printer, then press <SET>.
- ▶ The Page Layout screen will appear.


### About the Paper Types

If you are using a Canon PIXMA/DS/BJ printer with Canon paper, set the respective paper type as follows:

<b>Photo</b>	Photo Paper Plus Glossy
<b>Fast Photo</b>	Photo Paper Pro
<b>Default</b>	Photo Paper Plus Glossy

If you are using a non-Canon printer, refer to the printer's instruction manual.

## Setting the Layout

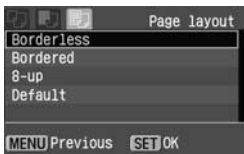

- Press the <▲▼> key to select the desired layout, then press <SET>.
- ▶ The Print setting screen will reappear.

## Layout Settings

<b>Borderless</b>	The print will have no borders. If your printer cannot print borderless prints, the print will have borders.
<b>Bordered</b>	The print will have a white border along the edges.
<b>**-up</b>	Option to print 2, 4, 8, 9, 16, or 20 copies of same image on one sheet.
<b>Default</b>	With a Canon printer, the default is borderless.

### 4 Set the other options.

- If desired, also set the <☺> date imprinting, <☒> printing effects, and <☰> number of copies.

#### ☺ Date imprinting



#### ☒ Printing effects



#### ☰ Number of copies



- Press the <▲▼> key to select the desired option.
- Press the <◀▶> key to select the desired setting.
- Depending on the BJ printer, the <☒> Printing effects setting may enable you to select the **[Vivid]** (for vivid greens and blue sky), **[NR]** (noise reduction), **[Vivid+NR]** or **[On]** setting.
- For details on trimming, see page 134.



## 5 Start printing.

- Press the <▲▼> key to select **[Print]**, then press <ⓈET>.
- ▶ The printing will start.
- When the printing ends, the screen will return to step 1.
- To stop the printing, press <ⓈET> while **[Stop]** is displayed, then select **[OK]** and press <ⓈET>.



- Depending on the image's file size and recording quality, it may take some time for the printing to start after you select **[Print]**.
- The **[Default]** setting for printing effects and other options are the printer's own default settings as set by the printer's manufacturer. See the printer's instruction manual to find out what the **[Default]** settings are.

### Handling Printer Errors

If you resolve a printer error (no ink, no paper, etc.) and select **[Continue]** to resume printing but it does not resume, operate the buttons on the printer to resume printing. For details, see the printer's instruction manual.

### Error Messages

If a problem occurs during printing, an error message will appear on the camera's LCD monitor. Press <ⓈET> to stop printing. After resolving the problem, resume printing. For details on how to resolve a problem with the printer, refer to the printer's instruction manual.

#### Paper Error

Check whether the paper is properly loaded in the printer.

#### Ink Error

The printer has run out of ink or the waste ink tank is full.

#### Hardware Error

Check for any printer problems other than paper and ink problems.

#### File Error

The selected image cannot be printed via PictBridge.

Images taken with a different camera or images edited with a computer might not be printable.

## ☑ Printing with CP Direct

Printer-connected icon



### 1 Select the image to be printed.

- Check that the <☑> icon is displayed on the upper left of the LCD monitor.
- Press the <◀▶> key to select the image to be printed.

### 2 Press <SET>.

- ▶ The Print setting screen will appear.

#### Print setting screen



Set the quantity to be printed.

Set the trimming area.

Set the printing style.

Returns to the screen in step 1.

Starts the printing.

The printing style settings are displayed.

<☺> is the date icon.

### 3 Select [Style].


- Press the <▲▼> key to select [Style], then press <SET>.
- ▶ The Style screen will appear.





## 4 Set the options as desired.

- Set the **[Image]**, **[Borders]**, and **[Date]** as desired.

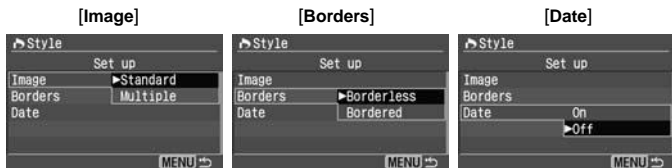

- Press the <▲▼> key to select the desired option, then press <SET>.
- Press the <▲▼> key to select the desired setting, then press <SET>.
- **[Image]** is selectable when credit card-size paper is used. If you select **[Multiple]**, 8 small images of the same picture will be printed on the paper.
- Check the **[Borders]** and **[Date]** settings and set them if necessary.
- When you are done, press the <MENU> button to return to the Print setting screen.



## 5 Set the number of copies.

- Set as necessary.
- Press the <▲▼> key to select **[copies]**.
- Press the <◀▶> key to set the desired quantity.
- Set a number from 1 to 99.

## 6 Set the trimming.

- Set as necessary.
- For details on trimming, see page 134.



## 7 Start printing.

- Press the <▲▼> key to select **[Print]**, then press <SET>.
- ▶ The printing will start.
- When the printing ends, the screen will return to step 1.
- To stop the printing, press <SET> while **[Stop]** is displayed, then select **[OK]** and press <SET>.

- The date may look light if it is imprinted on a bright background or border.
- If **[Multiple]** is selected, **[Borders]** and **[Date]** cannot be selected. **[Borderless]** will be set and **[Date]** will be set to **[Off]**. The image will also be cut off along all four edges.

- If **[Date]** is **[On]**, the date recorded for the image will appear on the print. The date will appear on the lower right of the image.
- If you select **[Stop]** while printing only one image, the printing will not stop until it finishes printing the image. If you are printing multiple images, the printing will stop after the current image is finished printing.
- If a problem occurs during printing, an error message will appear on the camera's LCD monitor. Select **[Stop]** or **[Resume]** (after resolving the problem). If **[Resume]** is not displayed, select **[Stop]**.

# Direct Printing with Bubble Jet Direct

## 1 Printer-connected icon



## Select the image to be printed.

- Check that the <SET> icon is displayed on the upper left of the LCD monitor.
- Press the <◀▶> key to select the image to be printed.

## 2 Press <SET>.

- ▶ The Print setting screen will appear.

### Print setting screen



Set the quantity to be printed.

Set the trimming area.

Set the printing style.

Returns to the screen in step 1.

Starts the printing.

The printing style settings are displayed.


<☺> is the date icon.

## 3 Select [Style].

- Press the <▲▼> key to select [Style], then press <SET>.
- ▶ The Style screen will appear.



## 4 Set the options as desired.

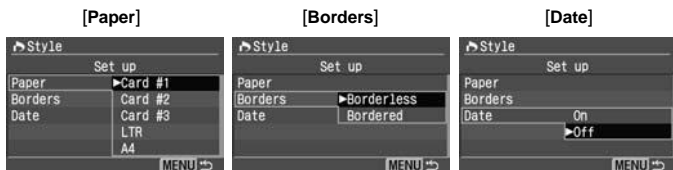

- Press the <▲▼> key to select the desired option, then press <SET>.
- Press the <▲▼> key to select the desired setting, then press <SET>.
- **[Paper]** is the size of the paper loaded in the printer.
- Check the **[Borders]** and **[Date]** settings and set them if necessary.
- When you are done, press the <MENU> button to return to the Print setting screen.



## 5 Set the number of copies.

- Set as necessary.
- Press the <▲▼> key to select **[copies]**.
- Press the <◀▶> key to set the desired quantity.
- Set a number from 1 to 99.


## 6 Set the trimming.


- Set as necessary.
- For details on trimming, see page 134.



## 7 Start printing.

- Press the <▲▼> key to select [**Print**], then press <SET>.
- ▶ The printing will start.
- When the printing ends, the screen will return to step 1.
- To stop the printing, press <SET> while [**Stop**] is displayed, then select [**OK**] and press <SET>.

 If [**Borders**] is set, the date might be imprinted on the border, depending on the printer.

- 
- If [**Date**] is [**On**], the date recorded for the image will appear on the print. The date will appear on the lower right of the image.
  - If you select [**Stop**] during the printing, the printing will stop and the paper will be discharged.
  - If a problem occurs during printing, an error message will appear on the camera's LCD monitor. Select [**Stop**] or [**Continue**]. If you select [**Continue**] and the printer does not resume printing, it will resume automatically after you resolve the problem.
  - If you are using a BJ printer equipped with an operation display panel, the error No. will be displayed if an error occurs. To resolve the respective error, refer to the BJ printer's instruction manual.

# Setting the Trimming

You can crop the image and print only the cropped portion as if the image was recomposed.

**Do the trimming right before printing.** If you set the trimming and then set the print settings, you may have to set the trimming again.



## 1 Select [Trimming].

- Press the <▲▼> key to select [Trimming], then press <SET>.
- ▶ The trimming screen will appear.



## 2 Trim the image.

- The image area within the trimming frame will be printed.
- The operation guide disappears while you trim the image. It will reappear after 5 sec. of idle time.



### Changing the trimming frame size

- When you press the <Q> or <■·Q> button, the size of the trimming frame will change. The smaller the trimming frame, the larger the image magnification will be.



### Moving the trimming frame

- Press the <◆> keys to move the trimming frame in the respective direction. Move the trimming frame until it shows the desired image area or composition.

### Rotating the frame

- The <INFO.> button toggles between the vertical and horizontal orientation of the trimming frame. For example, a horizontal shot can be printed as a vertical shot.

Image area to be printed



### 3 Exit the menu.

- Press <SET>.
- ▶ The Print setting screen will reappear.
- ▶ On the upper left, you can see the trimmed image area that will be printed.



- Depending on the printer, the trimmed image area might not be printed as you specified.
- The smaller you make the trimming frame, the grainier the picture will look. If the picture will be too grainy, the trimming frame will turn red.
- While trimming the image, look at the camera's LCD monitor. If you look at the image on a TV screen, the trimming frame might not be displayed accurately.




The trimming frame shape will be different depending on the **[Paper settings]**, **[Image] / [Paper]**, **[Page layout] / [Borders]** settings.

## Easy Printing

When you print directly from your camera to your printer, the printing settings will be saved in your camera. To use the same settings again, follow the steps below.

- 1 Connect the camera to a printer and prepare for printing.**
- 2 Playback the images and select the ones to be printed.**
- 3 Press the <img alt="Print icon" data-bbox="375 305 405 325"/> button that lights in blue.**
  - ▶ The blue lamp will blink and printing will start.

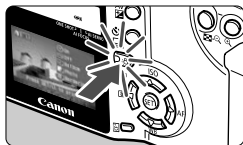

- With Easy Printing, only one print can be printed each time.
- With Easy Printing, any cropping (trimming) will not be applied.



# 9

## DPOF: Digital Print Order Format

With DPOF (Digital Print Order Format), you can use the camera to specify which images in the CF card are to be printed and the quantity. This feature is very convenient when you make prints with a DPOF-compatible printer or photo lab.

### About DPOF

DPOF (Digital Print Order Format) is a standard for recording print ordering instructions to the CF card. It is for images taken with a digital camera, and you can specify which photos and the quantity to print. With a DPOF-compatible digital camera, you can do the following:


- By inserting a CF card into a printer compatible with DPOF, you can make prints as specified.
- Printers capable of direct printing from the camera can print the images as specified by DPOF.
- When ordering prints from a photo lab, you do not need to fill in any order form to specify the image selections, quantity, etc.



# MENU Print Ordering


## Print Settings

Set the print type, date imprinting, and file No. imprinting. The print settings will be applied to all print-ordered images. (They cannot be set individually for each image.)

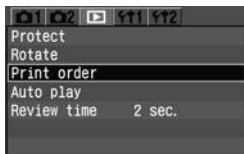


### 1 Select [Print order].

- Select the [Print order] tab.
- Press the <▲▼> key to select [Print Order], then press <SET>.
- ▶ The Print Order screen will appear.

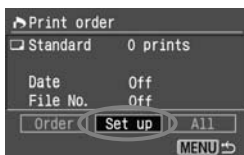

### 2 Select [Set up].

- Press the <◀▶> key to select [Set up], then press <SET>.
- ▶ The Print setting screen will appear.

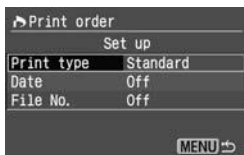


### 3 Set the options as desired.

- Set the [Print type], [Date], and [File No.].
- Press the <▲▼> key to select the desired option, then press <SET>.
- Press the <▲▼> key to select the desired setting, then press <SET>.

[Print type]





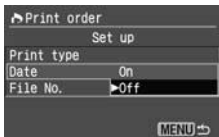

[Date]



[File No.]



Print Type		Standard	Prints one image on one sheet.
		Index	Multiple, thumbnail images are printed on one sheet.
	 	Both	Prints both the standard and index prints.
Date	On	[On] imprints the recorded date on the print.	
	Off		
File No.	On	[On] imprints the file No. on the print.	
	Off		


## 4 Exit the menu.

- Press the <MENU> button.
- ▶ The Print Order screen will reappear.
- Next, select [**Order**] or [**All**] to select the images to be printed.



- RAW images cannot be selected for printing.
- Even if [**Date**] and [**File No.**] are set to [**On**], the date or file No. might not be imprinted depending on the print type setting and printer type.
- With [**Index**] prints, both the [**Date**] and [**File No.**] cannot be set to [**On**] at the same time.
- When printing with DPOF, you must use the CF card whose Print Order specifications have been set. It will not work if you just extract images from the CF card and try to print them.
- Certain DPOF-compatible printers and photo labs might not be able to print the photos as you specified. If this happens with your printer, refer to the printer's instruction manual. Or check with your photo lab about compatibility when ordering prints.
- Do not insert into the camera a CF card whose print order specifications have already been set by a different camera and then try to set print order specifications. The print order may not work or may be overwritten. Also, depending on the image type, the print order may not be possible.

## Selecting Individual Images for Printing

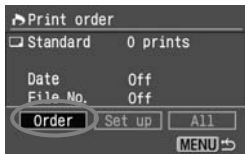

### 1 Select [Order].

- Press the <◀▶> key to select [Order], then press <SET>.
- ▶ The Order screen will appear.



### 2 Select the image to be printed.

- Press the <◀▶> key to select the image to be printed.

### 3 Order the print.

- The print order will vary depending on the [Print Type] setting (p.138).




#### For [Standard] and [Both]

- For standard-type prints, you can set the quantity (up to 99) for each image.
- Press the <▲▼> key to select the print quantity.



#### For [Index]

- If you want to include the image in the index print, checkmark <✓> the box. Otherwise, leave the box unchecked.
- Pressing <▲▼> toggles between checkmarking and uncheckmarking the box.
- If there are other images you want to select, repeat steps 2 and 3.
- You can select up to 998 images.

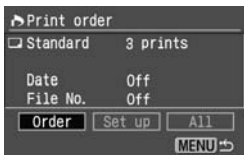

## 4 Exit the menu.

- Press the <MENU> button.
- ▶ The Print Order screen will reappear.
- Press the <MENU> button again to save the print order to the CF card. The menu will then reappear.


## Selecting All Images

The print order can also be set or canceled for all the images in the CF card. For standard-type prints, a quantity of one will be ordered for all the images. Note that after following the “Selecting Individual Images” procedure, if you do the “Selecting All Images” procedure, the print order will change to “All images.”




### 1 Select [All].

- Press the <◀▶> key to select [All], then press <SET>.
- ▶ The All screen will appear.

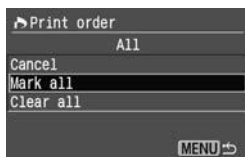

### 2 Select [Mark all].

- Press the <▲▼> key to select [Mark all], then press <SET>.
- ▶ One print each will be specified for all the images, then the Print Order screen will reappear.
- If you select [Clear all], all the images selected for printing will be deselected.
- If you select [Cancel], the Print Order screen will reappear.

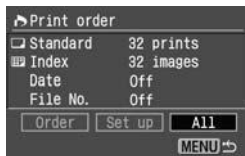

### 3 Exit the menu.

- On the Print Order screen, press the <MENU> button.
- ▶ The settings will be saved to the CF card, and the menu will reappear.

- Note that RAW images cannot be selected for printing even when you set “Mark all.”
- When using a PictBridge printer, print no more than 400 images for one print order. If you specify more than this, all the selected images might not be printed.

## MENU Direct Printing with DPOF

With a printer compatible with direct printing, you can easily print images specified with DPOF.

### 1 Prepare to print.

- See page 121, 122. See “Setting the Camera” and “Connecting the Camera to the Printer” (steps 1 to 5).



### 2 Select [Print order].

- Select the [ ] tab.
- Press the <▲▼> key to select [Print order], then press <SET>.
- ▶ The Print Order screen will appear.




### 3 Select [Print].

- Press the <◆◇> key to select [Print], then press <SET>.
- [Print] will be displayed only if the camera is connected to the printer and printing is possible.
- ▶ The Print setting screen will appear.

### 4 Set the printing options.

PictBridge

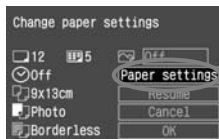

CP Direct



Bubble Jet Direct



PictBridge

- Set the [Paper settings] and <🖨️> printing effects. (p.124)

 **CP Direct** /  **Bubble Jet Direct**

- Set the **[Style]**. (p.128/131)

## 5 Start printing.

- Press the <▲▼> key to select **[OK]**, then press <SET>.
- ▶ The printing will start.
- To stop the printing, press <SET> while **[Stop]** is displayed, then select **[OK]** and press <SET>.

- When printing with a PictBridge or Bubble Jet Direct printer, be sure to set the paper size.
- With PictBridge, the file No. cannot be imprinted.
- If **[Bordered]** is set, the date might be imprinted on the border, depending on the printer.
- The date might look light if it is imprinted on a bright background or border.

- With CP Direct, if **[Print type]** is set to **[Index]**, the number of images printed on one index sheet will be as follows:
  - Credit card size: 20 images      • 9 x 13 cm size: 42 images
  - 10 x 14.8 cm size: 63 images

As for the number of index images with Bubble Jet Direct, see the BJ printer's instruction manual.
- If you stopped the printing and want to resume printing the remaining images, select **[Resume]**. Note that printing will not resume if you stop the printing and do any of the following:
  - Before resuming the printing, you changed the print order settings.
  - Before resuming the printing, you erased an image that was to be printed.
  - In the case of index printing with CP Direct, you changed the paper cassette before resuming the printing.
  - In the case of index printing with PictBridge, you changed the paper settings before resuming the printing.
  - When you stopped the printing, the CF card's remaining capacity was low.
- If there is a printing problem, see page 127 for PictBridge, page 130 for CP Direct, or page 133 for Bubble Jet Direct.



# 10


## Customizing the Camera

---

Custom Functions enable you to customize various camera features to suit your picture-taking preferences.

- Custom Functions work only in Creative Zone modes.


## MENU Setting a Custom Function ★

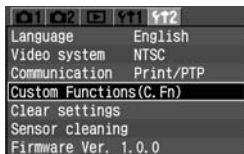

### 1 Select [Custom Functions (C.Fn)].


- Select the [Fn] tab.
- Press the <▲▼> key to select [Custom Functions (C.Fn)], then press <SET>.
- ▶ The Custom Function screen will appear.

Custom Function No.

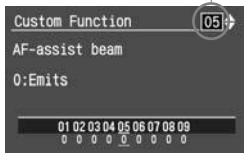

### 2 Select the Custom Function No.

- Press the <▲▼> key to select the Custom Function No., then press <SET>.

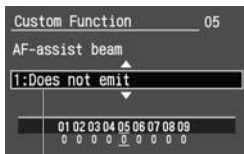

### 3 Change the setting.


- Press the <▲▼> key to select the desired setting (number), then press <SET>.
- Repeat steps 2 and 3 if you want to set other Custom Functions.
- On the bottom of the screen, you can see the current Custom Function settings.

Description

### 4 Exit the menu.


- Press the <MENU> button to return to the menu.
- When you press the shutter button halfway, the <C.Fn> icon will be displayed on the LCD panel.

## Resetting All Custom Functions \*

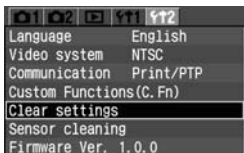


### 1 Select [Clear settings].

- Select the [Y2] tab.
- Press the <▲▼> key to select [Clear settings], then press <SET>.

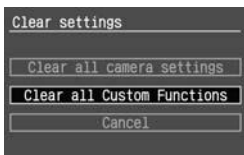

### 2 Select [Clear all Custom Functions].

- Press the <▲▼> key to select [Clear all Custom Functions], then press <SET>.

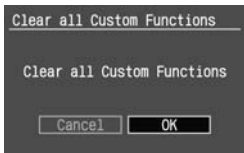

### 3 Select [OK].

- Press the <◀▶> key to select [OK], then press <SET>. All the Custom Functions will then be reset to the default settings.

## MENU Custom Function Settings★

### C.Fn-1 SET button/Cross keys funct.

You can change the function assigned to the <SET> button and <⬅➡> keys for shooting.

**0: Normal**

**1: SET:Quality**

When you press <SET>, the [**Q1 Quality**] menu appears so you can quickly change the setting.

**2: SET:Parameter**

When you press <SET>, the [**Q2 Parameters**] menu appears so you can quickly change the setting.

**3: SET:Playback**

When you press <SET>, the images recorded in the CF card will be played. Assigns the same function as the <▶> button.

**4: Cross keys:AF frame selec.**

At first, you can just use the <⬅➡> keys to select an AF point directly without pressing the <AF-ON> button. To set automatic AF point selection, press the <AF-ON> button. Also, to select the center AF point, press <SET>.

### C.Fn-2 Long exposure noise reduction

**0: Off**

**1: On**

Reduces noise in bulb exposures 30 sec. or longer at ISO 100 - 800 or 1 sec. or longer at ISO 1600. After the picture is taken, the time required for noise-reduction processing will be the same as the exposure time. During the noise reduction processing, "buSY" will be displayed and shooting will not be possible.

### C.Fn-3 Flash sync. speed in Av mode

**0: Auto**

**1: 1/200sec. (fixed)**

Sets the flash sync speed to 1/200 sec. in the aperture-priority AE (Av) mode. (Against dark backgrounds such as the night sky, the subject's background will look dark.)

## C.Fn-4 Shutter button/AE lock button

### 0: AF/AE lock

### 1: AE lock/AF

Convenient when you want to focus and meter separately. Press the <★> button to autofocus and press the shutter button halfway to attain AE lock.

### 2: AF/AF lock, no AE lock

In the AI Servo AF mode, you can press the <★> button to stop the AF operation momentarily. This prevents the AF from being thrown off by any obstacle passing between the camera and subject. The exposure is set at the moment the picture is taken.

### 3: AE/AF, no AE lock

This is useful for subjects which keep moving and stopping repeatedly. In the AI Servo AF mode, you can press the <★> button to start or stop the AI Servo AF operation. The exposure is set at the moment the picture is taken. Thus, the optimum focusing and exposure will always be attained as you wait for the decisive moment.

## C.Fn-5 AF-assist beam

You can enable or disable the camera's AF-assist beam or have it emitted by the EOS-dedicated Speedlite instead.

### 0: Emits

### 1: Does not emit

The AF-assist beam is not emitted at all regardless of the shooting conditions.

### 2: Only emits ext. flash

With an EOS-dedicated Speedlite, it will emit the AF-assist beam when necessary. The camera's built-in flash will not emit the AF-assist beam regardless of the shooting conditions.

## C.Fn-6 Exposure level increments

### 0: 1/3-stop

### 1: 1/2-stop

Sets 1/2-stop increments for the shutter speed, aperture, exposure compensation, AEB, etc.



The exposure level will be displayed in the viewfinder and on the LCD panel as shown below.



## C.Fn-7 Mirror lockup

**0: Disable**

**1: Enable**

Effective for close-up and telephotos shots to prevent camera shake caused by the mirror's reflex action. For more on mirror lockup, see page 94.

## C.Fn-8 E-TTL II

**0: Evaluative**

Fully automatic flash photography under all conditions, from low light to daylight fill-flash.

**1: Average**


The flash exposure is averaged for the entire area covered by the flash. Since the camera will not execute automatic exposure compensation, adjust the flash exposure compensation if necessary. This also applies if you use FE lock.

## C.Fn-9 Shutter curtain sync.

**0: 1st-curtain sync.**

**1: 2nd-curtain sync.**

When a slow shutter speed is set, you can capture a light trail following the subject. The flash fires right before the shutter closes. This Custom Function can be used to obtain 2nd-curtain sync effects even with EX-series Speedlites which do not provide 2nd-curtain sync. If the EX-series Speedlite has this feature, it will override this Custom Function.

 When 2nd-curtain sync is used, a preflash will be fired for flash metering control right after you press the shutter button completely. Remember that the main flash will fire right before the shutter closes.

# 11

## Reference

---

This section will help you understand your camera better. It covers information on camera features, system accessories, and other reference information.



# Function Availability Table

●: Set automatically ○: User selectable

Mode Dial		Basic Zone						Creative Zone				
								P	Tv	Av	M	A-DEP
Quality	JPEG	○	○	○	○	○	○	○	○	○	○	○
	RAW							○	○	○	○	○
	RAW +							○	○	○	○	○
ISO speed	Auto	●	●	●	●	●	●					
	Manual							○	○	○	○	○
White balance	Auto WB	●	●	●	●	●	●	○	○	○	○	○
	Preset WB, Custom WB, WB correction, WB bracketing							○	○	○	○	○
Parameters		● (Parameter 1)						○	○	○	○	○
AF	One-Shot		●	●	●		●	○	○	○	○	●
	AI Servo					●		○	○	○	○	—
	AI Focus	●						●	○	○	○	—
	AF point selection	Auto	●	●	●	●	●	●	○	○	○	○
Manual								○	○	○	○	
Exposure	Evaluative	●	●	●	●	●	●	○	○	○	○	○
	Partial							○	○	○	○	○
	Center-weighted average							○	○	○	○	○
Metering mode	Program shift							○				
	Exposure compensation							○	○	○		○
	AEB							○	○	○	○	○
	AE lock							○	○	○		○
	Depth-of-field preview							○	○	○	○	○
Drive	Single	●		●	●		●	○	○	○	○	○
	Continuous		●			●		○	○	○	○	○
Built-in flash	Auto	●	●		●		●					
	Manual							○	○	○	○	○
	Flash off			●		●		●				
	Red-eye reduction	○	○		○		○	○	○	○	○	○
	FE lock							○	○	○	○	○
	Flash exposure compensation							○	○	○	○	○
Custom Functions/Clearing All Custom Functions								○	○	○	○	○
Camera setting reset								○	○	○	○	○
Image sensor cleaning								○	○	○	○	○






## AF Modes and Drive Modes

Drive mode	AF mode		
	One-Shot AF	AI Focus AF	AI Servo AF
 Single shooting	The picture cannot be taken until focus is achieved. When focus is achieved, it is locked. With evaluative metering, the exposure setting is also locked. (The exposure setting is stored in memory before the shot is taken.)	Automatically switches from One-Shot AF to AI Servo AF if the subject starts moving.	The focusing tracks the subject movement. The exposure is set at the moment the picture is taken.
 Continuous shooting	The above conditions apply during continuous shooting. During continuous shooting (max. 3 shots/sec.), focusing is not executed.		The above conditions apply during continuous shooting. During continuous shooting (max. 3 shots/sec.), focusing is executed.

## AE Lock

(In Creative Zone modes)

Metering mode	AF point selection	
	Automatic AF point selection	Manual AF point selection
 Evaluative Metering*	AE lock is applied at the AF point that achieved focus.	AE lock is applied at the selected AF point.
 Partial Metering	AE lock is applied at the center AF point.	
 Center-weighted Average Metering		

\* When the lens' focus mode switch is set to <MF>, AE lock is applied at the center AF point.



### Image Conversion Factor

Since the image area is smaller than the 35mm film format, it will look like the lens focal length is increased by 1.6x.



Image size  
22.2 x 14.8mm (0.87 x 0.58 in)

35mm image size  
36 x 24mm (1.42 x 0.95 in)

# Troubleshooting Guide

If there is a problem, first refer to this Troubleshooting Guide. If this Troubleshooting Guide does not resolve the problem, contact your dealer or nearest Canon Service Center.

## Power Source

### The battery cannot be recharged.

- **You are using the wrong battery.**
  - ▶ Use Battery Pack NB-2LH.
- **The battery pack is not properly attached to the battery charger.**
  - ▶ Attach the battery pack properly to the charger. (p.20)

### The camera does not operate even when the power switch is set to <ON>.

- **The battery is exhausted.**
  - ▶ Recharge the battery pack. (p.20)
- **The battery is not installed properly.**
  - ▶ Install the battery properly. (p.22)
- **Battery compartment cover is not closed.**
  - ▶ Close the battery compartment cover securely. (p.22)
- **CF card slot cover is not closed.**
  - ▶ Close the CF card slot cover securely. (p.26)

### The access lamp still blinks even when the power switch is set to <OFF>.

- **If you set the power switch to <OFF> right after shooting, the access lamp will still light/blink for a few seconds until the camera finishes recording the image onto the CF card.**
  - ▶ When the camera finishes recording the image to the CF card, the access lamp will stop blinking and the power will turn off automatically.

### The battery becomes exhausted quickly.

- **The battery is not fully charged.**
  - ▶ Recharge the battery fully. (p.20)
- **The battery's service life has expired.**
  - ▶ Replace the battery pack with a new one.

**The camera turns off by itself.**

- **Auto power off is in effect.**
  - ▶ Press the shutter button halfway. If you do not want auto power off to take effect, set [**1** **1** **Auto power off**] on the menu to [**Off**].

**Only the <☐> icon blinks on the top LCD panel.**

- **The battery is almost exhausted.**
  - ▶ Recharge the battery pack. (p.20)

**Shooting****No images can be shot nor recorded.**

- **The CF card is not properly inserted.**
  - ▶ Insert the CF card properly. (p.26)
- **The CF card is full.**
  - ▶ Use a new CF card or erase unnecessary images. (p.26, 116)
- **The battery is exhausted.**
  - ▶ Recharge the battery pack. (p.20)
- **You did not focus perfectly. (The focus confirmation light <●> in the viewfinder blinks.)**
  - ▶ Press the shutter button halfway again and focus the subject. If you still cannot focus properly, focus manually. (p.28, 76)

**The LCD monitor does not display a clear image.**

- **The LCD monitor screen is dirty.**
  - ▶ Use a soft, lens cloth to clean the screen.
- **The LCD's service life has expired.**
  - ▶ Consult your nearest customer service center or dealer.

### The image is out of focus.

- **The lens focus mode switch is set to <MF>.**
  - ▶ Set the lens focus mode switch to <AF>. (p.25)
- **Camera shake occurred when you pressed the shutter button.**
  - ▶ To prevent camera shake, hold the camera still and press the shutter button gently. (p.28, 42)

### The CF card cannot be used.

- **[Err \*\*] is displayed on the LCD panel.**
  - ▶ If it is [Err CF], see page 118.
  - ▶ If it is [Err 02], see page 157.
- **You are using a non-Canon CF card.**
  - ▶ Using Canon CF cards is recommended. (p.159)

## Image Review & Operation

### The image cannot be erased.

- **The image is erase-protected.**
  - ▶ Cancel the protection. (p.115)

### The wrong shooting date and time is displayed.

- **The correct date and time has not been set.**
  - ▶ Set the correct date and time. (p.37)

### No image appears on the TV screen.

- **Video cable plugs are not inserted all the way.**
  - ▶ Insert the video cable plugs all the way in. (p.114)
- **The correct video format (NTSC or PAL) has not been set.**
  - ▶ Set the camera to the correct video format matching the TV set. (p.34)
- **You are not using the video cable that came with the camera.**
  - ▶ Use the video cable that came with the camera. (p.114)

## Direct Printing

### The images cannot be printed.

- **The camera is not properly connected to the printer.**
  - ▶ Use the specified cable to properly connect the camera to the printer. (p.122)
- **The printer is not turned on.**
  - ▶ Turn on the printer.

## Error Codes

If a camera error occurs, “**Err xx**” will be displayed on the LCD panel. Follow the countermeasures below to resolve the problem for respective error code.

If the same error occurs often, something is probably wrong with the camera. Jot down the “**xx**” error code and contact your nearest Canon Service Center.

If an error code appears after you take the picture, the camera might have missed the shot. Press the <▶> button to see if the image appears on the LCD monitor.

Error Code	Countermeasures
<b>Err 01</b>	Communications between the camera and lens is faulty. Clean the lens contacts. (p.9)
<b>Err 02</b>	There is a problem with the CF card. Try any of the following: Remove and re-insert the CF card. Format the CF card. Use a different CF card.
<b>Err 04</b>	The CF card is full. Erase unnecessary images in the card or replace the CF card.
<b>Err 05</b>	Something obstructed the built-in flash's automatic pop-up operation. Turn the power switch to <OFF> and <ON> again.
<b>Err 99</b>	An error other than the above has occurred. Remove and re-install the battery. This error may occur if you use a non-Canon lens and the camera or lens does not operate properly as a result.

## Major Accessories (Optional)



### Battery Pack NB-2LH

Compact, high-capacity, lithium-ion, secondary power pack.



### AC Adapter Kit ACK-DC20

Power source kit (AC adapter, DC coupler, power cord) for supplying power to the camera from a household power outlet. Compatible with 100 - 240 V AC.



### Battery Grip BG-E3

This accommodates two NB-2LH packs or six size-AA batteries. It provides a vertical-grip shutter button, electronic dial, AE lock/FE lock button, AF point selection button, and exposure compensation/aperture setting button.



### Semi-Hard Case EH18-L

Dedicated case to protect the camera.

It can accommodate the camera attached with the EF-S18-55mm f/3.5-5.6 II lens.



### Shoe-mount Speedlites

An EX-series Speedlite can be attached to the camera's hot shoe. You can use E-TTL II autoflash to obtain flash exposures as easy as normal shooting without flash.



### Macro Lites

The EX-series Macro Lites (two models) are ideal for close-up flash photography. You can fire only one or both flash tubes and control the flash ratio to easily obtain sophisticated lighting effects with E-TTL II autoflash.



RC-1



RC-5

### Remote Controller RC-1 and RC-5

Remote control transmitter that enables you to shoot from 5 m (16.4 ft.) away from the camera. The RC-1 can trip the shutter immediately or after a 2-sec. delay, and the RC-5 trips the shutter after a 2-sec. delay.



### Remote Switch RS-60E3

Remote switch to prevent camera shake during super-telephoto shots, close-ups, and bulb exposures. The cord is 60cm/2.0 ft. The switch provides the same effect as pressing the shutter button halfway or completely. A shutter-release lock is also provided.



### E-series Dioptric Adjustment Lenses

One of ten E-series dioptric adjustment lenses (-4 to +3 diopters) can be attached to the camera's eyepiece to further expand the dioptric adjustment range.



### CF card

Data storage media where the captured images are recorded.


CF cards made by Canon are recommended.




### PC card adapter

Enables a CF card to be inserted into a PC card slot or PC card reader.

# System Map

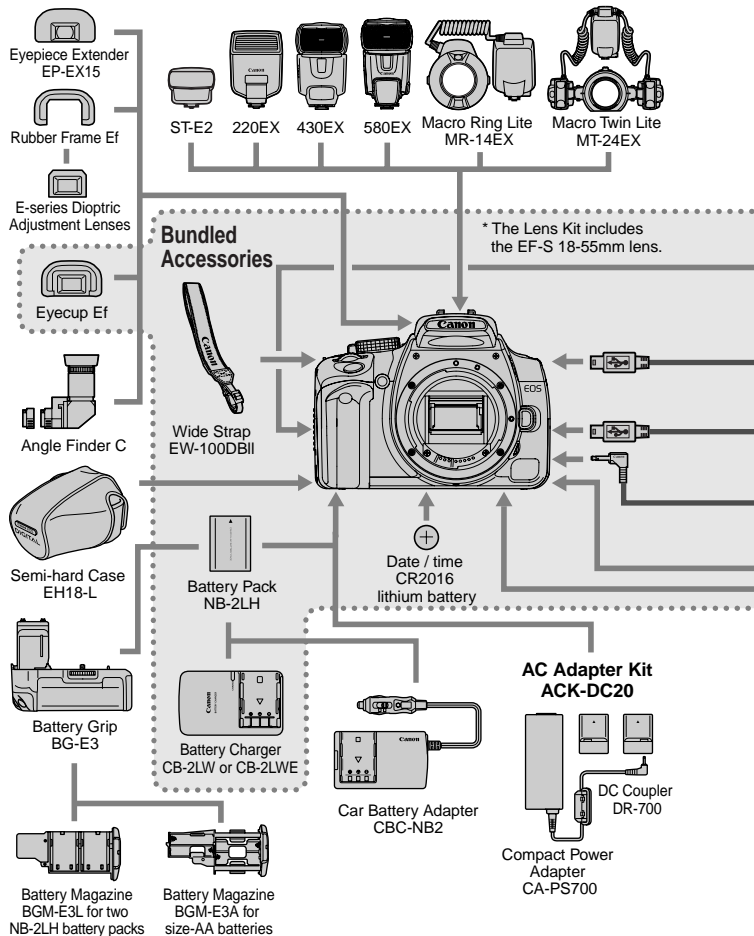



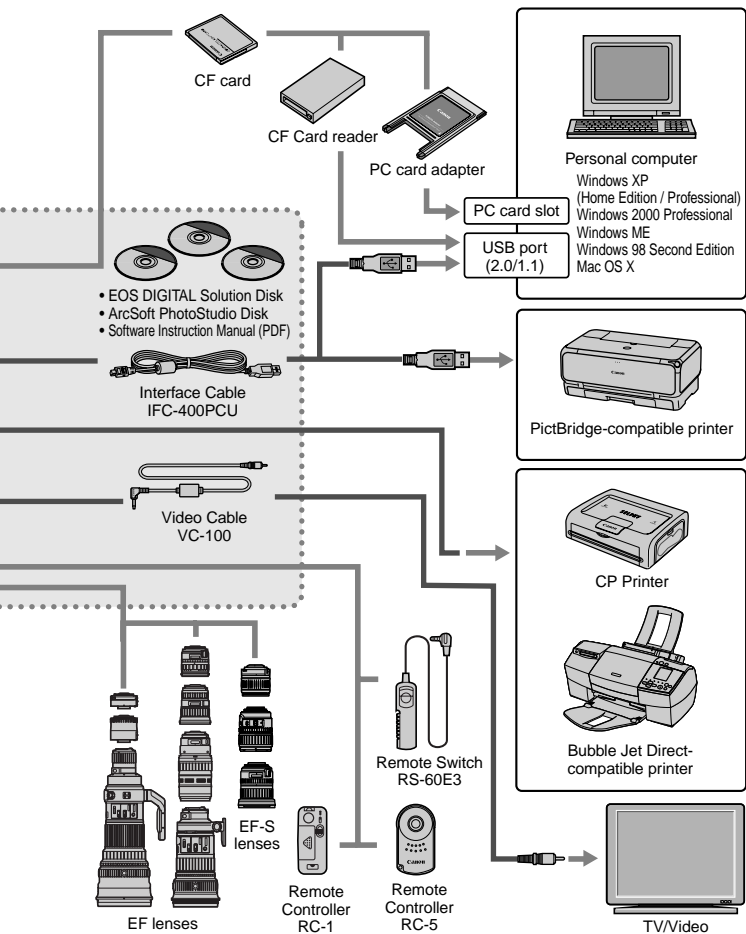

# Specifications

## • Type

Type:	Digital, single-lens reflex, AF/AE camera with built-in flash
Recording media:	CF card (Type I or II) *Compatible with Microdrive and 2GB and larger CF cards
Image size:	22.2 x 14.8mm
Compatible lenses:	Canon EF lenses (including EF-S lenses) (35mm-equivalent focal length is equal to approx. 1.6 times the marked focal length)
Lens mount:	Canon EF mount

## • Imaging Element

Type:	High-sensitivity, high-resolution, large single-plate CMOS sensor
Pixels:	Effective pixels: Approx. 8.00 megapixels Total pixels: Approx. 8.20 megapixels
Aspect ratio:	3:2
Color filter system:	RGB primary color filter
Low-pass filter:	Located in front of the image sensor, non-removable

## • Recording System

Recording format:	Design rule for Camera File System 2.0
Image type:	JPEG, RAW (12bit)
RAW+JPEG	
simultaneous recording:	Possible
File size:	(1) Large/Fine: Approx. 3.3 MB (3456 x 2304 pixels) (2) Large/Normal: Approx. 1.7 MB (3456 x 2304 pixels) (3) Medium/Fine: Approx. 2.0 MB (2496 x 1664 pixels) (4) Medium/Normal: Approx. 1.0 MB (2496 x 1664 pixels) (5) Small/Fine: Approx. 1.2 MB (1728 x 1152 pixels) (6) Small/Normal: Approx. 0.6 MB (1728 x 1152 pixels) (7) RAW: Approx. 8.3 MB (3456 x 2304 pixels) * Exact file sizes depend on the subject, ISO speed, processing parameters, etc.
File numbering:	Consecutive numbering or auto reset
Color space:	sRGB or Adobe RGB
Processing parameters:	Parameter 1 and 2, set 1 to 3 (three custom parameter sets), B/W
Interface:	USB 2.0 Hi-Speed (Print/PTP, PC connection selectable) Video output (NTSC/PAL)

## • White Balance

Type:	Auto, daylight, shade, cloudy, tungsten light, white fluorescent light, flash, custom
Auto white balance:	Auto white balance with the imaging sensor
Color temperature correction:	White balance correction: ±9 stops in full-stop increments White balance bracketing: ±3 stops in full-stop increments * Blue/amber bias or magenta/green bias possible
Color temperature information transmission:	Provided

## • Viewfinder

Type:	Eye-level pentamirror
Coverage:	Vertical/Horizontal 95%
Magnification:	0.8x (-1 diopter with 50mm lens at infinity)
Eyepoint:	21 mm
Built-in dioptic adjustment:	-3.0 - +1.0 diopter
Focusing screen:	Fixed, precision matte
Mirror:	Quick-return half mirror (Transmission:reflection ratio of 40:60, no mirror cut-off with EF600mm f/4 or shorter lenses)
Viewfinder information:	AF information (AF points, focus confirmation light), exposure information (shutter speed, aperture value, AE lock, exposure level, AEB in progress, exposure warning), flash information (flash ready, red-eye reduction enabled, red-eye reduction lamp on, high-speed sync, FE lock, flash exposure compensation), maximum burst, CF card information
Depth-of-field preview:	Enabled with depth-of-field preview button

## • Autofocus

Type:	TTL-CT-SIR with a CMOS sensor (TTL secondary image registration, phase detection)
AF points:	7 AF points
Metering range:	EV 0.5 - 18 (at 20°C/68°F, ISO 100)
Focus modes:	One-Shot AF, AI Servo AF, AI Focus AF, Manual focusing (MF)
AF point selection:	Auto or manual
Selected AF point indicator:	Superimposed in viewfinder and indicated on LCD panel

AF-assist beam: Small series of flashes fired by built-in flash  
Effective range: Approx. 4.0m/13.1ft. at center, approx.  
3.5m/11.5ft. at periphery

### • Exposure Control

Metering modes: 35-zone TTL full aperture metering

- Evaluative metering (linkable to any AF point)
- Partial metering (approx. 9% of viewfinder at center)
- Center-weighted average metering

Metering range: EV 1 - 20 (at 20°C/68°F with 50mm f/1.4 lens, ISO 100)

Exposure control: Program AE (Full Auto, Portrait, Landscape, Close-up, Sports, Night Portrait, Flash Off, Program), shutter-priority AE, aperture-priority AE, depth-of-field AE, manual exposure, E-TTL II autoflash

ISO speed: Basic Zone modes: Automatically set (ISO 100 - 400)  
Equivalent to ISO 100, 200, 400, 800, 1600

Exposure compensation: Manual:  $\pm 2$  stops in 1/3- or 1/2-stop increments (can be combined with AEB)  
AEB:  $\pm 2$  stops in 1/3- or 1/2-stop increments

AE lock: Auto: Applied in One-Shot AF mode with evaluative metering when focus is achieved  
Manual: By AE lock button in all metering modes

### • Shutter

Type: Electronically-controlled, focal-plane shutter

Shutter speeds: 1/4000 to 30 sec. (1/3- and 1/2-stop increments), bulb, X-sync at 1/200 sec.

Shutter release: Soft-touch electromagnetic release

Self-timer: 10-sec. delay

Remote control: Remote Switch RS-60E3  
Remote Controller RC-5/RC-1

### • Built-in Flash

Type: Retractable, auto pop-up flash

Flash metering: E-TTL II autoflash

Guide No.: 13/43 (ISO 100, in meters/feet)

Recycle time: Approx. 3 sec.

Flash-ready indicator: Flash-ready icon lights in viewfinder

Flash coverage: 17mm lens angle of view

FE lock: Provided

Flash exposure compensation:  $\pm 2$  stops in 1/3- or 1/2-stop increments

### • External Speedlite

EOS-dedicated Speedlite: E-TTL II autoflash with EX-series Speedlite

Zooming to match

lens focal length: Provided

### • Drive System

Drive modes: Single, continuous, and self-timer/remote control

Continuous: Max. 3 shots per sec.

Max. burst: JPEG (Large/Fine): Approx. 14 shots

RAW: Approx. 5 shots, RAW+JPEG (Large/Fine):  
Approx. 4 shots

\* With a Canon 512MB CF card.

\* Varies depending on the subject, ISO speed,  
processing parameters, CF card, etc.

### • LCD Monitor

Type: TFT color liquid-crystal monitor

Monitor size: 1.8 in.

Pixels: Approx. 115,000

Coverage: 100% with respect to the effective pixels

Brightness adjustment: Five levels provided  
(Gray level chart displayed during adjustment)

Interface languages: 15

### • Image Playback

Display format: Single image (with or without info), shooting information,  
9-image index, magnified view (Approx. 1.5x - 10x),  
autoplay, image rotation, and jump (by 10/100 images or  
date)

Highlight warning: In the shooting information mode, any overexposed  
highlight areas with no image information will blink.

### • Image Protection and Erase

Protect: Single images can be erase-protected or not.

Erase: One image or all images in the CF card can be erased  
(except protected images).

### • Direct Printing

Compatible printers: CP Direct, Bubble Jet Direct, and PictBridge-compatible  
printers

Printable images: JPEG images (DPOF printing possible)

Easy Print feature: Provided

### • DPOF: Digital Print Order Format

DPOF: Version 1.1 compatible

### • Customization

Custom Functions: 9 Custom Functions with 24 settings

### • Power Source

Battery: Battery Pack NB-2LH, quantity 1  
 \* AC Adapter Kit ACK-DC20 enables a household AC outlet to supply power.  
 \* Battery Grip BG-E3 enables size-AA batteries to supply power.

Battery life: [shots]

Temperature	Shooting Conditions	
	No Flash	50% Flash Use
At 20°C / 68°F	Approx. 600	Approx. 400
At 0°C / 32°F	Approx. 450	Approx. 350

\* The above figures apply when a fully-charged Battery Pack NB-2LH is used.

\* The figures above are based on CIPA (Camera & Imaging Products Association) testing standards.

Battery check: Automatic  
 Power saving: Provided. Power turns off after 1, 2, 4, 8, 15, or 30 min.  
 Date/Time battery: CR2016 lithium battery, quantity 1

### • Dimensions and Weight

Dimensions (W x H x D): 126.5 x 94.2 x 64 mm / 5.0 x 3.7 x 2.5 in.

Weight: 485 g / 17.1 oz. (body only)

### • Operation Environment

Working temperature range: 0°C - 40°C / 32°F - 104°F

Working humidity: 85% or less

**• Battery Charger CB-2LW**

Compatible battery:	Battery Pack NB-2LH
Recharging time:	Approx. 90 min.
Rated input:	100 - 240 V AC, 50/60 Hz
Rated output:	8.4 V DC, 0.55 A
Working temperature range:	0°C - 40°C / 32°F - 104°F
Dimensions (W x H x D):	91 x 56 x 22.5 mm / 3.6 x 2.2 x 0.9 in
Weight:	Approx. 68 g / 2.4 oz

**• Battery Charger CB-2LWE**

Compatible battery:	Battery Pack NB-2LH
Recharging time:	Approx. 90 min.
Rated input:	100 - 240 V AC, 50/60 Hz
Rated output:	8.4 V DC, 0.55 A
Working temperature range:	0°C - 40°C / 32°F - 104°F
Dimensions (W x H x D):	91 x 56 x 22.5 mm / 3.6 x 2.2 x 0.9 in
Weight:	Approx. 61 g / 2.2 oz (without power cord)

- All the specifications above are based on Canon's testing standards.
- The camera's specifications and physical appearance are subject to change without notice.

## **Digital Camera Model DS126071 Systems**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for class B digital devices, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with the ferrite core provided with the digital camera must be used with this equipment in order to comply with Class B limits in Subpart B of Part 15 of the FCC rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.

One Canon Plaza, Lake Success, NY 11042, U.S.A.

Tel No. (516)328-5600



# Index

## A

AC Adapter Kit .....	24, 158
Access lamp.....	27
Accessories .....	158
A-DEP .....	88
Adobe RGB.....	62
AE .....	80
AE lock.....	92, 153
AEB.....	90
AF assist beam .....	74
AF mode .....	70
AF point.....	73
AI Focus AF .....	72
AI Servo AF.....	71
Aperture .....	84
Attaching the Strap .....	19
Auto play .....	112
Auto playback.....	112
Auto power off.....	28, 41
Auto reset.....	67
Auto rotate .....	105
Automatic AF point selection .....	73
Av.....	84

## B

B/W .....	65
Basic Zone modes .....	16
Battery .....	20, 22, 158
Battery Charger .....	17
Battery check .....	22
Battery life .....	23
Beeper .....	50
Bubble Jet Direct.....	131
Built-in flash .....	96
Bulb exposures .....	93
Bundled Items .....	3

## C

C.Fn .....	148
------------	-----

Camera setting display .....	68
Center-weighted average metering...	77
CF card.....	9, 26, 118, 159
Clear all camera settings.....	35
Clear all Custom Functions .....	147
Clear settings .....	34
Close-up .....	46
Color saturation .....	64
Color space .....	62
Color tone.....	64
Communication .....	121
Compression rate .....	52
Continuous .....	67
Continuous shooting.....	78
Contrast.....	64
CP Direct.....	128
Creative Zone modes .....	16
Cross keys.....	18, 30
Custom Functions .....	148
Custom white balance .....	57

## D

DC coupler .....	24
Depth-of-field preview.....	85
Dioptic adjustment.....	42
Direct printing .....	119, 143
DPOF .....	137
Drive mode .....	78

## E

Easy Printing .....	136
Erase .....	116
Erasing a single image .....	116
Erasing all images .....	117
Error Codes .....	157
E-TTL II autoflash.....	96, 101, 150
Evaluative metering.....	77
Exposure compensation.....	89
Exposure level increments .....	149

EX-series Speedlite .....	101
Extension .....	52, 68
External flash .....	101
Eyepiece cover .....	19

**F**

FE lock .....	99, 101
FEB .....	101
File numbering .....	67
Filter Effects .....	66
Firmware .....	34
Flash .....	96, 101, 102
Flash exposure compensation ...	100, 101
Flash off .....	47
Flash sync speed .....	148
Focus confirmation light .....	15
Focus lock .....	75
Focus mode switch .....	70, 76
Folder .....	67
Format .....	118
FP flash .....	101
Full Auto .....	44
Function Availability Table .....	152

**H**

Highlight alert .....	108
High-speed sync .....	101
Histogram .....	108
Holding the Camera .....	42

**I**

Image processing .....	53
Image review time .....	104
Image size .....	153
Image Zone .....	16
Image-recording quality .....	52
Index .....	139
Index display .....	109
INFO. ....	68, 107
Interface cable .....	3

ISO speed .....	55
-----------------	----

**J**

JPEG .....	52
Jump by 10 images/100 images ...	111
Jump by date .....	111
Jump display .....	111

**L**

Landscape .....	46
Language .....	36
LCD brightness .....	106
LCD monitor .....	9, 34
LCD panel .....	9, 14
LCD panel illumination .....	102
Lens .....	9, 25

**M**

M (Manual) .....	86
Magnified view .....	110
Main Dial .....	18, 29
Manual AF point selection .....	73
Manual Focusing .....	76
Max. Burst .....	54
Menus .....	31, 33, 34
Metering mode .....	77
MF .....	76
Mirror lockup .....	94
Mode Dial .....	16
Monochrome .....	65

**N**

Night Portrait .....	47
Noise reduction .....	148
Nomenclature .....	12
Non-Canon flash units .....	102
NTSC .....	34, 114
Number of copies ...	126, 129, 132, 140

**O**

One-Shot AF .....	71
-------------------	----

- P**
- P (Program) .....80
  - PAL.....34, 114
  - Paper settings .....124
  - Partial metering.....77
  - PC connection.....121
  - PictBridge .....124
  - Playback.....107
  - Playback menu.....31, 33
  - Portrait .....46
  - Possible shots .....53
  - Power outlet .....24
  - Power Switch .....28
  - Pressing completely.....28
  - Pressing halfway.....28
  - Print Order .....137
  - Print/PTP .....121
  - Processing parameters.....63, 64
  - Program AE .....80
  - Program shift.....81
  - Protect.....115
  - PTP .....121
- R**
- RAW.....53
  - RAW+JPEG .....52
  - Recharge .....20
  - Red-eye reduction.....98
  - Remote control.....49, 159
  - Replacing the date/time battery .....38
  - Rotate .....113
- S**
- Selecting all images.....142
  - Selecting Individual Images .....140
  - Self-timer.....48, 78
  - Sensor cleaning .....39
  - Setting the date/time .....37
  - Set-up menu .....31, 34
  - Sharpness.....64
  - Shoot w/o card .....41
  - Shooting information display .....108
  - Shooting menu .....31, 33
  - Shooting mode .....16
  - Shutter button .....28
  - Shutter curtain synchronization ....150
  - Shutter speed .....82
  - Single image display.....107
  - Single shooting .....78
  - Specifications .....162
  - Sports .....47
  - sRGB .....62
  - Standard.....139
  - Style .....128, 131
  - System Map .....160
- T**
- Timer .....18
  - Toning effect .....66
  - Trimming.....134
  - Tv .....82
- V**
- Video cable.....114
  - Video OUT.....114
  - Viewfinder.....15
- W**
- WB-BKT .....60
  - White balance.....56
  - White balance bracketing .....60
  - White balance correction.....59
  - Wireless remote control.....49, 159
  - Wireless, multi-Speedlite system ...101



**CANON INC.** 30-2, Shimomaruko 3-chome, Ohta-ku, Tokyo 146-8501, Japan

**U.S.A.** ————— **CANON U.S.A. INC.**

For all inquiries concerning this camera, call toll free in the U.S.  
1-800-OK-CANON or write to: Customer Relations, Canon U.S.A., Inc.  
One Canon Plaza, Lake Success, N.Y. 11042-1198

**CANADA** ————— **CANON CANADA INC. HEADQUARTERS**

6390 Dixie Road, Mississauga, Ontario L5T 1P7, Canada

**CANON CANADA INC. MONTREAL BRANCH**

5990, Côte-de-Liesse, Montréal Québec H4T 1V7, Canada 1010

**CANON CANADA INC. CALGARY OFFICE**

2828, 16th Street, N.E. Calgary, Alberta T2E 7K7, Canada

For all inquiries concerning this camera, call toll free in Canada

1-800-OK-CANON

**EUROPE,** ————— **CANON EUROPA N.V.**

**AFRICA &** Bovenkerkerweg 59-61, P.O. Box 2262, 1180 EG Amstelveen, The Netherlands

**MIDDLE EAST** **CANON COMMUNICATION & IMAGE FRANCE S.A.**

102, Avenue du Général de Gaulle 92257 La Garenne-Colombes Cedex, France

**CANON UK LTD.**

Woodhatch Reigate Surrey RH2 8BF, United Kingdom

**CANON DEUTSCHLAND GmbH**

Europark Fichtenhain A10, 47807 Krefeld, Germany

**CANON ITALIA S.p.A.**

Via Milano 8 I-20097 San Donato Milanese, Milano, Italy

**CANON Schweiz AG**

Geschäftsbereich Wiederverkauf, Industriestrasse 12, CH-8305 Dietlikon, Switzerland

**CANON G. m. b. H.**

Oberlaaerstrasse 233, 4th floor, 1100 Wien, Austria

**CANON España, S. A.**

C/Joaquín Costa, 41, 28002 Madrid, Spain

**SEQUE Soc. Nac. de Equip., Lda.,**

Praça da Alegria, 58, 2º, 1269-149 Lisboa, Portugal

**CENTRAL &** ————— **CANON LATIN AMERICA, INC. DEPTO DE VENTAS**

**SOUTH AMERICA** 703 Waterford Way Suite 400 Miami, FL 33126 U.S.A.

**CANON LATIN AMERICA, INC. CENTRO DE SERVICIO Y REPARACION**

Apartado 2019, Zona Libre de Colón, República de Panamá

**ASIA** ————— **CANON HONGKONG CO., LTD.**

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon, Hong Kong

**CANON SINGAPORE PTE. LTD.**

1 HarbourFront Avenue #04-01 Keppel Bay Tower Singapore 098632

**OCEANIA** ————— **CANON AUSTRALIA PTY. LTD.**

1 Thomas Holt Drive, North Ryde, N.S.W. 2113, Australia

**CANON NEW ZEALAND LTD.**

Akoranga Business Park, Akoranga Drive, Northcote, Auckland, New Zealand

**JAPAN** ————— **CANON SALES CO., INC.**

16-6, Kohnan 2-chome, Minato-ku, Tokyo 108-8011, Japan

This Instruction Manual booklet is current as of January 2005. For information on the camera's compatibility with any accessories and lenses introduced after this date, contact any Canon Service Center.