



Cisco Unified SIP Phone 3905 User Guide for Cisco Unified Communications Manager 10.0 (SIP)

First Published: 2013-10-17

Last Modified: 2018-04-05

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The following information is for FCC compliance of Class A devices: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio-frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to correct the interference at their own expense.

The following information is for FCC compliance of Class B devices: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment causes interference to radio or television reception, which can be determined by turning the equipment off and on, users are encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Modifications to this product not authorized by Cisco could void the FCC approval and negate your authority to operate the product

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.


NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2013-2018 Cisco Systems, Inc. All rights reserved.

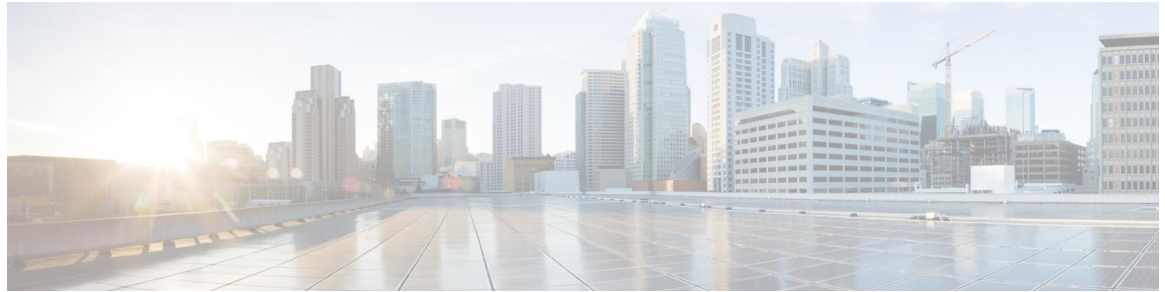

CONTENTS

CHAPTER 1

Getting Started 1

- Accessibility Features 1
- Phone Connections 1
- Buttons and Hardware 3
- Phone Screen 5
- Footstand 5
- Clean the Phone Screen 6
- Adjust the Handset Rest 6
- Important Headset Safety Information 7

CHAPTER 2

Basic Operations 9

- Make Calls 9
 - Redial Number 9
 - Dial International Number 9
 - Place Call Using Forced Authorization Code 10
- Answer Calls 10
 - Answer Call Using Hookflash 10
 - Answer Call Using Pickup 10
 - Answer Call Using Group Pickup 11
- Respond to Call Waiting Notification 11
- Manage Calls 12
 - Forward All Calls 12
 - Transfer a Call to Another Number 12
 - Toggle Between Calls Before Completing Transfer 13
- Hold Call 13
- Mute Phone 13
- Conference 14
 - Set Up Conference 14

Drop Party from Conference 14

View Phone Information 15

Sign In to the Cisco Unified Communications Self Care Portal 15

CHAPTER 3

Call History 17

Call History Overview 17

View Call History 17

Dial From Call History 18

CHAPTER 4

Voicemail 19

Voicemail Overview 19

Personalize Voicemail 19

Check for Voice Messages 20

Listen to Voice Messages 20

CHAPTER 5

Advanced Operations 21

Call Functions 21

 Auto Answer 21

 Auto Barge 21

 Shared Lines 21

 Page Phones 22

CHAPTER 6

User Preferences 23

Change Ringtone 23

Line Settings 23

CHAPTER 7

Product Safety and Security 25

Safety and Performance Information 25

 Power Outage 25

 External Devices 25

 Ways to Provide Power to Your Phone 26

 Phone Behavior During Times of Network Congestion 26

Compliance Statements 26

 Compliance Statements for the European Union 26

 CE Marking 26

- Compliance Statements for Canada 27
- Compliance Information for Brazil 27
- FCC Compliance Statements 27
 - FCC Part 15.19 Statement 27
 - FCC Part 15.21 Statement 27
 - FCC RF Radiation Exposure Statement 27
 - FCC Receivers and Class B Digital Statement 28
- Cisco Product Security Overview 28
- Important Online Information 28

CHAPTER 8

Warranty 29

- Cisco One-Year Limited Hardware Warranty Terms 29



Getting Started

- [Accessibility Features, page 1](#)
- [Phone Connections, page 1](#)
- [Buttons and Hardware, page 3](#)
- [Phone Screen, page 5](#)
- [Footstand, page 5](#)
- [Clean the Phone Screen, page 6](#)
- [Adjust the Handset Rest, page 6](#)
- [Important Headset Safety Information, page 7](#)

Accessibility Features

The Cisco Unified SIP Phone 3905 provides accessibility features for the vision impaired, the blind, and the hearing and mobility impaired.

 
http://www.cisco.com/en/US/docs/voice_ip_comm/cuipph/all_models/accessibility/english/user/guide/access_3905.html

You can also find more information about accessibility at this Cisco website:

<http://www.cisco.com/web/about/responsibility/accessibility/index.html>

 
Phone Connections


Use the following figure to connect the phone to the network.

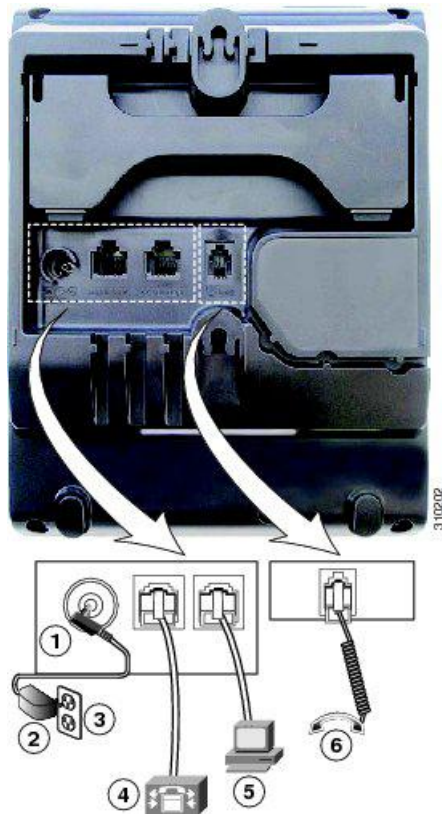





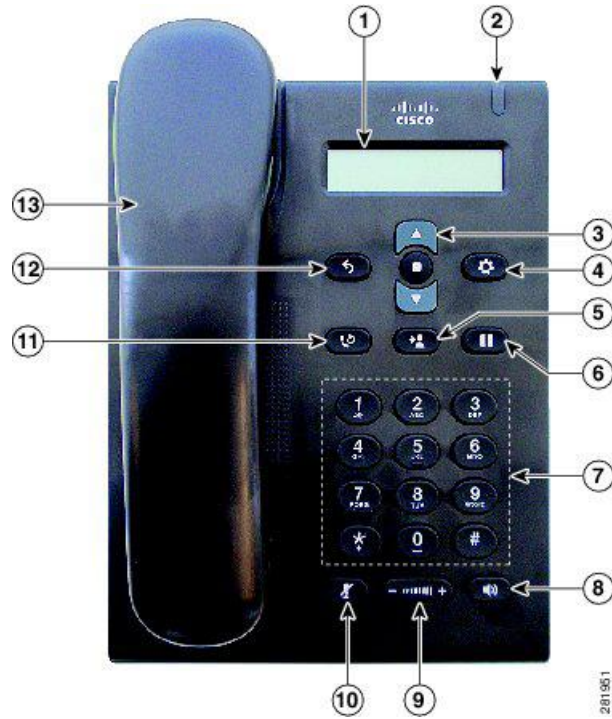



1	DC adapter port (DC 4.2V).	4	Network port (10/100 SW) connection. IEEE 802.3af power enabled.
2	AC-to-DC power supply (optional).	5	Access port (10/100 PC) connection.
3	AC power wall connection.	6	Handset connection.

Buttons and Hardware



1	Phone screen	Shows information about your phone such as directory number, active call, and phone menu listings.
2	Light strip	Indicates an incoming call (flashing red) or new voice message (steady red).
3	Navigation bar and Select/Feature button 	The Navigation bar allows you to scroll through menus and highlight items. The Select button (in the middle of the Navigation bar) allows you to select a highlighted item. When the phone is off-hook, the Select button functions as the Feature button. You can access these features: <ul style="list-style-type: none"> • Call Forward All: Allows you to forward a call. • Voice Mail: Allows you access voice mails. • Call Pickup: Allows you to answer a call that is ringing on a co-worker's phone. • Group Call Pickup: Allows you to answer a call that is ringing in another call group.

4	Applications button 	Opens or closes the Applications menu. Use it to access call history, user preferences, phone settings, and phone model information.
5	Transfer button 	Transfers a call.
6	Hold/Resume button 	Places an active call on hold or resumes a held call.
7	Keypad	Allows you to dial phone numbers.
8	Speakerphone button 	Selects the speakerphone as the default audio path and initiates a new call, picks up an incoming call, or ends a call. The speakerphone audio path does not change until a new default audio path is selected (for example, by picking up the handset).
9	Volume button 	Controls the handset and speakerphone volume (off-hook) and the ringer volume (on hook).
10	Mute button 	Toggles the microphone on or off.
11	Redial button 	Dials the last dialed number.
12	Back button 	Returns to the previous screen or menu.
13	Handset	Phone handset.

Phone Screen



1	Header	<p>Displays date and time. Also displays line information such as voicemail and missed calls. When using the Applications menu, displays phone menu listings.</p> <p>The format that the phone uses to display dates is set up by your system administrator. The possible formats are:</p> <ul style="list-style-type: none"> • Day, Month, Year (DD/MM/YYYY) • Month, Day, Year (MM/DD/YYYY) • Year, Month, Day (YYYY/MM/DD)
2	Line details and other phone information	<p>Displays the directory number. During a call, also displays details for the active line. If not on a call, also displays line text label and other information such as placed calls and phone menu listings.</p>

Footstand

The Cisco Unified IP Phone 3905 has a foldable footstand. When the footstand is unfolded, it gives the phone an elevated viewing angle.



Clean the Phone Screen

 
Procedure

If your phone screen gets dirty, wipe it with a soft, dry cloth.

Caution Do not use any liquids or powders on the phone because they can contaminate the phone components and cause failures.

Adjust the Handset Rest

If your phone is wall-mounted or if the handset slips out of the cradle too easily, you may need to adjust the handset rest to ensure that the receiver does not slip out of the cradle.

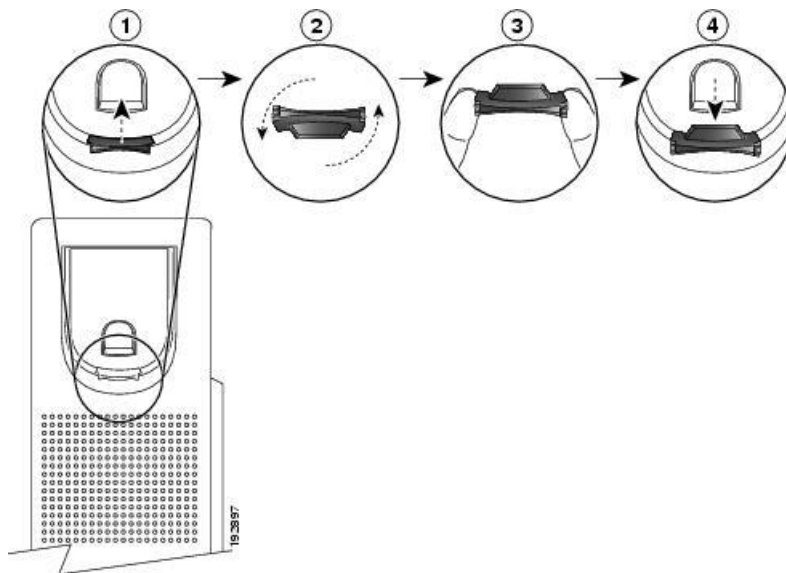

Procedure

-
- Step 1** Remove the handset from the cradle and pull the plastic tab from the handset rest.
 - Step 2** Rotate the tab 180 degrees.
 - Step 3** Hold the tab between two fingers, with the corner notches facing you.
 - Step 4** Line up the tab with the slot in the cradle and press the tab evenly into the slot. An extension protrudes from the top of the rotated tab.
 - Step 5** Return the handset to the handset rest.
-

Important Headset Safety Information



High Sound Pressure—Avoid listening to high volume levels for long periods to prevent possible hearing damage.

When you plug in your headset, lower the volume of the headset speaker before you put the headset on. If you remember to lower the volume before you take the headset off, the volume will start lower when you plug in your headset again.

Be aware of your surroundings. When you use your headset, it may block out important external sounds, particularly in emergencies or in noisy environments. Don't use the headset while driving. Don't leave your headset or headset cables in an area where people or pets can trip over them. Always supervise children who are near your headset or headset cables.



CHAPTER 2

Basic Operations

- [Make Calls, page 9](#)
- [Answer Calls, page 10](#)
- [Respond to Call Waiting Notification, page 11](#)
- [Manage Calls, page 12](#)
- [Mute Phone, page 13](#)
- [Conference, page 14](#)
- [View Phone Information, page 15](#)
- [Sign In to the Cisco Unified Communications Self Care Portal, page 15](#)


Make Calls

Your phone works just like a regular phone. But we make it easier for you to make calls.

Redial Number

Redial allows you to call the most recently dialed phone number by pressing the Redial button.

Procedure

To redial a number, press the **Redial** button .
You can be off-hook or on-hook when you press this button.

Dial International Number

Plus Dialing allows you to press and hold the “*” key for at least 1 second to add a plus “+” sign as the first digit in a phone number for international dialing. It applies only for off-hook dialing.

Procedure

- Step 1** Press and hold the "*" key for at least 1 second.
The + sign is entered as the first digit in the phone number.
The corresponding tone stops to indicate that the * has changed to a + sign.
- Step 2** Dial the international number.
-

Place Call Using Forced Authorization Code

Your phone supports Forced Authorization Codes (FAC) that allow your administrator to manage call access. Your administrator provides you with the codes. When active, the Forced Authorization Codes feature requires that you enter a valid authorization code before the call connects.

Procedure

- Step 1** Dial a number.
- Step 2** After the tone, enter the Forced Authorization Code (FAC).
-

Answer Calls

Your Cisco IP Phone works just like a regular phone. But we make it easier for you to answer calls.

Answer Call Using Hookflash

Hookflash allows you to activate features on your phone by quickly pressing and releasing the hookswitch button on the phone cradle rest.

Procedure

Quickly press and release the hookswitch button to answer the call.

Answer Call Using Pickup

Call Pickup allows you to answer a call that is ringing on a co-worker's phone by redirecting the call to your phone. Use Call Pickup if you share call-handling tasks with co-workers.

Pickup allows you to answer a call that is ringing on another phone within your call pickup group.

If multiple calls are available for pickup, your phone picks up the oldest call first (the call that has been ringing for the longest time).

Your system administrator sets up the call pickup group you are in and the call pickup buttons depending on your call-handling needs and work environment.

Procedure

- Step 1** Press the **Feature** button.
 - Step 2** Use the **Navigation pad** to scroll and select **Pickup**.
 - Step 3** Press the **Feature** button to transfer a ringing call within your pickup group to your phone.
 - Step 4** Lift the handset to connect the call.
-

Answer Call Using Group Pickup

Group Pickup allows you to answer a call on a phone that is outside your call pickup group by using a group pickup number that your system administrator provides.

Procedure

- Step 1** Press the **Feature** button.
 - Step 2** Use the **Navigation pad** to scroll and select **Group Pickup**.
 - Step 3** Press the **Feature** button.
 - Step 4** Enter the group pickup number to answer a call on a phone outside your pickup group.
 - Step 5** Lift the handset to connect the call.
-

Respond to Call Waiting Notification

Call Waiting provides cues to notify you that a new call is ringing on your phone when you are talking on another call, including:

- A call waiting tone (single beep)
- A display of the second incoming call on the phone screen

Procedure

To answer the ringing call, press the **Hold/Resume** button.

Your phone puts the original call on hold automatically and connects the ringing call.

Manage Calls

Forward All Calls

Call Forward All allows you to forward calls on your phone to another number. Call Forward All applies to all calls that you receive.

You can set up Call Forward All directly on your phone. To access Call Forward All remotely, go to your Self Care Portal.

When forwarding calls from your phone, enter the call-forward target phone number exactly as you would dial it from your phone. For example, enter an access code or the area code, if necessary.

When you lift the handset, you will hear a call forward confirmation tone until you cancel call forwarding. The visual confirmation turns off when Call Forward All is canceled.

Procedure

- Step 1** Press the **Feature** button.
 - Step 2** Use the Navigation pad to scroll and select **Call Forward All**.
 - Step 3** Press the **Feature** button.
 - Step 4** Listen for the confirmation tone, then enter the phone number to which your calls will be forwarded. A visual confirmation displays on your screen for as long as the feature is enabled.
 - Step 5** To cancel call forwarding, repeat Step 1-2.
-

Related Topics



[Sign In to the Cisco Unified Communications Self Care Portal](#), on page 15

Transfer a Call to Another Number

You can redirect a connected call from your phone to another number as follows:

- You can redirect a single call to another number that you specify.
- You can connect two calls to each other without remaining on the line yourself.

Procedure

- Step 1** Verify that you are on an active call (not on hold).
 - Step 2** Press **Transfer** .
 - Step 3** Enter the transfer recipient's phone number or press a speed-dial button.
 - Step 4** Wait for the recipient to answer, or skip to the next step while the call is ringing.
 - Step 5** Press **Transfer**  again.
-

Toggle Between Calls Before Completing Transfer

After you connect to the transfer recipient—but before you transfer a call to this party—you can press the Hold/Resume button to toggle between the two calls. This allows you to consult privately with the party on each call before you complete the transfer.



Procedure

- Step 1** Press the **Hold/Resume** button to toggle between the party that you intend to transfer and the transfer recipient.
 - Step 2** After you finish speaking with the transfer recipient, press the **Transfer** button to complete the transfer.
-

Hold Call

Hold allows you to put an active call into a held state.

Procedure

- Step 1** To put a call on hold, press the **Hold/Resume** button . The party that is put on hold hears the preset music.
 - Step 2** To resume the call, press the **Hold/Resume** button .
-

Mute Phone

You can block audio input for your handset, headset, and speakerphone, so that you can hear other parties on the call but they cannot hear you.

Procedure

- Step 1** Press **Mute**  to turn Mute on.
- Step 2** Press **Mute** again to turn Mute off.
-

Conference

Conference allows you to talk simultaneously with multiple parties. When you are talking on a call, use Conference to dial another party and add them to the call. You can remove individual participants from the conference if your phone supports the feature.

You can set up a conference by using the Hookflash feature on the phone. You can include up to three participants in a conference. Use the hookflash feature to drop a participant from a conference. The conference ends when all the participants hang up.

Set Up Conference

Procedure

- Step 1** Verify that you are on an active call (not on hold).
- Step 2** Press and release the hookswitch to get a dial tone.
- Step 3** Dial the party's number.
- Step 4** (Optional) Wait for the recipient to answer.
Or skip to Step 5 while the call is ringing.
- Step 5** Press and release the hookswitch again.
The conference begins.
-

Drop Party from Conference

Only the conference host can drop a party from a conference.

Procedure


- Step 1** Verify that you are in a conference.
- Step 2** Press and release the hookswitch.
The party who joined last is dropped from the conference.
-

View Phone Information

Phone Information allows you to view the following model information for your phone:

- Model Number
- MAC Address
- Application Load ID
- Boot Load ID
- Serial Number
- IP Address
- Active Server
- Stand-by-Server

Procedure

-
- Step 1** Press **Applications** .
- Step 2** Select **Phone Information**.
- Step 3** Press **Back** to return to the Applications screen.
-

Sign In to the Cisco Unified Communications Self Care Portal

Your phone is a network device that can share information with other network devices in your company, including your personal computer. You can use your computer to sign in to the Cisco Unified Communications Self Care Portal, where you can control features, settings, and services for your phone. For example, you can manage your phone display language, set up services, add entries to your personal address book, and set up speed-dial codes.

Before you can access any of your options, such as speed dial or personal address book, you must sign in. When you finish using the portal, sign out.



Note

Some features may not be available for your phone, and thus you can't set the features up in the Self Care Portal.

Sometimes, you can access the Cisco Unified Communications Self Care Portal without signing in.

For assistance in using the portal, see the *Cisco Unified Communications Self Care Portal User Guide* at http://www.cisco.com/en/US/products/sw/voicesw/ps556/products_user_guide_list.html.

Procedure

- Step 1** Obtain the portal URL, user ID, and default password from your administrator. Typically, the portal URL is `http://ip_address` or `hostname/ucmuser`.
- Step 2** Open a web browser on your computer and enter the URL.
- Step 3** If prompted to accept security settings, select **Yes** or **Install Certificate**.
- Step 4** Enter your user ID in the **Username** field.
- Step 5** Enter your password in the **Password** field.
- Step 6** Select **Login**.
- Step 7** Select **Logout** to sign out.
-



Call History

- [Call History Overview, page 17](#)
- [View Call History, page 17](#)
- [Dial From Call History, page 18](#)

Call History Overview

Call History allows you to view information about the last 50 calls on your phone, listed under the following categories:


- Missed: lists the last 50 missed calls
- Received: lists the last 50 received calls
- Placed: lists the last 50 placed calls
- All: lists the last 50 calls, including Missed, Received, and Placed

A call icon is displayed to indicate the type of call. The caller ID is displayed with the call icon. If the caller ID is unavailable, then the phone number is displayed. If the phone number is unavailable, then “Unknown” is displayed. All Call History items are ordered by time (latest to oldest).



You can also dial a number directly from the Call History list.

View Call History

Procedure

- Step 1** Press **Applications** .
- Step 2** Use the **Navigation bar** and button to scroll and select **Call History**. The phone screen displays the four call categories.
- Step 3** Select a category.

The phone screen displays the call history for the selected category.

Step 4 Press the  button to return to the Call History screen, or press **Applications**  to exit the call history.

Dial From Call History

Procedure

Step 1 Press **Applications** .

Step 2 Use the **Navigation bar** and button to scroll and select **Call History**.
The phone screen displays the four call categories.

Step 3 Select a category.
The phone screen displays the call history for the selected category.

Step 4 From the Call History list, select the call you want to dial and do one of the following:

- Press the **Select** button (the phone uses the speakerphone by default).
 - Pick up the handset.
 - Press **Speakerphone**.
-



Voicemail

- [Voicemail Overview, page 19](#)
- [Personalize Voicemail, page 19](#)
- [Check for Voice Messages, page 20](#)
- [Listen to Voice Messages, page 20](#)

Voicemail Overview

Voice messages are stored on your voicemail system. Your company determines the voicemail system your phone uses.

For information about the commands that your voicemail service supports, see the voicemail service user documentation.

Personalize Voicemail

Procedure

- Step 1** Press the **Feature** button.
 - Step 2** Use the **Navigation pad** to scroll and select **Voice Mail**.
 - Step 3** Press the **Feature** button.
 - Step 4** Follow the voice prompts.
-

Check for Voice Messages

Procedure

- Step 1** Look for the following visual indications:
- A solid red light on the phone. Set up the visual message waiting lamp using the Self Care Portal.
 - Message icon on a line.
- Step 2** Listen for the stutter tone (if available) from your handset or speakerphone when you place a call. The stutter tone is line-specific and you hear it only when using the line that has new voice messages. You can set up audible message waiting tones using the Self Care Portal.
-

Listen to Voice Messages

Procedure

- Step 1** Press the **Feature** button.
- Step 2** Use the **Navigation pad** to scroll and select **Voice Mail**.
- Step 3** Press the **Feature** button.
- Step 4** Follow the voice prompts.
-



Advanced Operations

- [Call Functions](#), page 21

Call Functions

This section describes some of the advanced call functions available to you.

Auto Answer

Auto Answer prompts your phone to automatically answer incoming calls after one ring.

Auto Answer with Speakerphone

Your system administrator sets up Auto Answer to work with your speakerphone.

Keep the handset in the cradle to auto answer with your speakerphone. Otherwise, calls ring normally and you must answer them manually.

Auto Barge

Auto barge, if configured, allows you to barge into a shared line call automatically.

For example, in a shared line scenario, when you go off-hook and a call remote is already in use, you can barge into the call automatically.

Shared Lines

Shared lines allow you to use one phone number for multiple phones.

You may have a shared line if you have multiple phones and want one phone number, share call-handling tasks with co-workers, or handle calls on behalf of a manager.

For example, if you share a line with a co-worker:

- When a call comes in on the shared line:

- Your phone rings and the phone light strip flashes amber.
- Your co-worker's phone rings and the phone light strip flashes amber.
- If you answer the call:
 - Your phone screen displays a connected icon for the shared call.
 - Your co-worker's phone screen displays a remote-connected icon for the shared call.
If auto barge is enabled, you can auto barge a call by going off-hook or make a new call.
- If you put the call on hold:
 - Your phone screen displays an on-hold icon for the shared call.
 - Your co-worker's phone screen displays a remote-hold icon for the shared call.
Your co-worker can pick up the call.

Page Phones

Paging allows you to send a one-way audio message to a designated group of phones. Each idle phone in the designated group automatically answers the call in speakerphone mode. When the paging call is completed and you hang up, all phones return to idle.

Your administrator controls the ability for you to use this feature.

Before You Begin

- Administrator has configured a paging number.
- Your phone has Singlewire InformaCast software installed. For more information, contact your system administrator.

Procedure

- Step 1** Dial the paging number.
Phones that answer the page show the caller ID of the paging phone.
 - Step 2** Speak your message.
 - Step 3** Hang up.
-





User Preferences

- [Change Ringtone](#), page 23
- [Line Settings](#), page 23

Change Ringtone

You can customize how your phone indicates an incoming call. You can also adjust the ringer volume for your phone.

Procedure

- Step 1** Press **Applications** .
 - Step 2** Use the **Navigation bar** and button to scroll and select **Preferences**.
 - Step 3** Select **Ringtone**.
 - Step 4** Select a ringtone.
 - Step 5** Press the **Select** button to confirm your selection and play a sample.
 - Step 6** Press the  button to return to the Preferences screen.
-

Line Settings

Line settings affect a specific phone line (directory number) on your phone. Line settings can include call forwarding, visual and audio message indicators, ring patterns, and other line-specific settings.

You can use the Cisco Unified Communications Self Care Portal to change your line settings. For information, see the *Cisco Unified Communications Self Care Portal User Guide* at http://www.cisco.com/c/en/us/td/docs/voice_ip_comm/cucm/useroptions/10_5_1/CUCM_BK_U437D0F8_00_self-care-user-guide-1051.html.



Product Safety and Security

- [Safety and Performance Information, page 25](#)
- [Compliance Statements, page 26](#)
- [Cisco Product Security Overview, page 28](#)
- [Important Online Information, page 28](#)

Safety and Performance Information

Power Outage

Your access to emergency service through the phone requires that the phone receive power. If a power interruption occurs, service or emergency calling service dialing does not function until power is restored. If a power failure or disruption occurs, you may need to reset or reconfigure the equipment before you can use service or emergency calling service dialing.

External Devices

We recommend that you use good-quality external devices that are shielded against unwanted radio frequency (RF) and audio frequency (AF) signals. External devices include headsets, cables, and connectors.

Depending on the quality of these devices and their proximity to other devices, such as mobile phones or two-way radios, some audio noise may still occur. In these cases, we recommend that you take one or more of these actions:

- Move the external device away from the source of the RF or AF signals.
- Route the external device cables away from the source of the RF or AF signals.
- Use shielded cables for the external device, or use cables with a better shield and connector.
- Shorten the length of the external device cable.
- Apply ferrites or other such devices on the cables for the external device.

Cisco cannot guarantee the performance of external devices, cables, and connectors.

 


Caution

In European Union countries, use only external speakers, microphones, and headsets that are fully compliant with the EMC Directive [89/336/EC].

Ways to Provide Power to Your Phone

You can provide power to your phone in one of two ways:

- Use the power adapter that comes with your phone.
- If your network supports Power over Ethernet (PoE), you can plug your phone into the network. Plug an Ethernet cable into the Ethernet phone port  and into the network.

If you are not sure whether your network supports PoE, check with your administrator.

Phone Behavior During Times of Network Congestion

Anything that degrades network performance can affect phone voice and video quality, and in some cases, can cause a call to drop. Sources of network degradation can include, but are not limited to, the following activities:

- Administrative tasks, such as an internal port scan or security scan
- Attacks that occur on your network, such as a Denial of Service attack

Compliance Statements

Compliance Statements for the European Union

CE Marking

The following CE mark is affixed to the equipment and packaging.



EU Authorized Representative:
Edgard Vangeel
Cisco Systems Belgium
De Kleetlaan 6A
B 1831 Diegem
Belgium

3902018

Compliance Statements for Canada

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Avis de Conformité Canadien

Ce dispositif est conforme aux normes CNR exemptes de licence d'Industrie Canada. Le fonctionnement de ce dispositif est autorisé sous réserve des deux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Compliance Information for Brazil

Art. 6º - 506

This equipment is a secondary type device, that is, it is not protected against harmful interference, even if the interference is caused by a device of the same type, and it also cannot cause any interference to primary type devices.

For more information, go to this URL: <http://www.anatel.gov.br>

Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário.

Site Anatel: <http://www.anatel.gov.br>

FCC Compliance Statements

The Federal Communications Commission requires compliance statements for the following:

FCC Part 15.19 Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 15.21 Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter

must be at least 20 cm from the user and must not be collocated or operating in conjunction with any other antenna or transmitter.

FCC Receivers and Class B Digital Statement

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment or devices
- Connect the equipment to an outlet other than the receiver's
- Consult a dealer or an experienced radio/TV technician for assistance

Cisco Product Security Overview

This product contains cryptographic features and is subject to U.S. and local country laws that govern import, export, transfer, and use. Delivery of Cisco cryptographic products does not imply third-party authority to import, export, distribute, or use encryption. Importers, exporters, distributors, and users are responsible for compliance with U.S. and local country laws. By using this product, you agree to comply with applicable laws and regulations. If you are unable to comply with U.S. and local laws, return this product immediately.

Further information regarding U.S. export regulations can be found at <https://www.bis.doc.gov/policiesandregulations/ear/index.htm>.

Important Online Information

End User License Agreement

The End User License Agreement (EULA) is located here: <https://www.cisco.com/go/eula>

Regulatory Compliance and Safety Information

Regulatory Compliance and Safety Information (RCSI) is located here:

https://www.cisco.com/c/en/us/td/docs/voice_ip_comm/cuipph/all_models/regulatory_compliance/english/install/guide/iphrcsi3.html



Warranty

- [Cisco One-Year Limited Hardware Warranty Terms, page 29](#)

Cisco One-Year Limited Hardware Warranty Terms

Special terms apply to your hardware warranty and services that you can use during the warranty period. Your formal Warranty Statement, including the warranties and license agreements applicable to Cisco software, is available on Cisco.com at this URL: <https://www.cisco.com/go/hwwarranty>.

