

Installation manual
T4290, T4530, T4650
Selecta Control

Thinking of you

 **Electrolux**

Contents

Contents

Safety precautions	5
Dimension sketch.....	7
Technical data	8
Setup.....	11
Door	14
Special installation	16
Exhaust system.....	17
Installation	
Steam installation.....	22
Gas installation	23
Electric installation	31
Function check.....	39
Option: Adaptor for direct fresh-air intake	40

The manufacturer reserves the right to make changes to design and component specifications.

Safety Precautions



Safety Precautions



Do not dry unwashed items in the machine

The machine is not to be used if industrial chemicals have been used for cleaning.

Do not allow minors to use the machine.

Do not hose down the machine with water.

The machine's door lock must under no circumstances be bypassed.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the machine.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.

Fabric softeners or similar products should be used as specified by the fabric softener instructions.

The machine may not be used to dry floor mops that contain polypropylene.

The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

WARNING. Never stop the machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Remove garments from the machine as soon as they are dried. This prevents them from becoming creased and reduces the risk of spontaneous ignition.

If the machine develops a fault, this must be reported to the person in charge as soon as possible. This is important both for your safety and that of others.

The machine must not be located where a door, sliding door, etc., can block the machine's door

The machine is not intended to be used by people (including minors) with reduced physical or mental capacity or lack of experience and knowledge. Such people must be instructed in the use of the machine by a person who has responsibility for their safety. Minors must be supervised to ensure that they do not play with the machine.

Adequate ventilation has to be provided to avoid the back flow of gases into the room for appliances burning other fuels, including open fires.

Gas heated tumble dryer:



The machine is not to be installed in rooms containing cleaning machines with perchloroethylene, TRICHLOROETHYLENE or CHLOROFLUOROCONTAINING HYDROCARBONS as cleaning agents.

If you can smell gas,

- **Do not switch on any equipment**
- **Do not use electrical switches**
- **Do not use telephones in the building**
- **Evacuate the room, building or area**
- **Contact the person responsible for the machine**

Dimension sketch T4290, T4530, T4650

		T4290	T4530/T4650		
1	Door opening	Ø 580	Ø 810	7	Pipe connection, evacuation
2	Operating panel				
3	Electric connection				
4	Gas connection				
5	Steam in				
6	Steam out				

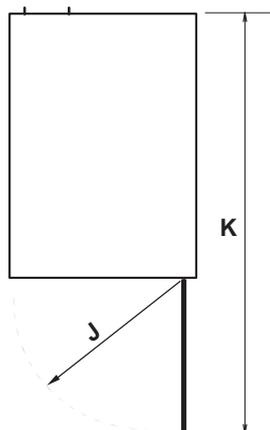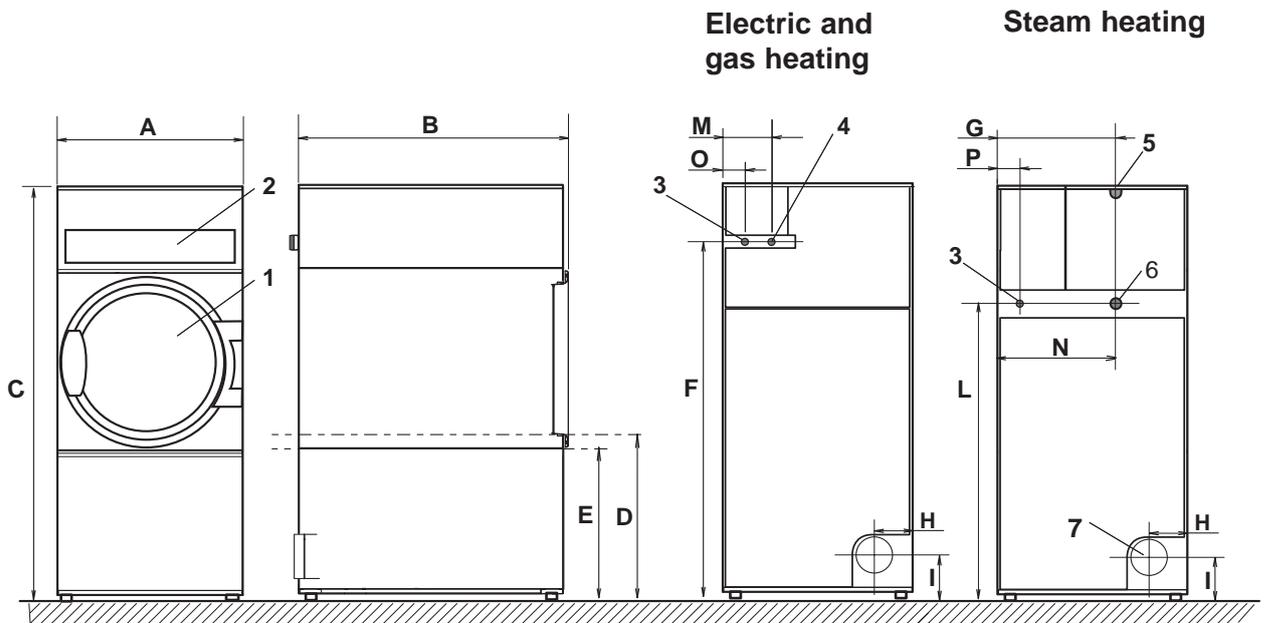

	A	B	C	D	E	F	G	H
T4290	710	1120	1880	780	725	1610	470	135
T4530	960	1180	1995	720	650	1725	595	155
T4650	960	1370	1995	720	650	1725	595	155
	I	J	K	L	M	N	O	P
T4290	170	700	1810	1395	250	500	70	190
T4530	225	950	2120	1510	270	595	140	170
T4650	225	950	2300	1510	270	595	140	170

Technical data, T4290

Heating		Electric	Steam	Gas
Drum volume:		286 litres	286 litres	286 litres
Weight:	Net	220 kg	220 kg	220 kg
Drum:	Diameter	680 mm	680 mm	680 mm
	Depth	790 mm	790 mm	790 mm
	Revolutions per minute	44 rpm	44 rpm	44 rpm
	G-factor	0.8	0.8	0.8
Load:		13.5 kg	13.5 kg	13.5 kg
Motor:	Effect without reverse	0.37 kW	0.37 kW	0.37 kW
	Effect with reverse	2 x 0.37 kW	2 x 0.37 kW	2 x 0.37 kW
	Revolutions per minute:			
	Motor 50 Hz	1400 rpm	1400 rpm	1400 rpm
	Motor 60 Hz	1680 rpm	1680 rpm	1680 rpm
Heat effect:	Electric heating	13.5 kW	Variable, depending on steam pressure	21.0 kW
	Electric heating	18.0 kW		
	Gas heating			
Air consumption:	Electric 13.5 kW	430 m ³ /h	925 m ³ /h	690 m ³ /h
	Electric 18.0 kW	690 m ³ /h		
	Steam			
	Gas			
Pipe connection:	Evacuation	Ø 200	Ø 200	Ø 200
	Steam		ISO 7/1-Rp1/2	
	Condensate outlet		ISO 7/1-Rp1/2	
Steam:	Recommended pressure (absolute)		100-1000 kPa	
	Max. allowable pressure		1000 kPa	
Drop in pressure:	Evacuation	max. 80 Pa	max. 80 Pa	max. 80 Pa
Gas pipe connection:				ISO 7/1-R1/2
Gas pressure:	See page regarding pressure			
Noise level:		< 70 dB (A)	< 70 dB (A)	< 70 dB (A)

Technical data, T4530

Heating		Electric	Steam	Gas
Drum volume:		528 litres	528 litres	528 litres
Weight:	Net	300 kg	340 kg	300 kg
Drum:	Diameter	913 mm	913 mm	913 mm
	Depth	812 mm	812 mm	812 mm
	Revolutions per minute	40 rpm	40 rpm	40 rpm
	G-factor	0.8	0.8	0.8
Load:		27 kg	27 kg	27 kg
Motor:	Effect	2 x 0.37 kW	2 x 0.37 kW	2 x 0.37 kW
	Revolutions per minute:			
	Motor 50 Hz	1400 rpm	1400 rpm	1400 rpm
	Motor 60 Hz	1680 rpm	1680 rpm	1680 rpm
Heat effect:	Electric heating	24.0 kW	Variable, depending on steam pressure	40.0 kW
	Electric heating	30.0 kW		
	Gas heating			
Air consumption:	Electric 24.0 kW	840 m ³ /h	1380 m ³ /h	1160 m ³ /h
	Electric 30.0 kW	1060 m ³ /h		
	Steam			
	Gas			
Pipe connection:	Evacuation	Ø 200	Ø 200	Ø 200
	Steam:		ISO 7/1-Rp 3/4	
	Condensate outlet:		ISO 7/1-Rp 3/4	
Steam:	Recommended pressure (absolute)		100-1000 kPa	
	Max. allowable pressure		1000 kPa	
Drop in pressure:	Evacuation	max. 200 Pa	max. 200 Pa	max. 60 Pa
Gas pipe connection:				ISO 7/1 - R1/2
Gas pressure:	See page regarding pressure			
Noise level:		< 70 dB (A)	< 70 dB (A)	< 70 dB (A)

Technical data, T4650

Heating		Electric	Steam	Gas
Drum volume:		650 litres	650 litres	650 litres
Weight:	Net	340 kg	345 kg	325 kg
Drum:	Diameter	913 mm	913 mm	913 mm
	Depth	998 mm	998 mm	998 mm
	Revolutions per minute	44 rpm	44 rpm	44 rpm
	G-factor	0.9	0.9	0.9
Load:		35 kg	35 kg	35 kg
Motor:	Effect of drum motor	0.37 kW	0.37 kW	0.37 kW
	Effect of fan motor	0.80 kW	0.80 kW	0.80 kW
	Revolutions per minute:			
	Motor 50 Hz, drum	1400 rpm	1400 rpm	1400 rpm
	Motor 60 Hz, drum	1680 rpm	1680 rpm	1680 rpm
	Motor 50 Hz, fan	2800 rpm	2800 rpm	2800 rpm
	Motor 60 Hz, fan	3300 rpm	3300 rpm	3300 rpm
Heat effect:	Electric heating	30.0 kW	Variable, depending on steam pressure	57.0 kW
	Electric heating	36.0 kW		
	Gas heating			
Air consumption:	Electric 30.0 kW	1500 m ³ /h	1500 m ³ /h	1500 m ³ /h
	Electric 36.0 kW	1500 m ³ /h		
	Steam			
	Gas			
Pipe connection:	Evacuation	Ø 200	Ø 200	Ø 200
	Steam:		ISO 7/1-Rp 3/4	
	Condensate outlet:		ISO 7/1-Rp 3/4	
Steam:	Recommended pressure (absolute)		100-1000 kPa	
	Max. allowable pressure		1000 kPa	
Drop in pressure: Evacuation		max. 340 Pa	max. 340 Pa	max. 340
Gas pipe connection:				ISO 7/1-R3/4
Gas pressure: See page regarding pressure				
Noise level:		< 70 dB (A)	< 70 dB (A)	< 70 dB (A)

Setup T4290, T4530

Unpacking

When unpacking the machine, handle it with care. There are no transport clamps.

Positioning



Fig. 1 Position the tumble dryer so there is plenty of working room, both for the user and for the service technician.

The distance from the wall or other equipment behind the tumble dryer should be at least 500 mm and the space at the sides at least 10 mm. Note that for servicing purposes access to the rear of the tumble dryer is required.

Mechanical installation

Fig. 2 Adjust the machine to make it stand horizontally and stably on all four feet.

The max. height adjustment of the feet is 15 mm.

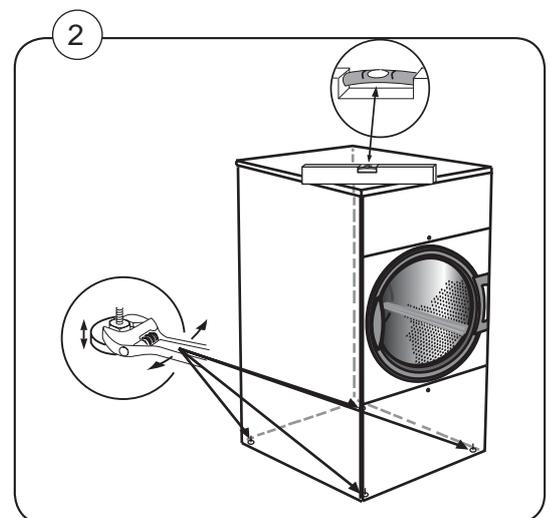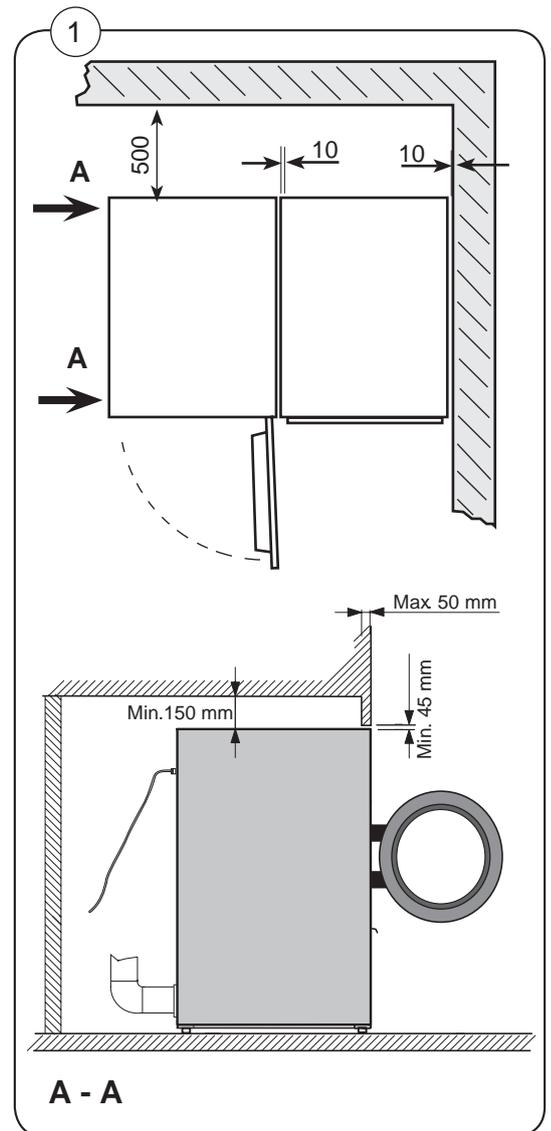

Setup T4650

Unpacking

When unpacking the machine, handle it with care. There are no transportation brackets to remove.





Fig. 1 From factory the dryer is equipped with 4 supporting feet A.

Remove the dryer from the pallet

At least two people are required to remove the dryer from the pallet.

The tumble dryer is fastened to the pallet by 3 transportation screws.

1. Open filter door. Remove the 2 transportation screws by the front.
 2. Remove the bottom back plate. Remove transportation screw by the back plate. Mount back plate.
 3. Place a 1 1/2" steel pipe at the back of the dryer as shown in fig. 2.
 4. Stand behind the dryer and tilt it forward. When the dryer rises from the pallet push the pipe under the dryer, fig. 3.
 5. Push the dryer from the front so that it hangs off of the back edge of the pallet, fig. 4.
 6. Remove the steel pipe by tilting the dryer forward while removing the pipe.
 7. Install the 2 back feet (supplied the dryer).
 8. Push the dryer backwards on the pallet until it leans on the 2 back feet.
 9. Mount the 2 front feet.
 10. Remove the pallet.
 11. The dryer is now on the floor.
- If necessary, adjust the feet after the dryer is in its final position. See next page.

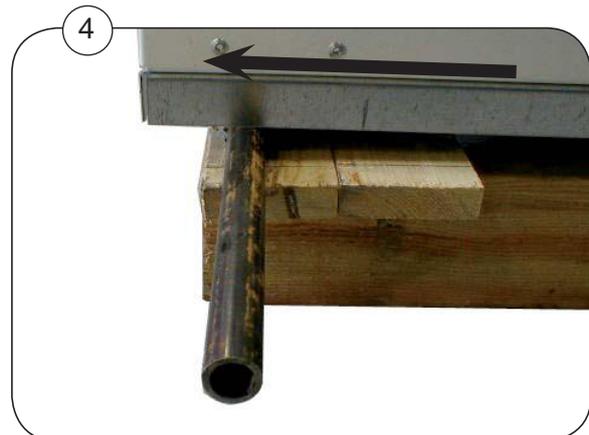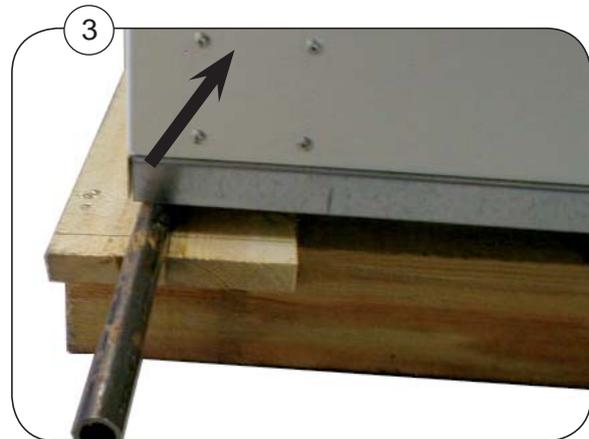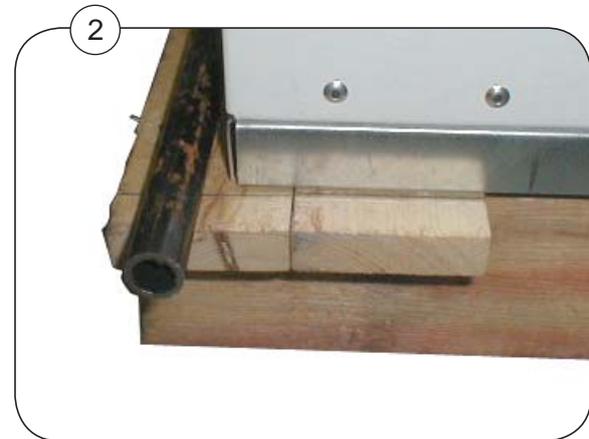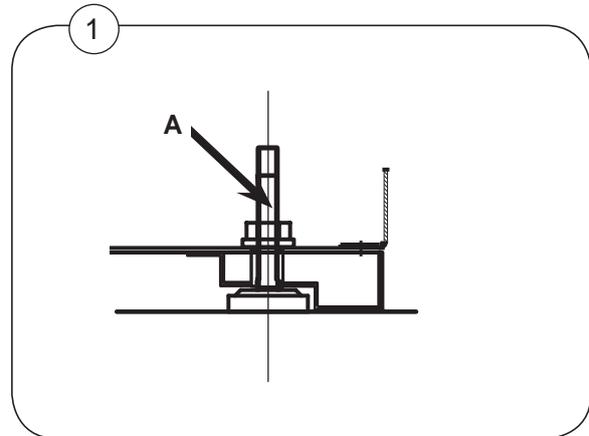

Setup T4650

Positioning



Fig. 1 Position the tumble dryer so that there is plenty of room for working, both for the user and for the service technician.

The distance from the wall or other equipment behind the tumble dryer should be at least 500 mm and the space at the sides at least 10 mm. Note that for servicing purposes, access to the rear of the tumble dryer is required.

Mechanical installation

Fig. 2 Adjust the machine to make it stand horizontally and stably on all four feet.

The max. height adjustment of the feet is 15 mm.

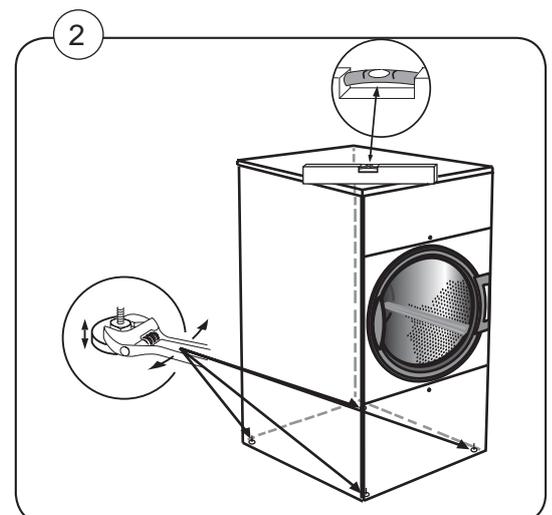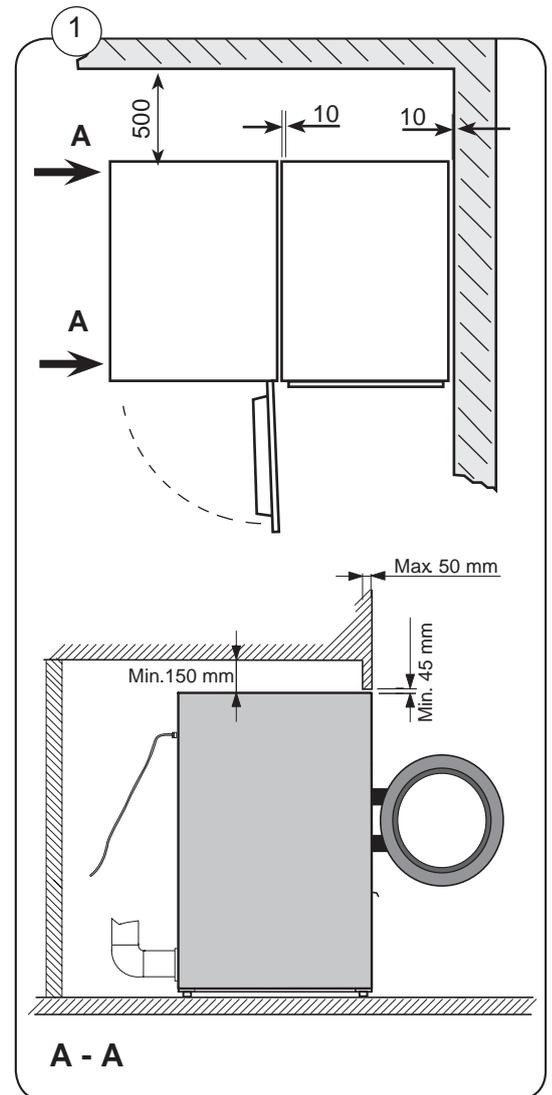

Reversing the door

The dryer is usually delivered with a right hinged door but the door can be changed to left hinged position, as illustrated below, or vice versa.

Door reversal instructions

1. Disconnect the power supply to the dryer.
2. Dismount the door.
3. Dismount locking unit **A**, fig. 1.
4. Remove the screws that secure the centre front panel to the dryer and remove the entire panel.
5. Disconnect the door switch wires **B** and move them to the opposite side of the dryer, fig. 2.





Pull the wires through opening **C** and down through opening **D**. Also remember to move the bushing and mount it in opening **D**, fig. 3 & 4.

6. Dismount the bracket with switch and turn it 180°.

Note! When turning the bracket the wires are facing downwards. Lead them upwards towards the operating panel and fasten them with cable strips.

7. Mount the bracket with switch on the left side and connect the wires as before.

To be continued on the following page.

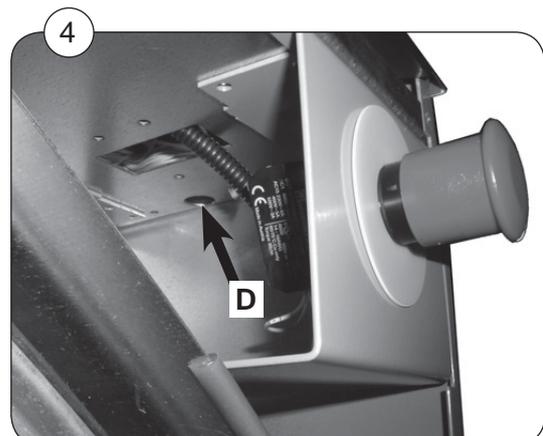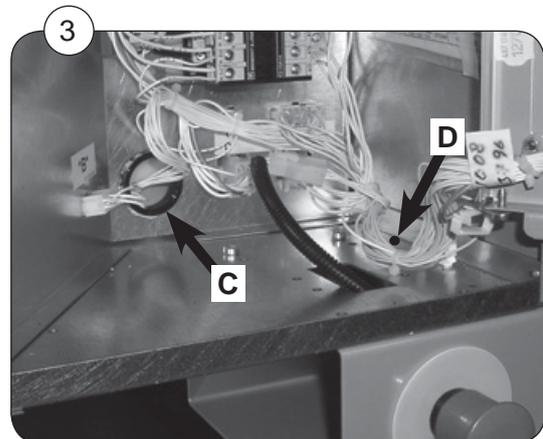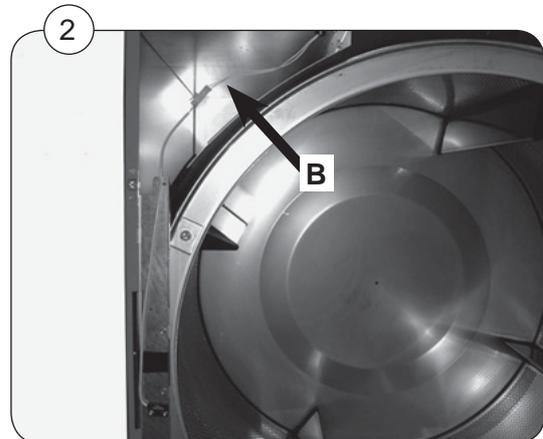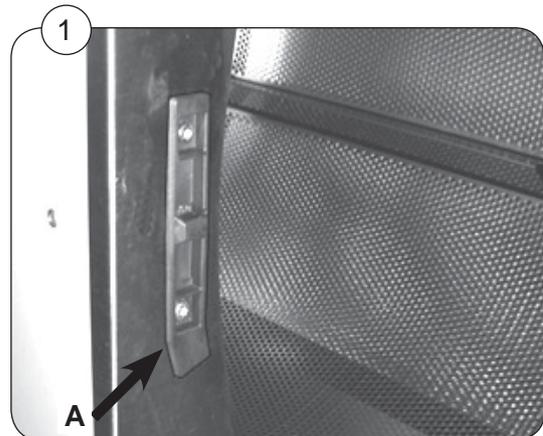

Continued

8. In order to prevent false air to enter, attach the sealing strip around the drum casing edge on the same side as the door is to be hinged, fig. 5 & 6 - see how it is done by looking at the tape attached on the opposite side.

Note! The sealing strip is enclosed in the drum.




9. Make sure that the 4 guard strips on the casing are intact before mounting the front panel, fig. 7.
10. **T4530/4650 only**
Remove the small cover plate on the centre front panel and mount it in the opposite corner.
11. Turn the front panel upside down and re-mount it.
12. Turn the door upside down and re-mount it.

Test run

Check for proper operation of the door switch, as follows:

1. Re-connect the power supply to the dryer
2. Attempt to start the dryer with the door open. It must not start.
3. Close the door and start the machine. Open the door. The dryer must stop.

If the dryer starts with the door open, or fails to stop when the door is opened during operation, repair or replace the door switch, as necessary.

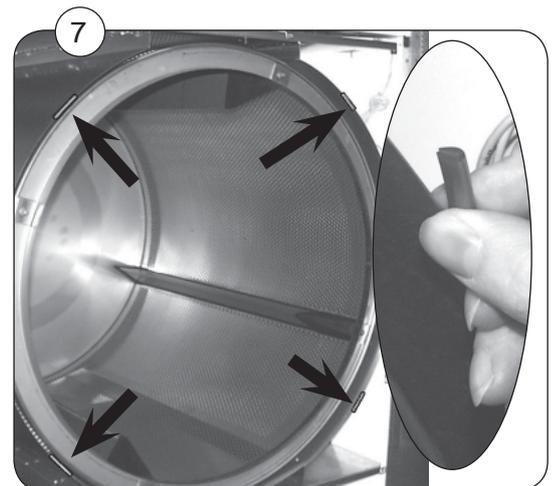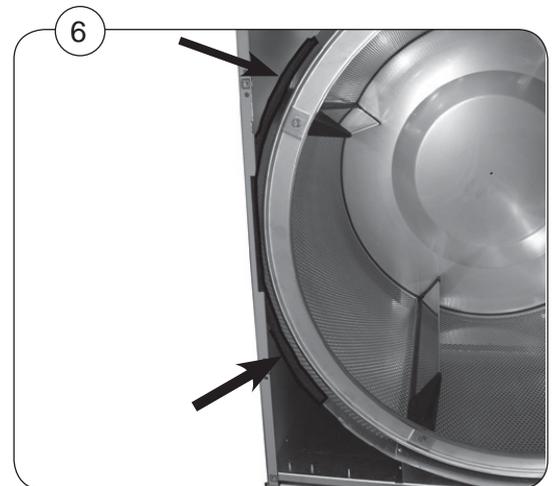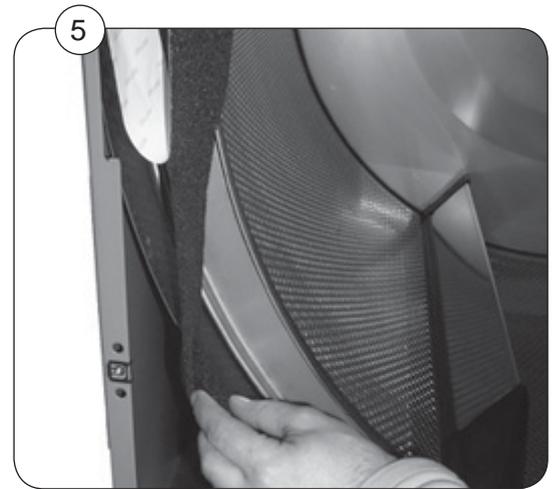

Installation on board a ship


The four accompanying fittings are fastened to the foundation by means of 4 x M10 set screws (supplied with marine models).

Fastening to the base

If the dryer needs fastening to the base a kit containing 4 fittings can be ordered. Kit no. **472 77 77 01**.

The four fittings are fastened to the base by means of 4 x M10 expander bolts.

Drilling plan

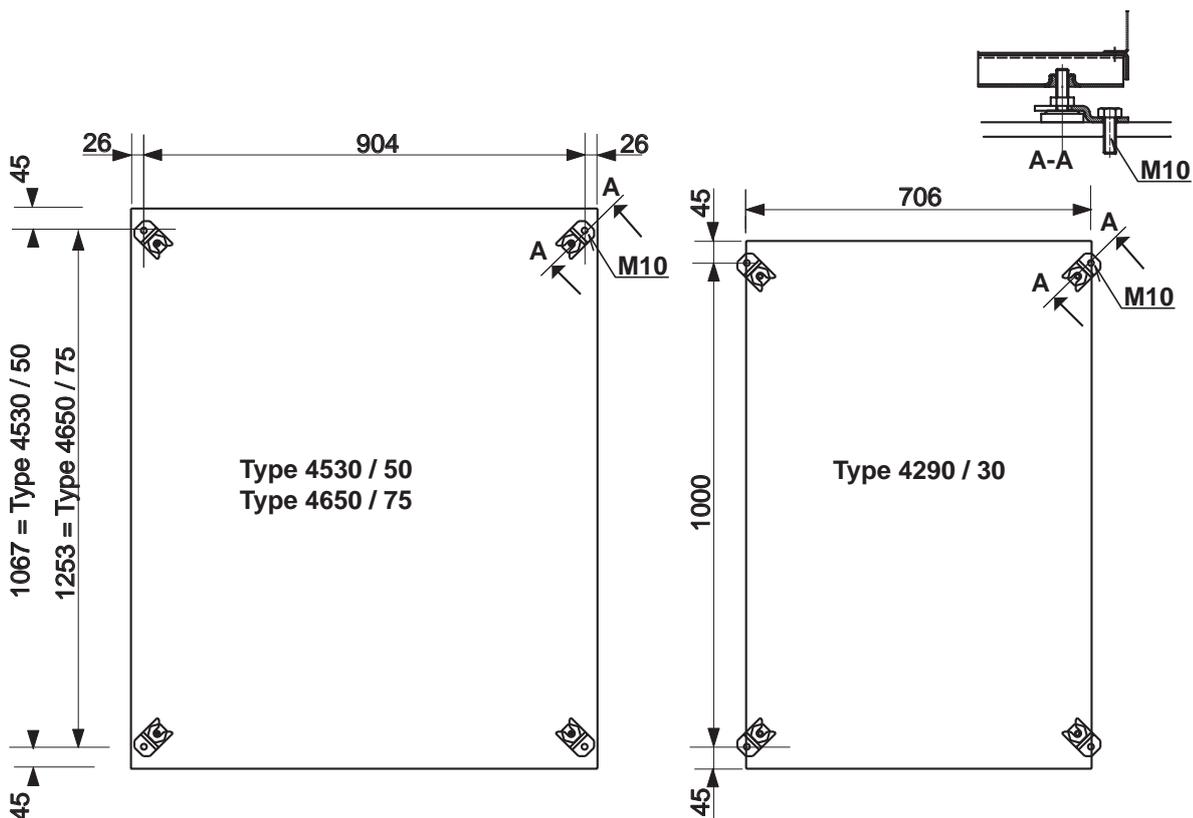

Evacuation system


Air principle

Fig. 1 The blower creates low pressure in the dryer, drawing air into the cylinder via the heating unit.

The heated air passes through the garments and the cylinder vents.

The air then flows out through a lint filter positioned straight below the drum. After this, the air is evacuated through the blower and exhaust system.

It is very important that the dryer gets enough fresh air, see next section.

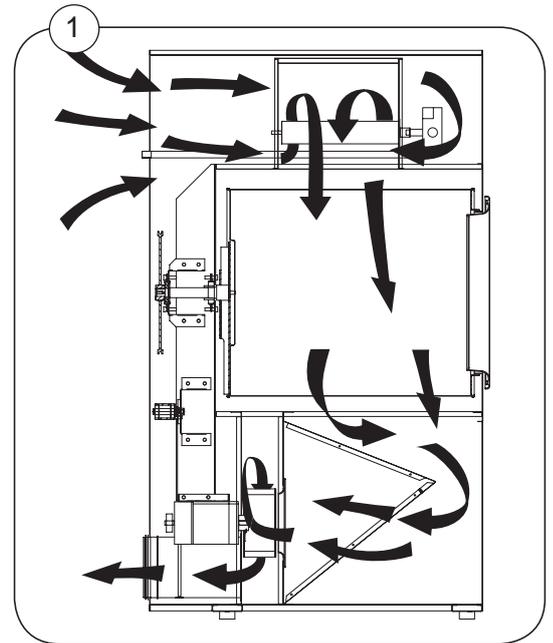

Evacuation system

Fresh-air

For maximum efficiency and the shortest possible drying time, it is important to ensure that fresh air is able to enter the room from the outside in the same volume as that blown out of the room.

Fig. 1 To avoid a draught in the room, it is advisable to place the air inlet behind the dryer.

Fig. 2 The area of the air inlet opening must be 5 times the size of the exhaust pipe area. The area of the inlet opening is the area through which the air can flow without resistance from the grating/slatted cover.

See table on the following page.



Note! Gratings/slatted covers often block half of the total fresh air vent area. Remember to take this into account

The resistance in the grating/slats on the air inlet cover plate should not exceed 10 Pa (0.1 mbar).

T4290: The air consumption is approximately 430 - 925 m³/h.

T4530: The air consumption is approximately 840 - 1380 m³/h.

T4650: The air consumption is approximately 1500 m³/h.

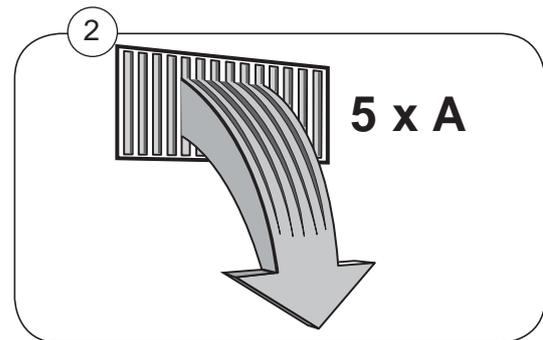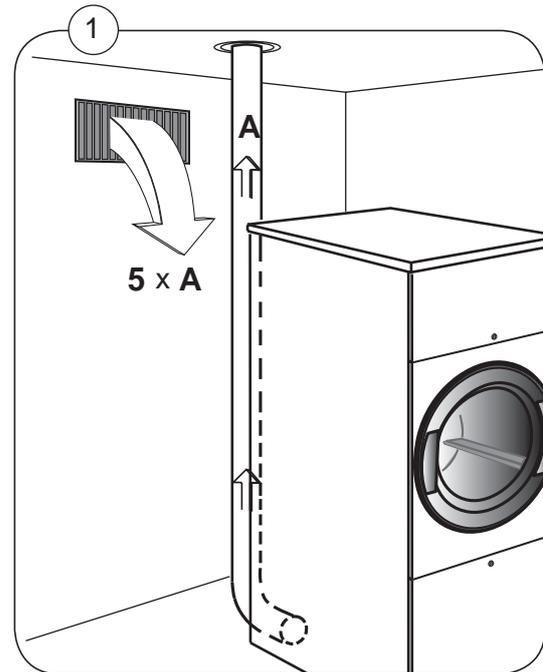

Evacuation system

Exhaust duct

It applies to the exhaust duct that:

- The exhaust duct must be smooth on the inside (low air resistance).
- The exhaust duct must lead into the open.
- The exhaust duct must lead clear of the building as condensation may cause frost damage to the building.
- The exhaust duct must be protected against rain and foreign objects.
- The exhaust duct must have gentle bends, fig. 1.
- The exhaust duct must not be a shared duct between dryers and appliances using gas or other fuels as their energy source.

It applies to the installation of several dryers on a shared exhaust duct that:

- The exhaust duct diameter must increase after each dryer, fig. 2.
The table below shows the exhaust duct diameter and the necessary fresh-air inlet area.

Note! It is recommended that each dryer is connected to a separate exhaust duct.

Service organization/dealer

If you have questions relating to the design of the exhaust system, please contact your local dealer or service organization.




The exhaust duct diameter must not be reduced.

No. of dryers	1	2	3	4	5	6	7	8	9	10
Exhaust duct diameter in mm	200	280	315	355	400	450	475	500	535	560
Minimum area of fresh-air intake in m ²	0.15	0.30	0.45	0.60	0.75	0.90	1.05	1.20	1.35	1.50


Each dryer requires a fresh-air aperture of min. 400 x 400 mm.

Evacuation system

Gentle bends

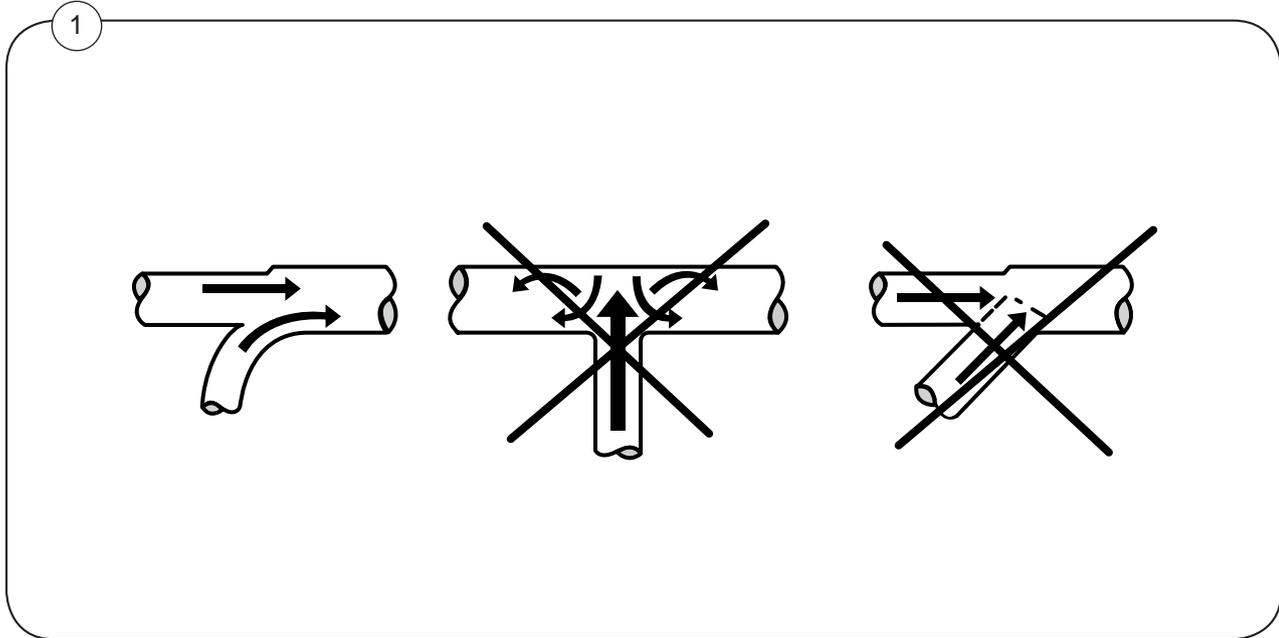

Several dryers on a shared exhaust duct

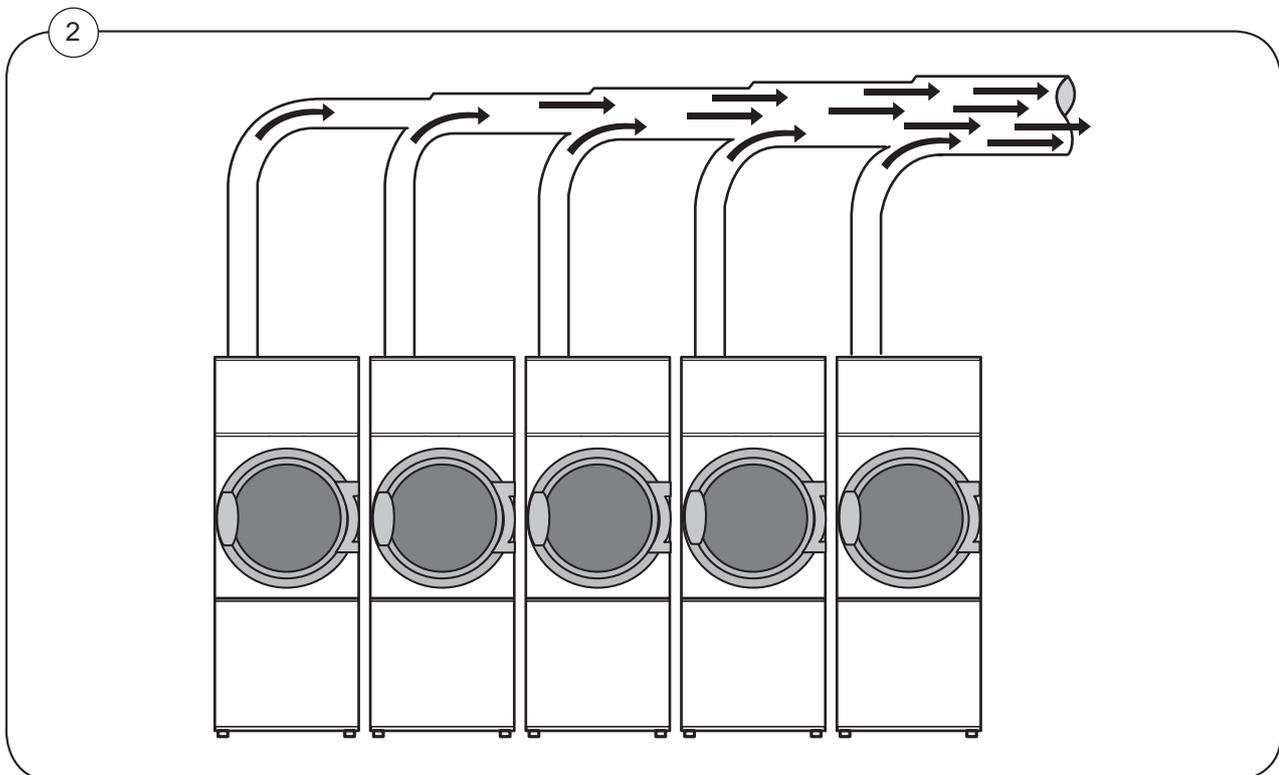

Evacuation system


Nonreturn flap

In order to achieve the best result it is important that the dryer has the right volume of air to work with.

From factory the nonreturn flap is set to be wide open.

Adjusting the dryer

1. Dismount the back plate.
2. Adjust the amount of air by opening/closing the damper **A**, fig. 1.

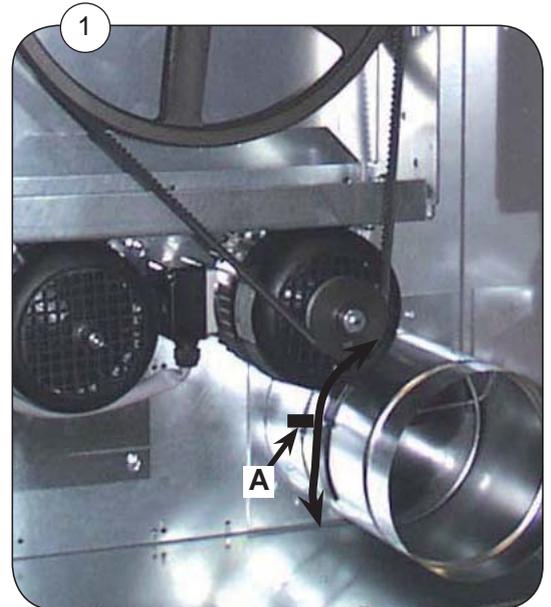

Steam installation

Before start

The steam pipe must be cut off and must not be under pressure.

Steam

Steam 3-10 bar absolute pressure (130- 180°C).

Steam forward

1. The branch pipe's branch must be located at the top of the main steam pipe to prevent condensation in the steam.
2. The branch pipe must have a descending gradient and must end at a height above the inlet connecting branch (A).
3. Mount a plug valve (C) and a dirt collector (D) in the branch pipe.

Condensation return

1. It is important that the branch pipe for condensed water on return to the main condensation pipe has a descending gradient and is lower than the outlet connecting branch (B).
2. Mount a dirt collector (D) in the return pipe.
3. Mount a mechanical water discharger behind the dirt collector (E).
4. Then mount a plug valve (C).
5. Mount pressure hoses between branch pipes and dryer.

Leak test


1. Leak test the system.
2. Clean the dirt collectors (D).

Function check

The function check is described in the back of this manual.

Pipe insulation

All pipes must be insulated in order to reduce risk of burning. Insulation also reduces loss of heat to the surroundings.

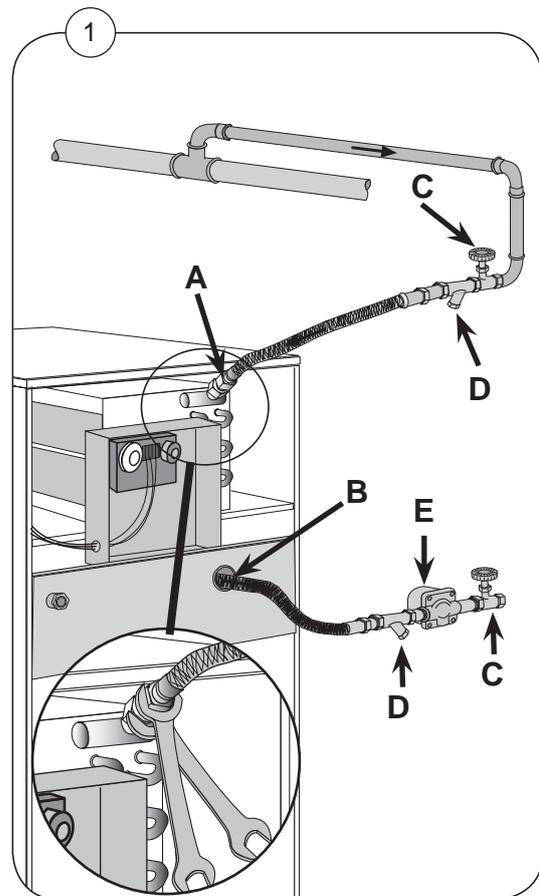

Gas installation general



Mount a shut-off valve upstream from the dryer.

The gas connection to the dryer should be dimensioned to an output depending on the kW-rating of the dryer.

The factory nozzle pressure setting corresponds to the fuel value given on the data label.

Check that the nozzle pressure and fuel value correspond with the values in the gas tables on the following pages. If not, contact the supplier.

Bleed the pipe system before connecting the dryer.

After connection, test all joints for leaks.

Converting instructions to another gas type

Before installing the dryer affix the label "Read the user instructions" to the inside of the door, see pictures below.

The label must have the correct country code - choose the correct label from the kit.



GB, IE

Read the technical instructions before installing the appliance.

Read the user instructions before lighting the appliance.

This appliance may only be installed in a room if the room meets the appropriate ventilation requirements specified in the national installation regulations.

487229348.00

Gas installation - table of pressure and adjustment

This gas appliance has been built to run on natural gas group I2H and I2E(LL), commonly identified by GNH.

The data label shows the injector size and the injector pressure and the countries that use this gas quality: DK, NO, SE, FI, CH, CZ, EE, LT, SL, TR, BG, RO, GB, ES, GR, IE, IT, PT, AT, LV, HU, IS, SK, DE, PL, LU and non-European countries.

Before connecting the appliance please make sure that the supplied gas type is correct.

Following gas conversions are possible:

1. Appliances to be installed to run on GNH or GNL in FR, BE: I2E+
2. Appliances to be installed in NL, parts of DE and Non-European countries: I2L.
3. Appliances to be installed to run on LPG in: DK, NO, SE, FI, EE, LT, SL, TR, DE, NL, CH, CZ, HU, GR, MT, CY, LV, SK, LU, BG and Non-European countries: I3B/P .
4. Appliances to be installed to run on LPG in: GB, ES, GR, IE, IT, PT, CH, CZ, BE, FR, CY, EE, LV, LT, LU, RO: I3+ .
5. Appliances to be installed to run on LPG in: AT: I3B/P (50 mbar) inlet pressure.
6. Appliances to be installed to run on LPG in: PL: I3B/P (36 mbar) inlet pressure.

Fig. 1 - T4290 only

Gas group	Injector size Ø mm (1)	Air reducing plate (fig. 5)	Inlet pres- sure (mbar)	Injector pressure (mbar)	Label no. (fig. 10)
I2H, I2E(LL)	3.8	Ø38	20	10.5	DEFAULT
I2E+	3.3	Ø38	20/25	20/25	487266723
I2L (LL)	3.8	Ø38	20/25	15, 2	487266723
I3B/P, I3+	2.2	NONE	30, 28/37	30, 28/37	487266721
I3B/P (36)	2.1	NONE	36	36	487266722
I3B/P (50)	2.2	NONE	50	50	487266722

Fig. 2 - T4530 only

Gas group	Injector size Ø mm (1)	Air reducing plate (fig. 7)	Inlet pres- sure (mbar)	Injector pressure (mbar)	Label no. (fig 10)
I2H, I2E(LL)	5.6	Ø40	20	8	DEFAULT
I2E+	4.7	Ø40	20/25	20/25	487266733
I2L (LL)	6.2	Ø40	20,25	8	487266733
I3B/P, I3+	3.2	Ø40	30, 28/37	30, 28/37	487266731
I3B/P (36)	3.05	Ø40	36	36	487266732
I3B/P (50)	3.2	Ø40	50	30	487266732

Fig. 3 - T4650 only

Gas group	Injector size Ø mm (1)	Air reducing plate (fig. 9)	Inlet pres- sure (mbar)	Injector pressure (mbar)	Label no. (fig. 10)
I2H, I2E(LL)	6.5	Ø32	20	9.5	DEFAULT
I2E+	5.4	Ø32	20/25	20/25	487266738
I2L (LL)	6.5	Ø32	20,25	14	487266738
I3B/P, I3+	3.8	Ø40	30, 28/37	30, 28/37	487266736
I3B/P (36)	3.5	Ø40	36	36	487266737
I3B/P (50)	3.8	Ø40	50	50	487266737

Conversion instructions - T4290 only:

1. Disconnect the power to the dryer.
2. Open the operating panel.
3. Remove nozzle (1), see Fig. 4.
4. If converting to LPG also remove the air reducing plate, see Fig. 5.
5. Mount the enclosed nozzle (1), see Fig. 1.
6. Loosen the measuring branch screw (2) 1/4 turn; connect a manometer to the measuring branch (2), see Fig. 4.
7. Connect the power and select a programme with heat.
8. Start the dryer.
9. See nozzle pressure in table Fig. 1 - set the nozzle pressure on setting screw (4) under cover screw (3), see Fig. 4.
10. Check that the gas flame burns evenly and has a bluish colour.
11. Mount the cover screw (3), see Fig. 4.
12. Close the operating panel.

NOTE: After the conversion has been carried out, the enclosed sign with the new gas type printed on it **must** be affixed to the dryer data plate, see instructions later.

Fig. 4


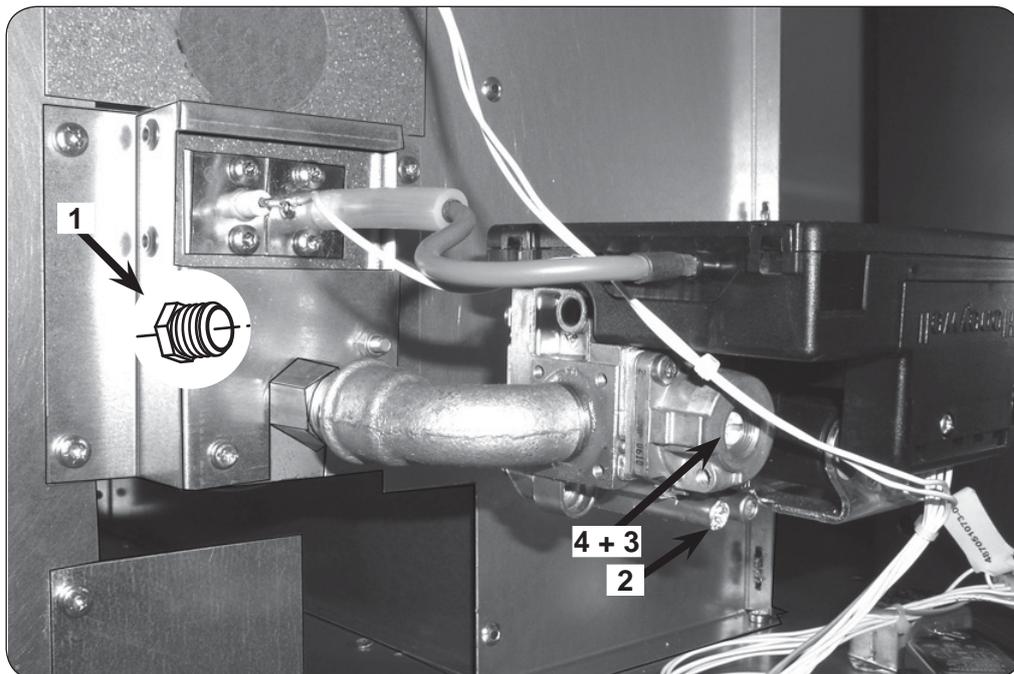




Fig. 5

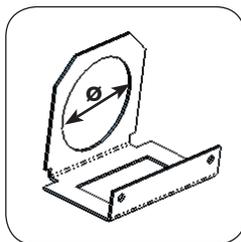

Conversion instructions - T4530 only:

1. Disconnect the power to the dryer.
2. Open the operating panel.
3. Remove nozzle (1), see Fig. 6.
4. Mount the supplied nozzle (1), see Fig. 2.
5. Loosen the measuring branch screw (2) 1/4 turn; connect a manometer to the measuring branch (2), see Fig. 6.
6. Connect the power and select a programme with heat.
7. Start the dryer.
8. See nozzle pressure in Fig. 2 - set the nozzle pressure on setting screw (4) under cover screw (3), see Fig. 6.
9. Check that the gas flame burns evenly and has a bluish colour.
10. Mount the cover screw (3), see Fig. 6.
11. Close the operating panel.

NOTE: After the conversion has been carried out, the enclosed sign with the new gas type printed on it **must** be affixed to the dryer data plate, see instructions later.

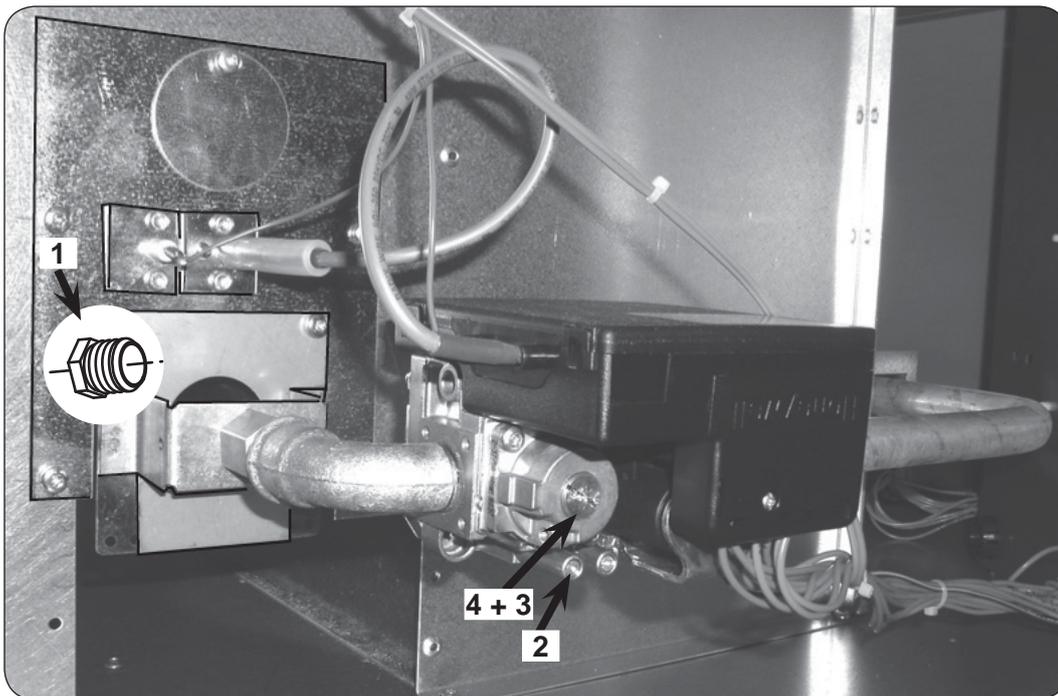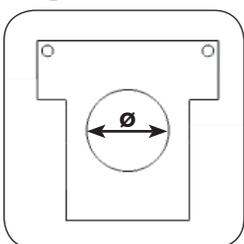Fig. 6**Fig. 7**

Conversion instructions - T4650 only:

1. Disconnect the power to the dryer.
2. Open the operating panel.
3. Remove nozzle 1, see Fig. 8.
4. Mount the supplied nozzle (1), see Fig. 3.
5. If converting to LPG remove the air reducing plate with opening $\varnothing 32$ and mount the one with opening $\varnothing 40$ instead, see Fig. 3 & 9.
6. Loosen the measuring branch screw (2) 1/4 turn; connect a manometer to the measuring branch (2), see Fig. 8.
7. Connect the power and select a programme with heat.
8. Start the dryer.
9. See nozzle pressure in table Fig. 3 - set the nozzle pressure on setting screw (4) under cover screw (3), see Fig. 8.
10. Check that the gas flame burns evenly and has a bluish colour.
11. Mount the cover screw (3), see Fig. 8.
12. Close the operating panel.

NOTE: After the conversion has been carried out, the enclosed sign with the new gas type printed on it **must** be affixed to the dryer data plate, see instructions later.

Fig. 8


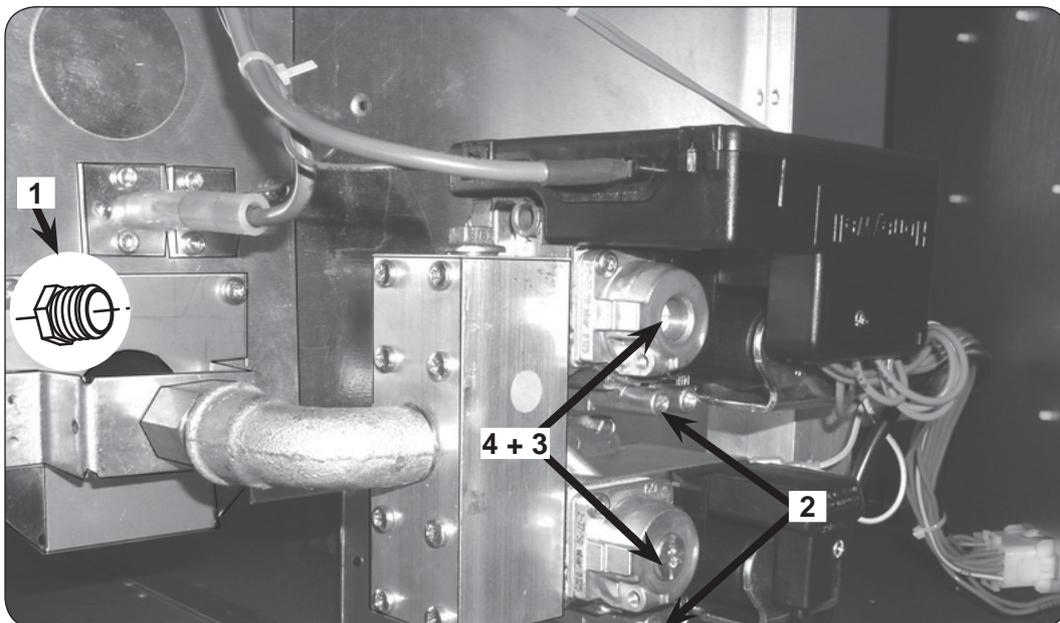


Fig. 9

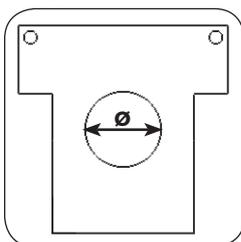


Installation

When the dryer is to be converted to another gas type, the data label on the rear of the dryer must be updated in order for the data to be correct.

Place the data label enclosed in the conversion kit on top of the data label as shown below. For data label no. see Fig. 1 - T4290, Fig. 2 - T4530, Fig. 3 - T4650.

If there are more than 1 data label, select the label with the correct country code and gas type.

Fig. 10

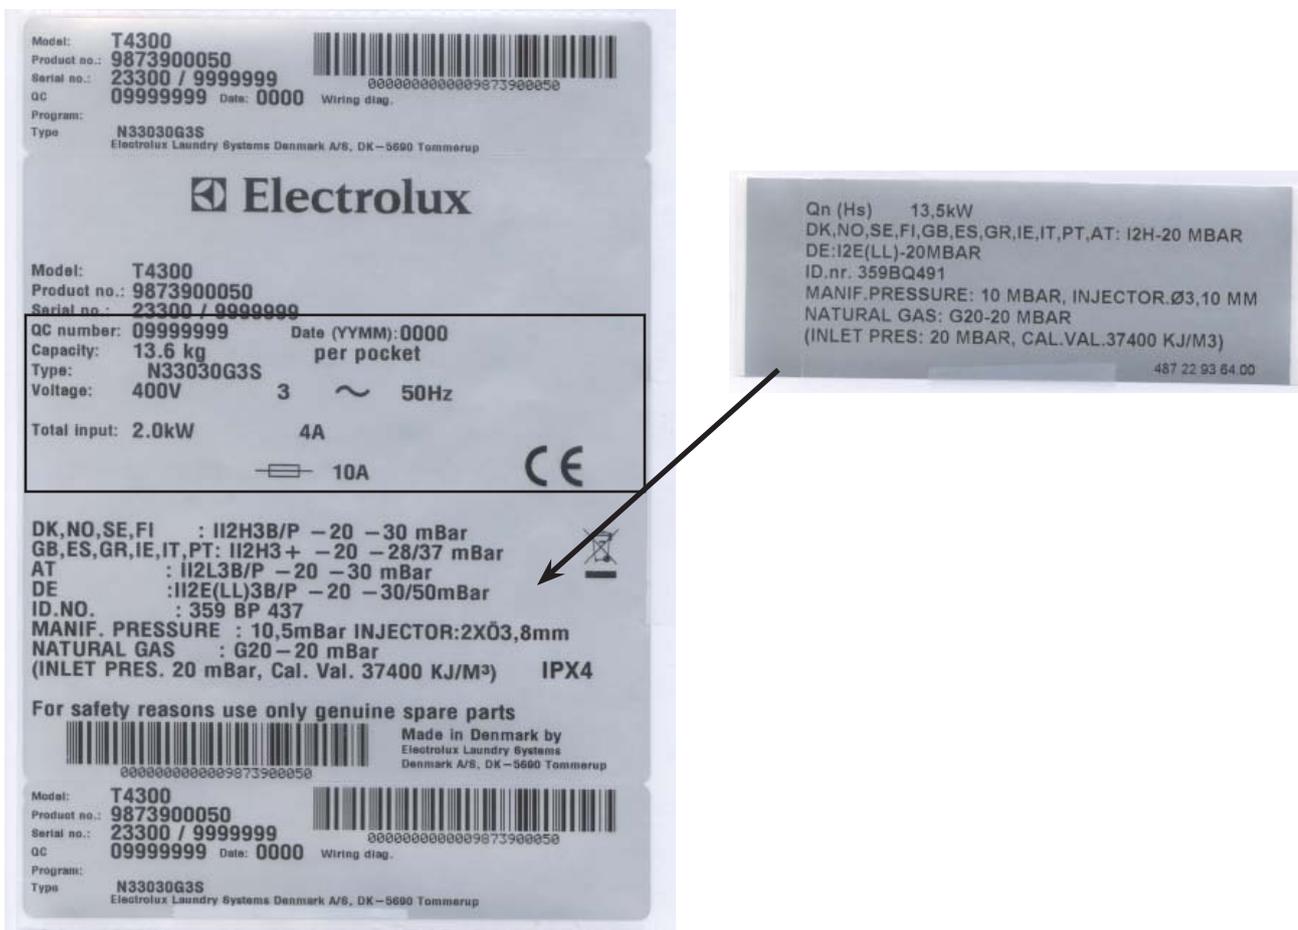

Electric installation



To be carried out by qualified personnel



The tumble dryer must be connected to its own fuse group and multi-pole main switch according to IEC 60947.

The sizes of the fuse group and the effect are shown on the following page.

The tumble dryer must be equipped with supplementary protection in accordance with heavy current regulations.

For calculation of the connection cable dimension, please refer to local guidelines.

Connecting the cable (within the EU and EEA)


1. Demount cover plate **A**, fig. 1 on the following page.
2. Pass the feeder cable through cable gland**, fig. 1 on the following page.
3. Turn knob* to 'O'/'OFF'
4. Connect the feeder cable as illustrated on the following page.
5. Remount cover plate **A**.
6. Function check the dryer
The function check is described in the back of this manual.

* Lockable knob is fitted on machines type 4530 and 4650 for countries within the EU and EEA (the machine directive standard for disconnecting the electrical supply during servicing).

Electric installation

Connecting the cable (outside the EU and EEA)

1. Demount cover plate **A**, fig. 1.
2. Pass the feeder cable through cable gland**, fig. 1.
3. Connect the feeder cable as illustrated.
4. Remount cover plate **A**.
5. Function check the dryer.
The function check is described in the back of this manual.

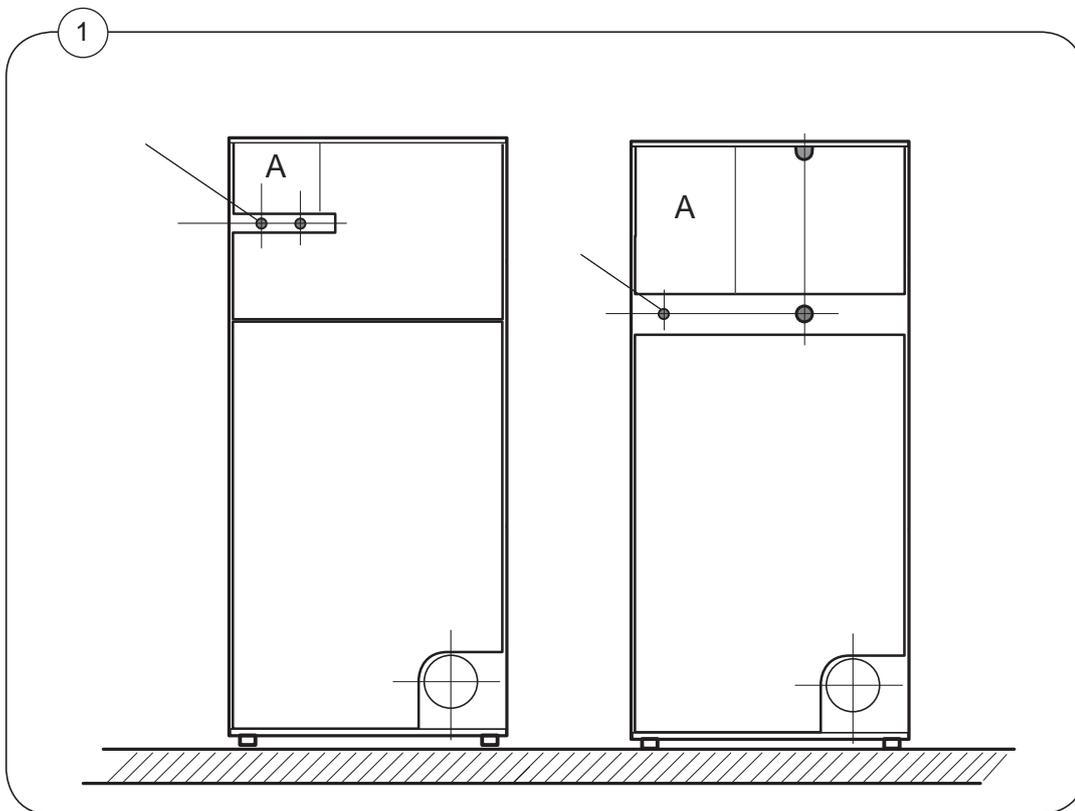

Cable gland for feeder cable

Fig 1 Positioning of cable gland for feeder cable.

On electric heated dryers type T4530 and T4650 the cable gland is not mounted. The cable gland is in the drum and has to be mounted on the beam.

Electric installation - electric, gas, steam heated


To be carried out by qualified personnel





The tumble dryer must be connected to its own fuse group and multi-pole main switch according to IEC 60947.

Connecting the cable

Demount the cover plate from the supply unit.
 The cable is led through the cable gland to the terminal block and connected as illustrated. If there is a neutral conductor in the power supply line this must be connected to terminal N:

- Fig. 1 Gas and steam heated 1-phase
- Fig. 2 Gas and steam heated 1-phase with supply disconnector
- Fig. 3 Gas and steam heated 3-phase

To be continued on the following page

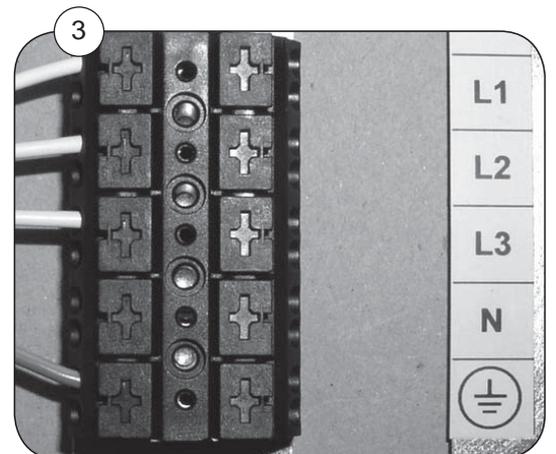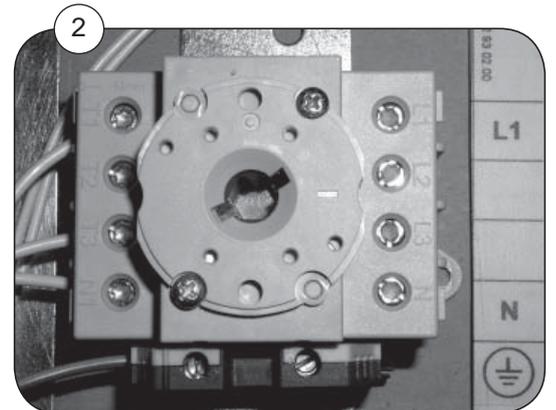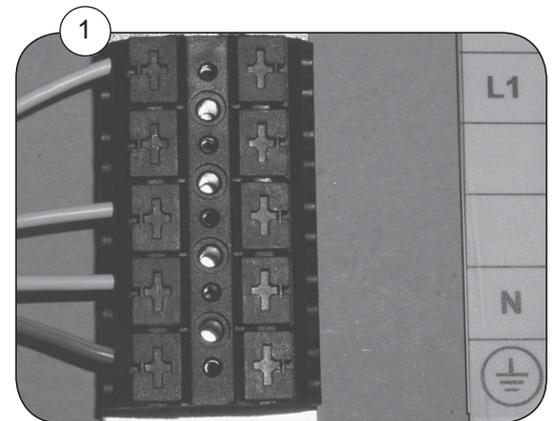

Continued

Fig. 4 Gas and steam heated 3-phase with supply disconnector

Fig. 5 Electric heated 3-phase

Fig. 6 Electric heated 3-phase with supply disconnector

Cable dimension

For calculation of the connection cable dimension, please refer to local guidelines.

Fuse group and effect



The sizes of the fuse group and the effect are shown on the following pages.

Function check


The function check is described in the back of this manual.

Note! Correct direction of rotation is important!

The dryer must be equipped with supplementary protection in accordance with heavy current regulations.

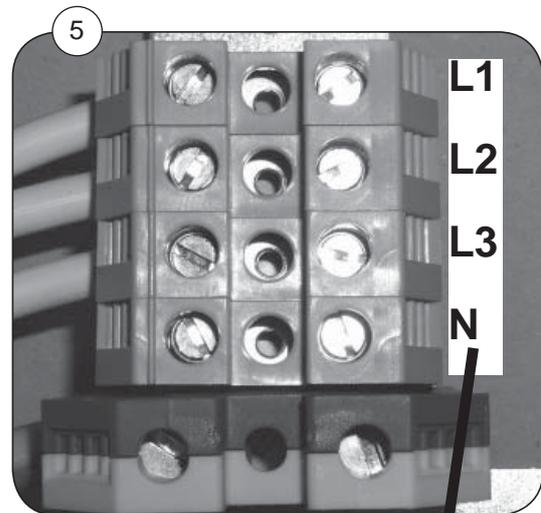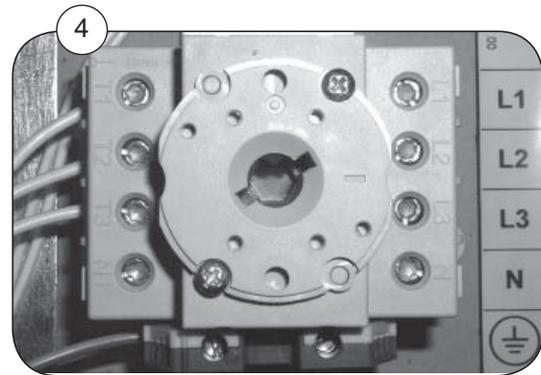

1.25 A external control only

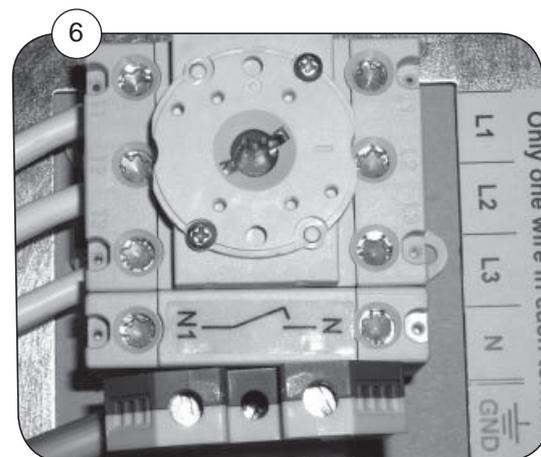

Electric installation - options

External connection - 100 mA


A special connection terminal is located on the connection console fig. 1.

This connection can be used as external control of a fan.

The terminal for external control is equipped with 110V/ max.100mA and is intended solely for the operation of a contactor

Max. connection 100mA.

Gnd. must not be used for earthing of external board.

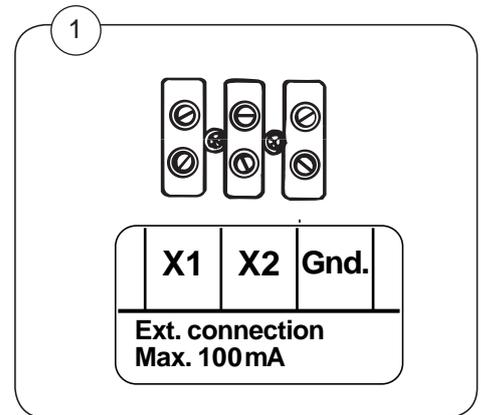

External connection - 1.25 A


A special connection for an external fan can be chosen on the connection console.

This connection is only available on 400V-3N machines.

Mount cable for external connection on contactor K7 in K7-2 and K7-4, fig.2.

Connect earth conductor to earth terminal for external connection, fig. 1.

Max. connection 1.25A.

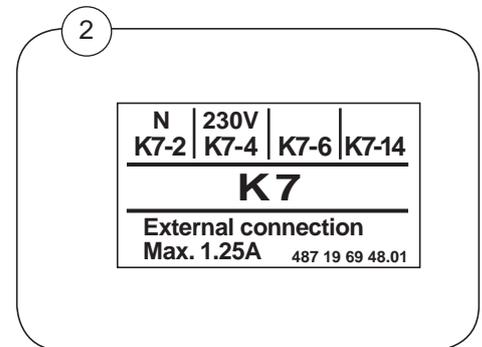

Electric installation - T4290

Fuse sizes, effects and voltages

	Voltage			Heat effect kW	Motor effect kW	Max. effect kW	Fuse
Gas	230-240V	3AC 50/60Hz	w/reversing	21 kW	1.5 kW	1.5 kW	10A
	230-240V	3AC 50/60Hz	wo/reversing	21 kW	1.0 kW	1.0 kW	10A
	230-240V	1AC 50/60Hz		21 kW	1.5 kW	1.5 kW	10A
	400-480V	3AC 60HZ	w/reversing	21 kW	1.5 kW	1.5 kW	10A
	400-480V	3AC 60HZ	wo/reversing	21 kW	1.0 kW	1.0 kW	10A
	400-415V	3AC 50Hz	w/reversing	21 kW	1.5 kW	1.5 kW	10A
	400-415V	3AC 50Hz	wo/reversing	21 kW	1.0 kW	1.0 kW	10A
	Steam	230-240V	3AC 50/60Hz	w/reversing		1.5 kW	1.5 kW
230-240V		3AC 50/60Hz	wo/reversing		1.0 kW	1.0 kW	10A
230-240V		1AC 50/60Hz			1.5 kW	1.5 kW	10A
400-480V		3AC 60HZ	w/reversing		1.5 kW	1.5 kW	10A
400-480V		3AC 60HZ	wo/reversing		1.0 kW	1.0 kW	10A
400-415V		3AC 50Hz	w/reversing		1.5 kW	1.5 kW	10A
400-415V		3AC 50Hz	wo/reversing		1.0 kW	1.0 kW	10A
Electric		230-240V	3AC 50/60Hz		13,5 kW	1.5 kW	15.0 kW
	400-415V	3AC 50/60Hz		13,5 kW	1.5 kW	15.0 kW	25A
	440-480V	3AC 60 Hz		13,5 kW	1.5 kW	15.0 kW	20A
	230-240V	3AC 50/60Hz		18 kW	1.5 kW	19.5 kW	50A
	400-415V	3AC 50/60HZ		18 kW	1.5 kW	19.5 kW	35A
	440-480V	3AC 60 Hz		18 kW	1.5 kW	19.5 kW	25A

Electric installation - T4530

Fuse sizes, effects and voltages

	Voltage		Heat effect kW	Motor effect kW	Max. effect kW	Fuse
Gas	230-240V	3AC 50/60 Hz	40 kW	1.5 kW	1.5 kW	10A
	230-240V	1AC 50/60Hz	40 kW	1.5 kW	1.5 kW	10A
	400-415V	3AC 50/60Hz	40 kW	1.5 kW	1.5 kW	10A
	440-480V	3AC 60Hz	40 kW	1.5 kW	1.5 kW	10A
Steam	230-240V	3AC 50/60 Hz	-	1.5 kW	1.5 kW	10A
	230-240V	1AC 50/60Hz	-	1.5 kW	1.5 kW	10A
	400-415V	3AC 50/60Hz	-	1.5 kW	1.5 kW	10A
	440-480V	3AC 60Hz	-	1.5 kW	1.5 kW	10A
Electric	230-240V	3AC 50/60Hz	24 kW	1.5 kW	25.5 kW	80A
	400-415V	3AC 50/60Hz	24 kW	1.5 kW	25.5 kW	50A
	440-480V	3AC 60Hz	24 kW	1.5 kW	25.5 kW	50A
	230-240V	3AC 50/60Hz	30 kW	1.5 kW	31.5 kW	100A
	400-415V	3AC 50/60Hz	30 kW	1.5 kW	31.5 kW	50A
	440-480V	3AC 60Hz	30 kW	1.5 kW	31.5 kW	50A

Electric installation - T4650

Fuse sizes, effects and voltages

	Voltage		Heat effect kW	Motor effect kW	Max. effect kW	Fuse
Gas	230-240V	3AC 50/60 Hz	57 kW	2 kW	2 kW	10A
	400-415V	3AC 50/60Hz	57 kW	2 kW	2 kW	10A
	440-480V	3AC 60HZ	57 kW	2 kW	2 kW	10A
Steam	230-240V	3AC 50/60 Hz	-	2 kW	2 kW	10A
	400-415V	3AC 50/60HZ	-	2 kW	2 kW	10A
	440-480V	3AC 60Hz	-	2 kW	2 kW	10A
Electric	230-240V	3AC 50/60Hz	30 kW	2 kW	32 kW	100A
	400-415V	3AC 50/60Hz	30 kW	2 kW	32 kW	50A
	440-480V	3AC 60Hz	30 kW	2 kW	32 kW	50A
	230-240V	3AC 50/60Hz	36 kW	2 kW	38 kW	100A
	400-415V	3AC 50/60Hz	36 kW	2 kW	38 kW	63A
	440-480V	3AC 60Hz	36 kW	2 kW	38 kW	63A



Function check

Check whether the drum is empty and the door has been closed.

Start the dryer

Check if the micro switches are working properly:

The dryer must stop if the loading door is opened.


The dryer must stop if the filter door is opened.

Correct direction of rotation

Fig. 1 Correct direction of rotation on fan wheel: **clockwise**.

For dryers with a 3-phase motor the direction of rotation must be checked.

If the direction of rotation is not correct, swop two phases on the connection terminal.

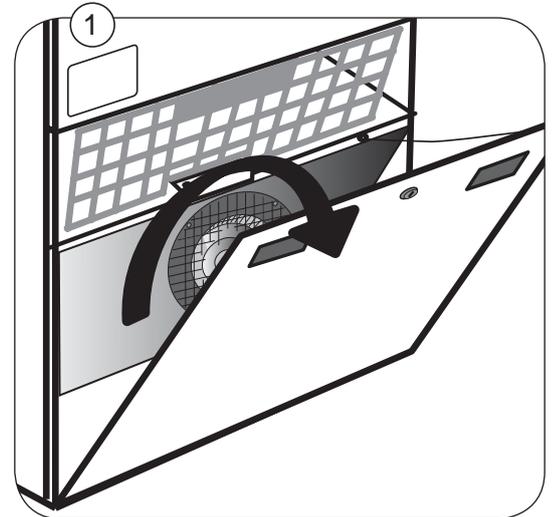

Final test


Let the dryer work for 5 minutes on a program that requires heat.

Then check whether the heating is working by opening the front door and feel the heat.

If the above tests-points are in order, the dryer is ready for use.

Safety screws

Fig. 2 Remember to fit the screws on the sides of the front panel.

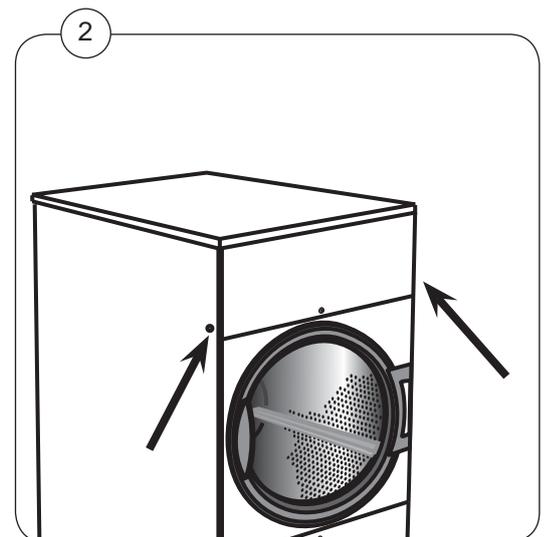


Service organisation/dealer

If deficiencies or errors are detected, please contact your local service organisation / dealer.

Option: Adaptor for direct fresh-air intake - dimension sketch

Gas- and electric heated dryers

1	Adaptor:	T4290	no. 988 80 20 41
		T4530, T4650	no. 988 80 20 42
2	Diameter:	T4290	Ø 315
		T4530, T4650	Ø 400

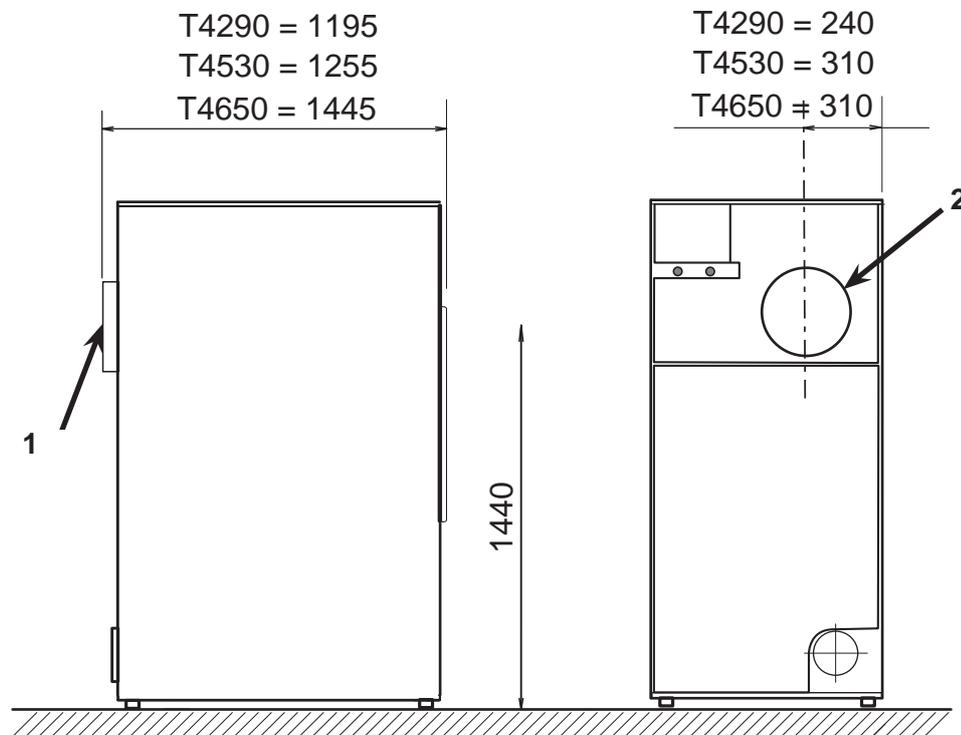

Thinking of you
 **Electrolux**

www.electrolux.com/laundrysystems

Share more of our thinking at www.electrolux.com