

HOW TO USE YOUR NEW

ELECTROLUX®

VACUUM CLEANER



MODEL 1205

Congratulations!

The new Electrolux that you have just purchased is the finest cleaner that almost 50 years of specialized experience have made possible. It is the most automatic cleaner made—stops when a new bag is needed—automatically, seals dirt in the bag—automatically, prevents operation without a bag—automatically, and rewinds the cord—automatically. There's no other cleaner like it.

Guarantee

The Electrolux® Cleaner which you receive herewith has been thoroughly tested at the Electrolux factory in Old Greenwich, Connecticut. Electrolux hereby guarantees for a period of two years from date of purchase from Electrolux that upon return of the cleaner to an Electrolux office within that period, it will repair or replace, free of cost to you, any part of such cleaner which our examination shall disclose to be defective in workmanship or material, except that with respect to the hose, the wands, the detachable electric cord (if any), the cleaning tools and other attachments including the rug washer and the power nozzle, such guarantee shall be limited to a period of one year from date of such purchase.

ELECTROLUX

By

Vice President

© Electrolux 1968

Division of Consolidated Foods Corporation

FOR A CLEAN HOME

Your Electrolux representative has shown you how to use your new Electrolux® Vacuum Cleaner to have the cleanest home possible. On the following pages are a few helpful reminders on its use and care. Read them over carefully and call your representative or nearest Branch for the answer to any questions you may have or to meet any future service needs.



THE AUTOMATIC CONTROL

Your Electrolux representative will adjust the automatic control indicator to the setting best suited for your cleaning needs. There are six bands on the indicator, ranging from coarse, through medium, to fine dirt.

SET AT COARSE—when cleaning fuzz, dog hair, nap, lint, thread, feathers, crumbs, sawdust, larger particles of dirt, etc.

 
SET AT MEDIUM—when cleaning ordinary household dust and dirt, sand particles, grit, etc.

SET AT FINE—when cleaning attics, cellar floors, ashes, soot, plaster, or any fine dirt.


The instant enough dirt is picked up to cut down the suction power, the Electrolux Cleaner will shut off its motor *automatically*, will open the cover *automatically* and the red Guide Light will come on and tell you it's time to replace the dirt clogged bag with a clean bag. If you forget to replace the bag, the motor will not start and Guide Light will remain lit and tell you to "Check Bag."

To change bag before cleaner opens automatically, push down latch at top of cleaner. Make sure bag is seated properly. Stand cleaner on end for ease in changing bag.

YOUR NEW ELECTROLUX CLEANER

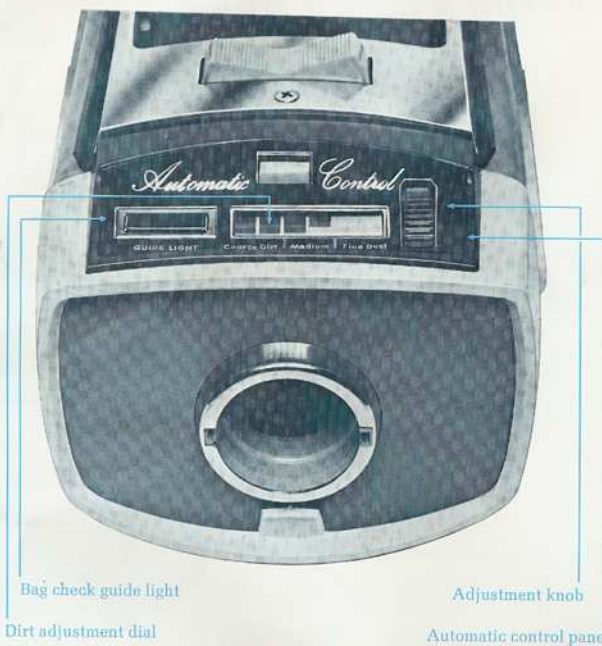

WITH ITS WORK SAVING ATTACHMENTS

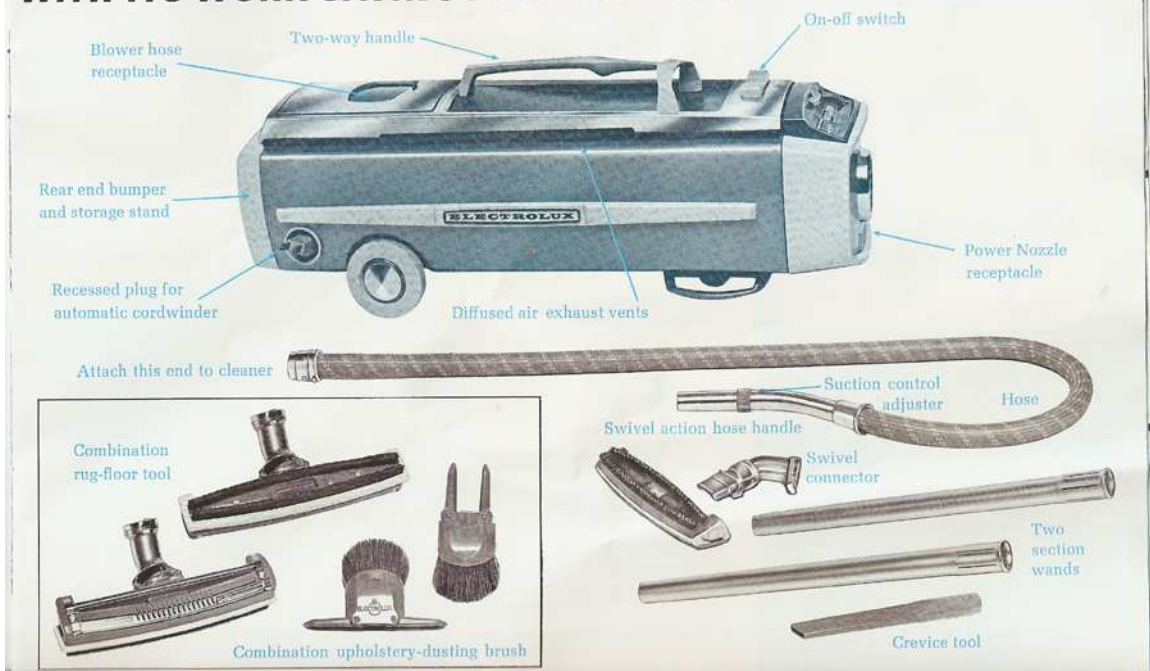 



RUG WASHER

This economical work-saving optional cleaner attachment for shampooing rugs and carpets without getting down on hands and knees. No rinsing or wiping up required, restores carpet beauty without soaking. Saves on rug cleaning bills. Comes in own 3-in-1 Carpet Caddy for easy storage and carrying purposes. (Ask for Rug Washer Manual)

POWER NOZZLE

The optional Electrolux® Power Nozzle provides a powerful two motor cleaning system. Its swiftly rotating brush gives the fastest, easiest rug, upholstery and mattress care possible. It gently fluffs the nap, and permits the cleaner suction to get the deep down dirt that causes expensive carpet wear. (See Power Nozzle Manual for complete instructions)

 


Power Nozzle will stop automatically if too large an object is accidentally picked up and jams it. Shut cleaner off and press reset button to start after removing obstacle.


USE ONLY GENUINE ELECTROLUX® FILTER BAGS

This guarantees best performance in your cleaner because—

1. It seals all the dirt in the bag when the automatic control stops your cleaner and tells you to put a new bag in.
2. Not only is it self-sealing, but only the genuine Electrolux bag has three layers of filter paper to prevent clogging.

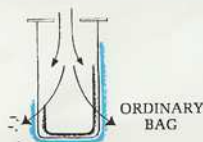

ORDINARY BAG

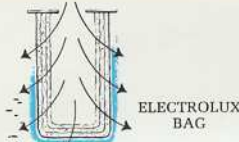 

ELECTROLUX BAG

3. Ordinary bags without filters quickly clog, get less dirt as suction drops. You waste time and effort, use more bags.
4. Electrolux triple filter lining lets air flow through the wall of bag and keeps cleaning power high, outlasts and outperforms all other bags.

When the bag needs replacing the cleaner will open automatically. Discard old bag with dirt sealed in. To insert a new bag stand cleaner on end, drop into place, and close cover.

IMPORTANT: To re-order bags, use re-order envelope in package of filter bags, call your sales representative, or consult telephone directory for nearest authorized Electrolux Branch office.



CARE AND MAINTENANCE

Electrolux makes quality products, strongly constructed, only requiring reasonable good care and treatment. Do not drop cleaner, pick up water with it, or store in a damp place. Keep it clean. Have periodic check-ups by your representative to keep in good running order.

 
CLOGGED HOSE

Occasionally you may pick up an object that becomes lodged in the hose. To clear it, reverse suction by putting suction end of hose in blower receptacle and the hose handle end back into suction end of the machine, to prevent dirt from flying around room. Turn on machine and blow obstacle free. Call your representative if object remains lodged in hose. Do not run machine for any length of time with clogged or partially clogged hose. Overheating may cause motor damage.

SUCTION CONTROL

Make sure Power Nozzle and Rug Tool glide easily over carpets and rugs. To prevent sticking from too much suction, open ring on hose handle until easy movement is created.

- 1 Insert hose end into suction end of cleaner until it clicks. To remove press buttons on side and pull out.

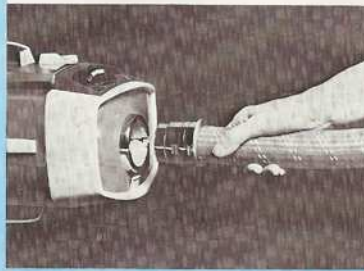

- 2 The two sections of your wand fit together. For all cleaning at floor level, insert one section into the other, twist lightly.

 


- 5 Swivel connector locks into place when you push it on wand as far as it will go. Depress spring clip to unlock it.



- 6 Combination dusting brush-upholstery tool may be used on hose handle or wand. Slip it on and twist slightly.

- 3 Slip hose handle snugly into one end of wand. Cleaning tools are attached to the other end.

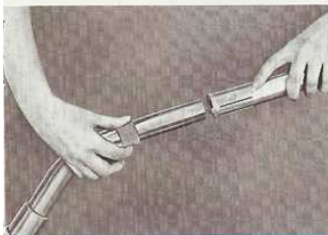

- 4 To use combination rug-floor tool, first attach swivel-connector as shown. Be sure plate marked "THIS SIDE UP" is visible in use.



STORAGE OF CLEANER

The cleaner with hose, wands and tools attached may be stored in very little space by standing on rear bumper end, hanging hose over two clothes hooks spaced about a foot apart on closet wall to avoid sharp bending of hose.

CLEANING TOOLS

 
To remove loose dirt and lint from brushes whisk with hose handle end. Tools may be wiped with a cloth or sponge dampened with a mild detergent.

CARE OF AUTOMATIC CORDWINDER

Cord may be kept clean by wiping with damp cloth and rubbing lightly with talcum powder to insure easy operation.



- 7 Reverse to clean upholstery or fabrics. Wings adjust to contour of furniture. To reduce suction for curtain, open ring on hose handle.

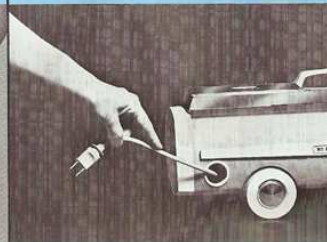

- 8 Pull out cord from automatic cordwinder and plug into electric outlet. Pull lightly and release like a window shade and cord automatically rewinds into cleaner.

ELECTROLUX

the Standard of Excellence in Home Cleaning!

HELPFUL HINTS ON HOME CLEANING

TO CLEAN CARPETS AND FLOORS Put hose in suction end, wand on hose and larger combination tool on end of wand. Use tool with bristles up, smooth rug cleaning surface down on the carpet. Simply guide the tool back and forth in free easy strokes until every area has been covered. Let the Electrolux Cleaner do the work. Clean floors in same way with bristles down.



TO CLEAN WALLS Use large tool (or optional white wall brush). Brush with bristles side to remove clinging dust from walls and ceilings. Clean regularly to keep walls fresh looking, and save on redecorating. If lint clings to brush, whisk it clean with suction from open end of hose.



TO CLEAN FILMY CURTAINS . . . DRAPES Use the smaller combination tool as shown . . . or reverse tool and use the dusting brush. If suction is too strong and sucks in filmy fabrics, open the vacuum adjuster ring on hose handle to reduce air flow.



TO CLEAN STAIRS Either larger or smaller tool may be used. Always keep cleaner in front of you as you work. Carpeted stairs may be cleaned with wings of small tool extended and down, reversing tool to use brush side when cleaning wooden stair ends and banisters. Keep bristles up while cleaning carpet with larger tool, bristles down when cleaning uncarpeted stairs.



TO CLEAN UPHOLSTERED FURNITURE Use the smaller tool as shown with the wings down and extended. Your cleaner will remove deep down dirt as well as surface dust. Adjust wings of tool to fit contour of various surfaces. It will clean round and square surfaces as well as flat surfaces. Power Nozzle may also be used on flat surfaces, such as cushions.



TO CLEAN MATTRESSES AND BEDDING Use the smaller tool in the same way as for cleaning upholstered furniture. Frequent cleaning airs and freshens mattresses, pillows and blankets . . . removes fine dust from pillows or mattress fillers. The Power Nozzle does the fastest, most efficient job on mattresses.



MORE CLEANING TIPS

Your versatile Electrolux tools will do scores of little cleaning jobs around the house. Here are a few examples of how to use it. Use the tools on the wand or directly on hose handle.



CUFFS



PETS



KITCHEN CABINET



HAT



FIREPLACE



CAR



TV



FUR COAT



LAMP SHADE



POCKETS



ASH TRAY



TRADEMARK

Above is the registered trademark of the Company and the stamp of authenticity to assure you are receiving genuine Electrolux products. Look for it on the products, paper bags and literature for your protection.

SERVICE

For prompt service call your Electrolux representative, or the nearest authorized Electrolux Branch as listed in your telephone directory. Authorized Electrolux Branches carry only genuine Electrolux parts. They may be recognized by the registered Electrolux trademark as shown at the top of the page.

DISPOSABLE FILTER BAGS

Use only genuine Electrolux bags, carrying the Electrolux trademark. They are triple filter lined, and designed to protect your motor. They may be obtained from your local representative, Branch Office or from the nearest Regional Office listed.

OTHER ELECTROLUX PRODUCTS

Electrolux makes other optional equipment for your cleaner, such as a White Bristle Wall Brush, a White Bristle Dusting Brush, Sprayer and Vaporizer for special needs. It also makes a Commercial Cleaner, Floor Polisher and Carpet Beautifier, Furniture Polish, Moth Crystals and Waxes and Cleaners for floor care.



This cleaner and other Electrolux products are listed under the Reexamination Service of Underwriters Laboratories, Inc. for your protection.

REGIONAL OFFICES

3001 North Fulton Drive, N.E.
Atlanta, Ga. 30305

6605 North Northwest Highway
Chicago, Illinois 60631

Foothill Village
Salt Lake City, Utah 84108

808 Swifton Center
Cincinnati, Ohio 45237

2333-A Cottman Avenue
Philadelphia, Pa. 19149

55 State Street
Springfield, Mass. 01101

1632 E. 15th Street
Tulsa, Oklahoma 74102

1612 Ponce de Leon Avenue
PDA 23,
Sanjurjo, Puerto Rico 00909

Send filter bag orders to Electrolux at one of the addresses listed above.

JOT IT DOWN!

Purchaser's Name _____

Address _____

FOR GUARANTEE PROTECTION

Date of Purchase _____ Cleaner Model _____

FOR SERVICE

Name of Salesman _____

Branch Address _____

Telephone Number _____