

# Epson Stylus® CX9400Fax Series



## Quick Guide

*Basic Printing, Copying, Scanning, and Faxing*  
*Maintaining Your All-in-One*  
*Solving Problems*

# Contents


<b>Loading Paper</b> .....	<b>4</b>
Using Special Papers .....	<b>5</b>
<b>Placing Originals for Copying, Scanning, or Faxing</b> .....	<b>7</b>
Using the Scanner Glass .....	<b>7</b>
Using the Automatic Document Feeder .....	<b>8</b>
<b>Copying a Document or Photo</b> .....	<b>9</b>
Copying a Document .....	<b>9</b>
Restoring, Cropping, or Copying Photos .....	<b>10</b>
<b>Faxing a Document or Photo</b> .....	<b>13</b>
Connecting a Phone or Answering Machine .....	<b>13</b>
Setting Up Fax Features .....	<b>14</b>
Sending a Fax .....	<b>19</b>
Receiving Faxes .....	<b>21</b>
<b>Printing From Your Camera's Memory Card</b> .....	<b>22</b>
Inserting Your Camera's Memory Card .....	<b>22</b>
<b>Printing From Your Computer</b> .....	<b>24</b>
Printing in Windows .....	<b>24</b>
Printing With a Macintosh .....	<b>26</b>
Selecting the Correct Paper Type .....	<b>30</b>
<b>Scanning Multiple Pages</b> .....	<b>31</b>

<b>Maintaining Your All-in-One</b> . . . . .	<b>32</b>
Checking the Print Head Nozzles . . . . .	<b>32</b>
Cleaning the Print Head . . . . .	<b>33</b>
Checking the Ink Cartridge Status . . . . .	<b>34</b>
Purchasing Epson Ink Cartridges . . . . .	<b>35</b>
Replacing Ink Cartridges . . . . .	<b>36</b>
<b>Solving Problems</b> . . . . .	<b>38</b>
Checking for Software Updates . . . . .	<b>38</b>
Problems and Solutions . . . . .	<b>38</b>
Where To Get Help . . . . .	<b>41</b>
<b>Notices</b> . . . . .	<b>42</b>


# Loading Paper

You can load up to 100 sheets of plain paper, 100 sheets of Epson® Presentation Paper Matte, or 80 sheets of Epson Bright White Paper. Load Premium Presentation Paper Matte and most photo papers 20 sheets at a time. Load transfer paper and adhesive sheets one sheet at a time.

1. Open the paper support and extend the output tray.

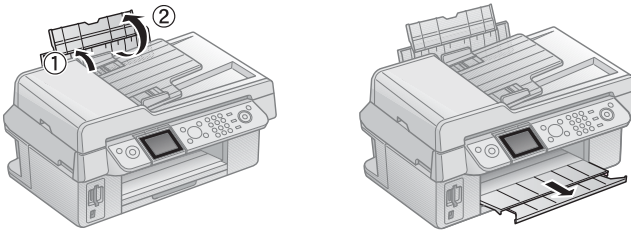


2. Insert the paper, glossy or printable side up, short edge first, against the right side. Then slide the edge guide against the paper.

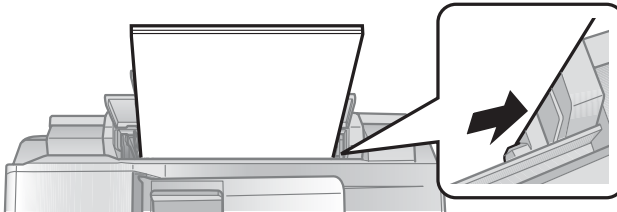

Always load paper short edge first, even for landscape printing. Load letterhead or pre-printed paper top edge first.

**Note:**

For details on paper and instructions on loading envelopes, see the on-screen *User's Guide*.

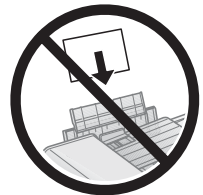

# Using Special Papers

Epson offers a wide array of high quality papers, making it easy to maximize the impact of your photos, presentations, and creative projects.

You can purchase genuine Epson ink and paper at Epson Supplies Central<sup>SM</sup> at [www.epson.com/ink3](http://www.epson.com/ink3) (U.S. sales) or [www.epson.ca](http://www.epson.ca) (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Paper name	Size	Part number	Sheet count
Epson Bright White Paper	Letter (8.5 × 11 inches)	S041586	500
Epson Premium Presentation Paper Matte	Borderless 8 × 10 inches	S041467	50
	Letter (8.5 × 11 inches)	S041257 S042180	50 100
Epson Premium Presentation Paper Matte Double-sided	Letter (8.5 × 11 inches)	S041568	50
Epson Presentation Paper Matte	Letter (8.5 × 11 inches)	S041062	100
	Legal (8.5 × 14 inches)	S041067	100
Epson Ultra Premium Photo Paper Glossy	Borderless 4 × 6 inches	S041934	50
		S042181	60
		S042174	100
	Borderless 5 × 7 inches	S041945	20
Borderless 8 × 10 inches	S041946	20	
Letter (8.5 × 11 inches)	S041935	20	
	S042175	25	
	S042182	50	
Epson Premium Photo Paper Glossy	Borderless 4 × 6 inches	S041808	40
		S041727	100
	Borderless 5 × 7 inches	S041464	20
	Borderless 8 × 10 inches	S041465	20
Letter (8.5 × 11 inches)	S041286	20	
	S042183	25	
	S041667	50	

<b>Paper name</b>	<b>Size</b>	<b>Part number</b>	<b>Sheet count</b>
Epson Premium Photo Paper Semi-gloss	Borderless 4 × 6 inches	S041982	40
	Letter (8.5 × 11 inches)	S041331	20
Epson Photo Paper Glossy	Borderless 4 × 6 inches	S041809 S042038	50 100
	Letter (8.5 × 11 inches)	S041141 S041649 S041271	20 50 100
Epson Photo Quality Self-adhesive Sheets	A4 (8.3 × 11.7 inches)	S041106	10
Epson Iron-on Cool Peel Transfer Paper	Letter (8.5 × 11 inches)	S041153	10

# Placing Originals for Copying, Scanning, or Faxing

Before you copy, scan, or fax, place your documents or photos on the scanner glass (below) or in the Automatic Document Feeder (see page 8).


---

## Using the Scanner Glass

You can place two photos or a document up to letter-size on the scanner glass to make color or black and white copies.

1. Open the document cover and place your original face-down on the scanner glass, with the top against the back left corner.

If you're scanning  $3 \times 5$ - or  $4 \times 6$ -inch photos, you can place up to two at a time on the scanner glass. Place them at least  $1/4$  inch (5 mm) apart.

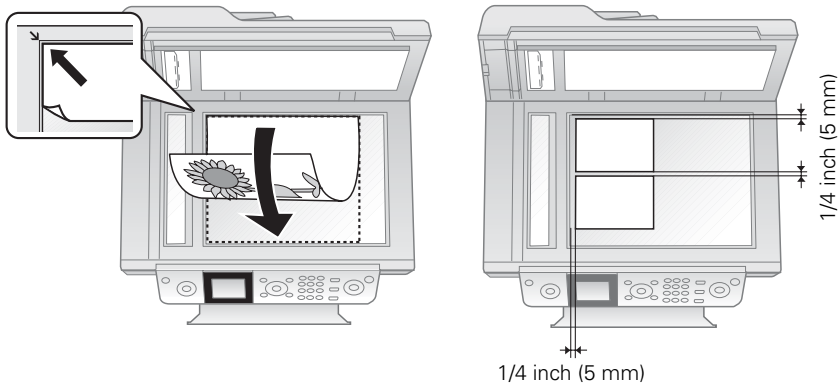


2. Close the cover gently so you don't move the original(s).

---


# Using the Automatic Document Feeder

You can place up to 30 letter-size sheets or 10 legal-size sheets in the Automatic Document Feeder.

1. Tap the originals on a flat surface to even the edges.
2. Move the edge guides aside.

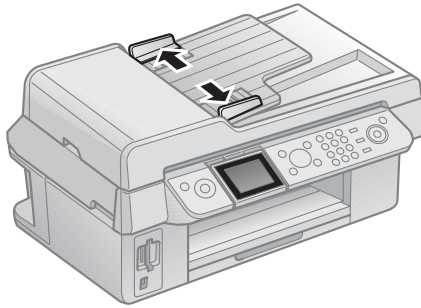

3. Insert the originals face-up.

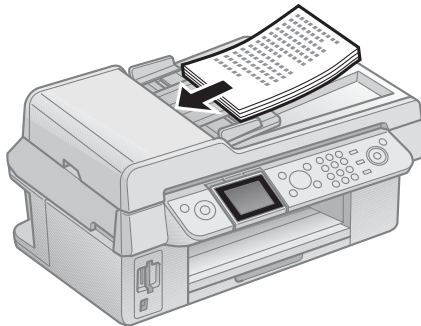

4. Slide the edge guides against the originals.

**Note:**

When you use the Copy function, letter-size paper is automatically selected for your printed copies. If you copy a legal-size document, the image will be cropped to fit letter-size paper.



# Copying a Document or Photo

Once you've placed your originals on the scanner glass or in the Automatic Document Feeder (see page 7), you can make color or black and white copies. See:

- “Copying a Document” below
- “Restoring, Cropping, or Copying Photos” on page 10

## Note:

To turn off the “beep” heard when you press a button, press **Setup**, select **Maintenance**, choose **Beep**, and select **Off**.

---

## Copying a Document

1. Place your original(s) for copying (see page 7).
2. Load letter-size plain paper, Epson Bright White Paper, or Epson Presentation Paper Matte.
3. Press the **Copy** button.
4. Press **+** or **-** to select the number of copies you want.
5. Press **◀** or **▶** to select **Color** or **B&W** (black and white) copies.



## Note:

**Layout** is automatically set to **With Border** when copying plain-paper documents.

6. To change any of the print settings displayed on the screen, press **Menu** and select your settings.
  - To adjust the copy size, select **Zoom** and choose either **Actual** (to select a percentage using **+** or **-**) or **Auto Fit Page** (to automatically size the image to fit your paper).
  - Select **Plain Paper** as the Paper Type.

## Note:

**Paper Size** is automatically set to **Letter**.

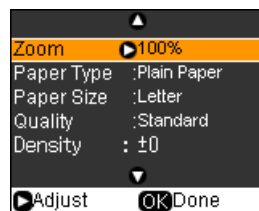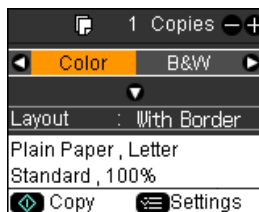

- To change the copy quality, select **Quality** and choose **Standard**, **Best**, or **Draft**.
  - To adjust the darkness or lightness of the copy, select **Density** and choose a higher (darker) or lower (lighter) setting.
7. After you finish selecting your settings, press **OK**.
  8. Press **Start** to begin copying. To cancel copying, press **Stop/Clear Settings**.

**Note:**


Do not pull out paper as it is printing; it ejects automatically.

---

## Restoring, Cropping, or Copying Photos


You can copy one or two photos onto 4 × 6-inch, 5 × 7-inch, or letter-size photo paper for instant photo reprints. You can also restore colors in faded photos, print with or without borders, convert photos to black and white, and crop your photos.

1. Place one or two photos on the scanner glass. Place them at least 1/4 inch (5 mm) apart.
2. Load 4 × 6-inch, 5 × 7-inch, or letter-size Epson photo paper in the sheet feeder.
3. Press the **4×6/5×7/Restore** button.

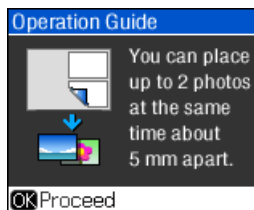


4. Press **OK**.
5. To turn on **Color Restoration** to restore colors in faded photos as you copy, press **Color Restoration** and select **On**. (If your photo is not faded, do not turn on **Color Restoration**.)
6. Press **OK**.

7. Press **OK** to prescan your photos. You see these settings:

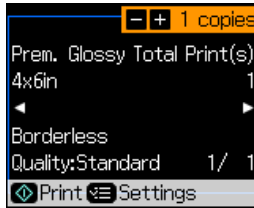


8. Press **◀** or **▶** to view your photos. To print more than 1 copy of a photo, press **+** or **-** to select the number.
9. If you want to crop a photo and enlarge the resulting image area to fit onto your paper, press **Display/Crop**.

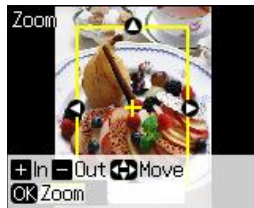

- To resize the image area, press **+** or **-**.
- To move the image area, use the arrow buttons.
- To check the zoomed image, press **OK**.

10. After you finish cropping, press **OK**.

11. To change any of the print settings displayed on the screen, press **Menu** and select your settings.

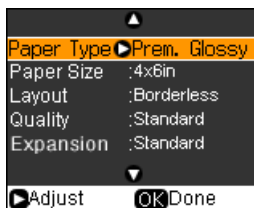

- Select **Paper Type** and choose the type of paper you loaded.

<b>Paper Type</b>	<b>Paper Type setting</b>
Epson Premium Photo Paper Glossy Epson Premium Photo Paper Semi-gloss	Prem. Glossy
Epson Ultra Premium Photo Paper Glossy	Ultra Glossy
Epson Photo Paper Glossy	Photo Paper
Epson Premium Presentation Paper Matte	Matte

- Select **Paper Size** and choose the size of paper you loaded.

**Note:**

Availability of options depends on the **Paper Type** setting you choose.

- To print without borders, select **Layout** and then select **Borderless**. Or select **With Border** to print with white margins at the edges of your photos.
- To adjust the amount of image expansion when printing borderless photos, select **Expansion** and choose **Standard**, **Min**, or **Mid**.

**Note:**

You may see white borders on your printed photo if you use the **Min** setting.

12. When you're ready to copy, press **Start**. To cancel copying, press **Stop/Clear Settings**.

**Note:**

Do not pull out paper as it is printing; it ejects automatically.

When you scan with your computer, you can use additional options to transform faded, dusty, or badly exposed photos into ones with true-to-life color and sharpness. See the on-screen *User's Guide* for details.

# Faxing a Document or Photo

Your CX9400Fax Series lets you send faxes by entering fax numbers or selecting entries from a speed dial list. Using the Automatic Document Feeder, you can fax up to 30 pages at a time.

See these sections:

- “Connecting a Phone or Answering Machine” below
- “Setting Up Fax Features” on page 14
- “Sending a Fax” on page 19
- “Receiving Faxes” on page 21

For more information on faxing and fax settings, see the on-screen *User's Guide*.


---

## Connecting a Phone or Answering Machine

1. Connect the phone cable from the wall jack to the LINE port on the back of the CX9400Fax Series.

**Note:**

If you're connecting the CX9400Fax Series to a DSL phone line, you must plug a DSL filter into the wall jack or you won't be able to use the fax or telephone equipment as described below. Contact your DSL provider for the necessary filter.

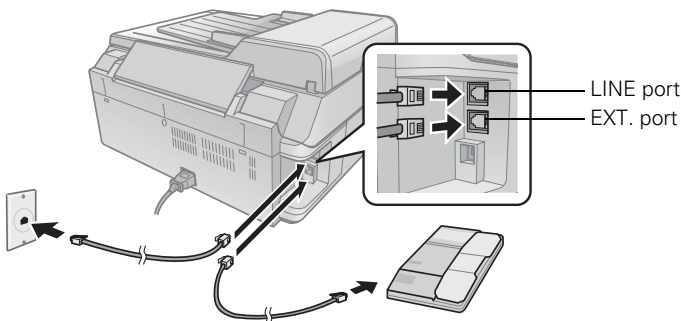

2. To use a telephone or answering machine, you need a second phone cable. Connect one end of the cable to the telephone or answering machine, and connect the other end to the EXT. port on the back of the CX9400Fax Series (or to another wall jack on the same line).

If your answering machine is set to pick up on the fourth ring, you should set the CX9400Fax Series to pick up on the fifth ring or later:

1. Press **Setup**.
2. Select **Fax Settings**, then press **OK**.
3. Select **Communication**, then press **OK**.
4. Select **Rings to Answer**, then press **▶**.
5. Select the number of rings, then press **OK**. Select more than the number of rings needed for the answering machine to pick up.

When you receive a call, if the other party is a fax and you pick up the phone or the answering machine answers, the CX9400Fax Series automatically begins receiving the transmission. If the other party is a caller, the phone can be used as normal or a message can be left on the answering machine.

---

## Setting Up Fax Features

Before sending or receiving faxes, you may want to create a fax header, select your fax preferences, and set up a speed dial list of frequently used fax numbers.

- “Entering Fax Header Information” on page 15
- “Select Scan and Print Settings” on page 16
- “Setting Up a Speed Dial List” on page 17

### **Note:**

To change other settings or print fax reports, see the on-screen *User's Guide*.

To turn off the “beep” heard when you press a button, press **Setup**, select **Maintenance**, choose **Beep**, and select **Off**.

## Entering Fax Header Information



You should enter fax header information before sending faxes so that recipients can identify their source.

### Note:

If you leave the CX9400Fax Series unplugged for a long period of time, the date and time settings may get lost. See the *Start Here* sheet or on-screen *User's Guide* for instructions on setting the date and time.


## Entering Your Sender Name

1. Press **Setup**.
2. Select **Fax Settings**, then press **OK**.  
You see this screen:
3. Select **Header & Time**, then press **OK**.
4. Select **Fax Header**, then press **OK**.
5. Use the numeric keypad to enter the header information (see page 16). You can enter up to 40 digits.
6. Press **OK**. You return to the Header & Time menu.

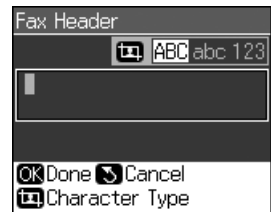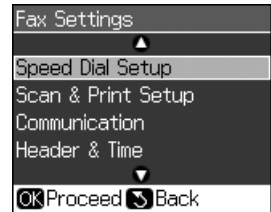

## Entering Your Phone Number

1. Select **Your Phone Number** from the Header & Time menu, then press **OK**. You see the phone number input screen.
2. Use the numeric keypad to enter your phone number (see page 16). You can enter up to 20 digits.
3. Press **OK**. You return to the Header & Time menu.

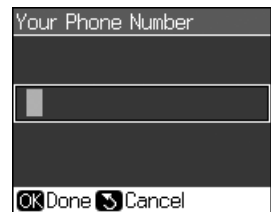

## Using the Keypad to Enter Numbers and Characters

Follow these guidelines to enter numbers and characters.

- To move the cursor, add a space, or delete a character:

Button	Function
◀ or ▶	Moves the cursor to the left or right.
Auto Answer/Space	Inserts a space and moves the cursor one character to the right.
Speed Dial/Backspace	Deletes a character and moves the cursor one space to the left.

- To enter a fax number, use the numeric keypad. Press **Redial/Pause** to insert a pause symbol (-) when a brief pause is required during dialing. Use the **#** button to type the + symbol when entering a phone number in international dialing format.
- To enter characters, press **Display/Crop** to switch between uppercase, lowercase, or numbers. Then use the numeric keypad to enter the characters indicated on the button. Press the button repeatedly, if necessary, until the character you want displays on the screen.

Press **1symb** to enter these characters: ! # % & ' ( ) \* + , - . / : ; = ? @ ~

## Select Scan and Print Settings

Use these settings to adjust the image quality of incoming and outgoing faxes, select the paper size loaded in your CX9400Fax Series, select the size at which faxes are printed, and select when you want printed reports.

1. Press **Setup**.
2. Select **Fax Settings**, then press **OK**.  
You see this screen:
3. Select **Scan & Print Setup**, then press **OK**.





4. Adjust any of the following settings:

Setting and options	Description
Resolution Standard Fine Photo	Sets the scan resolution of outgoing faxes and the print quality of received faxes.
Contrast -4 to +4	Sets the contrast when sending and receiving faxes.
Paper Size Letter (default) Legal A4	Indicates the size of paper loaded in the CX9400Fax Series.
Auto Reduction Off On	Indicates whether large incoming faxes are reduced to fit on the selected Paper Size ( <b>On</b> ), or printed at their original size on multiple sheets ( <b>Off</b> ).
Last Trans. Off On Error (default) On Send	Indicates when the CX9400Fax Series prints a report on the last transmitted fax. Select <b>Off</b> to turn off report printing, <b>On Error</b> to print reports only when an error occurs, or <b>On Send</b> to print reports for every fax you send.

## Setting Up a Speed Dial List


You can create a speed dial list of up to 60 fax numbers so you can quickly select them for faxing. You can also print the list for easy reference (see page 18).

### Creating a Speed Dial List

1. Press **Setup**.
2. Select **Fax Settings**, then press **OK**. You see this screen:



3. Select **Speed Dial Setup**, then press **OK**.

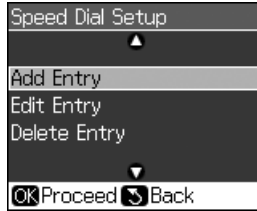

4. Select **Add Entry**, then press **OK**. You see the list of available entries.

**Note:**

To edit or delete an entry from an existing list, select **Edit Entry** or **Delete Entry** instead.

5. Select or type the number of the speed dial entry you want to add, then press **OK**.
6. Use the numeric keypad to enter the fax number (see page 16), then press **OK**.
7. Use the numeric keypad to enter a name to identify the speed dial entry (see page 16), then press **OK**. You return to the Speed Dial Setup menu.
8. If you want to add another speed dial entry, select **Add Entry** and repeat the steps above.

## ***Printing Your Speed Dial List***

To print your speed dial list, follow these steps:

1. Press the **Fax** button.
2. Press **Display/Crop** to view the Fax Reports screen.
3. Select **Speed Dial** and press **OK**.
4. Make sure letter-size paper is loaded in the CX9400Fax Series, then press **Start** to print your list.

# Sending a Fax

You can send a fax by manually entering a fax number, redialing the previous fax number, or selecting an entry from your speed dial list (see page 17).

1. Place your original(s) for faxing (see page 7).
2. Press the **Fax** button.
3. Do one of the following to dial the fax number:

- Enter the fax number manually

Use the numeric keypad to enter the fax number. You can enter up to 64 digits.

- Dial the number using your telephone

If you've connected a telephone to the CX9400Fax Series, dial the number from the phone. You see the screen at right. Select **Send**, then press **OK**. Continue with step 5.

**Note:**

Don't hang up the phone until you begin transmitting the fax in step 8.

- Select a speed dial entry

Press **Speed Dial/Backspace**. Select or type the number of the speed dial entry you want to use, then press **OK**.



- Redial the last fax number you used

Press **Redial/Pause**. The last fax number is displayed on the screen.

4. Press **▼**.
5. Select **Color** or **B&W**.

**Note:**

If the recipient's fax machine prints only in black and white, your fax is automatically sent in black and white even if you select color.

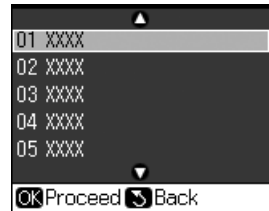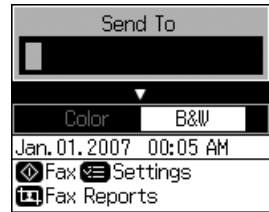

6. Press **Menu**, if necessary, to adjust any of the following settings:
  - **Resolution** to increase the scanning resolution of a faxed document
  - **Contrast** to change the contrast of the faxed document
  - **Fax Delay** to specify a different time to send your fax. (You cannot send another fax until the delayed fax has been sent or cancelled.)
  - **Fax Mode** to select **Polling** mode to receive a fax from another fax machine to which you have dialed (such as a fax information service). Change the setting back to **Sending** when you're finished.

Press **OK** when you're done selecting settings.

7. Press **OK**, if desired, to see a summary of your fax transmission settings.
8. Press **Start** to send your fax. To cancel faxing, press **Stop/Clear Settings**.

If you are scanning with the Automatic Document Feeder, your document is automatically scanned and faxed.

If you placed your document on the scanner glass, you see this screen after the first page is scanned:



If you need to fax additional pages, place your original on the scanner glass or in the Automatic Document Feeder. Then press **OK** to continue. If you do not need to fax another page, press **Back**. Your document is faxed.

**Note:**

If the fax number is busy, you see a redialing message and the CX9400Fax Series redials after one minute. To redial immediately, press **Redial/Pause**.

# Receiving Faxes

Before receiving faxes, make sure you load plain paper and select the **Paper Size** setting that matches the size of paper you've loaded (see "Select Scan and Print Settings" on page 16). If the incoming fax pages are larger than the paper size you loaded, the fax size is reduced to fit or printed on multiple pages, depending on the **Automatic Reduction** setting you select (see page 16).

If you run out of paper during printing, you see the error message **Paper out**. Load more paper and press the **Start** button to continue.

To receive faxes automatically, make sure the **Auto Answer** light is turned on. To turn it on, press the **Auto Answer/Space** button.

## Note:

To change the number of rings before the CX9400Fax Series answers, see page 14.



To receive faxes manually, turn off the **Auto Answer** light and follow these steps:

1. When your telephone rings, lift the phone off the hook. You see this screen:



2. Press **▶** to select **Receive**, then press **OK**.
3. If you want to receive the fax, press the **Start** button.
4. After all the pages are received, you see the screen shown above. Replace the phone on the hook.

# Printing From Your Camera's Memory Card


The CX9400Fax Series lets you print photos directly from your digital camera's memory card. Once your card is inserted, you can also print photos using an index sheet or your camera's DPOF settings, or transfer files to and from the card. You can also print by connecting your camera directly. See the on-screen *User's Guide*.

---


## Inserting Your Camera's Memory Card

1. Insert the card into the correct slot, as shown. Insert just one card at a time. The memory card access light flashes, then stays on.

### Left slot:

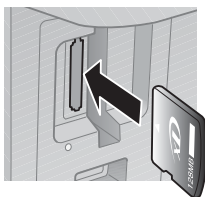

### Right slot:

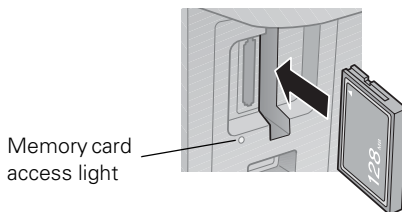

SD™  
SDHC™  
miniSD™\*  
miniSDHC\*  
microSD\*  
microSDHC\*  
MultiMediaCard™  
Memory Stick™  
Memory Stick Duo™\*  
Memory Stick PRO™  
Memory Stick PRO Duo™\*  
MagicGate™ Memory Stick  
MagicGate Memory Stick Duo™\*  
xD-Picture Card™  
xD-Picture Card Type H  
xD-Picture Card Type M

CompactFlash®  
Microdrive™

\* Adapter required

The image files on your card must meet these requirements:

<b>File format</b>	JPEG with the Exif version 2.21 standard
<b>Image size</b>	80 × 80 pixels to 9200 × 9200 pixels
<b>Number of files</b>	Up to 999

2. To remove the card, make sure the memory card access light is not flashing, then pull the card straight out of its slot.

**Caution:**


Do not remove the card or turn off the CX9400Fax Series while the memory card access light is flashing; you may lose data on the card.

## Selecting Photos From the Screen

1. Load Epson photo paper. See page 5 for a list.
2. Press the **Memory Card** button.
3. Press ◀ or ▶ to select **View and Print Photos**.
4. Press **OK**.
5. Press ◀ or ▶ to move through your photos and display the one that you want to print.
6. Press + to select the number of copies you want of that photo.
7. To crop the photo, press the **Display/Crop** button and see page 11 for instructions.
8. Press ◀ or ▶ to view other photos, select the number of copies, and crop, if desired.
9. To print borderless photos on 4 × 6-inch Epson Premium Photo Paper Glossy or Semi-gloss, press ⬠ **Start**.

To change your paper type or any of the other print settings, press **Menu**. Select your settings and press **OK**. (See page 12 for a list of paper types.)

10. Press ⬠ **Start** to start printing. To cancel printing, press Ⓞ **Stop/Clear Settings**.

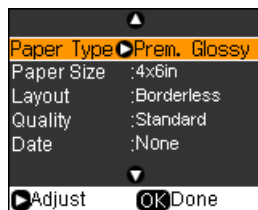

# Printing From Your Computer

This section describes basic printing from your Windows® or Macintosh® computer. To install your software, see the *Start Here* sheet. For detailed instructions, see the on-screen *User's Guide*.


## Tip:

It's a good idea to check for updates to your CX9400Fax Series software. See "Checking for Software Updates" on page 38 for instructions.

---

## Printing in Windows

1. Open a photo or document in a printing program, open the File menu, and select Print.

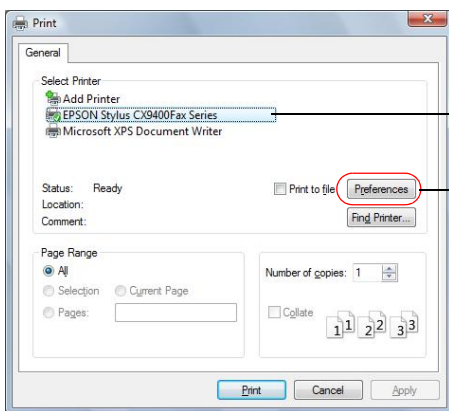

Select EPSON Stylus CX9400Fax Series

Click here to open your printer software

2. Select EPSON Stylus CX9400Fax Series and click the Preferences or Properties button.

## Note:

If you see a Setup, Printer, or Options button, click it. Then click Preferences or Properties on the next screen.




3. On the Main tab, select the basic print settings. Make sure you choose the correct paper **Type** setting for your paper (see page 30).

Select the type of document you're printing (choose **Photo** or **Best Photo** for photos)

Select your paper **Type**

Select your paper **Size**

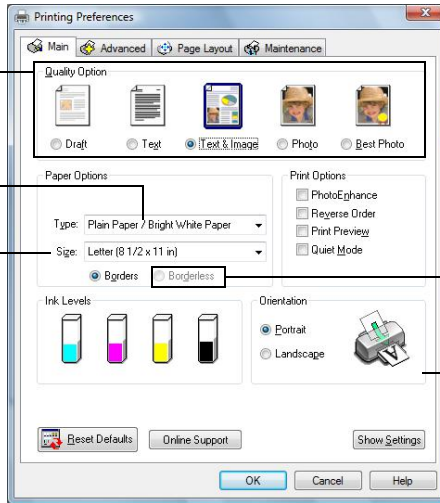

Click here for borderless photos

Select your document or photo **Orientation**

**Note:**

For the best quality printing, select **PhotoEnhance** (also known as Auto Photo Correction). This automatically analyzes your photos and, if necessary, adjusts the brightness, contrast, and saturation. PhotoEnhance™ uses a sophisticated face recognition technology to optimize photos that include faces. For this to work, both eyes and the nose must be visible in the subject's face. If your photo includes a face with an intentional color cast, such as a bronze statue, you may want to turn off PhotoEnhance to retain the special color effects.


4. To reduce or enlarge your printout or print double-sided, click the **Page Layout** tab and select settings as necessary.
5. For more printing options, click the **Advanced** tab.

**Note:**

For more information about print settings, click **Help** or see your on-screen *User's Guide*.

6. Click **OK** to save your settings.

7. Click **OK** or **Print** to start printing. This window appears and shows the progress of your print job.

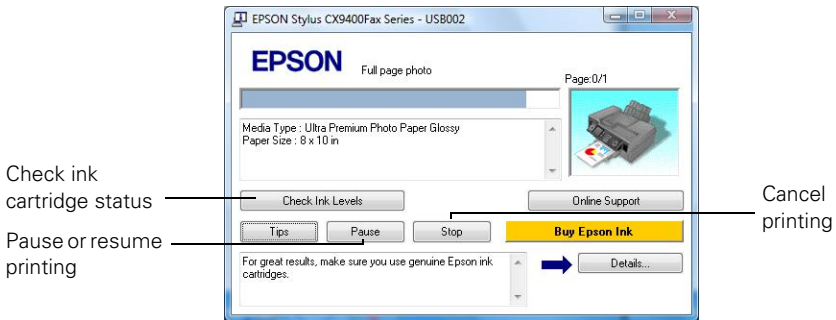


---

## Printing With a Macintosh

See the section below for your Mac<sup>®</sup> operating system.

### **Mac OS X 10.5**

1. Open a photo or document in a printing program, open the **File** menu, and select **Print**.
2. Select **EPSON Stylus CX9400Fax** as the **Printer** setting.

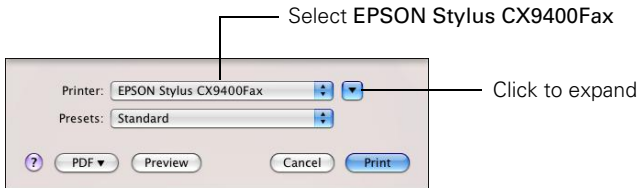


3. Click the arrow to expand the **Print** window, if necessary.


4. Select the basic copy and page settings. For borderless photos, choose a **Paper Size** setting with a **Sheet Feeder - Borderless** option.

**Note:**


If the setting you want isn't shown (for example, **Scale**), check for it in your application before printing. Or check for it in the settings for your application at the bottom of this window. (If you're printing from Preview, you see the settings shown below.)

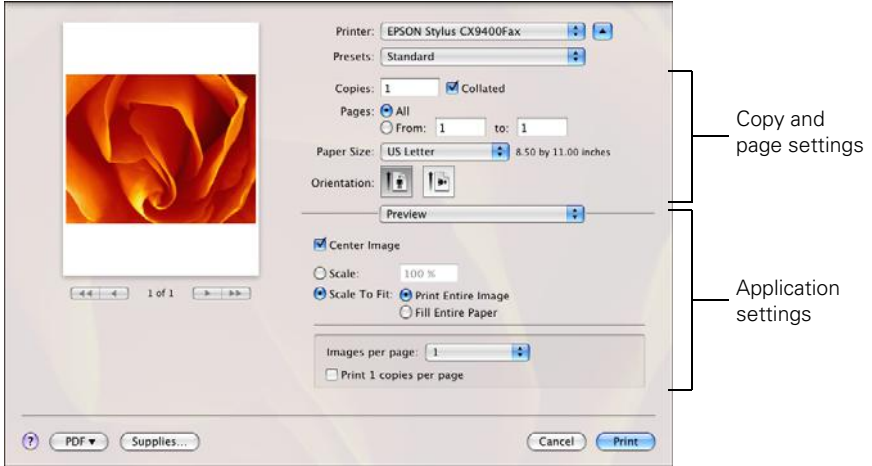


5. Choose **Print Settings** from the pop-up menu, and select the following print settings:

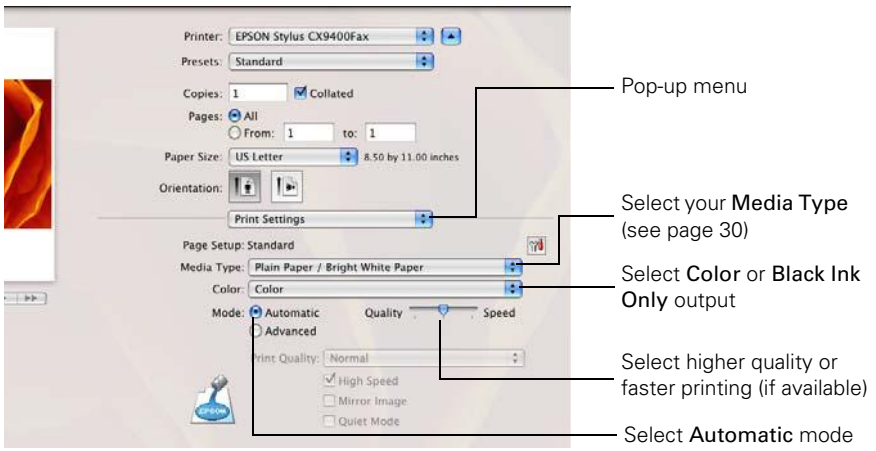

6. Choose any other printing options you may need from the pop-up menu. See the on-screen *User's Guide* for details.


- Click Print.
- To monitor your print job, click the  printer icon in the dock.

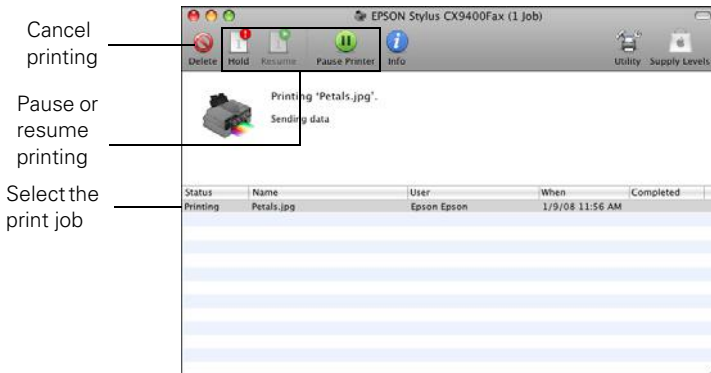

- Cancel printing
- Pause or resume printing
- Select the print job


## Mac OS X 10.2 to 10.4

- Open a photo or document in a printing program, open the File menu, and select Page Setup.
- Select the basic page settings. For borderless photos, choose a Paper Size setting with a Sheet Feeder - Borderless option.

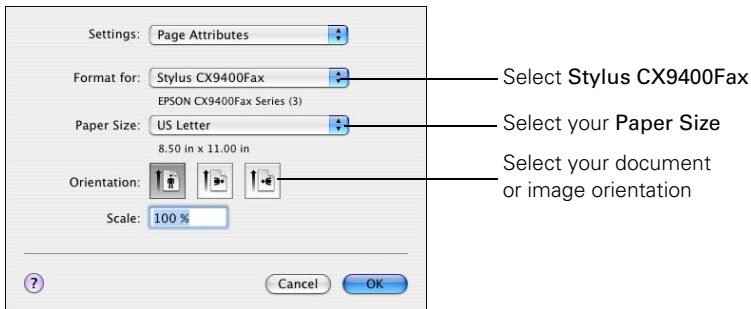



- Click OK.
- Open the File menu and select Print.

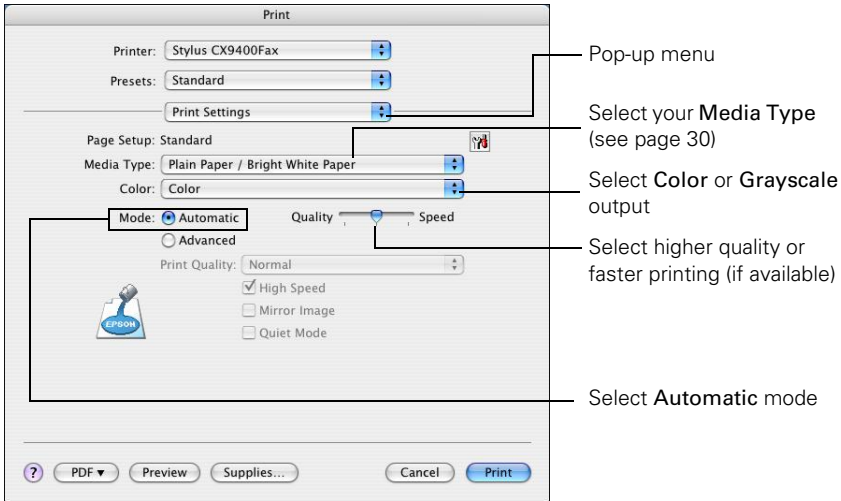
5. Select **Stylus CX9400Fax**, choose **Print Settings** from the pop-up menu, and select the following print settings:



**Note:**

In certain programs, you may need to select **Advanced** before you can select **Print Settings**. For more information about printer settings, click the ? button.

6. Choose any other printing options you may need from the pop-up menu. See the on-screen *User's Guide* for details.
7. Click **Print**.
8. To monitor your print job, click the  printer icon in the dock (or click the  Print Center icon and double-click **Stylus CX9400Fax** on the next screen).

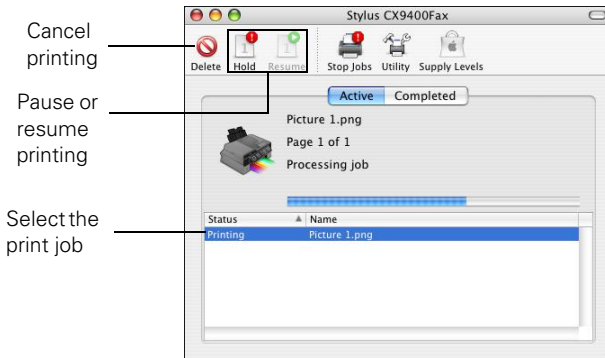

---

## Selecting the Correct Paper Type

Select the correct **Type** (see page 25) or **Media Type** (see page 29) setting in your printer software so the ink coverage can be adjusted accordingly.

<b>For this paper/media</b>	<b>Select this setting</b>
Plain paper Epson Bright White Paper Epson Presentation Paper Matte	Plain Paper/Bright White Paper
Epson Ultra Premium Photo Paper Glossy	Ultra Premium Photo Paper Glossy
Epson Premium Photo Paper Glossy	Premium Photo Paper Glossy
Epson Photo Paper Glossy	Photo Paper Glossy
Epson Presentation Paper Matte	Presentation Paper Matte
Epson Premium Photo Paper Semi-gloss	Premium Photo Paper Semi-gloss
Epson Premium Presentation Paper Matte Epson Premium Presentation Paper Matte Double-sided Epson Photo Quality Self-adhesive Sheets Epson Iron-on Cool Peel Transfer Paper	Premium Presentation Paper Matte
Envelopes	Envelope


# Scanning Multiple Pages

You can scan a document and save it on your computer in PDF or another format. With the Automatic Document Feeder, you can scan up to 30 pages at a time.

## Note:

For detailed scanning instructions, see the on-screen *User's Guide*.

1. Place your document in the Automatic Document Feeder (see page 8).
2. Do one of the following to start Epson Scan:
  - **Windows:** Double-click the EPSON Scan icon on your desktop.
  - **Macintosh:** Double-click EPSON Scan in the Applications folder.
3. Select **Office Mode** in the upper right.
4. Select the **Image Type**.
5. Select **Auto Detect** or **ADF** (Automatic Document Feeder) as the **Document Source** setting.
6. Select the **Size** of the originals and their **Orientation** on the scanner.
7. Select the scanning **Resolution** based on how you will use the scanned image:
  - E-mail, view on a computer screen, or post on the web: 96 to 150 dpi
  - Print or convert to editable text (OCR): 300 dpi
  - Fax: 200 dpi
8. Click the **Preview** button to scan and eject the first page. Place the page back on top of the other pages and reload them in the feeder.
9. If desired, draw a marquee (or box) around the area you want to scan in the Preview window. Adjust the image quality, if necessary.
10. Click **Scan** and select the name, location, and format (such as PDF) for your scanned document.

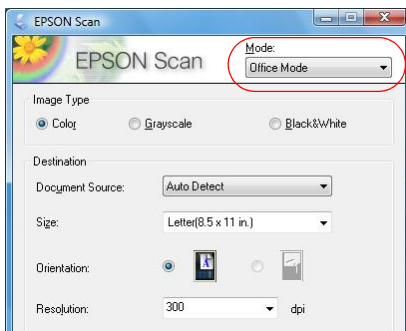

To open the file, double-click it in Windows Explorer or Macintosh Finder.


# Maintaining Your All-in-One

Follow the steps here to check and clean the print head, and replace ink cartridges. To align the print head, if necessary, see the on-screen *User's Guide*.

## Checking the Print Head Nozzles

If your printouts are faint or have gaps in them, the print head nozzles may be clogged. Follow these steps to check the print head nozzles:


1. Load letter-size plain paper in the sheet feeder.
2. Press the **Setup** button.
3. Select **Maintenance** and press **OK**.
4. Select **Nozzle Check** and press **OK**.
5. Press **Start**.
6. Check the nozzle check pattern that prints to see if there are gaps in the lines.

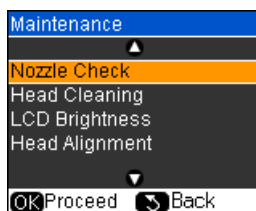

Nozzles  
are clean



 Nozzles need  
cleaning



7. If there are no gaps, press **OK** to continue printing.

If there are gaps or the pattern is faint, press **Start** to clean the print head. See page 33 for details.



---


# Cleaning the Print Head

If print quality has declined and the nozzle check indicates clogged nozzles, you can clean the print head. Print head cleaning uses ink, so clean it only if necessary.

**Note:**

You cannot clean the print head if an ink cartridge is expended, and may not be able to clean it when a cartridge is low. You must replace the cartridge first (see page 36).

1. Load letter-size plain paper in the sheet feeder.
2. Press the **Setup** button.
3. Select **Maintenance** and press **OK**.
4. Select **Head Cleaning** and press **OK**.
5. Press **Start**.

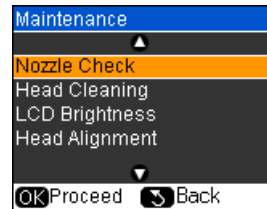

Cleaning lasts around 1 minute. When it's finished, you see a message on the display screen.

**Caution:**

Never turn off the printer during a cleaning cycle or you may damage it.

6. Press **Start** to run a nozzle check and confirm that the print head is clean.

**Note:**

If you don't see any improvement after cleaning the print head three times, turn off your all-in-one and wait at least six hours to let any dried ink soften. Then try printing again.

If you do not use your all-in-one often, it is a good idea to print a few pages at least once a month to maintain good print quality.

---


# Checking the Ink Cartridge Status


Your CX9400Fax Series will let you know when an ink cartridge is low or expended by displaying a message on its display screen or your computer.

**Note:**

You cannot print or copy when an ink cartridge is expended even if the other cartridges are not expended. Replace any expended cartridges before printing or copying.

To check ink cartridge status from the display screen anytime, follow these steps:

1. Press the **Setup** button.
2. Select **Ink Levels** and press **OK**.
3. A cartridge marked with  is getting low on ink. See page 36 to replace the cartridge, if necessary.

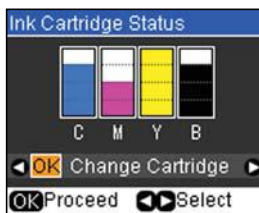

A window may appear on your computer screen when you try to print when ink is low. This window can optionally display ink offers and other updates retrieved from an Epson web site. On a Windows computer that is connected to the Internet, you may see a screen asking if you want to receive these Epson offers the first time you try to print when ink is low. Click **Accept** or **Decline**.

**Note:**

To disable checking for ink offers or updates from Epson, see the instructions in your on-screen *User's Guide*.

---

# Purchasing Epson Ink Cartridges

You can purchase genuine Epson ink and paper at Epson Supplies Central at [www.epson.com/ink3](http://www.epson.com/ink3) (U.S. sales) or [www.epson.ca](http://www.epson.ca) (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

Use the following list when you order or purchase new ink cartridges:

Ink color	Part number
Black	69 or 68 (High Capacity)
Cyan	69
Magenta	69
Yellow	69

**Note:**

We recommend that you use genuine Epson cartridges and do not refill them. The use of other products may affect your print quality and could result in printer damage.

Yields vary considerably based on images printed, print settings, paper type, frequency of use, and temperature. For print quality, a small amount of ink remains in the cartridge after the “replace cartridge” indicator comes on. The printer ships with full cartridges and part of the ink from the first cartridges is used for charging the printer.

For best printing results, use up a cartridge within six months of opening the package.

Store ink cartridges in a cool, dark place. If you bring them inside from out in the cold, allow them to warm up to room temperature for at least 3 hours before using them.

# Replacing Ink Cartridges

Make sure you have a new ink cartridge before you begin. You must install new cartridges immediately after removing the old ones.


## Caution:

Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Leave the expended cartridge(s) installed until you have obtained a replacement, or the ink remaining in the print head nozzles may dry out.



1. Turn on the CX9400Fax Series.

If a cartridge is low or expended, you see a message on the display screen. Note which cartridges need to be replaced and press OK.

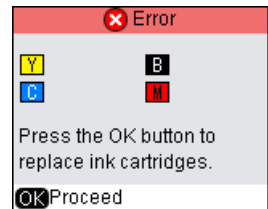

If you're replacing a cartridge before you see a message on the display screen, press the **Setup** button, select **Maintenance**, and press OK. Then select **Change Ink Cartridge** and press OK.


2. Open the scanner, then open the cartridge cover.

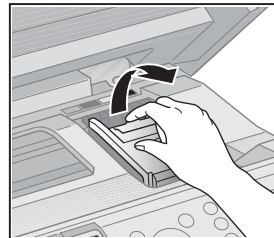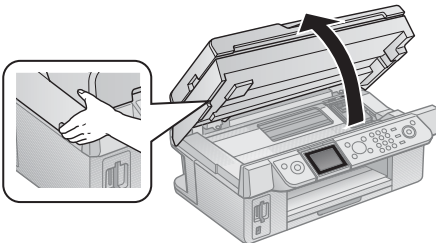


3. Squeeze the tab on the cartridge and lift it up. Dispose of it carefully. Do not take the used cartridge apart or try to refill it.

## Warning:

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water. Keep ink cartridges out of the reach of children.

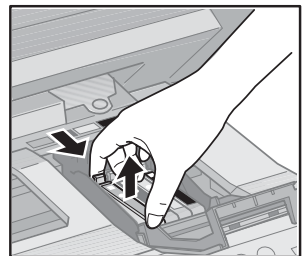

4. Shake the cartridge several times, then remove it from the package. Do not touch the green chip on the side.


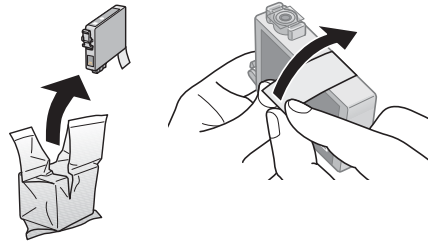


5. Remove the yellow tape from the bottom of the ink cartridge.

**Caution:**

Do not remove any other labels or seals, or ink will leak.

6. Insert the new ink cartridge into the holder and push it down until it clicks into place.

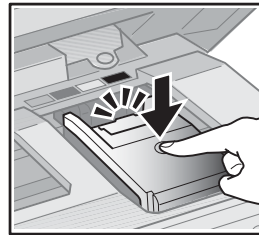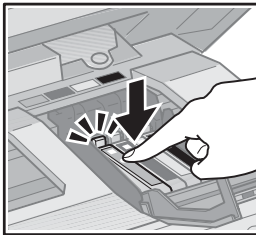

7. Once you replace all the cartridges that need replacing, close the cartridge cover and push it down until it clicks into place.
8. Close the scanner.
9. Press **OK** to begin charging the ink. This takes about 2 minutes. When you see a completion message on the display screen, ink charging is finished.

**Caution:**

To conserve ink, never turn off the CX9400Fax Series while ink is charging. If you see an ink replacement message on the display screen, press **OK** and press down all the cartridges securely.

If you remove a low or expended ink cartridge, you cannot reinstall and use the cartridge.

# Solving Problems


Check the messages on the display screen to diagnose the cause of most problems. You can also check the basic troubleshooting suggestions beginning on page 38 or see the on-screen *User's Guide* for more detailed help.

---

## Checking for Software Updates

Periodically, it's a good idea to check Epson's support website for free updates to your Epson CX9400Fax Series software. Open your on-screen *User's Guide* and select **Download the Latest Software** or visit Epson's support website at [epson.com/support](http://epson.com/support) (U.S.) or [epson.ca](http://epson.ca) (Canada).




With Windows, you can select **Driver Update** on the **Maintenance** tab in the printer settings window. You can also click **Start** or , select **Programs** or **All Programs**, select **EPSON**, and click **EPSON Stylus CX9400Fax Series Driver Update**. Also select **EPSON Scan** and click **EPSON Stylus CX9400Fax Series Scanner Driver Update**.

---

## Problems and Solutions

Check the solutions below if you're having trouble using your all-in-one.

**Note:**

If the screen is dark, the CX9400Fax Series is in sleep mode to save power. Press any button (except the  **On** button) to wake it up.

### ***Printing and Copying Problems***

- Make sure your paper is loaded printable side up (usually the whiter, brighter, or glossy side). Load it short edge first, and against the right edge guide. Don't load paper above the arrow mark inside the guide.

- Make sure the type of paper you loaded matches the paper size and paper type settings on the control panel when copying (see page 12), when faxing (see page 21), or in your printer software (see page 30).
- Use the Automatic Document Feeder to fax or scan legal-size documents, but not to copy them. Letter-size paper is automatically selected for copying. If you copy a legal-size document, your image will be cropped.
- Make sure your original is positioned against the back left corner of the scanner glass. If the edges are cropped, move your original away from the edges slightly.

## ***Paper Feeding Problems***


If paper doesn't feed correctly when printing, remove the paper and flip through the stack to separate the sheets. Reload the paper against the right side and slide the edge guide against it. Do not load too many sheets at once (see page 4).

If paper has jammed:

1. Press **Start** to eject the jammed paper.
2. If paper is still jammed, gently pull it out from the output tray or sheet feeder.
3. If paper is stuck inside, press the **On** button to turn off the printer. Then lift the scanner, remove the jammed paper and torn pieces, close the scanner, and turn the printer back on.

If documents don't feed correctly in the Automatic Document Feeder, make sure the corners of the paper are not bent, folded, or curled up. Do not load more than 10 sheets of legal-size paper at a time. If documents have jammed:

1. Open the ADF cover and pull any paper out to the left as shown.

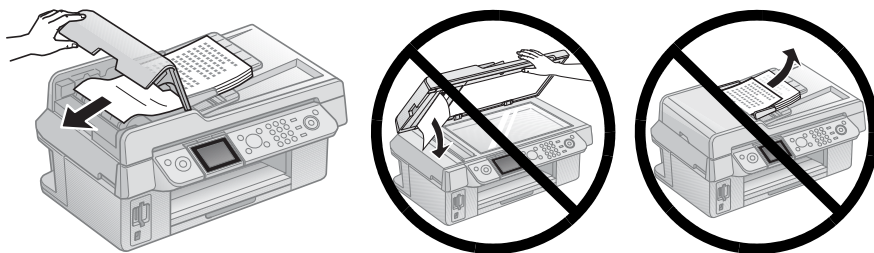

### **Caution:**

Do not try to remove the paper without opening the ADF cover first, or you could damage the mechanism.

2. Press OK to clear any messages on the display screen.
3. Reload the paper.

## ***Faxing Problems***

- Make sure the recipient's fax machine is turned on and working.
- Make sure the LINE port on the CX9400Fax Series is connected to a telephone wall jack. Verify that the telephone wall jack works by connecting a phone to it.
- If the line has static, press **Setup**, select **Fax Settings**, select **Communication**, and turn off the **V.34** and **ECM** (Error Correction Mode) settings.
- If the CX9400Fax Series is connected to a DSL phone line, you must have a DSL filter connected to the phone jack. Contact your DSL provider for the necessary filter.

## ***Print Quality Problems***

- For the best print quality, use Epson papers (see page 5) and genuine Epson ink cartridges (see page 36).
- If you notice light or dark bands across your printouts or they are too faint, run a nozzle check (see page 32) to see if the print head needs cleaning.
- If you notice jagged vertical lines, you may need to align the print head. See the on-screen *User's Guide* for instructions.
- The ink cartridges may be low on ink. Check your cartridge status (see page 32) and replace cartridges, if necessary (see page 36).
- If you're copying, place the document flat against the scanner glass.
- Clean the scanner glass with a soft, dry, lint-free cloth (paper towels are not recommended), or use a small amount of glass cleaner on a soft cloth, if necessary. Do not spray glass cleaner directly on the glass.



---

# Where To Get Help

## ***Epson Technical Support***

### **Internet Support**

Visit Epson's support website at [epson.com/support](http://epson.com/support) and select your product for solutions to common problems. You can download drivers and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

### **Speak to a Support Representative**

Before you call Epson for support, please have the following information ready:

- Product name (Epson Stylus CX9400Fax Series all-in-one)
- Product serial number (located on the label in back)
- Proof of purchase (such as a store receipt) and date of purchase
- Computer configuration and description of the problem

Then call:

- U.S.: (562) 276-4382, 6 AM – 6 PM, Pacific Time, Monday through Friday
- Canada: (905) 709-3839, 6 AM – 6 PM, Pacific Time, Monday through Friday

Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

## ***Purchase Supplies and Accessories***

You can purchase genuine Epson ink and paper at Epson Supplies Central at [www.epson.com/ink3](http://www.epson.com/ink3) (U.S. sales) or [www.epson.ca](http://www.epson.ca) (Canadian sales). You can also purchase supplies from an Epson authorized reseller. To find the nearest one, call 800-GO-EPSON (800-463-7766).

## ***Other Software Technical Support***

ArcSoft PhotoImpression®  
Phone: (510) 440-9901  
[www.arcsoft.com](http://www.arcsoft.com)

ABBYY® FineReader® Sprint Plus  
Phone: (510) 226-6717  
[www.abbyyusa.com](http://www.abbyyusa.com)  
[support@abbyyusa.com](mailto:support@abbyyusa.com)

# Notices

---

## Important Safety Instructions

Before using your all-in-one, read and follow these safety instructions:

- Be sure to follow all warnings and instructions marked on the product.
- Use only the type of power source indicated on the product label.
- Use only the power cord that comes with the product. Use of another cord may cause fires or shock. Do not use the cord with any other equipment.
- Place the product near a wall outlet where the plug can be easily unplugged.
- If you won't be using the product for a long period, unplug the power cord from the electrical outlet.
- Always turn off the product using the ⏻ On button, and wait until the ⏻ On light stops flashing before unplugging the printer or cutting off power to the electrical outlet.
- Avoid plugging the product into an outlet on the same circuit as a photocopier or air conditioning system that regularly switches on and off, or on an outlet controlled by a wall switch or timer.
- Do not let the power cord become damaged or frayed.
- If you use an extension cord with the product, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.
- Place the product on a flat, stable surface that extends beyond its base in all directions. It will not operate properly if it is tilted or at an angle.
- When storing or transporting the product, do not tilt it, stand it on its side, or turn it upside down; otherwise ink may leak from the cartridges.
- Avoid placing the product in locations that are subject to rapid changes in heat or humidity, shocks or vibrations, or dust.
- Leave enough room around the product for sufficient ventilation. Make sure the product is at least 4 inches (10 cm) away from the wall.
- Do not place the product near a radiator or heating vent or in direct sunlight.
- Do not block or cover openings in the product case or insert objects through the slots.

- Do not use aerosol products that contain flammable gases inside or around the printer. Doing so may cause fire.
- Do not press too hard on the document table when placing the originals.
- Do not open the scanner section while the product is in use.
- Do not touch the flat white cable inside the product.
- Do not spill liquid on the product.
- Adjust only those controls that are covered by the operating instructions. Except as specifically explained in your documentation, do not attempt to service the product yourself.
- Unplug the product and refer servicing to qualified service personnel under the following conditions: if the power cord or plug is damaged; if liquid has entered the product; if the product has been dropped or the case damaged; if the product does not operate normally or exhibits a distinct change in performance.

## ***LCD Screen Safety***

- Use only a dry, soft cloth to clean the LCD screen. Do not use liquid or chemical cleansers.
- If the LCD screen is damaged, contact Epson. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately.

## ***Ink Cartridge Safety Instructions***

- Keep ink cartridges out of the reach of children and do not drink the ink.
- Be careful when you handle used ink cartridges; there may be ink remaining around the ink supply port. If ink gets on your skin, wash it off with soap and water. If it gets in your eyes, flush them immediately with water. If you still have discomfort or vision problems, see a doctor immediately.
- Do not put your hand inside the product or touch any cartridges during printing.
- Install a new ink cartridge immediately after removing an expended one. Leaving cartridges uninstalled can dry out the print head and may prevent the product from printing.
- If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust and store it in the same environment as the product. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink cartridge ink supply port or surrounding area. Do not store the cartridge upside down.

## ***Telephone Equipment Safety Instructions***

When using telephone equipment, you should always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury, including the following:

- Do not use the Epson product near water.
- Avoid using a telephone during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use a telephone to report a gas leak in the vicinity of the leak.

### **Caution:**

To reduce the risk of fire, use only a No. 26 AWG or larger telecommunication line cord.

---

## **Epson America, Inc., Limited Warranty**

**What Is Covered:** Epson America, Inc. (“Epson”) warrants to the original retail purchaser that the Epson printer covered by this limited warranty statement, if purchased and operated only in the United States or Canada, will be free from defects in workmanship and materials for a period of one (1) year from the date of original purchase. For warranty service, you must provide proof of the date of original purchase.

**What Epson Will Do To Correct Problems:** Should your Epson printer prove defective during the warranty period, please call the Epson Connection<sup>SM</sup> at (562) 276-4382 (U.S.) or (905) 709-3839 (Canada) for warranty repair instructions and return authorization. An Epson service technician will provide telephone diagnostic service to determine whether the printer requires service. If service is needed, Epson will, at its option, exchange or repair the printer without charge for parts or labor. If Epson authorizes an exchange for the defective unit, Epson will ship a replacement printer to you, freight prepaid, so long as you use an address in Canada or the U.S. (excluding Puerto Rico and U.S. Possessions). Shipments to other locations will be made freight collect. You are responsible for securely packaging the defective unit and returning it to Epson within five (5) working days of receipt of the replacement. Epson requires a debit or a credit card number to secure the cost of the replacement printer in the event that you fail to return the defective one. If your printer is being repaired, Epson will direct you to send your printer to Epson or its authorized service center, where the printer will be fixed and sent back to you. You are responsible for packing the printer and for all costs to and from the Epson authorized service center. When warranty service involves the exchange of the printer or a part, the item replaced becomes Epson property. The replacement printer or part may be new or refurbished to the Epson standard of quality, and, at Epson’s option, may be another model of like kind and quality. Epson’s liability for replacement of the covered printer will not exceed the original retail selling price of the covered printer. Exchange products and parts assume the remaining warranty period of your original product covered by this limited warranty.

**What This Warranty Does Not Cover:** This warranty covers only normal use in the United States and Canada. Using this product for continuous production or similar high duty purposes is not considered normal use; damage, maintenance or service from such use will not be covered under this warranty. This warranty is not transferable. This warranty does not cover any color change or fading of prints or reimbursement of materials or services required for reprinting. This warranty does not cover damage to the Epson product caused by parts or supplies not manufactured, distributed or certified by Epson. This warranty does not cover ribbons, ink cartridges or third party parts, components, or peripheral devices added to the Epson product after its shipment from Epson, e.g., dealer or user-added boards or components. Epson is not responsible for warranty service should the Epson label or logo or the rating label or serial number be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, improper installation, neglect, improper shipping, damage caused by disasters such as fire, flood, and lightning, improper electrical current, software problems, interaction with non-Epson products, or service other than by an Epson Authorized Servicer. If a claimed defect cannot be identified or reproduced, you will be held responsible for the costs incurred.

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESS AND IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSON OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, NEITHER EPSON AMERICA, INC. NOR ITS AFFILIATES SHALL BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE EPSON PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

In Canada, warranties include both warranties and conditions.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

To find the Epson Authorized Reseller nearest you, visit our website at:  
<http://www.epson.com>.

To find the Epson Customer Care Center nearest you, visit: <http://support.epson.com>.

You can also write to:

Epson America, Inc., P.O. Box 93012, Long Beach, CA 90809-3012

---

## Declaration of Conformity

According to 47CFR, Part 2 and 15 for: Class B Personal Computers and Peripherals;  
and/or CPU Boards and Power Supplies used with Class B Personal Computers:

We: Epson America, Inc.  
Located at: MS 3-13  
3840 Kilroy Airport Way  
Long Beach, CA 90806  
Telephone: (562) 290-5254

Declare under sole responsibility that the product identified herein, complies with 47CFR Part 2 and 15 of the FCC rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47CFR §2.909. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Trade Name: Epson  
Type of Product: Multifunction printer  
Model: C361A

---

# FCC Compliance Statement

## *For United States Users*

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back side is a label that contains, among other information, the FCC registration number and the **ringer equivalence number (REN)** for this equipment. You must, upon request, provide this information to your local telephone company. The information associated with the services the equipment is to be connected are REN: **0.2B**, Jack type: **RJ-11C**.

The REN is useful to determine the quantity of devices that you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you may want to contact your local telephone company to determine the maximum REN for your calling area. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format **US: BKMF02BC361A**. The digits represented by 00 are the REN without a decimal point (e.g., 00 is a REN of 0.0). For earlier products, the REN is separately shown on the label.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

Should this equipment cause harm to the telephone network, the telephone company may discontinue your service temporarily. If possible they will notify you in advance that temporary discontinuance of service may be required. But if advanced notice isn't practical, the telephone company will notify you as soon as possible. You will be informed of your right to file a complaint with the FCC. The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

This product is not intended to be repaired. If you experience trouble with this equipment, please contact:

Name: Epson America, Inc.  
Address: 3840 Kilroy Airport Way, Long Beach, CA 90806 U.S.A.  
Telephone: (562) 981-3840

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or other electronic device, including fax machines, to send any message unless such message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity, or other individual sending the message and the telephone number of the sending machine or such business, other entity, or individual. In order to program this information into your fax machine, follow the instructions in “Entering Fax Header Information” on page 15.

According to the FCC’s electrical safety advisory, we recommend that you may install an AC surge arrestor in the AC outlet to which this equipment is connected. Telephone companies report that electrical surges, typically lightning transients, are very destructive to customer terminal equipment connected to AC power sources and that this is a major nationwide problem.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment Model C361A does not disable your alarm equipment. If you have questions about what will disable alarm equipment, consult your telephone company or a qualified installer.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio and television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



## **WARNING**

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

## **For Canadian Users**

1. This product meets the applicable Industry Canada technical specifications.

*Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.*

2. The Ringer Equivalence Number is an indication of the maximum number of devices allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the RENs of all the devices does not exceed five.

*L'indice d'équivalence de la sonnerie (IES) sert à indiquer le nombre maximal de terminaux qui peuvent être raccordés à une interface téléphonique. La terminaison d'une interface peut consister en une combinaison quelconque de dispositifs, à la seule condition que la somme d'indices d'équivalence de la sonnerie de tous les dispositifs n'exède pas 5.*

This Class B digital apparatus complies with Canadian ICES-003.

*Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.*

# Copyright Notice

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson product. Epson is not responsible for any use of this information as applied to other equipment.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

## Responsible Use of Copyrighted Materials

Epson encourages each user to be responsible and respectful of the copyright laws when using any Epson product. While some countries' laws permit limited copying or reuse of copyrighted material in certain circumstances, those circumstances may not be as broad as some people assume. Contact your legal advisor for any questions regarding copyright law.

## Trademarks

Epson and Epson Stylus are registered trademarks, and Epson Exceed Your Vision is a trademark of Seiko Epson Corporation.

PhotoEnhance is a trademark, and Supplies Central and Epson Connection are service marks of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2008 Epson America, Inc. 1/08



MEMORY STICK PRO™





**EPSON®**  
EXCEED YOUR VISION



\*411302900\*

CPD-24114R1  
Printed in XXXXXX XX.XX-XX XXX