

# NÜVI® 2509/2609 SERIES

---

## Owner's Manual

© 2014 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to [www.garmin.com](http://www.garmin.com) for current updates and supplemental information concerning the use of this product.

Garmin®, nüvi®, and the Garmin logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. These trademarks may not be used without the express permission of Garmin.

BaseCamp™, Garmin Express™, HomePort™, MapSource®, myGarmin™, ecoRoute™, myTrends™, trafficTrends™, nüMaps Guarantee™, and nüMaps Lifetime™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such word mark or logo by Garmin is under license. Foursquare® is a trademark of Foursquare Labs, Inc. in the U.S. and in other countries. microSD™ and the microSDHC logo are trademarks of SD-3C, LLC. Windows®, Windows Vista®, and Windows XP® are registered trademarks of Microsoft Corporation in the United States and other countries. Mac® is a trademark of Apple Inc. HD Radio™ and the HD logo are trademarks of iBiquity Digital Corporation. HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and foreign patents.

# Table of Contents

<b>Getting Started</b> .....	<b>1</b>	Trip Information.....	6
Connecting the Device to Vehicle Power.....	1	Viewing Trip Data from the Map.....	6
Support and Updates.....	1	Viewing the Trip Information Page.....	6
Setting Up Garmin Express.....	1	Viewing the Trip Log.....	6
nūMaps Guarantee™.....	1	Resetting Trip Information.....	6
Lifetime Subscriptions.....	1	Using Suggested Routes.....	6
Updating Maps and Software with Garmin Express.....	1	Viewing Current Location Information.....	7
Entering and Exiting Sleep Mode.....	2	Finding Nearby Services.....	7
Turning Off the Device.....	2	Getting Directions to Your Current Location.....	7
Resetting the Device.....	2	Avoiding Road Features.....	7
Acquiring GPS Signals.....	2	About Custom Avoidances.....	7
Adjusting the Screen Brightness.....	2	Avoiding an Area.....	7
Adjusting the Volume.....	2	Avoiding a Road.....	7
About Automatic Volume.....	2	Disabling a Custom Avoidance.....	7
Status Bar Icons.....	2	Deleting Custom Avoidances.....	7
Viewing GPS Signal Status.....	2	Customizing the Map.....	7
Battery Information.....	2	Customizing the Map Tools.....	7
Setting the Time.....	2	Customizing the Map Layers.....	7
Using the On-Screen Buttons.....	2	Changing the Map Data Field.....	7
Using the On-Screen Keyboard.....	2	Changing the Map Perspective.....	7
<b>Locations</b> .....	<b>3</b>	Safety Cameras.....	7
Finding Locations.....	3	<b>Traffic</b> .....	<b>7</b>
Finding a Location by Category.....	3	Receiving Traffic Data Using a Traffic Receiver.....	8
Finding a Location Using the Search Bar.....	3	Viewing Upcoming Traffic.....	8
Changing the Search Area.....	3	Viewing Traffic on the Map.....	8
Finding a Location by Browsing the Map.....	3	Searching for Traffic Incidents.....	8
Finding an Address.....	3	Traffic on Your Route.....	8
Finding Recently Found Destinations.....	3	Taking an Alternate Route.....	8
Finding Parking.....	3	About Traffic Cameras.....	8
Search Tools.....	3	Saving a Traffic Camera.....	8
Saving Locations.....	4	Viewing a Traffic Camera.....	8
Saving a Location.....	4	About Traffic Subscriptions.....	8
Saving Your Current Location.....	4	Subscription Activation.....	8
Saving a Home Location.....	4	Viewing Traffic Subscriptions.....	8
Editing a Saved Location.....	4	Adding a Subscription.....	8
Assigning Categories to a Saved Location.....	4	trafficTrends™.....	9
Deleting a Saved Location.....	4	Disabling trafficTrends.....	9
Setting a Simulated Location.....	4	Enabling Traffic.....	9
Adding a Shortcut.....	4	<b>Voice Command</b> .....	<b>9</b>
Removing a Shortcut.....	4	Setting the Wakeup Phrase.....	9
Custom Points of Interest.....	4	Activating Voice Command.....	9
Installing POI Loader.....	4	Voice Command Tips.....	9
Using the POI Loader Help Files.....	4	Starting a Route Using Voice Command.....	9
Finding Custom POIs.....	4	Muting Instructions.....	9
<b>Navigation</b> .....	<b>5</b>	Disabling Voice Command.....	9
Starting a Route.....	5	<b>Voice Control</b> .....	<b>9</b>
Previewing Multiple Routes.....	5	Configuring Voice Control.....	9
Changing the Route Calculation Mode.....	5	Using Voice Control.....	9
Starting a Route to a Saved Location.....	5	Voice Control Tips.....	9
Navigating to Points of Interest Within a Venue.....	5	<b>Hands-Free Phone Calls</b> .....	<b>10</b>
Exploring a Venue.....	5	About Hands-Free Calling.....	10
Your Route on the Map.....	5	Enabling Bluetooth Wireless Technology.....	10
Using the Map.....	5	Pairing Your Phone.....	10
Adding a Point to a Route.....	5	Tips After Pairing the Devices.....	10
Taking a Detour.....	5	Disconnecting a Bluetooth Device.....	10
Stopping the Route.....	6	Deleting a Paired Phone.....	10
Viewing Route Activity.....	6	Placing a Call.....	10
Viewing a List of Turns.....	6	Dialing a Number.....	10
Viewing the Next Turn.....	6	Calling a Contact in Your Phone Book.....	10
Viewing Junctions.....	6	Calling a Location.....	10
About Up Ahead.....	6	Receiving a Call.....	10
Finding Upcoming Points of Interest.....	6	Using the Call History.....	10
Customizing the Up Ahead Categories.....	6	Using In-Call Options.....	10
		Saving a Home Phone Number.....	10
		Calling Home.....	10

<b>Using the Apps</b> .....	<b>10</b>	Cleaning the Touchscreen .....	16
Using Help .....	10	Avoiding Theft .....	16
Searching Help Topics .....	10	Mounting on Your Dashboard .....	16
Smartphone Link .....	10	Removing the Device, Mount, and Suction Cup .....	16
Downloading Smartphone Link .....	11	Removing the Device from the Mount .....	16
Connecting to Smartphone Link .....	11	Removing the Mount from the Suction Cup .....	16
Sending a Location from Your Phone to Your Device .....	11	Removing the Suction Cup from the Windshield .....	16
Disabling Calls While Connected to Smartphone Link .....	11	Purchasing Additional Maps .....	16
Garmin Live Services .....	11	Purchasing Accessories .....	16
Subscribing to Garmin Live Services .....	11	<b>Troubleshooting</b> .....	<b>16</b>
About ecoRoute .....	11	The suction cup will not stay on my windshield .....	16
ecoRoute HD Accessory .....	11	My device is not acquiring satellite signals .....	16
Setting Up the Vehicle .....	11	The device does not charge in my vehicle .....	16
Changing the Fuel Price .....	11	My battery does not stay charged for very long .....	17
Calibrating the Fuel Economy .....	11	The battery gauge does not seem accurate .....	17
About ecoChallenge .....	11	My device does not appear as a removable drive on my computer .....	17
Viewing Fuel Economy Information .....	12	My device does not appear as a portable device on my computer .....	17
Mileage Reports .....	12	My device does not appear as either a portable device or a removable drive or volume on my computer .....	17
Resetting ecoRoute Information .....	12	My phone will not connect to the device .....	17
Driving Tips .....	12	<b>Index</b> .....	<b>18</b>
Foursquare® .....	12		
Checking in with Foursquare .....	12		
Searching Foursquare Points of Interest .....	12		
Viewing myGarmin Messages .....	12		
Viewing the Weather Forecast .....	12		
Viewing Weather Near a Different City .....	12		
Viewing the Weather Radar .....	13		
Viewing Weather Alerts .....	13		
Checking Road Conditions .....	13		
Planning a Trip .....	13		
Scheduling a Trip .....	13		
Navigating to a Saved Trip .....	13		
Editing a Saved Trip .....	13		
Viewing Previous Routes and Destinations .....	13		
<b>Data Management</b> .....	<b>13</b>		
File Types .....	13		
About Memory Cards .....	13		
Installing a Memory Card .....	13		
Connecting the Device to Your Computer .....	13		
Transferring Data From Your Computer .....	14		
Disconnecting the USB Cable .....	14		
<b>Customizing the Device</b> .....	<b>14</b>		
Map and Vehicle Settings .....	14		
Enabling Maps .....	14		
Navigation Settings .....	14		
Calculation Mode Settings .....	14		
Avoiding Toll Roads .....	14		
Avoiding Toll Stickers .....	14		
Bluetooth Settings .....	14		
Disabling Bluetooth .....	15		
Display Settings .....	15		
Traffic Settings .....	15		
Units and Time Settings .....	15		
Language and Keyboard Settings .....	15		
Device and Privacy Settings .....	15		
Proximity Alerts Settings .....	15		
Restoring Settings .....	15		
<b>Device Information</b> .....	<b>15</b>		
Specifications .....	15		
<b>Appendix</b> .....	<b>15</b>		
Power Cables .....	15		
Charging the Device .....	15		
Changing the Fuse in the Vehicle Power Cable .....	16		
Device Care .....	16		
Cleaning the Outer Casing .....	16		

## Getting Started

### ⚠ WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Connecting the Device to Vehicle Power

### ⚠ WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, store the device out of direct sunlight.

Before you use your device on battery power, you should charge it.

- 1 Plug the vehicle power cable ① into the USB port on the device.



- 2 Press the mount ② onto the suction cup ③ until it snaps into place.
- 3 Press the suction cup to the windshield, and flip the lever ④ back toward the windshield.
- 4 Fit the tab on the top of the mount into the slot on the back of the device.
- 5 Press the bottom of the mount into the device until it clicks.
- 6 Plug the other end of the vehicle power cable into a power outlet in your vehicle.

## Support and Updates

Garmin Express™ provides easy access to these services for Garmin® devices. Some services may not be available for your device.

- Product registration
- Product manuals
- Software updates
- Map updates
- Vehicles, voices, and other extras

### Setting Up Garmin Express

- 1 Connect the device to your computer using a USB cable.
- 2 Go to [www.garmin.com/express](http://www.garmin.com/express).
- 3 Follow the on-screen instructions.

### nüMaps Guarantee™

Your device may be eligible for a free map update within 90 days of first acquiring satellites while driving. Go to [www.garmin.com/numaps](http://www.garmin.com/numaps) for terms and conditions.

### Lifetime Subscriptions

Some models include subscriptions to lifetime features. For more information, go to [www.garmin.com/lmt](http://www.garmin.com/lmt).

**LT:** This model includes a lifetime traffic subscription and a traffic receiver.

**LM:** This model includes a nüMaps Lifetime™ subscription, which provides quarterly map updates for the useful life of your device. For terms and conditions go to [www.garmin.com/us/maps/numaps\\_lifetime](http://www.garmin.com/us/maps/numaps_lifetime).

**LMT:** This model includes a nüMaps Lifetime subscription, lifetime traffic subscription, and a traffic receiver.

**LMTD or LMT-D:** This model includes a nüMaps Lifetime subscription, lifetime digital traffic subscription, and a digital traffic receiver.

### Activating Lifetime Maps

**NOTE:** Lifetime Maps are not applicable to products that do not have pre-loaded maps.

**NOTE:** Lifetime Maps entitle you to receive map updates when and as such updates are made available by Garmin during the useful life of one compatible Garmin product or as long as Garmin receives map data from a third party supplier, whichever is shorter. For the meaning of a product's "useful life" and for other important terms and conditions, go to [www.garmin.com/numapslifetime](http://www.garmin.com/numapslifetime).

- 1 Go to [www.garmin.com/express](http://www.garmin.com/express).
- 2 Follow the on-screen instructions.

**NOTE:** If you register the device, you can receive e-mail notifications when a map update is available.

### Updating Maps and Software with Garmin Express

You can use Garmin Express software to download and install the latest map and software updates for your device. Map updates provide the latest available mapping data to ensure your device continues to calculate accurate and efficient routes to your destinations. Garmin Express is available for Windows® and Mac® computers.

- 1 On your computer, go to [www.garmin.com/express](http://www.garmin.com/express).




- 2 Select an option:
  - To install on a Windows computer, select **Download for Windows**.
  - To install on a Mac computer, select **Download for Mac**.
- 3 Open the downloaded file, and follow the on-screen instructions to complete the installation.
- 4 Start Garmin Express.
- 5 Connect your Garmin device to your computer using a USB cable.



- 6 Click **Add a Device**.  
The Garmin Express software detects your device.
- 7 Click **Add Device**.

- 8 Follow the on-screen instructions to add your device to the Garmin Express software.  
When setup is complete, the Garmin Express software searches for map and software updates for your device.
- 9 Select an option:
  - To install all available updates, click **Install All**.
  - To install a single update, click **View Details** and select an update.

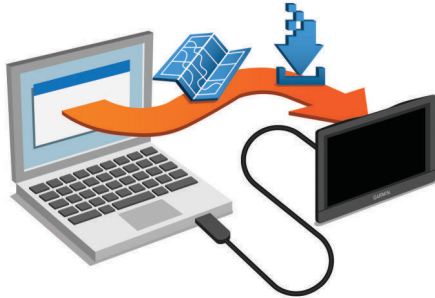

The Garmin Express software downloads and installs the updates onto your device. Map updates are very large, and this process may take a long time on slower Internet connections.

## Entering and Exiting Sleep Mode

You can use sleep mode to conserve battery power when your device is not in use. While in sleep mode, your device uses very little power and can wake instantly for use.

**TIP:** You can charge your device faster by putting it in sleep mode while charging the battery.

Press the power key ①.



## Turning Off the Device


- 1 Hold the power key until a prompt appears on the screen.  
The prompt appears after five seconds. If you release the power key before the prompt appears, the device enters sleep mode.
- 2 Select **Off**.

## Resetting the Device

You can reset your device if it stops functioning.

Hold the power key for 12 seconds.

## Acquiring GPS Signals

To navigate with your device, you must acquire satellites.  in the status bar indicates the satellite signal strength. Acquiring satellites can take several minutes.



- 1 Turn on the device.
- 2 Wait while the device locates satellites.
- 3 If necessary, go outdoors to an open area, away from tall buildings and trees.

## Adjusting the Screen Brightness

- 1 Select **Settings > Display > Brightness**.

- 2 Use the slider bar to adjust the brightness.

## Adjusting the Volume

- 1 Select **Volume**.
- 2 Select an option:
  - Use the slider bar to adjust the volume.
  - Select  to mute the device.
  - Select  for additional options.


## About Automatic Volume

On devices with hands-free calling, automatic volume allows the device to adjust the volume level based on the background noise in the vehicle (*Hands-Free Phone Calls*, page 10).

Automatic volume control lowers the volume of the device when background noise is low and raises the volume level when background noise increases.





## Enabling Automatic Volume

Your device can increase or decrease the volume automatically based on the level of background noise.

- 1 Select **Volume > **.
- 2 If necessary, select **Automatic Volume**.
- 3 Select **Enabled**.

## Status Bar Icons

The status bar is located at the top of the main menu. The status bar icons display information about features on the device. You can select some icons to change settings or view additional information.

	GPS signal status
	Bluetooth® technology status (appears when Bluetooth is enabled)
9:10 <sup>A</sup>	Current time
	Battery status
	Connected to Smartphone Link
53 <sup>F</sup>	Temperature

## Viewing GPS Signal Status

Hold  for three seconds.

## Battery Information








After the device is connected to power, it begins to charge.

 in the status bar indicates the status of the internal battery.

## Setting the Time




- 1 From the main menu, select the time.
- 2 Select an option:
  - To set the time automatically using GPS information, select **Automatic**.
  - To set the time manually, drag the numbers up or down.

## Using the On-Screen Buttons

- Select  to return to the previous menu screen.
- Hold  to quickly return to the main menu.
- Select  or  to see more choices.
- Hold  or  to scroll faster.
- Select  to see a menu of options for the current screen.

## Using the On-Screen Keyboard

See "Language and Keyboard Settings" to change the keyboard layout (*Language and Keyboard Settings*, page 15).

- Select  to delete a search entry.
- Select  to delete a character.
- Select  to change the keyboard language mode.

- Select &?% to enter special characters, such as punctuation marks.
- Select ↑ to change character capitalization.

## Locations

The detailed maps loaded in your device contain locations, such as restaurants, hotels, auto services, and detailed street information. You can use categories to browse for nearby businesses and attractions. You can also search for addresses, coordinates, cities, and intersections.

### Finding Locations


#### Finding a Location by Category

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

#### Searching Within a Category

After you have performed a search for a point of interest, certain categories may display a Quick Search list that shows the last four destinations you selected.

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 Select a category.
- 4 If applicable, select a destination from the Quick Search list.

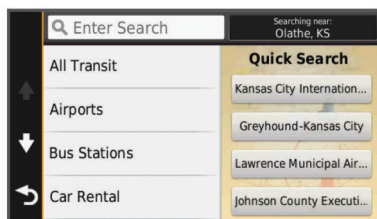

- 5 If necessary, select the appropriate destination.

#### Finding a Location Using the Search Bar

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?**.
- 2 Select **Enter Search** in the search bar.
- 3 Enter all or part of the search term.  
Suggested search terms appear below the search bar.
- 4 Select an option:
  - To search for a type of business, enter a category name (for example, "movie theaters").
  - To search for a business name, enter all or part of the name.
  - To search for an address near you, enter the house number and street name.
  - To search for an address in another city, enter the house number, street name, city, and state.
  - To search for a city, enter the city and state.
  - To search for coordinates, enter latitude and longitude coordinates.
- 5 Select an option:
  - To search using a suggested search term, select the term.
  - To search using the text you entered, select **Q**.
- 6 If necessary, select a location.

### Changing the Search Area

- 1 From the main menu, select **Where To?**.
- 2 Select **Searching Near**.
- 3 Select an option.

### Finding a Location by Browsing the Map

Before you can find places included in the map data, such as restaurants, hospitals, and fuel stations, you must enable the map layer for places along the road ([Customizing the Map Layers, page 7](#)).

- 1 Select **View Map**.
- 2 Drag and zoom the map to display the area to search.
- 3 If necessary, select **Q**, and select a category icon to view only a specific category of places.  
Location markers (📍 or a blue dot) appear on the map.
- 4 Select an option:
  - Select a location marker.
  - Select a point, such as a street, intersection, or address location.
- 5 If necessary, select the location description to view additional information.

### Finding an Address

**NOTE:** The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To?**.
- 2 If necessary, select **Searching Near** to change the search area ([Changing the Search Area, page 3](#)).
- 3 Select **Address**.
- 4 Follow the on-screen instructions to enter address information.
- 5 Select the address.

### Finding Recently Found Destinations

Your device stores the last 50 destinations you have found.

- 1 Select **Where To? > Recent**.
- 2 Select a location.

#### Clearing the List of Recently Found Locations

Select **Where To? > Recent > ☰ > Clear > Yes**.

### Finding Parking

- 1 Select **Where To? > Categories > Parking**.
- 2 Select a parking location.

#### Finding Your Last Parking Spot

When you disconnect the device from vehicle power while the device is on, your current location is saved as a parking spot.

Select **Apps > Last Spot**.

### Search Tools

Search tools allow you to search for specific types of locations by responding to on-screen prompts.

#### Finding an Intersection

You can search for an intersection or junction between two streets, highways, or other roads.


- 1 Select **Where To? > Categories > Intersections**.
- 2 Follow the on-screen instructions to enter street information.
- 3 Select the intersection.

#### Finding a City

- 1 Select **Where To? > Categories > Cities**.
- 2 Select **Enter Search**.
- 3 Enter a city name, and select **Q**.
- 4 Select a city.


### Finding a Location Using Coordinates

You can find a location using latitude and longitude coordinates. This can be helpful when geocaching.

- 1 Select **Where To? > Categories > Coordinates**.
- 2 If necessary, select , and change the coordinate format or datum.
- 3 Select the latitude coordinate.
- 4 Enter the new coordinate, and select **Done**.
- 5 Select the longitude coordinate.
- 6 Enter the new coordinate, and select **Done**.
- 7 Select **View on Map**.

## Saving Locations

### Saving a Location


- 1 Search for a location (*Finding a Location by Category*, page 3).
- 2 From the search results, select a location.
- 3 Select .
- 4 Select **Save**.
- 5 If necessary, enter a name, and select **Done**.

### Saving Your Current Location

- 1 From the map, select the vehicle icon.
- 2 Select **Save**.
- 3 Enter a name, and select **Done**.
- 4 Select **OK**.

### Saving a Home Location

You can set your home location for the location you return to most often.



- 1 Select **Where To? >  > Set Home Location**.
- 2 Select **Enter My Address, Use Current Location, or Recently Found**.

The location is saved as "Home" in the Saved menu.



### Going Home

Select **Where To? > Go Home**.

### Editing Your Home Location Information

- 1 Select **Where To? > Saved > Home**.
- 2 Select .
- 3 Select  > **Edit**.
- 4 Enter your changes.
- 5 Select **Done**.



### Editing a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category.
- 3 Select a location.
- 4 Select .
- 5 Select  > **Edit**.
- 6 Select an option:
  - Select **Name**.
  - Select **Phone Number**.
  - Select **Categories** to assign categories to the saved location.
  - Select **Change Map Symbol** to change the symbol used to mark the saved location on a map.
- 7 Edit the information.
- 8 Select **Done**.

### Assigning Categories to a Saved Location

You can add custom categories to organize your saved locations.

**NOTE:** Categories appear in the saved locations menu after you have saved at least 12 locations.

- 1 Select **Where To? > Saved**.
- 2 Select a location.
- 3 Select .
- 4 Select  > **Edit > Categories**.
- 5 Enter one or more category names, separated by commas.
- 6 If necessary, select a suggested category.
- 7 Select **Done**.

### Deleting a Saved Location

**NOTE:** Deleted locations cannot be recovered.

- 1 Select **Where To? > Saved**.
- 2 Select  > **Delete Saved Places**.
- 3 Select the box next to the saved locations to delete, and select **Delete**.

## Setting a Simulated Location

If you are indoors or not receiving satellite signals, you can use the GPS to set a simulated location.

- 1 Select **Settings > Navigation > GPS Simulator**.
- 2 From the main menu, select **View Map**.
- 3 Tap the map twice to select an area.

The address of the location appears at the bottom of the screen.
- 4 Select the location description.
- 5 Select **Set Location**.


## Adding a Shortcut

You can add shortcuts to the Where To? menu. A shortcut can point to a location, a category, or a search tool.

The Where To? menu can contain up to 36 shortcut icons.

- 1 Select **Where To? > Add Shortcut**.
- 2 Select an item.

### Removing a Shortcut

- 1 Select **Where To? >  > Remove Shortcut(s)**.
- 2 Select a shortcut to remove.
- 3 Select the shortcut again to confirm.
- 4 Select **Save**.

## Custom Points of Interest

Custom POIs are customized points on the map. They can contain alerts that let you know if you are near a designated point or if you are traveling faster than a specified speed.

### Installing POI Loader

You can create or download custom POI lists on your computer and install them on your device using POI Loader software.

- 1 Go to [www.garmin.com/poiloader](http://www.garmin.com/poiloader).
- 2 Follow the on-screen instructions.

### Using the POI Loader Help Files

For more information on the POI loader, refer to the Help file.

With the POI loader open, click **Help**.

### Finding Custom POIs

Before you can find custom POIs, you must load custom POIs on your device using the POI Loader software (*Installing POI Loader*, page 4).



- 1 Select **Where To? > Categories**.
- 2 Scroll to the Other Categories section, and select a category.

## Navigation

### Starting a Route

- 1 Search for a location (*Locations, page 3*).
- 2 Select a location.
- 3 Select **Go!**.

### Previewing Multiple Routes

- 1 Search for a location (*Finding a Location by Category, page 3*).
- 2 From the search results, select a location.
- 3 Select **Routes**.
- 4 Select a route.

### Changing the Route Calculation Mode

The route calculation is based on road speeds and vehicle acceleration data for a given route. The calculation mode affects only automobile routes.

- 1 Select **Settings > Navigation > Calculation Mode**.
- 2 Select an option:
  - Select **Faster Time** to calculate routes that are faster to drive but can be longer in distance.
  - Select **Shorter Distance** to calculate routes that are shorter in distance but can take more time to drive.
  - Select **Off Road** to calculate point-to-point routes (without roads).
  - Select **Less Fuel** to calculate routes that are more fuel-efficient.

### Navigating Off Road

If you are not following roadways as you navigate, you can use Off Road mode.

- 1 Select **Settings > Navigation**.
- 2 Select **Calculation Mode > Off Road > Save**.

The next route will be calculated as a straight line to the location.

### Starting a Route to a Saved Location

- 1 Select **Where To? > Saved**.
- 2 If necessary, select a category, or select **All Saved Places**.
- 3 Select a location.
- 4 Select **Go!**.

### Navigating to Points of Interest Within a Venue

You can create a route to a point of interest (POI) within a larger venue, such as a store in a shopping mall or a specific terminal in an airport.

- 1 Select **Where To? > Enter Search**.
- 2 Select an option:
  - To search for the venue, enter the name or address of the venue, select **Q**, and go to step 3.
  - To search for the POI, enter the name of the POI, select **Q**, and go to step 5.
- 3 Select the venue.

A list of categories appears below the venue, such as restaurants, car rentals, or terminals.
- 4 Select a category.
- 5 Select the POI, and select **Go!**.

The device creates a route to the parking area or venue entrance closest to the POI. When you arrive at the destination, a checkered flag indicates the recommended parking area. A labeled point indicates the location of the POI within the venue.

### Exploring a Venue

You can view a list of all points of interest located within each venue.

- 1 Select a venue.
- 2 Select **i > Explore this Venue**.
- 3 Select a category.
- 4 Select a point of interest.
- 5 Select **Go!**.

### Your Route on the Map


#### NOTICE

The speed limit feature is for information only and does not replace your responsibility to abide by all posted speed limit signs and to use safe driving judgment at all times. Garmin will not be responsible for any traffic fines or citations you receive for failing to follow all applicable traffic laws and signs.

The route is marked with a magenta line. A checkered flag marks your destination.

As you travel, the device guides you to the destination with voice prompts, arrows on the map, and directions at the top of the map. If you depart from the original route, the device recalculates the route and provides new directions.

A data field displaying the current speed limit may appear as you travel on major roadways.

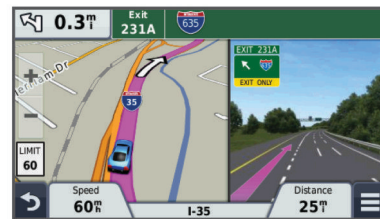

### Using the Map

- 1 Select **View Map**.
- 2 Select anywhere on the map.
- 3 Select an option:
  - To zoom in or out, select **+** or **-**.
  - To switch between North Up and 3-D views, select **▲**.
  - To view specific categories, select **Q**.

### Adding a Point to a Route

Before you can add a point, you must be navigating a route.

- 1 From the map, select **➔ > Where To?**
- 2 Search for a location.
- 3 Select a location.
- 4 Select **Go!**.
- 5 Select **Add to Active Route**.

### Taking a Detour

Before you can take a detour, you must be navigating a route and you must add the change route tool to the map tools menu (*Customizing the Map Tools, page 7*).

You can take a detour for a specified distance along your route or detour around specific roads. This is useful if you encounter construction zones, closed roads, or poor road conditions.

- 1 From the map, select **≡ > Change Route**.

- Select an option:
  - To detour your route for a specific distance, select **Detour by Distance**.
  - To detour around a specific road on the route, select **Detour by Road**.

### Stopping the Route

From the map, select > .

## Viewing Route Activity

### Viewing a List of Turns

While navigating a route, you can view all of the turns and maneuvers for your entire route and the distance between turns.

- While navigating a route, select the text bar on the top of the map.
- Select a turn.
 

The details for the turn appear. If available, an image of the junction appears for junctions on major roadways.

### Viewing the Entire Route on the Map

- While navigating a route, select the navigation bar at the top of the map.
- Select > **Map**.

### Viewing the Next Turn

While navigating a route, a preview of the next turn, lane change, or other maneuver appears in the upper-left corner of the map.

The preview includes the distance to the turn or maneuver and the lane in which you should be traveling, if available.

From the map, select to view the next turn on the map.

### Active Lane Guidance

As you approach a turn while navigating a route, a detailed simulation of the road appears beside the map, if available. A colored line indicates the proper lane for the turn.

### Viewing Junctions

While navigating a route, you can view the junctions on major roadways. When you approach a junction in a route, the image of that junction appears briefly, if available.

From the map, select to view the junction, if available.

## About Up Ahead

You can view upcoming businesses and services along your route or the road on which you are traveling.

Services are listed under tabs by category.

	Gas
	Food
	Lodging
	Restrooms
	Parking
	Banks and ATMs

### Finding Upcoming Points of Interest

- From the map, select > **Up Ahead**.
- Select a category.
- Select a point of interest on the map.

### Customizing the Up Ahead Categories

You can change the categories you search for, rearrange the order of the categories, and search for a specific business or category.

- From the map, select > **Up Ahead**.
- Select a service icon.

- Select .
- Select an option:
  - To move a category up or down in the list, select and drag the arrow to the right of the category name.
  - To change a category, select the category.
  - To create a custom category, select a category, select **Custom Search**, and enter the name of a business or category.
- Select **Done**.

## Trip Information

### Viewing Trip Data from the Map

Before you can view trip data on the map, you must add the tool to the map tools menu ([Customizing the Map Tools, page 7](#)).

From the map, select > **Trip Data**.

### Customizing the Trip Data Fields

Before you can customize the data that appears in the trip data fields on the map, you must add the Trip Data tool to the map tools menu ([Customizing the Map Tools, page 7](#)).

- Select **View Map**.
- Select > **Trip Data**.
- Select a trip data field.
- Select an option.


The new trip data field appears in the trip data list.

### Viewing the Trip Information Page

The trip information page displays your present speed and provides statistics about your trip.

**NOTE:** If you make frequent stops, leave the device turned on, so it can accurately measure elapsed time during the trip.

From the map, select **Speed**.

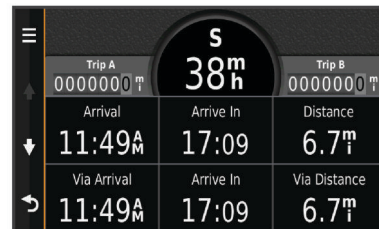

### Viewing the Trip Log

Your device keeps a trip log, which is a record of the path you have traveled.

- Select **Settings > Map & Vehicle > Map Layers**.
- Select the **Trip Log** check box.

### Resetting Trip Information

- From the map, select **Speed**.
- Select > **Reset Field(s)**.
- Select an option:
  - When not navigating a route, select **Select All** to reset every data field except the speedometer, on the first page.
  - Select **Reset Trip Data** to reset the information on the trip computer.
  - Select **Reset Max. Speed** to reset the maximum speed.
  - Select **Reset Trip B** to reset the odometer.

## Using Suggested Routes

Before you can use this feature, you must save at least one location and enable the travel history feature ([Device and Privacy Settings, page 15](#)).

Using the myTrends™ feature, your device predicts your destination based on your travel history, the day of the week, and the time of day. After you have driven to a saved location several times, the location may appear in the navigation bar on the map, along with the estimated time of travel, and traffic information.

Select the navigation bar to view a suggested route to the location.

## Viewing Current Location Information

You can use the Where Am I? page to view information about your current location. This feature is helpful if you need to tell emergency personnel your location.

From the map, select the vehicle.


### Finding Nearby Services

You can use the Where Am I? page to find nearby services, such as fuel, hospitals or police stations.

- 1 From the map, select the vehicle.
- 2 Select a category.

### Getting Directions to Your Current Location

If you need to tell another person how to get to your current location, your device can give you a list of directions.

- 1 From the map, select the vehicle.
- 2 Select  > **Directions to Me**.
- 3 Select a starting location.
- 4 Select **Select**.

## Avoiding Road Features

- 1 Select **Settings** > **Navigation** > **Avoidances**.
- 2 Select the road features to avoid on your routes, and select **Save**.

## About Custom Avoidances

Custom avoidances allow you to avoid specific areas and sections of road. You can enable and disable custom avoidances as needed.

### Avoiding an Area

- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 If necessary, select **Add Avoidance**.
- 3 Select **Add Avoid Area**.
- 4 Select the upper-left corner of the area to avoid, and select **Next**.
- 5 Select the lower-right corner of the area to avoid, and select **Next**.

The selected area is shaded on the map.

- 6 Select **Done**.

### Avoiding a Road



- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 Select **Add Avoid Road**.
- 3 Select the starting point of the section of road to avoid, and select **Next**.
- 4 Select the ending point of the road section, and select **Next**.
- 5 Select **Done**.

### Disabling a Custom Avoidance

You can disable a custom avoidance without deleting it.

- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 Select an avoidance.
- 3 Select  > **Disable**.

## Deleting Custom Avoidances

- 1 Select **Settings** > **Navigation** > **Custom Avoidances**.
- 2 Select an option:
  - To delete all custom avoidances, select .
  - To delete one custom avoidance, select the avoidance, and select  > **Delete**.

## Customizing the Map

### Customizing the Map Tools

You can select the shortcuts that appear in the map tools menu.

- 1 Select **Settings** > **Map & Vehicle** > **Map Tools**.
- 2 Select the map tools to include in the menu.
- 3 Select **Save**.

### Customizing the Map Layers

You can customize which data appear on the map, such as icons for points of interest and road conditions.

- 1 Select **Settings** > **Map & Vehicle** > **Map Layers**.
- 2 Select the layers to include on the map, and select **Save**.

### Changing the Map Data Field

- 1 From the map, select a data field.

**NOTE:** You cannot customize Speed.

- 2 Select a type of data to display.

### Changing the Map Perspective

- 1 Select **Settings** > **Map & Vehicle** > **Driving Map View**.
- 2 Select an option:
  - Select **Track Up** to display the map in two dimensions (2-D), with your direction of travel at the top.
  - Select **North Up** to display the map in 2-D with north at the top.
  - Select **3-D** to display the map in three dimensions.
- 3 Select **Save**.

## Safety Cameras

### NOTICE

Garmin is not responsible for the accuracy of or the consequences of using a custom point of interest or a safety camera database.

**NOTE:** This feature is not available for all regions or product models.

Information about safety camera locations and speed limits is available in some areas for some product models. Go to [www.garmin.com/safetycameras](http://www.garmin.com/safetycameras) to check availability and compatibility, or to purchase a subscription or one-time update. You can purchase a new region or extend an existing subscription at any time.

You can update safety cameras for an existing safety camera subscription by going to <http://my.garmin.com>. You should update your device frequently to receive the most up-to-date safety camera information.

For some devices and regions, basic safety camera data may be included with your device. Included data does not include updates or a subscription.

## Traffic

### NOTICE

Garmin is not responsible for the accuracy or timeliness of the traffic information.

Traffic information may not be available in all areas or countries. For information about traffic receivers and coverage areas, go to [www.garmin.com/traffic](http://www.garmin.com/traffic).

A traffic receiver is included in some packages, built into either the vehicle power cable or the device, and is an optional accessory for all models.

- Traffic alerts appear on the map when there are traffic incidents along your route or in your area.
- You can receive traffic information through a traffic receiver or as a subscription service through Smartphone Link ([Garmin Live Services](#), page 11).
- The device must be connected to Smartphone Link with an active traffic subscription to receive traffic information through Smartphone Link.
- The device must be connected to vehicle power to receive traffic information through a traffic receiver.
- The powered traffic receiver and the device may need to be in data range of a station transmitting traffic data to receive traffic information.
- You do not need to activate the subscription included with your device or traffic receiver.
- If your device includes an external traffic antenna, you should always leave the external antenna plugged in for the best traffic reception.

## Receiving Traffic Data Using a Traffic Receiver

### NOTICE

Heated (metallized) windshields could degrade the performance of the traffic receiver.

Before you can receive traffic data using a traffic receiver, you must have a traffic-compatible power cable. If your device model includes lifetime traffic, you should use the vehicle power cable packaged with your device. If your device model does not include traffic, you must purchase a Garmin traffic receiver accessory. Go to [www.garmin.com/traffic](http://www.garmin.com/traffic) for more information.

Your device can receive traffic signals from a station broadcasting traffic data.

**NOTE:** In some areas, traffic information may be received from FM radio stations using HD Radio™ technology.

- 1 Connect the traffic-compatible power cable to an external power source.
- 2 Connect the traffic-compatible power cable to the device.

When you are within a traffic coverage area, your device displays traffic information.

## Viewing Upcoming Traffic

You can view traffic incidents coming up along your route or along the road on which you are traveling.

- 1 While navigating a route, select **☰ > Traffic**.  
The nearest upcoming traffic incident appears in a panel on the right side of the map.
- 2 Select the traffic incident to view additional details.

## Viewing Traffic on the Map

The traffic map shows color-coded traffic flow and delays on nearby roads.

- 1 From the main menu, select **Apps > Traffic**.
- 2 If necessary, select **☰ > Legend** to view the legend for the traffic map.

## Searching for Traffic Incidents

- 1 From the main menu, select **Apps > Traffic**.

- 2 Select **☰ > Incidents**.

- 3 Select an item in the list.

- 4 If there is more than one incident, use the arrows to view additional incidents.

## Traffic on Your Route

When a traffic delay occurs on your route, an alert appears on the map, and the device calculates an alternate route to avoid the delay. You can choose whether to use alternate routes automatically, or upon request. See [Traffic Settings](#) for more information ([Traffic Settings](#), page 15). Your device may route you through a traffic delay if a better alternative route does not exist. The delay time is added into your estimated time of arrival automatically.

### Taking an Alternate Route

If you do not have your device set to use alternate routes automatically, you can manually start an alternate route to avoid a traffic delay.

- 1 While navigating a route, select **☰ > Traffic**.

- 2 Select **Alternate Route**.

**NOTE:** If a better alternative route does not exist, this option is not available, and **On Fastest Route** appears instead.

- 3 Select **Go!**.

## About Traffic Cameras

Traffic cameras provide live images of traffic conditions on major roadways and intersections. You can save cameras that you want to view regularly.

### Saving a Traffic Camera

Before you can use this feature, you must subscribe to the photoLive service, and your device must be connected to a supported phone running Smartphone Link ([Smartphone Link](#), page 10).

This feature is not available in all areas.

- 1 Select **Apps > photoLive**.
- 2 Select **Touch to Add**.
- 3 Select a road.
- 4 Select an intersection.
- 5 Select **Save**.

### Viewing a Traffic Camera

Before you can view a traffic camera, you must save a traffic camera ([Saving a Traffic Camera](#), page 8).

- 1 Select **Apps > photoLive**.
- 2 Select a camera.

## About Traffic Subscriptions

You can purchase additional subscriptions or a renewal if your subscription expires. Go to <http://www.garmin.com/traffic>.

### Subscription Activation

You do not need to activate the subscription included with your FM traffic receiver. The subscription activates automatically after your device acquires satellite signals while receiving traffic signals from the pay service provider.

### Viewing Traffic Subscriptions

Select **Settings > Traffic > Subscriptions**.

### Adding a Subscription

You can purchase traffic subscriptions for other regions or countries.

- 1 From the main menu, select **Traffic**.
- 2 Select **Subscriptions > +**.

- 3 Write down the FM traffic receiver unit ID.
- 4 Go to [www.garmin.com/fmtraffic](http://www.garmin.com/fmtraffic) to purchase a subscription and get a 25-character code.  
The traffic subscription code cannot be reused. You must obtain a new code each time you renew your service. If you own multiple FM traffic receivers, you must obtain a new code for each receiver.
- 5 Select **Next** on the device.
- 6 Enter the code.
- 7 Select **Done**.

## trafficTrends™

When the trafficTrends feature is enabled, your device uses historic traffic data to calculate more-efficient routes.

**NOTE:** Different routes may be calculated based on traffic trends for the day of the week or the time of day.

### Disabling trafficTrends

To prevent your device from recording or sharing traffic data, you must disable trafficTrends.

Select **Settings > Traffic > trafficTrends™**.

### Enabling Traffic

You can enable or disable traffic data. When traffic data is disabled, the device does not receive traffic data, but it still avoids potentially congested areas in routes using the trafficTrends feature, if enabled ([trafficTrends™](#), page 9).

- 1 Select **Settings > Traffic**.
- 2 Select the **Traffic** check box.

## Voice Command

**NOTE:** Voice command is not available for all languages and regions, and may not be available on all models.

**NOTE:** Voice Activated Navigation may not achieve desired performance when in a noisy environment.

Voice command allows you to use your device by saying words and commands. The voice command menu provides voice prompts and a list of available commands.

### Setting the Wakeup Phrase

The wakeup phrase is a word or phrase you can say to activate voice command. The default wakeup phrase is Voice Command.

**TIP:** You can reduce the chance of accidental voice command activation by using a strong wakeup phrase.

- 1 Select **Apps > Voice Command > \** > **Wake Up Phrase**.
- 2 Enter a new wakeup phrase.  
The device indicates the strength of the wakeup phrase as you enter the phrase.
- 3 Select **Done**.

### Activating Voice Command

Say your wakeup phrase.

The voice command menu appears.

### Voice Command Tips

- Speak in a normal voice directed at the device.
- Reduce background noise, such as voices, or the radio, to increase the accuracy of the voice recognition.
- Speak commands as they appear on the screen.
- Respond to voice prompts from the device as needed.
- Increase the length of your wakeup phrase to reduce the chance of accidental voice command activation.

- Listen for two tones to confirm when the device enters and exits voice command.

## Starting a Route Using Voice Command

You can say the names of popular, well-known locations.

- 1 Say your wakeup phrase ([Setting the Wakeup Phrase](#), page 9).
- 2 Say **Find Place**.
- 3 Listen for the voice prompt, and speak the name of the location.
- 4 Say the line number.
- 5 Say **Navigate**.

## Muting Instructions

You can disable the voice prompts for voice Command without muting the device.

- 1 Select **Apps > Voice Command > \**.
- 2 Select **Mute Instructions > Enabled**.

## Disabling Voice Command

You can disable voice command, which prevents you from accidentally activating voice command while speaking.

- 1 Select **Apps > Voice Command > \**.
- 2 Select **Voice Command > Disabled**.

## Voice Control

For regions where the Voice Command feature is unavailable, the Voice Control feature is activated. Voice Control allows you to use your voice to control the device. Before you can use the Voice Control feature, you must configure it for your voice.

### Configuring Voice Control

The Voice Control feature must be configured for a single user's voice and does not work for other users.

- 1 Select **Apps > Voice Control**.
- 2 Follow the on-screen instructions to record commands for each voice control phrase.

**NOTE:** You do not have to read the exact phrase on the screen. You may say an alternative command with the same meaning based on your preference.

To use a voice control feature, you must say the command you recorded for the feature.

### Using Voice Control

- 1 Say the command you recorded for the **Voice Control** phrase.  
The voice control menu appears.
- 2 Follow the on-screen instructions.

### Voice Control Tips

- Speak in a normal voice directed at the device.
- Reduce background noise, such as voices, or the radio, to increase the accuracy of the voice recognition.
- Speak commands as they appear on the screen.
- Listen for a tone to confirm when the device successfully receives a command.

# Hands-Free Phone Calls

## About Hands-Free Calling

**NOTE:** Bluetooth wireless technology is not available on all models, or for all languages and regions.

Hands-free calling is available on some models. Using Bluetooth wireless technology, your device can connect to your mobile phone to become a hands-free device. To determine whether your mobile phone with Bluetooth technology is compatible with your device, go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth).

Your phone may not support all of the hands-free phone features your device provides.

### Enabling Bluetooth Wireless Technology

- 1 Select **Settings** > **Bluetooth**.
- 2 Select **Bluetooth**.

## Pairing Your Phone

Before you can use hands-free calling, you must pair your device with a compatible mobile phone.

- 1 Place your phone and your Bluetooth device within 33 ft. (10 m) of each other.
- 2 On your device, enable Bluetooth wireless technology.
- 3 Select **Settings** > **Bluetooth** > **Search for Devices**.
- 4 On your phone, enable Bluetooth wireless technology.
- 5 On your device, select **OK**.  
A list of nearby Bluetooth devices appears.
- 6 Select your phone from the list, and select **OK**.
- 7 If necessary, on your phone, confirm the device is allowed to connect.
- 8 If necessary, enter the device Bluetooth PIN into your phone.

### Tips After Pairing the Devices

- After the initial pairing, the two devices can connect automatically each time you turn them on.
- When your phone is connected to your device, you are ready to receive voice calls.
- When you turn on the device, it tries to connect to the last phone to which it was connected.
- You might need to set your phone to connect to the device automatically when the device is turned on.

### Disconnecting a Bluetooth Device

You can temporarily disconnect a Bluetooth device without deleting it from the paired devices list. The Bluetooth device can connect to your nüvi device automatically in the future.

- 1 Select **Settings** > **Bluetooth**.
- 2 Select the device to disconnect.
- 3 Clear the check box next to the name of your paired device.

### Deleting a Paired Phone

You can delete a paired phone to prevent it from automatically connecting to your device in the future.

- 1 Select **Settings** > **Bluetooth**.
- 2 Select the phone, and select **Unpair device**.

## Placing a Call

### Dialing a Number

- 1 Select **Apps** > **Phone** > **Dial**.
- 2 Enter the number.
- 3 Select **Dial**.

## Calling a Contact in Your Phone Book

Your phone book is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the phone book to be available. Some phones do not support this feature.

- 1 Select **Apps** > **Phone** > **Phone Book**.
- 2 Select a contact.
- 3 Select **Call**.

### Calling a Location

- 1 Select **Apps** > **Phone** > **Browse Categories**.
- 2 Select a point of interest.
- 3 Select **Call**.

## Receiving a Call

When you receive a call, select **Answer** or **Ignore**.





## Using the Call History

Your call history is loaded from your phone to the device each time your phone and the device connect. It may take a few minutes for the call history to be available. Some phones do not support this feature.

- 1 Select **Apps** > **Phone** > **Call History**.
- 2 Select a category.  
A list of calls appears, with the most recent calls at the top.
- 3 Select a call.


## Using In-Call Options

While on a call, you can select in-call options from the map.

- To transfer audio to your phone, select .
- TIP:** You can use this feature if you want to turn off your device and remain on the call, or if you need privacy.
- To use the dial pad, select .
- TIP:** You can use this feature to use automated systems, such as voice mail.
- To mute the microphone, select .
- To hang up, select .

## Saving a Home Phone Number

**TIP:** After you save a home number, you can edit the home number by editing “Home” in your list of saved locations ([Editing a Saved Location](#), page 4).

- 1 Select **Apps** > **Phone** >  > **Set Home Number**.
- 2 Enter your phone number.
- 3 Select **Done**.

### Calling Home

Before you can call home, you must enter a phone number for your home location.

Select **Apps** > **Phone** > **Call Home**.

## Using the Apps

### Using Help

Select **Apps** > **Help** to view information about using the device.

### Searching Help Topics

Select **Apps** > **Help** > **Q**.

## Smartphone Link

Smartphone Link is a phone application that allows you to synchronize location data with your phone and access live

information using your phone data connection. Your device transfers data from Smartphone Link using Bluetooth wireless technology. Live information is available through free and subscription-based plans from Garmin Live Services ([Garmin Live Services](#), page 11).

Saved locations and recently found locations are synchronized with your phone each time your device connects to Smartphone Link.

### Downloading Smartphone Link

Smartphone Link is available for some smartphones. Go to [www.garmin.com/smartphonelink](http://www.garmin.com/smartphonelink) or see the application store for your phone for compatibility and availability information.

Download Smartphone Link from the application store on your supported phone.

See your phone owner's manual for information on downloading and installing applications.

### Connecting to Smartphone Link

Before you can connect to Smartphone Link, you must download and install the Smartphone Link application on your phone.

- 1 Start Smartphone Link on your phone.
- 2 From your device, select **Settings > Bluetooth**.
- 3 Select the **Bluetooth** check box.
- 4 From your phone, enable Bluetooth wireless technology, and scan for nearby Bluetooth devices.

See your phone owner's manual for more information.

- 5 From your phone, select your device from the list of nearby devices.
- 6 Follow the on-screen instructions on your phone and on your device to confirm the pairing request.

✱ appears in the status bar on your device when Smartphone Link is connected.

### Sending a Location from Your Phone to Your Device

Smartphone Link is registered as a navigation application on your phone.

- 1 From your phone, select the button to start navigating to a location (see the owner's manual for your phone).
- 2 From the application menu, select **Smartphone Link**.

The next time you connect your device to your phone, the location is transferred to the recently found items on your device.

### Disabling Calls While Connected to Smartphone Link

While the device is connected to the phone and receiving Garmin Live Services, you can disable hands-free calling.

- 1 Select **Settings > Bluetooth**.
- 2 Select your phone.
- 3 Clear the **Phone calls** check box.

## Garmin Live Services

Before you can use Garmin Live Services, your device must be connected to a supported phone running Smartphone Link ([Connecting to Smartphone Link](#), page 11).

Connecting to Smartphone Link provides access to Garmin Live Services. Garmin Live Services provides free and subscription-based plans to view live data on your device, such as traffic conditions and weather.

Some services, like weather, are available as separate apps on your device. Other services, like traffic, enhance the existing navigation features on your device. Features that require access to Garmin Live Services display the Smartphone Link symbol and appear only when the device is connected to Smartphone Link.

## Subscribing to Garmin Live Services

Before you can subscribe to Garmin Live Services, you must install the Smartphone Link app on your phone.

- 1 Start the Smartphone Link app on your phone ([Connecting to Smartphone Link](#), page 11).
- 2 Select **My Account**.  
A list of services and subscription prices appears.
- 3 Select a service.
- 4 Select the price.
- 5 Select **Subscribe**.
- 6 Follow the on-screen instructions.

## About ecoRoute

In some areas, before you can use ecoRoute™ features, you must purchase an unlock code or an ecoRoute HD accessory. Go to [www.garmin.com/ecoroute](http://www.garmin.com/ecoroute) for more information.

The ecoRoute feature calculates the fuel economy and the fuel price of navigating to a destination, and offers tools for improving fuel efficiency.

The data provided by the ecoRoute feature is an estimate only. The data is not actually read from the vehicle, unless you are using the ecoRoute HD accessory.

To receive more-accurate fuel reports for your specific vehicle and driving habits, calibrate the fuel economy ([Calibrating the Fuel Economy](#), page 11).

### ecoRoute HD Accessory

When connected to the ecoRoute HD accessory, your device can receive real-time vehicle information, such as error messages, RPM, and battery voltage. Your device includes data read from the vehicle by the ecoRoute HD accessory when calculating ecoRoute data.

The ecoRoute HD accessory is compatible only with devices that have Bluetooth wireless technology.

Go to [www.garmin.com/ecoroute](http://www.garmin.com/ecoroute).

### Setting Up the Vehicle

The first time you use the ecoRoute features, you must enter vehicle information.

- 1 Select **Apps > ecoRoute**.
- 2 Follow the on-screen instructions.

### Changing the Fuel Price

- 1 Select **Apps > ecoRoute > At the Pump**.
- 2 Enter the current price of fuel, and select **Next**.
- 3 Select **Yes**.

### Calibrating the Fuel Economy

You can calibrate the fuel economy to receive more-accurate fuel reports for your specific vehicle and driving habits. You should calibrate when you fill up your fuel tank.

- 1 Select **Apps > ecoRoute > At the Pump**.
- 2 Enter the current fuel price.
- 3 Enter the amount of fuel the vehicle has used since the last time the fuel tank was filled.
- 4 Enter the distance you have traveled since the last time the fuel tank was filled.
- 5 Select **Next**.  
The device calculates the average vehicle fuel economy.
- 6 Select **Save**.

### About ecoChallenge

ecoChallenge helps you maximize the vehicle fuel economy by scoring your driving habits. The higher your ecoChallenge scores, the more fuel you have saved. The ecoChallenge

collects data and calculates a score whenever your device is moving and in Automobile transportation mode.

### Viewing ecoChallenge Scores

Select **Apps** > **ecoRoute** > **ecoChallenge**.

#### About the ecoChallenge Score

**Acceleration:** Displays your score for smooth and gradual acceleration. You lose points for rapid acceleration.

**Braking:** Displays your score for smooth and gradual braking. You lose points for hard braking.

**Overall:** Displays an average of the speed, acceleration, and braking score.

**Speed:** Displays your score for driving your vehicle at the optimal speed for conserving fuel.

#### Resetting the ecoChallenge Scores

- 1 Select **Apps** > **ecoRoute** > **ecoChallenge**.
- 2 Select  > **Reset**.

#### Viewing Fuel Economy Information

- 1 Select **Apps** > **ecoRoute** > **Fuel Economy**.
- 2 Select a section of the graph to zoom in.

#### Mileage Reports

Mileage reports provide the distance, the time, the average fuel economy, and the fuel cost of navigating to a destination.

A mileage report is created for every route that you drive. If you stop a route on your device, a mileage report is created for the distance you traveled.

#### Viewing a Mileage Report

You can view saved mileage reports on the device.

**TIP:** You can connect the device to your computer and access mileage reports in the Reports folder on the device.

- 1 Select **Apps** > **ecoRoute** > **Mileage Report**.
- 2 Select a report.

#### Resetting ecoRoute Information

- 1 Select **Apps** > **ecoRoute** > **Vehicle Profile**.
- 2 Select **Reset**.

#### Driving Tips

- Drive the speed limit. In most vehicles, you will achieve optimal fuel economy between 45 mph and 60 mph.
- Drive a consistent speed.
- Brake and accelerate gradually and consistently.
- Avoid stop-and-go traffic and rush hour.
- Do not rest your foot on the brake pedal.
- Use the cruise control.
- Turn your vehicle off instead of idling for temporary stops.
- Combine small trips into one longer trip with multiple stops.
- Turn off the air conditioner and open your windows, unless you are traveling at high speeds on the highway.
- Tighten your gas cap.
- Park in the shade or in the garage.
- Unload excess weight. Remove unneeded items from your vehicle.
- Avoid carrying items on your roof. Remove rooftop carriers and removable racks when not in use.
- Maintain the recommended tire pressure. Check tire pressure regularly and before long trips.
- Keep your vehicle well-tuned, and follow the vehicle manufacturer's recommended maintenance intervals.
- Change your oil, oil filters, and air filters regularly.

- Use the lowest recommended suitable grade of fuel. Use biofuels when feasible, such as E85 and biodiesel.


## Foursquare®

Foursquare is a location-based social network. Your device includes pre-loaded Foursquare points of interest, which are indicated by the Foursquare logo in your location search results.

For additional features, you can connect to your Foursquare account using Smartphone Link on your compatible smartphone. When you connect to your Foursquare account using Smartphone Link, you can view Foursquare location details, check in to a location, and search for points of interest in the online Foursquare database.

#### Checking in with Foursquare

Before you can check in with Foursquare, you must connect to a supported phone running Smartphone Link and log in to your Foursquare account.

- 1 Select **Apps** > **Foursquare** > **Check In**.
- 2 Select a point of interest.
- 3 Select  > **Check In**.

#### Searching Foursquare Points of Interest

You can use the search bar to search for locations by entering a category, brand name, address, or city name.

- 1 Select **Where To?** > **Foursquare**.
- 2 Select **Enter Search** in the search bar.
- 3 Enter all or part of the search term.  
Suggested search terms appear below the search bar.
- 4 Select an option:
  - To search for a type of business, enter a category name (for example, "movie theaters").
  - To search for a business name, enter all or part of the name.
- 5 Select an option:
  - To search using a suggested search term, select the term.
  - To search using the text you entered, select **Q**.
- 6 If necessary, select a location.

## Viewing myGarmin Messages

Before you can use this feature, your device must be connected to a supported phone running Smartphone Link ([Connecting to Smartphone Link, page 11](#)). This feature is not available in all areas.

You can view messages from myGarmin, such as notifications for software and map updates.

- 1 Select **Apps** > **myGarmin**.  
If you have unread messages, the number of unread messages appears on the myGarmin icon.
- 2 Select a message subject.  
The full message appears.

## Viewing the Weather Forecast

Before you can use this feature, your device must be connected to a supported phone running Smartphone Link ([Connecting to Smartphone Link, page 11](#)). This feature is not available in all areas.

- 1 Select **Apps** > **Weather**.
- 2 Select a day.  
The detailed forecast for that day appears.

#### Viewing Weather Near a Different City

- 1 Select **Apps** > **Weather** > **Current Location**.



- 2 Select an option:
  - To view weather for a favorite city, select a city in the list.
  - To add a favorite city, select **Add City**, and enter a city name.

### Viewing the Weather Radar

Before you can use this feature, you must purchase Advanced Weather service using Smartphone Link.

You can view an animated, color-coded radar map of current weather conditions, as well as a weather icon on the map. The weather icon changes to show weather in the vicinity, such as rain, snow, and thunderstorms.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select **☰ > Weather Radar**.

### Viewing Weather Alerts

Before you can use this feature, you must purchase Advanced Weather service using Smartphone Link.

While you are traveling with your device, weather alerts may appear on the map. You can also view a map of weather alerts near your current location or near a selected city.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select **☰ > Weather Alerts**.

### Checking Road Conditions

Before you can use this feature, you must purchase Advanced Weather service using Smartphone Link.

- 1 Select **Apps > Weather**.
- 2 If necessary, select a city.
- 3 Select **☰ > Road Conditions**.

## Planning a Trip

You can use the trip planner to create and save a trip with multiple destinations.

- 1 Select **Apps > Trip Planner**.
- 2 Select **New Trip**.
- 3 Select **Select Start Location**.
- 4 Search for a location (*Finding a Location by Category, page 3*).
- 5 Select **Select**.
- 6 To add additional locations, select **+**.
- 7 Select **Next**.
- 8 Select **Save**.
- 9 Enter a name, and select **Done**.

### Scheduling a Trip

You can add scheduling information to each location in your trip, including the desired arrival time and layover duration at each location. This can help you plan your departure to reach locations in your trip on time.

- 1 Select **Apps > Trip Planner**.
- 2 Select a trip.
- 3 Select a location.
- 4 Select **Departure Time** or **Arrival Time**.
- 5 Select a date and time, and select **Save**.
- 6 Select **Duration**.
- 7 Select the amount of time you intend to spend at the location, and select **Save**.
- 8 If necessary, repeat steps 3 through 7 for each location.

### Navigating to a Saved Trip

- 1 Select **Apps > Trip Planner**.
- 2 Select a saved trip.
- 3 Select **Go!**.
- 4 If prompted, select a route (*Your Route on the Map, page 5*).

### Editing a Saved Trip

- 1 Select **Apps > Trip Planner**.
- 2 Select a saved trip.
- 3 Select **☰**.
- 4 Select an option:
  - Select **Rename Trip**.
  - Select **Edit Destinations** to add and delete a location, or to change the order of locations.
  - Select **Delete Trip**.
  - Select **Optimize Order** to arrange the stops on your trip in the most-efficient order.

## Viewing Previous Routes and Destinations

Before you can use this feature, you must enable the travel history feature (*Device and Privacy Settings, page 15*).

You can view your previous routes and places you have stopped on the map.

Select **Apps > Where I've Been**.

## Data Management

You can store files on your device. The device has a memory card slot for additional data storage.

**NOTE:** The device is not compatible with Windows 95, 98, Me, Windows NT®, and Mac OS 10.3 and earlier.

### File Types

The device supports these file types.

- Maps and GPX waypoint files from myGarmin™ mapping software, including MapSource®, BaseCamp™, and HomePort™ (*Custom Points of Interest, page 4*).
- GPI custom POI files from Garmin POI Loader (*Installing POI Loader, page 4*).

### About Memory Cards

You can purchase memory cards from an electronics supplier, or purchase pre-loaded Garmin mapping software ([www.garmin.com](http://www.garmin.com)). In addition to map and data storage, the memory card can be used to store files such as maps, images, geocaches, routes, waypoints, and custom POIs.

### Installing a Memory Card

The device supports microSD™ and microSDHC memory cards.

- 1 Insert a memory card into the slot on the device.
- 2 Press it in until it clicks.

## Connecting the Device to Your Computer

You can connect the device to your computer using a USB cable.

- 1 Plug the small end of the USB cable into the port on the device.
- 2 Plug the larger end of the USB cable into a port on your computer.

A picture of your device connected to a computer appears on the device screen.

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

## Transferring Data From Your Computer

- 1 Connect the device to your computer (*Connecting the Device to Your Computer*, page 13).

Depending on your computer operating system, the device appears as either a portable device, a removable drive, or a removable volume.

- 2 On your computer, open the file browser.
- 3 Select a file.
- 4 Select **Edit > Copy**.
- 5 Browse to a folder on the device.  
**NOTE:** For a removable drive or volume, you should not place files in the Garmin folder.
- 6 Select **Edit > Paste**.

## Disconnecting the USB Cable

If your device is connected to your computer as a removable drive or volume, you must safely disconnect your device from your computer to avoid data loss. If your device is connected to your Windows computer as a portable device, it is not necessary to safely disconnect.

- 1 Complete an action:
  - For Windows computers, select the **Safely Remove Hardware** icon in the system tray, and select your device.
  - For Mac computers, drag the volume icon to the trash.
- 2 Disconnect the cable from your computer.

# Customizing the Device

## Map and Vehicle Settings

To open the Map and Vehicle settings, from the main menu, select **Settings > Map & Vehicle**.

**Vehicle:** Sets the icon that represents your position on the map. Go to [www.garmin.com](http://www.garmin.com) for more icons.

**Driving Map View:** Sets the perspective on the map.

**Map Detail:** Sets the level of detail on the map. More detail may cause the map to draw slower.

**Map Theme:** Changes the color of the map data.

**Map Tools:** Sets the shortcuts that appear in the map tools menu.

**Map Layers:** Sets the data that appears on the map page (*Customizing the Map Layers*, page 7).

**myMaps:** Sets which installed maps the device uses.

## Enabling Maps

You can enable map products installed on your device.

**TIP:** To purchase additional map products, go to <http://buy.garmin.com>.

- 1 Select **Settings > Map & Vehicle > myMaps**.
- 2 Select a map.

## Navigation Settings

To open the Navigation settings page, from the main menu, select **Settings > Navigation**.

**Calculation Mode:** Sets the route calculation method.

**Avoidances:** Sets road features to avoid on a route.

**Custom Avoidances:** Allows you to avoid specific roads or areas.

**Toll Roads:** Sets preferences for avoiding toll roads.

**Tolls and Fees:** Sets preferences for avoiding toll roads and toll stickers.

**NOTE:** This feature is not available in all areas.

**Safe Mode:** Disables all functions that require significant operator attention and could become a distraction while driving.

**GPS Simulator:** Stops the device from receiving a GPS signal, and saves battery power.

## Calculation Mode Settings

Select **Settings > Navigation > Calculation Mode**.

The route calculation is based on road speeds and vehicle acceleration data for a given route.

**Faster Time:** Calculates routes that are faster to drive but can be longer in distance.

**Shorter Distance:** Calculates routes that are shorter in distance but can take more time to drive.

**Less Fuel:** Calculates routes that could use less fuel than other routes.

**Off Road:** Calculates a direct line from your location to your destination.

## Avoiding Toll Roads

Your device can avoid routing you through areas that require tolls, such as toll roads, toll bridges, or congestion areas. The device may still include a toll area in your route if no other reasonable routes are available.

- 1 Select **Settings > Navigation**.

- 2 Select an option:

**NOTE:** The menu changes based on your area and the map data on your device.

- Select **Toll Roads**.
- Select **Tolls and Fees > Toll Roads**.

- 3 Select an option:

- To be asked each time before routing through a toll area, select **Always Ask**.
- To always avoid tolls, select **Avoid**.
- To always allow tolls, select **Allow**.

- 4 Select **Save**

## Avoiding Toll Stickers

**NOTE:** This feature is not available in all areas.

The map data on your device may contain detailed toll sticker information for some countries. You can avoid or allow toll stickers for each country.

- 1 Select **Settings > Navigation > Tolls and Fees > Toll Stickers**.

- 2 Select a country.

- 3 Select an option:

- To be asked each time before routing through a toll area, select **Always Ask**.
- To always avoid tolls, select **Avoid**.
- To always allow tolls, select **Allow**.

- 4 Select **Save**.

## Bluetooth Settings

Select **Settings > Bluetooth**.

**Bluetooth:** Enables Bluetooth wireless technology.

**Search for Devices:** Searches for nearby Bluetooth devices.

**Friendly Name:** Allows you to enter a friendly name that identifies your device on other devices with Bluetooth wireless technology.

## Disabling Bluetooth

- 1 Select **Settings > Bluetooth**.
- 2 Select **Bluetooth**.

## Display Settings

To open the Display settings page, from the main menu, select **Settings > Display**.

**Orientation:** Sets the display to portrait (vertical) or landscape (horizontal).

**Color Mode:** Sets the device to display day or night colors. You can select Auto to allow the device to automatically set day or night colors based on the time of day.

**Brightness:** Adjusts the display brightness.

**Display Timeout:** Sets the amount of idle time before your device enters sleep mode.

**Screenshot:** Allows you to take a picture of the device screen. Screenshots are saved in the Screenshot folder of the device storage.

## Traffic Settings

To open the traffic settings page, from the main menu, select **Settings > Traffic**.

**Traffic:** Enables traffic.

**Current Provider:** Sets the traffic provider to use for traffic data. Auto selects the best available traffic data automatically.

**Subscriptions:** Lists current traffic subscriptions.

**Optimize Route:** Selects whether to use optimized alternate routes automatically or upon request (*Traffic on Your Route*, page 8).

**Traffic Alerts:** Selects the traffic delay severity for which the device displays a traffic alert.

**trafficTrends™:** Enables the trafficTrends feature (*trafficTrends™*, page 9).

## Units and Time Settings

To open the Units and Time settings page, from the main menu, select **Settings > Units & Time**.

**Current Time:** Sets the device time.

**Time Format:** Allows you to select a 12-hour, 24-hour, or UTC display time.

**Units:** Sets the unit of measure used for distances.

**Position Format:** Sets the coordinate format and datum used for geographical coordinates.

## Language and Keyboard Settings

To open the Language and Keyboard settings, from the main menu, select **Settings > Language & Keyboard**.

**Voice Language:** Sets the language for voice prompts.

**Text Language:** Sets all on-screen text to the selected language.

**NOTE:** Changing the text language does not change the language of user-entered data or map data, such as street names.

**Keyboard Language:** Enables keyboard languages.

## Device and Privacy Settings

To open the device settings, select **Settings > Device**.

**About:** Displays the software version number, the unit ID number, and information on several other software features.

**EULAs:** Displays the end-user license agreements.

**NOTE:** You need this information when you update the system software or purchase additional map data.

**Position Reporting:** Shares your position information with Garmin to improve content.

**Travel History:** Allows the device to record information for the myTrends, Where I've Been, and Trip Log features.

**Clear Travel History:** Clears your travel history for the myTrends, Where I've Been, and Trip Log features.

## Proximity Alerts Settings

**NOTE:** You must have custom points of interest (POIs) loaded for proximity points alerts to display.

Select **Settings > Proximity Alerts**.

**Audio:** Sets the style of alert that plays when you approach proximity points.

**Alerts:** Sets the type of proximity points for which alerts are played.

## Restoring Settings

You can restore a category of settings or all settings to the factory default values.

- 1 Select **Settings**.
- 2 If necessary, select a settings category.
- 3 Select **≡ > Restore**.

## Device Information

### Specifications

Operating temperature range	-4° to 131°F (-20° to 55°C)
Charging temperature range	32° to 113°F (0° to 45°C)
Power input	Vehicle power using the included vehicle power cable or AC power using an optional accessory
Battery life (2509 series)	Up to 2.5 hours depending on usage and settings
Battery life (2609 series)	Up to 1 hour depending on usage and settings
Battery type	Rechargeable Lithium-ion

## Appendix

### Power Cables

Your device can be powered various ways.

- Vehicle power cable
- USB cable
- AC adapter (optional accessory)

### Charging the Device

**NOTE:** This Class III product shall be powered by an LPS power supply.

You can charge the battery in the device using any of these methods.

- Connect the device to the vehicle power cable.
- Connect the device to a computer using a USB cable.  
The device may charge slowly when connected to a computer. Some portable computers may not charge the device.
- Connect the device to an optional power adapter accessory, such as a wall power adapter.

You can purchase an approved Garmin AC-DC adapter suitable for home or office use from a Garmin dealer or [www.garmin.com](http://www.garmin.com).

## Changing the Fuse in the Vehicle Power Cable

### NOTICE

When replacing the fuse, do not lose any of the small pieces and make sure they are put back in the proper position. The vehicle power cable does not work unless it is assembled correctly.

If your device does not charge in your vehicle, you may need to replace the fuse located at the tip of the vehicle adapter.

- 1 Rotate the end piece ① 90 degrees counter clockwise to unlock it.



**TIP:** You may need to use a coin to remove the end piece.

- 2 Remove the end piece, the silver tip ②, and the fuse ③.
- 3 Insert a new fast-blow fuse that has the same current, such as 1 A or 2 A.
- 4 Place the silver tip in the end piece.
- 5 Push in the end piece and rotate it 90 degrees clockwise to lock it back into the vehicle power cable ④.

## Device Care

### NOTICE

Avoid dropping your device.

Do not store the device where prolonged exposure to extreme temperatures can occur, because it can cause permanent damage.

Never use a hard or sharp object to operate the touchscreen, or damage may result.

Do not expose the device to water.

## Cleaning the Outer Casing

### NOTICE

Avoid chemical cleaners and solvents that can damage plastic components.

- 1 Clean the outer casing of the device (not the touchscreen) using a cloth dampened with a mild detergent solution.
- 2 Wipe the device dry.

## Cleaning the Touchscreen

- 1 Use a soft, clean, lint-free cloth.
- 2 If necessary, lightly dampen the cloth with water.
- 3 If using a dampened cloth, turn off the device and disconnect the device from power.
- 4 Gently wipe the screen with the cloth.

## Avoiding Theft

- Remove the device and mount from sight when not in use.
- Remove the residue left on the windshield by the suction cup.
- Do not keep your unit in the glove compartment.
- Register your device at <http://my.garmin.com>.

## Mounting on Your Dashboard

### NOTICE

The permanent mounting adhesive is extremely difficult to remove after it is installed.

You can use an optional mounting disk to mount your device to the dashboard and comply with certain state regulations. See [www.garmin.com](http://www.garmin.com) for more information.

- 1 Clean and dry the dashboard where you are placing the disk.
- 2 Remove the backing from the adhesive on the bottom of the disk.
- 3 Place the disk on the dashboard.
- 4 Remove the clear plastic cover from the top of the disk.
- 5 Place the suction cup mount on top of the disk.
- 6 Flip the lever down (toward the disk).

## Removing the Device, Mount, and Suction Cup

### Removing the Device from the Mount

- 1 Press the release tab or button on the mount.
- 2 Tilt the device forward.

### Removing the Mount from the Suction Cup

- 1 Turn the device mount to the right or left.
- 2 Apply pressure until the socket on the mount releases the ball on the suction cup.

### Removing the Suction Cup from the Windshield

- 1 Flip the lever on the suction cup toward you.
- 2 Pull the tab on the suction cup toward you.

## Purchasing Additional Maps

- 1 Go to your device product page at ([www.garmin.com](http://www.garmin.com)).
- 2 Click the **Maps** tab.
- 3 Follow the on-screen instructions.

## Purchasing Accessories

Go to <http://buy.garmin.com>.

## Troubleshooting

### The suction cup will not stay on my windshield

- 1 Clean the suction cup and windshield with rubbing alcohol.
- 2 Dry with a clean, dry cloth.
- 3 Mount the suction cup (*Connecting the Device to Vehicle Power*, page 1).

### My device is not acquiring satellite signals

- Verify the GPS simulator is turned off (*Navigation Settings*, page 14).
- Take your device out of parking garages and away from tall buildings and trees.
- Remain stationary for several minutes.

### The device does not charge in my vehicle

- Check the fuse in the vehicle power cable (*Changing the Fuse in the Vehicle Power Cable*, page 16).
- Verify the vehicle is turned on and is supplying power to the power outlet.
- Verify the interior temperature of the vehicle is between 32° and 113°F (between 0° and 45°C).
- Verify that the fuse is not broken in the vehicle power outlet.

## My battery does not stay charged for very long

- Decrease the screen brightness (*Display Settings, page 15*).
- Shorten the display timeout (*Display Settings, page 15*).
- Decrease the volume (*Adjusting the Volume, page 2*).
- Disable Bluetooth wireless technology (*Disabling Bluetooth, page 15*).
- Put the device in sleep mode when not in use (*Entering and Exiting Sleep Mode, page 2*).
- Keep your device away from extreme temperatures.
- Do not leave your device in direct sunlight.

## The battery gauge does not seem accurate

- 1 Allow the device to fully discharge.
- 2 Fully charge the device without interrupting the charge cycle.

## My device does not appear as a removable drive on my computer

On most Windows computers, the device connects using Media Transfer Protocol (MTP). In MTP mode, the device appears as a portable device and not as a removable drive. MTP mode is supported by Windows 7, Windows Vista®, and Windows XP Service Pack 3 with Windows Media Player 10.

## My device does not appear as a portable device on my computer

On Mac computers and some Windows computers, the device connects using USB mass storage mode. In USB mass storage mode, the device appears as a removable drive or volume, and not as a portable device. Windows versions prior to Windows XP Service Pack 3 use USB mass storage mode.

## My device does not appear as either a portable device or a removable drive or volume on my computer

- 1 Disconnect the USB cable from your computer.
- 2 Turn off the device.
- 3 Plug the USB cable into a USB port on your computer and into your device.

**TIP:** Your device should be connected directly to a USB port on your computer and not to a USB hub.

The device automatically turns on and goes into MTP mode or USB mass storage mode. A picture of the device connected to a computer appears on the device screen.

## My phone will not connect to the device

- Select **Settings > Bluetooth**.  
The Bluetooth field must be set to Enabled.
- Enable Bluetooth wireless technology on your phone and bring your phone within 33 ft. (10 m) of the device.
- Go to [www.garmin.com/bluetooth](http://www.garmin.com/bluetooth) for more help.

# Index

## Symbols

- 2-D map view 7
- 3-D map view 7

## A

- accessories 16
- active lane guidance 6
- addresses, finding 3
- answering calls 10
- audio, proximity points 15
- automatic volume 2
  - enabling 2
- avoidances
  - area 7
  - customizing 7
  - deleting 7
  - disabling 7
  - road 7
  - road features 7
  - tolls 14

## B

- battery
  - charging 1, 2, 15, 16
  - maximizing 17
  - problems 17
- Bluetooth technology 10, 17
  - disabling 15
  - disconnecting a device 10
  - enabling 10
  - settings 14
- brightness 2

## C

- cables, power 15
- calibrating fuel economy 11
- calls 10
  - answering 10
  - contacts 10
  - dialing 10
  - disabling 11
  - history 10
  - home 10
  - placing 10
- cameras, safety 7
- changing search area 3
- charging the device 1, 2, 15, 16
- cleaning the device 16
- cleaning the touchscreen 16
- computer, connecting 13, 17
- coordinates 4
- current location 7
- custom POIs 4
- customizing, avoidances 7
- customizing the device 14

## D

- dashboard mount 16
- deleting
  - paired Bluetooth device 10
  - trips 13
- destinations. *See* locations
- detours 5
- device care 16
- dialing 10
- directions 6
- disconnecting, Bluetooth device 10
- display settings 15
- driving directions 6

## E

- ecoChallenge 11, 12
- ecoChallenge score 12
  - resetting 12
- ecoRoute 11, 12
  - calibrating fuel economy 11
  - ecoChallenge score 11, 12
  - mileage report 12

- mileage reports 12
- vehicle profile 11
- ecoRoute HD, accessory 11
- EULAs 15
- extras, custom points of interest 4

## F

- files
  - supported types 13
  - transferring 14
- finding locations. *See also* locations
  - addresses 3
  - browsing the map 3
  - categories 3
  - cities 3
  - coordinates 4
  - intersections 3
  - using the map 3
- finding services, up ahead 6
- Foursquare 12
- fuel, prices 11
- fuel economy. 11, 12 *See also* ecoRoute
- fuel price, changing 11
- fuse, changing 16

## G

- Garmin Express 1
  - registering the device 1
  - updating software 1
- Garmin Live Services 11
  - subscribing to 11
- geocaching 4
- going home 4
- GPS 2

## H

- hands-free phone calls 10
- help. 10 *See also* product support
- home
  - calling 10
  - editing location 4
  - going 4
  - phone number 10
  - setting locations 4

## I

- ID number 15
- intersections, finding 3

## J

- junction view 6

## K

- keyboard 2
  - language 15
  - layout 15

## L

- language
  - keyboard 15
  - voice 15
- latitude and longitude 4
- lifetime maps 1
- locations 3, 13
  - calling 10
  - current 4, 7
  - recently found 3
  - saving 4
  - searching for 3
  - setting home 4
  - simulated 4

## M

- map layers, customizing 7
- map tools 7
- map view
  - 2-D 7
  - 3-D 7
- maps 5, 6, 14
  - browsing 3
  - data field 6, 7
  - detail level 14

- layers 7
- lifetime 1
- nüMaps Guarantee 1
- nüMaps Lifetime 1
- purchasing 16
- theme 14
- updating 1
- viewing routes 6
- memory card 13
- microSD card, installing 13
- mileage reports 12
- mount, removing 16
- mounting the device
  - automobile 1
  - dashboard 16
  - removing from mount 16
  - suction cup 1, 16
- muting, audio 9
- myGarmin, messages 12
- myTrends, routes 6

## N

- navigation 5
  - off-road 5
  - previewing routes 5
  - settings 14
- next turn 6
- nüMaps Guarantee 1
- nüMaps Lifetime 1

## O

- off-road navigation 5
- on-screen buttons 2

## P

- pairing 10
  - disconnecting 10
  - phone 10, 17
- parking 3
  - last spot 3
- phone
  - disconnecting 10
  - pairing 10, 17
- phone book 10
- phone calls 10
  - answering 10
  - dialing 10
  - muting 10
  - voice dial 10
- POI. 4 *See also* point of interest (POI)
- POI Loader 4
- points of interest (POI Loader) 4
- points of interest (POI) 5, 12
  - custom 4
  - extras 4
  - POI Loader 4
- power cables 15
  - changing the fuse 16
  - vehicle 1
- power key 2
- product registration 1
- product support 10
- proximity points alerts, settings 15

## Q

- Quick Search 3

## R

- recently found locations 3
- registering the device 1
- removing mount 16
- renaming trips 13
- reports, mileage 12
- resetting
  - device 2
  - trip data 6
- restoring settings 15
- road conditions, weather 13
- routes
  - adding a point 5
  - calculating 5

- calculation mode **14**
- myTrends **6**
- previewing **5**
- starting **5**
- stopping **6**
- suggested **6**
- viewing on the map **6**

**S**

- safety cameras, subscriptions **7**
- satellite signals
  - acquiring **2**
  - viewing **2**
- saved locations **5, 13**
  - categories **4**
  - deleting **4**
  - editing **4**
- saving, current location **4**
- screen, brightness **2**
- screenshots **15**
- search bar **3, 12**
- settings **14, 15**
- shortcuts
  - adding **4**
  - deleting **4**
- simulated locations **4**
- sleep mode **2**
- Smartphone Link **11**
  - connecting **11**
  - disabling calls **11**
  - Garmin Live Services **10**
- software
  - updating **1**
  - version **15**
- specifications **15**
- speech recognition **9**
- subscriptions
  - Garmin Live Services **11**
  - nüMaps Lifetime **1**
  - traffic **1**
- suction cup **16**

**T**

- theft, avoiding **16**
- time settings **2, 15**
- tolls, avoiding **14**
- traffic **7–9, 15**
  - activating a subscription **8**
  - adding subscriptions **8**
  - alternate route **8**
  - cameras **8**
  - incidents **8**
  - lifetime subscriptions **1**
  - map **8**
  - receiver **8**
  - searching for delays **8**
  - trafficTrends **9**
- traffic cameras **8**
  - viewing **8**
- trafficTrends **9**
  - disabling **9**
- travel history **15**
- trip computer **6**
- trip information **6**
  - resetting **6**
  - viewing **6**
- trip log, viewing **6**
- trip planner **13**
  - editing a trip **13**
- troubleshooting **16, 17**
- turn list **6**

**U**

- unit ID **15**
- up ahead
  - customizing **6**
  - finding services **6**
- updating
  - maps **1**
  - software **1**

- USB, disconnecting **14**

**V**

- vehicle power cable **1**
- vehicle profile **11**
- voice command **9**
  - activating **9**
  - navigating with **9**
  - tips for using **9**
  - wakeup phrase **9**
- voice control **9**
  - tips **9**
- volume, adjusting **2**

**W**

- weather **12**
  - radar **13**
  - road conditions **13**
- Where Am I? **4, 7**

