 

KODAK EASYSHARE DX4330 Zoom Digital Camera




User's Guide

Visit Kodak on the World Wide Web at www.kodak.com



Eastman Kodak Company
343 State Street
Rochester, New York 14650
© Eastman Kodak Company, 2002
Kodak and EasyShare are trademarks of Eastman Kodak Company.
P/N 6B8132

Front View

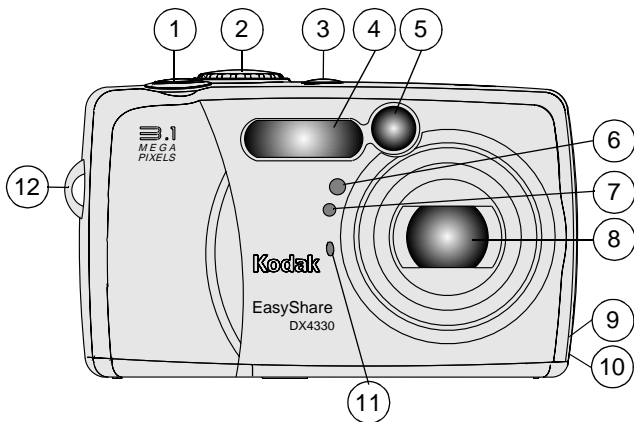

1 Shutter button

2 Mode dial

3 Flash button

4 Flash unit

5 Viewfinder window

6 Self Timer light

7 Light sensor

8 Lens


9 DC In

10 Lens cap strap post

11 Microphone

12 Wrist strap post

Back View

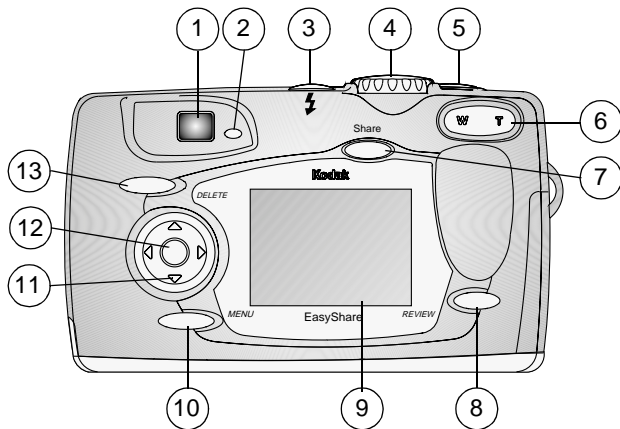

1 Viewfinder

2 Ready light

3 Flash button

4 Mode dial

5 Shutter button

6 Zoom (Wide Angle and Telephoto)

7 Share button

8 Review button

9 LCD


10 Menu button

11 4-way control

12 OK button

13 Delete button

Side View


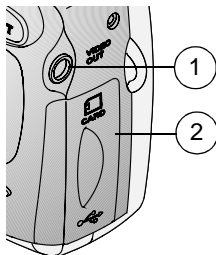


1 Video Out

2 Door to:

- Slot for optional MMC/SD card
- USB port (for computer connection)

Top, Bottom View

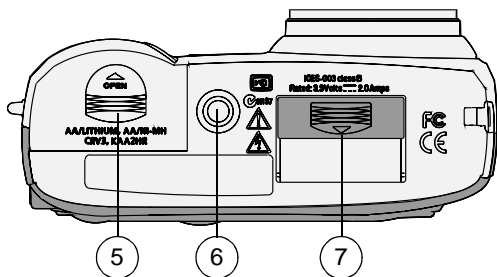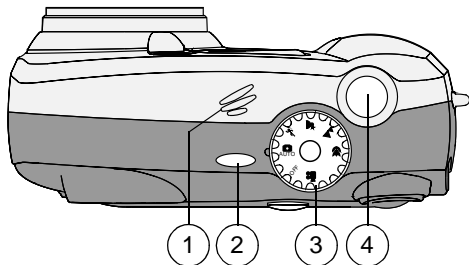

1 Speaker

2 Flash button

3 Mode dial

4 Shutter button

5 Battery door

6 Tripod socket

7 Dock connector door

Table of Contents


1	Getting Started	1
	Install Software First.....	1
	Need This Guide in Larger Print?.....	1
	What Can I Do With My Camera?.....	2
	What Can I Do With My Digital Pictures and Videos?.....	2
	Package Contents.....	3
	Attaching the Wrist Strap	4
	Attaching the Lens Cap Strap.....	4
	Adding Optional Lenses	4
	Loading the Battery.....	5
	Mode Dial Settings.....	6
	Turning On the Camera.....	7
	Setting the Date and Time	8
	Checking Camera Status Bar	9
	Inserting an MMC/SD Card.....	10
	Choosing Internal Memory or MMC/SD Card.....	11
2	Taking Pictures	13
	Taking Pictures in Auto Mode	13
	Taking Pictures in Sport Mode	14
	Taking Pictures in Night Mode	15
	Taking Pictures in Landscape Mode.....	16
	Taking Pictures in Close-up Mode	17
	Liveview—Using the LCD to Frame Your Subject	18

Quickview—Reviewing the Picture Just Taken	19
Using the Auto Focus Framing Marks	20
Using the Optical Zoom.....	21
Using the Digital Zoom.....	21
Using the Flash.....	22
Still Menus	24
Putting Yourself in the Picture.....	25
Setting Exposure Compensation	26
Setting Long Time Exposure.....	27
Setting Picture Quality.....	28
Placing the Date on Pictures	29
Setting the Orientation Sensor.....	30
Other Features.....	30
3 Taking Videos	31
Taking a Video.....	31
Quickview—Reviewing the Video Just Taken.....	32
Video Menus.....	32
Putting Yourself in the Video	33
Other Features.....	34

4	Reviewing Pictures and Videos	35
	Picture and Video Icons	35
	Navigating Through Pictures and Videos	36
	Playing a Video.....	36
	Deleting Pictures and Videos.....	37
	Review Menus	38
	Magnifying Pictures	38
	Protecting Pictures and Videos From Deletion.....	39
	Running a Slide Show	40
	Copying Pictures and Videos.....	42
	Displaying Video Date.....	43
	Viewing Picture/Video Information.....	43
5	Tagging Pictures and Videos	45
	When Can I Tag My Pictures and Videos?.....	45
	Tagging Pictures for Printing.....	46
	Tagging Pictures and Videos for Emailing.....	47
	Tagging Pictures and Videos as Favorites	48

6	Customizing Your Camera Settings	49
	To Access Setup Mode/Menus.....	49
	Setup Menu	49
	Changing the Print Quantity Default.....	50
	Turning Off Quickview	50
	Turning On Liveview In Still Modes	51
	Turning Off the Shutter Sound	51
	Setting Video Out.....	52
	Selecting a Language	52
	Formatting Internal Memory or MMC/SD Card.....	53
	Viewing Camera Information	54
7	Installing the Software	55
	WINDOWS System Requirements	55
	MAC OS X System Requirements.....	56
	MAC OS 8.6/9.x System Requirements	56
	Install the Software.....	57
8	Connecting to the Computer	59
	Connecting to the Computer.....	59
	Transferring Pictures and Videos to Your Computer.	60
	Printing Pictures from Your Computer	60
	Printing From an MMC/SD Card	60
	Ordering Prints Online	60

9	Using the Optional EASYSHARE Camera Dock II	.61
	Camera Dock Package Contents 61
	Installing the Camera Insert 62
	Connecting the Camera Dock 63
	Installing the Battery Pack in the Camera 64
	Docking the Camera 65
	Charging the Battery Pack 66
	Transferring Pictures and Videos 67
	Caution When Using a Tripod 67
	Earlier Camera Dock Model 68
10	Troubleshooting69
	Troubleshooting—Camera 69
	Troubleshooting—Camera Dock II 81
11	Getting Help85
	Helpful Web Links 85
	Help in this Manual 85
	Software Help 85
	Telephone Customer Support86

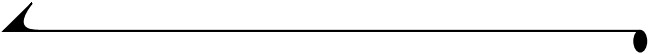

12 Appendix	89
Camera Specifications	89
Original Factory Settings—Camera.....	91
Upgrading Your Software and Firmware.....	92
Tips, Safety, Maintenance	92
Storage Capacities	93
Locating Pictures and Videos on a Card	94
Card File Naming Conventions	94
Using Your Batteries.....	95
Power-Saving Features	96
Optional AC Adapter	96
Regulatory Information	97

1 Getting Started

Install Software First

Install the software from the KODAK EASYSHARE Software CD **before** connecting the camera (or optional camera dock) to the computer. Failure to do so may cause the software to load incorrectly.

See the Quick Start Guide or [Installing the Software, page 55](#).

Need This Guide in Larger Print?


For a large print version of this User's Guide:


- 1 Go to <http://www.kodak.com/go/dx4330support>.
- 2 Under Explore EasyShare, click Service and Support.
- 3 Under Manuals/Guides, View PDF, click your language to open the User's Guide.
- 4 With the User's Guide open on a WINDOWS-based computer or MACINTOSH OS 8.6/9.x:
 - From the File menu, select Print.
 - In the Print window, select Fit to Page.


With the User's Guide open on MACINTOSH OS X:


- From the File menu, select Page Setup.
 - Change Scale to 200%.
- 5 Print as usual.

What Can I Do With My Camera?

Capture Still Pictures  —Enjoy point-and-shoot operation with flash, self timer, and zoom features. Use Auto, Sport, Night, Landscape, and Close-up modes to expand your capabilities.

Capture Videos with Sound  —Capture videos as QUICKTIME movies.

Review  —Display, protect, and delete pictures and videos. “Tag” pictures to print, email, and save as Favorites.

Set Up  —Customize your camera functions.

What Can I Do With My Digital Pictures and Videos?

Install the software from the KODAK EASYSHARE Software CD, then:

Transfer—Transfer pictures and videos to your computer.

Share—Print pictures, order prints online, email pictures and videos.

Organize—Use Favorites to organize, find, and retrieve your pictures on the computer.


Edit—Add special effects to your pictures, make a custom slide show, fix red-eye, crop, rotate, and much more.

Print—(see [page 60](#)) Print pictures directly to your home printer. Order prints online from Ofoto, a Kodak Company. Or purchase an optional KODAK Multimedia Card (MMC) or a Secure Digital (SD) card and:

- Automatically print to any printer with an MMC/SD slot
- Make prints at an MMC/SD-capable KODAK Picture Maker
- Take the card to your local photo retailer for professional printing

Refer to the Quick Start Guide or KODAK EASYSHARE Software Help for details. Some MACINTOSH operating systems may support limited KODAK EASYSHARE Software features.

Package Contents

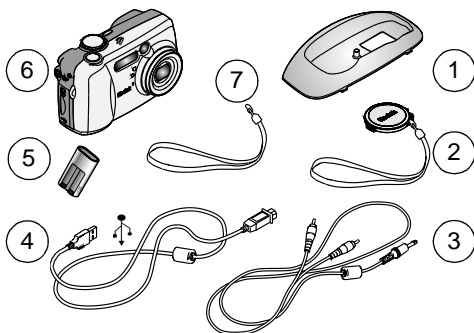

1 Custom Camera Dock insert*

2 Lens cap with strap

3 Audio/Video cable

4 USB cable

5 CRV3 or equivalent**

6 Camera


7 Wrist strap

Not shown: User's Guide, Quick Start Guide, KODAK EASYSHARE Software CD. (In some countries, the User's Guide is provided on a CD only.)

* The custom camera dock insert lets your camera fit the optional KODAK EASYSHARE Camera Dock II. **Do not discard.** A KODAK EASYSHARE Camera Dock II may be purchased at your Kodak retail dealer or on our Web site at <http://www.kodak.com/go/accessories>. (This camera and dock insert also operate with the original KODAK EASYSHARE Camera Dock.)


** If your camera was packaged with a KODAK EASYSHARE Camera Dock II, a KODAK EASYSHARE Ni-MH Rechargeable Battery Pack and AC power adapter are included. For details, see [page 66](#).

Attaching the Wrist Strap

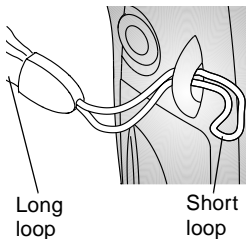

- 1 Thread the wrist strap as shown.
- 2 Thread the long loop through the short loop. Pull until secure.


Attaching the Lens Cap Strap

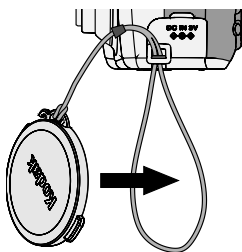

- 1 Thread the lens cap string through the lens cap strap post.
- 2 Thread the lens cap through the loop. Pull until secure.

Use the lens cap to protect the lens when camera is not in use.

Adding Optional Lenses

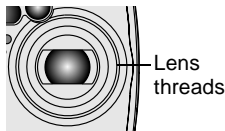


Purchase optional lenses at your Kodak retail dealer or on our Web site at <http://www.kodak.com/go/accessories>.

Loading the Battery




- 1 Turn off the camera.
- 2 Open the battery door.

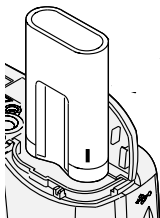

CRV3

- 3 Orient the battery* as shown.
- 4 Close the battery door.

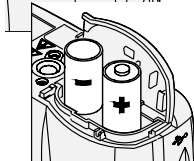

AA

Important Battery Information


The CRV3 battery is **not** rechargeable.







For acceptable battery life, and to make sure your camera operates dependably, **do not use alkaline batteries**. See [page 95](#) for acceptable battery types.

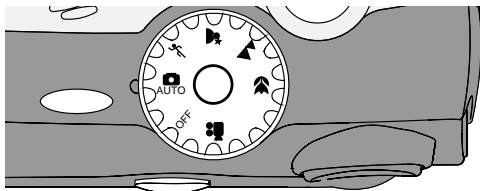NOTE: For information on the optional KODAK Digital Camera AC Adapter, 3-Volt, see [page 96](#).

* If you purchased the KODAK EASYSHARE Camera Dock II, see [page 64](#) for details on installing the KODAK EASYSHARE Ni-MH Rechargeable Battery Pack.


Mode Dial Settings



Icon	Mode	Purpose
Off	Off	Turns off the camera.
	Auto	For general picture-taking. Automatically sets exposure and focus. Flash fires if needed.
	Sport	For subjects that are in motion. Shutter speed is fast. Flash fires if needed.
	Night	For night scenes or low light conditions. Captures close and background subjects. Flash fires if needed. In dark scenes, the shutter speed is set between 1/30 and 1/2 second. Place camera on a flat, steady surface or tripod to avoid camera shake.
	Landscape	For distant subjects. Flash does not fire unless you turn it on.*
	Close-up	For subjects 2.8 to 28 in. (7 to 70 cm) from the lens in wide angle, or 11 to 28 in. (28 to 70 cm) in telephoto. Flash fires if needed.
	Video	Captures video with sound. Flash does not fire.

* To turn on the flash, see [page 22](#).

Turning On the Camera

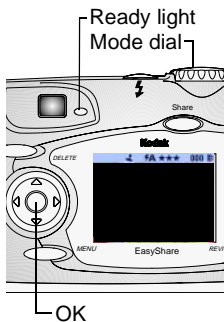


- 1 Remove the lens cap.

If the lens cap is not removed, it comes off automatically when you turn on the camera.


- 2 Turn the Mode dial from Off to any other position.

The ready light blinks green while the camera performs a self-check.

When the ready light glows steady green, the camera is ready to take pictures (or videos, if the mode dial is set to ).

In Still and Video modes, a status bar appears on the LCD.


Adjusting the Display

To	Do This
Turn Liveview on so that the LCD can be used as a viewfinder	Press the OK button. To turn it off, press the OK button again.
Change the Liveview setting so that it is on whenever the camera is on	See page 51 .
Turn the status bar back on after it times out	Press  .
Turn off the camera	<ol style="list-style-type: none"> 1 Turn the Mode dial to Off. <i>The camera completes operations that are in process.</i> 2 Replace the lens cap.

Setting the Date and Time

The Date & Time screen is displayed the first time you turn on the camera or if the battery is removed for more than 10 minutes. If this is the first time the camera has been turned on, go to Step 3.

To set the date and time after that:

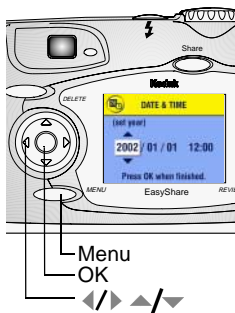

- 1 Turn on the camera, then press the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Setup Menu, then press the OK button.
- 3 Press $\blacktriangle/\blacktriangledown$ to highlight Date & Time, then press the OK button.

 
The date format is YYYY/MM/DD. The time is displayed in a 24-hour format.

- 4 Press $\blacktriangle/\blacktriangledown$ to adjust the date and time. Press $\blacktriangle/\blacktriangledown$ to move to the next setting.
- 5 When finished, press the OK button.
- 6 Press the Menu button to exit the menu.

The setting remains until you change it.

NOTE: Depending on your computer operating system, KODAK EASYSHARE Software may allow your computer to automatically update the camera clock when you connect the camera. See the KODAK EASYSHARE Software Help for details.

Checking Camera Status Bar



To check the current camera settings, turn the Mode dial from the Off position.

For flash icons, see [page 22](#).

For Share icons, see [page 45](#).

Status Bar Icons (Top of LCD)

Status bar icons depict enabled features and settings:

	LT			
Date stamp	Long time exposure	Exposure compensation	Self Timer	Flash mode

★★★ Best ★★ Better ★ Good	015	Internal memory Memory Card
Quality	Pictures remaining	Current Storage location

Screen Icons (Bottom of LCD)

Screen icons depict the current mode or a battery concern:

Auto	Sport	Night	Landscape	Close-up	Review	Video

Share		
Share	Low battery	Exhausted battery (blinking)

Inserting an MMC/SD Card


Optional MMC/SD cards provide removable, reusable storage for pictures and videos.



CAUTION:

The card can only be inserted one way; forcing it may damage the camera or card.

Do not insert or remove a card when the green ready light is blinking; doing so may damage your pictures, card, or camera.

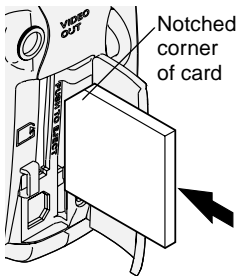


To insert an MMC/SD card:


- 1 Turn off the camera.
- 2 Open the card door.
- 3 Orient the card as shown on the card door.
- 4 Push the card into the slot to seat the connector. (To remove the card, push it in, then release it. When the card is partially ejected, pull it out.)
- 5 Close the door.

See [page 93](#) for storage capacities. Purchase cards at <http://www.kodak.com/go/accessories>.

Choosing Internal Memory or MMC/SD Card


The camera offers two options for storing pictures and videos:

 

Internal Memory  —store pictures and videos in internal memory.

MMC/SD Card  —store as many pictures and videos as you like, depending on the size of the card. Purchase cards at <http://www.kodak.com/go/accessories>. For storage capacities, see [page 93](#).

Managing Your Storage Location Setting

- 1 Turn on the camera.
- 2 Press the Menu button.
- 3 Press / to highlight Image Storage , then press the OK button.

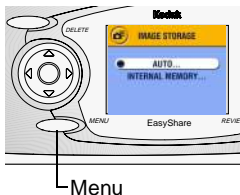

- 4 Press / to highlight an option, then press the OK button:

Auto (default)—the camera uses the card if one is in the camera. If not, the camera uses internal memory.

Internal Memory—the camera always uses internal memory, even if a card is installed.

- 5 Highlight Continue, then press the OK button again.

The setting remains until you change it and applies to all camera functions.



- 6 Press the Menu button to exit the menu.

Checking Your Storage Setting

In **Still and Video modes**, the storage location icon that appears in the status bar indicates the camera's storage location. To check the location, either:

Picture or
video location



- Turn the Mode dial from the Off position, or
 - In any capture mode, press ▼.
-  —Memory Card
 —Internal Memory



Checking a Picture or Video's Location

In **Review mode**, the storage location icon that appears with a picture indicates the location of the picture or video and the camera setting.

Picture or
video location



Press the Review button.


-  —Picture or video is stored on a card
 —Picture or video is stored in internal memory

2 Taking Pictures

The camera is ready to take pictures when you turn it on—even if you are in Review, Share, or Setup. (In Video mode, the camera captures video.) Before you take a picture, make sure your picture storage location is set the way you want it (see [page 11](#)).

Taking Pictures in Auto Mode

Use Auto for general picture-taking. Exposure, focus, and flash are automatic.

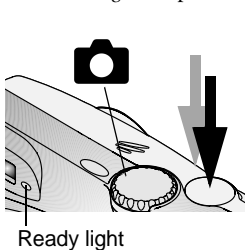



- 1 Turn the Mode dial to . *The LCD displays a mode description. To interrupt the description, press ▼.*
- 2 Use the viewfinder or LCD to frame your subject. (To turn the LCD Liveview on or off, press the OK button.)
- 3 Press the Shutter button **half-way** to set the exposure and focus. (Otherwise, the picture could be too dark, light, or blurry.)
- 4 When the ready light glows green, continue pressing the Shutter button **completely down** to take the picture. *The ready light blinks green while the picture is saved. The ready light blinks orange while the flash is recharging (or if there is an auto-exposure or auto-focus error).*

Default flash setting:	Auto
Available flash settings:	Auto, Flash Off, Fill Flash, Red-eye
Camera returns to default:	When you change modes or turn off the camera.

Taking Pictures in Sport Mode

Use this mode when the subject is in motion.

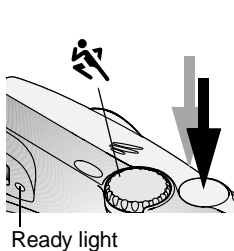

- 1 Turn the Mode dial to .
The LCD displays a mode description for a few seconds. To interrupt the description, press ▼
- 2 Press the Shutter button **half-way** to set the exposure and focus.
- 3 When the ready light glows green, continue pressing the Shutter button **completely down** to take the picture.

The ready light blinks green while the picture is saved.

Default flash setting:	Auto
Available flash settings:	Auto, Flash Off, Fill Flash, Red-eye
Camera returns to default:	When you change modes or turn off the camera.

Taking Pictures in Night Mode


Use this mode for night scenes or low light conditions. The flash illuminates close subjects. A longer exposure captures more detail of background subjects.




Auto Mode




Night Mode

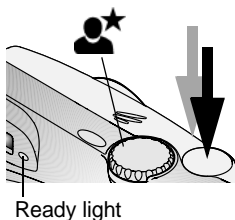

1 To avoid blurry pictures, place the camera on a flat, steady surface or use a tripod.

2 Turn the Mode dial to .

The LCD displays a mode description for a few seconds. To interrupt the description, press .

3 Press the Shutter button **half-way** to set the exposure and focus.


4 When the ready light glows green, continue pressing the Shutter button **completely down** to take the picture.



The ready light blinks green while the picture is saved.

Default flash setting:	Auto
Available flash settings:	Auto, Flash Off, Fill Flash, Red-eye
Camera returns to default:	When you change modes or turn off the camera.

Taking Pictures in Landscape Mode

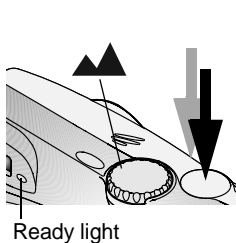Use this mode to capture subjects further than 57.4 ft (17.5 m), such as landscape scenes.




- 1 Turn the Mode dial to  .
The LCD displays a mode description for a few seconds. To interrupt the description, press  .
- 2 Press the Shutter button **half-way** to set the exposure.
- 3 When the ready light glows green, continue pressing the Shutter button **completely down** to take the picture.
The ready light blinks green while the picture is saved.

Default flash setting:	Off
Available flash settings:	Auto, Flash Off, Fill Flash, Red-eye
Camera returns to default:	When you change modes or turn off the camera.



Taking Pictures in Close-up Mode

Use this mode to capture subjects this close to the lens:

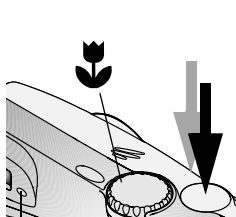- Wide angle: 2.8 to 28 in. (7 to 70 cm)
- Telephoto: 11 to 28 in. (28 to 70 cm)



Ready light

- 1 Turn the Mode dial to  .
The LCD displays a mode description for a few seconds. To interrupt the description, press  .
- 2 Press the Shutter button **half-way** to set the exposure and focus.
- 3 When the ready light glows green, continue pressing the Shutter button **completely down** to take the picture.
The ready light blinks green while the picture is saved.

Default flash setting:	Off
Available flash settings:	Auto, Flash Off, Fill Flash, Red-eye
Camera returns to default:	When you change modes or turn off the camera.

Liveview—Using the LCD to Frame Your Subject

When you turn on Liveview, the LCD displays a live image of what the lens sees. Use the LCD to frame your subject.




- 1 Turn the Mode dial to any Still position.
The LCD displays a mode description for a few seconds. To interrupt the description, press ▼.
- 2 Press the OK button to turn on Liveview.
- 3 Frame your subject in the LCD.
- 4 Press the Shutter button **half-way** to set the exposure and focus, then continue pressing **completely down** to take the picture.
- 5 To turn off Liveview, press the OK button.

NOTE: Liveview quickly depletes battery power. To conserve battery power, turn off Liveview and use the Viewfinder to frame your subject.

To change the Liveview setting so that it is on whenever the camera is on, see [page 51](#).


Using the Viewfinder

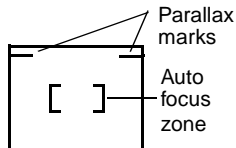


When using the viewfinder to capture close subjects (3 feet or less), keep the subject below the parallax marks. For even more accurate framing results, turn on Liveview. (Liveview depicts what the lens “sees.”)

Quickview—Reviewing the Picture Just Taken

After you take a picture, the LCD displays a Quickview of that picture for approximately 5 seconds. While the picture is displayed, you can:

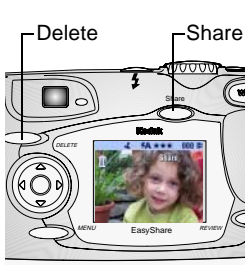

- **Review it:** If you take no action, the picture is saved.
- **Share it:** Press the Share button to tag the picture for print, email, or as a Favorite. (See [Tagging Pictures and Videos](#), page 45.)
- **Delete it:** Press the Delete button while the picture and  are displayed.

To save battery power, you can turn off the Quickview feature. (See [page 50](#).)

Using the Auto Focus Framing Marks

For the best possible pictures, the camera attempts to focus on foreground subjects (even if the subjects are not centered in the scene).


 



NOTE: Auto Focus framing marks appear only when the LCD is turned on. The framing marks do not appear in Landscape mode.

- 1 In any Still mode (except Landscape), press the OK button.

The LCD turns on.

- 2 Press the Shutter button **half-way** to set the exposure and focus.


The Auto Focus framing marks depict the main focus area or areas. If the camera is not focusing on the desired subject, release your finger, recompose the scene, and repeat Step 2.

While Shutter Button is Pressed Half-way	
	Center focus
	Center wide focus
	Side focus
	Center and side focus
	Left and right focus

- 3 Continue pressing the Shutter button **completely down** to take the picture.

Using the Optical Zoom

Use Optical Zoom to get up to 3X closer to your subject. When you turn on the camera, the lens extends to the Wide Angle position.

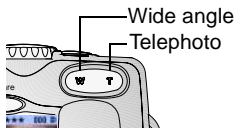

- 1 Use the viewfinder or LCD to frame your subject.
- 2 Press the Telephoto (T) button to zoom in. Press Wide Angle (W) button to zoom out.

The lens extends or retracts. The viewfinder or LCD displays the zoomed image.

- 3 Press the Shutter button **half-way** to set the exposure and focus, then continue pressing **completely down** to take the picture.

NOTE: The lens retracts when the camera is turned off.

Using the Digital Zoom

Use Digital Zoom to get an additional 3.3X magnification beyond Optical Zoom.

IMPORTANT: *Even with the camera's Advanced Digital Zoom, you may notice a decrease in image quality when using Digital Zoom.*

- 1 Press the OK button to turn on Liveview.
- 2 Press the Telephoto (T) button to the Optical Zoom limit. Release the button, then press it again.
The LCD displays the zoomed image and the magnification level.
- 3 Press the Shutter button **half-way** to set the exposure and focus, then continue pressing **completely down** to take the picture.

Using the Flash


Use the flash when you take pictures at night, indoors, or outdoors in heavy shadows. The flash setting can be changed in any Still mode; the default flash setting is restored when the you exit the mode turn off the camera.

Flash Range

- Wide angle: 2 to 11.2 ft (0.6 to 3.4 m)
- Telephoto: 2 to 6.6 ft (0.6 to 2.0 m)

Turning On The Flash



- 1 Press the  button repeatedly to scroll through the flash options.
- 2 Press the OK button

The flash icon that is displayed on the LCD status bar (page 9) is the active option.



Auto Flash—flash fires when the lighting conditions require it.



Off—flash never fires.









Fill—flash fires every time you take a picture, regardless of the lighting conditions.



Red-eye—flash fires once so the subject's eyes become accustomed to the flash, then fires again when the picture is taken.

Flash Settings In Each Mode








Icon	Mode	Default Flash Setting	Available Flash Settings	Camera Returns to the Default Flash Setting
	Auto	Auto or Red-eye	Auto, Flash Off, Fill Flash, Red-eye	When you change modes or turn off the camera
	Sport	Auto		
	Night	Auto		
	Landscape	Off		
	Close-up	Off		
LT	Long Time Exposure	Off		
	Video	Off	None	Flash cannot be turned on

Other Flash Screen Information



When choosing a flash setting, the current camera settings are displayed in the bottom portion of the screen.

Still Menus


	Self Timer (page 25)		Picture Quality (page 28)
	Image Storage (page 11)		Date Stamp (page 29)
	Exposure Compensation (page 26)		Orientation Sensor (page 30)
LT	Long Time Exposure (page 27)		Setup Menu (page 49)

Putting Yourself in the Picture

The Self Timer creates a 10-second delay between the time you press the Shutter button and the time the picture is taken.



Turn on the Self Timer:

- 1 In any Still mode, press the Menu button.
- 2 Highlight Self Timer , then press the OK button.
- 3 Highlight On, then press the OK button.
- 4 Press the Menu button to exit the menu.

Take the picture:

- 1 Place the camera on a flat surface or use a tripod.
- 2 Compose the scene. Press the Shutter button *half-way* to set the exposure and focus, then continue pressing *completely down*. Move into the scene.

The red Self Timer light blinks slowly for 8 seconds (then quickly for 2 seconds) before the picture is taken.

The Self Timer turns off after the picture is taken or if you change modes.




Self Timer
light

Setting Exposure Compensation



Use Exposure Compensation to control how much light enters the camera. This setting is useful for taking pictures in very large rooms, under low light, without a flash.

Adjust the exposure by plus or minus 2 steps in 1/2-step increments.

NOTE: Exposure Compensation cannot be used with Long Time Exposure.

- 1 In any Still mode, press the Menu button.
- 2 Highlight Exposure Compensation , then press the OK button.



- 3 Press / to select the Exposure Compensation setting.
 - If pictures are too light, decrease the value.
 - If pictures are too dark, increase the value.
- 4 Press the OK button to accept the change.
- 5 Press the Menu button to exit the menu.
- 6 Use the LCD to frame your subject. Press the Shutter button *half-way* to set the focus, then continue pressing *completely down* to take the picture.

This setting remains until you move the Mode dial or turn off the camera.

Setting Long Time Exposure

Use Long Time Exposure to control how long the shutter stays open. Settings are: None, 0.7, 1, 1.5, 2, 3, and 4 seconds.

NOTE: Long Time Exposure cannot be used with Exposure Compensation.

- 1 To avoid blurry pictures, place the camera on a flat, steady surface or use a tripod.
- 2 In any Still mode, press the Menu button.
- 3 Highlight Long Time Exposure **LT**, then press the OK button.



- 4 Press **▲/▼** to select an option.
- 5 Press the OK button to accept the change.
- 6 Press the Menu button to exit the menu.
- 7 Use the LCD to frame your subject. Press the Shutter button *half-way* to set the focus, then continue pressing *completely down* to take the picture.


This setting remains until you move the Mode dial or turn off the camera.

Available flash settings:	Auto, Flash Off, Fill Flash, Red-eye
Default flash setting:	Off
Camera returns to default:	When you change modes or turn off the camera.

Setting Picture Quality

Use the Quality setting to select a picture resolution.

1 In any Still mode, press the Menu button.

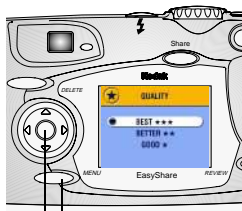

Menu
OK

2 Highlight Quality ★, then press the OK button.

3 Highlight an option:

Best ★★ ★ (3.1 MP)—for printing up to 11 x 17 in. (27.9 x 43.2 cm); pictures are highest resolution and largest file size.

★★★ *appears on the status bar.*

Better ★★ (2.16 MP)—for printing up to 8 x 10 in. (20.3 x 25.4 cm); pictures are medium resolution with smaller file size.

★★ *appears on the status bar.*

Good ★ (778 K)—for emailing or screen display; pictures are lowest resolution and smallest file size.

★ *appears on the status bar.*


4 Press the OK button.

5 Press the Menu button to exit the menu.

This setting remains until you change it.

Placing the Date on Pictures

Use the Date Stamp setting to imprint the date on your pictures.

- 1 Make sure the camera clock is set to the correct date ([page 8](#)).
- 2 In any Still mode, press the Menu button.
- 3 Highlight Date Stamp , then press the OK button.
- 4 Highlight an option, then press the OK button.
- 5 Press the Menu button to exit the menu.



The current date is printed in the bottom right corner of new pictures. This setting remains until you change it.

Setting the Orientation Sensor

If you rotate the camera to take a picture (for example, a portrait shot), the Orientation Sensor rotates the picture so that it is displayed correct side up during Quickview and Review.

The Orientation Sensor is turned on as the default. You can turn it off so that pictures are displayed in their original orientation.

NOTE: When your subject is above or below you (such as pictures of an object in the sky, on the ground, or when pointing down at small objects on a table), turn off the Orientation Sensor so that pictures are not rotated unnecessarily.

- 1 In any Still mode, press the Menu button.
- 2 Highlight Orientation Sensor , then press the OK button.




- 3 Highlight On or Off, then press the OK button.
- 4 Press the Menu button to exit the menu.

This setting remains until you change it.

Other Features


- [Choosing Internal Memory or MMC/SD Card, page 11](#)
- [Taking Videos, page 31](#)
- [Tagging Pictures and Videos, page 45](#)


3 Taking Videos

Use the Video mode  to take videos or to customize video-taking settings. Before you take a video, make sure your picture storage location is set the way you want it (see [page 11](#)).

NOTE: Zoom and flash are not available in Video mode.

Taking a Video

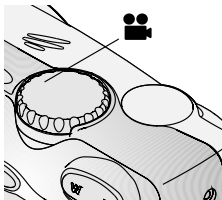

- 1 Turn the Mode dial to Video .

A live image, the status bar, and the approximate recording time available appear on the LCD.

- 2 Use the viewfinder or LCD to frame your subject.

NOTE: To conserve battery power, press the OK button to turn off the LCD.


- 3 Press the Shutter button using the method that you prefer:
 - **Press and release**—press the Shutter button completely down and release within 2 seconds. Press the Shutter button again to stop recording.
 - **Press and hold**—continue pressing and holding the Shutter button completely down. Release the Shutter button to stop recording.


The ready light blinks green and the red Self Timer light glows red while the camera is recording. Recording stops when you release the shutter button or when the current storage location is full.

NOTE: See [page 93](#) for video storage capacities.

Quickview—Reviewing the Video Just Taken

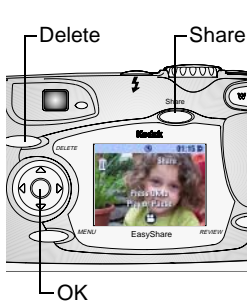


After you take a video, the LCD displays the first frame of the video for approximately 5 seconds. While the frame is displayed, you can:



- **Review it:** If you take no action, the video is saved.
- **Play it:** Press the OK button. Press OK again to pause the video. Press ▲/▼ to adjust the volume.
- **Share it:** Press the Share button to tag the video for email or as a Favorite (see [page 45](#)).
- **Delete it:** Press the Delete button while the video and  are displayed.

To save battery power, you can turn off the Quickview feature. (See [page 50](#).) When Quickview is turned off, the video is not displayed on the LCD after you take it.

Video Menus



	Self Timer (page 25)
	Image Storage(page 11)
	Setup Menu (page 49)

Putting Yourself in the Video

The Self Timer creates a 10-second delay between the time you press the Shutter button and the time video recording begins.



Turn on the Self Timer:

- 1 Turn the Mode dial to Video , then press the Menu button.
- 2 Highlight Self Timer , then press the OK button.
- 3 Highlight On, then press the OK button.
- 4 Highlight an option, then press the OK button:
 - Unlimited**—records until you stop recording or until storage is full.
 - Seconds**—records for the specified time or until storage is full.
- 5 Press the OK button to return to the menu.
- 6 Press the Menu button to exit the menu.

NOTE: If the current storage location does not have adequate space, some video length options are not displayed. See [page 93](#) for video storage capacities.

**Take the video:**

- 1 Place the camera on a flat surface or use a tripod.
- 2 Compose the scene, then press the Shutter button completely down. Move into the scene.

The red Self Timer light blinks slowly for 8 seconds, quickly for 2 seconds, then stays on while the video is recording.

- 3 To stop recording before the specified time, press the Shutter button.

The Self Timer turns off after you take the video.

Other Features

- [Choosing Internal Memory or MMC/SD Card, page 11](#)
- [Tagging Pictures and Videos, page 45](#)

4 Reviewing Pictures and Videos

Press the Review button to view and work with pictures and videos that are stored in internal memory or on a card. Remember, press the Shutter button to take a picture anytime, even in Review.



- 1 Press the Review button.

The LCD displays the last picture or video taken or reviewed and the Review icon.

- 2 Press the Review button again to return to Capture mode.


Picture and Video Icons

	Email
	Favorite
	02 Print # of copies
	Protect
	072 Picture/video number
	Internal Picture Location
	Card
	Low battery
	Exhausted battery

Navigating Through Pictures and Videos

- 1 Press the Review button.
- 2 Press ◀/▶ to scroll backward or forward through pictures and videos. For fast scrolling, press and hold a ◀/▶ button.


Playing a Video

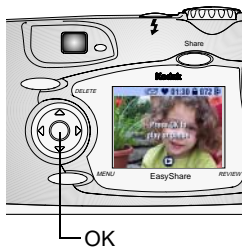

- To play a video, press the OK button. To pause, press the OK button during playback.
- To adjust the volume, press ▲/▼ during playback.
- To rewind a video, press ◀ during playback. To play the video, press the OK button.
- To go to the previous or next picture or video, press ◀/▶ while no video is playing.

Deleting Pictures and Videos

- 1 Press the Review button.
- 2 Press ◀/▶ to locate a picture or video, then press the Delete button.

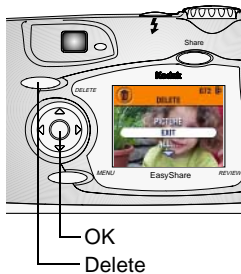

- 3 Highlight an option, then press the OK button:

PICTURE or VIDEO—deletes the displayed picture or video.









EXIT—exits the Delete screen.

ALL—deletes all pictures and videos from your current storage location.

NOTE: Protected pictures and videos cannot be deleted in this manner. Remove protection before deleting ([page 39](#)).

- 4 After deleting, press ◀/▶ to stay in delete mode and scroll to different pictures and videos. To exit Delete, press the Delete button.

Review Menus

	Magnify (page 38)		Copy (page 42)
	Protect (page 39)		Video Date Display (page 43)
	Image Storage (page 11)		Picture Info (page 43)
	Slide Show (page 40)		Setup Menu (page 49)


Magnifying Pictures

Use the Magnify feature to zoom in to different areas of a picture.

1 Press the Review button, then locate a picture.


 


2 To magnify at 2X, press the OK button. (Or press the Menu button, highlight Magnify, then press the OK button.) To magnify at 4X, press the OK button again.

The picture is magnified. The Magnify icon  and the magnification value are displayed.

3 Press     to navigate to different parts of the picture.

4 Press the OK button to redisplay the picture at the 1X (original) size.

5 Press   to locate a different picture, or press the Review button to exit Review mode.


Protecting Pictures and Videos From Deletion

- 1 Press the Review button, then locate the picture or video to protect.
- 2 Press the Menu button.

Protect icon



- 3 Highlight Protect , then press the OK button.

The picture or video is protected and cannot be deleted. The Protect icon  appears with the protected picture or video.



CAUTION:


Formatting internal memory or MMC/SD card deletes all (including protected) pictures, videos, and email addresses.

- 4 To remove protection, press the OK button again.
- 5 Press the Menu button to exit the menu.

Running a Slide Show

Use the Slide Show to display your pictures and videos on the LCD. To run a slide show on a television or on any external device, see [page 41](#).

Starting the Slide Show

- 1 Press the Review button, then press the Menu button.
- 2 Highlight Slide Show , then press the OK button.




- 3 Highlight Begin Show, then press the OK button.



Each picture and video is displayed once, in the order in which you took them. Then the camera returns to the menu.

- 4 To cancel the Slide Show, press the OK button.

Changing the Slide Show Display Interval

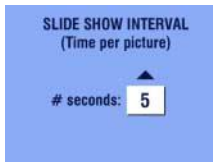The default interval setting displays each picture for 5 seconds. You can increase the display interval to up to 60 seconds.




- 1 On the Slide Show menu, highlight Interval, then press the OK button.
- 2 Select a display interval.
To scroll through the seconds quickly, press and hold /.
- 3 Press the OK button.

The interval setting remains until you change it.

Turning On Slide Show Loop

When you turn on Loop, the slide show is continuously repeated.

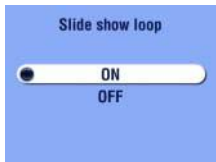


- 1 On the Slide Show menu, highlight Loop, then press the OK button.
- 2 Highlight On, then press the OK button.

When you start a slide show, it repeats until you cancel it by pressing the OK button or until battery power is exhausted. The Loop setting remains until you change it.

Displaying Pictures and Videos on a Television

You can display pictures and videos on a television, computer monitor, or any device equipped with a video input. (Images may not look as good on a television as on a computer monitor or when printed.)

NOTE: Ensure that the Video Out setting is correctly set to NTSC or PAL (page 52).

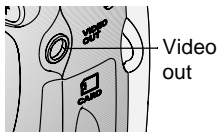

- 1 Connect the audio/video cable from the camera video-out port to the television video-in port. (Refer to your television User's Guide for details.)
The camera LCD turns off; the television screen acts as the camera display.
- 2 Review pictures and videos on the television screen.

NOTE: If you connect or disconnect the audio/video cable while a slide show is running, the slide show stops.


Copying Pictures and Videos

You can copy pictures and videos from a card to internal memory or from internal memory to a card.

Before you copy, make sure that:

- A card is inserted in the camera.
- The camera's picture storage location is set to the location **from** which you are copying. See [Choosing Internal Memory or MMC/SD Card](#), page 11.

Copy pictures or videos:

- 1 Press the Review button, then press the Menu button.
- 2 Highlight Copy , then press the OK button.



- 3 Highlight an option:
 - PICTURE or VIDEO**—copies the current picture.
 - EXIT**—returns to the Copy screen.
 - ALL**—copies all pictures and videos from your selected storage location to the other location.

- 4 Press the OK button.

A progress bar monitors the copy process until copy is complete. (For information on picture numbering, see [page 94](#).)

NOTE:

- Pictures and videos are copied, not moved. To remove pictures and videos from the original location after they are copied, delete them (see [page 37](#)).
- Tags that you applied for print, email, and favorites are not copied. Protection settings are not copied. To apply protection to a picture or video, see [page 39](#).

Displaying Video Date

To display the capture date and time (only during video playback on the camera):

- 1 Press the Review button, then press the Menu button.
- 2 Highlight Video Date Display, then press the OK button.




- 3 Highlight an option, then press the OK button.
- 4 Press the Menu button to exit the menu.

The capture date and time appear during video playback on the camera. This setting remains until you change it.

Viewing Picture/Video Information

- 1 Press the Review button, then press the Menu button.

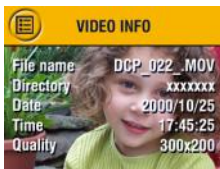

- 2 Highlight About, then press the OK button.
Information about the picture or video is displayed.
- 3 To view information on the next or previous picture or video, press ◀/▶. Press the Menu button to exit the menu.

5 Tagging Pictures and Videos




The Share button lets you “tag” your pictures and videos. When they are transferred to your computer, you can share:

Tagged Pictures

- By print
- By email
- As Favorites, for easy organization on your computer

Tagged Videos

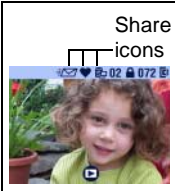- By email
- As Favorites

	 Print (page 46)
	 Email (page 47)
	 Favorite (page 48)


When Can I Tag My Pictures and Videos?


Tag pictures and videos whenever they appear on the LCD:


- Just after you take them, during Quickview (see [page 19](#) and [page 32](#))
- In Review mode (see [page 35](#))

NOTE: Tags remain until removed. If a tagged picture or video is copied, the tag is **not** copied. For details on organizing, printing, or emailing, see the Quick Start Guide or KODAK EASYSHARE Software Help.

Tagging Pictures for Printing

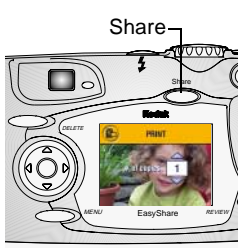

- 1 Press the Review button, then locate a picture.
- 2 Press the Share button. Highlight Print , then press the OK button.*
- 3 Press $\blacktriangle/\blacktriangledown$ to select the number of copies (0-99). Zero removes the tag for that picture.
- 4 Press the OK button. Press the Share button to exit the Share menu.

The Print icon  appears on the status bar. The default quantity is one. (To change the default, see [page 50](#).)

* To tag all pictures in the storage location, highlight Print All, press the OK button, then indicate the number of copies as described above. Print All is not available in Quickview.


To remove the print tagging for all pictures in the storage location, highlight Cancel Prints, then press the OK button. Cancel Prints is not available in Quickview.




Printing Tagged Pictures


To print digital pictures, see [page 60](#).

Tagging Pictures and Videos for Emailing

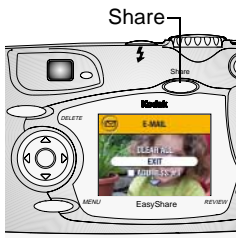First, use KODAK EASYSHARE Software to create an email address book on your computer. Then, copy up to 32 email addresses to the camera's internal memory. See the Quick Start Guide or KODAK EASYSHARE Software Help for details.



- 1 Press the Review button, then locate a picture or video.
- 2 Press the Share button. Highlight Email , then press the OK button.
- 3 Press / to highlight an email address, then press the OK button. To send the picture to more than one person, repeat step 3 for each address.

Selected addresses are noted with a check mark; the email icon  appears on the status bar.


- 4 To remove a selection, highlight a checked address and press the OK button. To remove all email selections, highlight Clear All.
- 5 Highlight Exit, then press the OK button.
Your selections are saved.
- 6 Press the Share button to exit the Share menu.

Emailing Tagged Pictures and Videos

When you transfer the tagged pictures and videos to your computer, the KODAK EASYSHARE Software email screen opens and lets you immediately send the pictures and videos to the addresses you specified.

See the Quick Start Guide or KODAK EASYSHARE Software Help for details on address books and emailing.

Tagging Pictures and Videos as Favorites

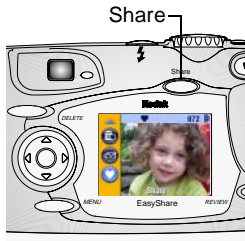

- 1 Press the Review button, then locate a picture or video.
- 2 Press the Share button. Highlight Favorite ♥, then press the OK button.
The Favorite icon ♥ appears on the status bar.
- 3 To remove the tag, press the OK button again.
- 4 Press the Share button to exit the Share menu.

Using Favorites On Your Computer


When you transfer tagged pictures and videos to your computer, you can retrieve, organize, and label them by subject, date, event, or any category you choose.

See the Quick Start Guide or KODAK EASYSHARE Software Help for details.










6 Customizing Your Camera Settings

Use Setup to customize camera settings according to your preferences.

To Access Setup Mode/Menus





- 1 In any mode, press the Menu button.
- 2 Highlight Setup , then press the OK button.

Setup Menus

	Default Print Quantity (page 50)		Video Out (page 52)
	Quickview (page 50)		Language (page 52)
	Liveview (page 51)		Format (page 53)
	Shutter Sound (page 51)		About (page 54)
	Date & Time Set (page 8)		

Changing the Print Quantity Default

The Default Print Quantity setting determines the value that is displayed on the Share Print screen ([page 46](#)). The default value is 1.



- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Default Print Quantity , then press the OK button.
- 4 Press / to indicate the new default quantity, then press the OK button.
- 5 Press the Menu button to exit the menu.



This setting remains until you change it.

Turning Off Quickview

After you take a picture or video, Quickview displays it on the LCD for approximately 5 seconds (see [page 19](#) and [page 32](#)). To save battery power, turn off Quickview.

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Quickview , then press the OK button.
- 4 Highlight Off, then press the OK button.
- 5 Press the Menu button to exit the menu.






The picture is not displayed on the LCD after you take it. To see the picture or video, press the Review button. This setting remains until you change it.

Turning On Liveview In Still Modes

The Liveview feature lets you use the LCD as a viewfinder (see [page 18](#)). Press the OK button to turn the LCD on and off.

NOTE: Liveview quickly depletes battery power; use it sparingly. The Liveview default setting is On in Close-up and Video modes.

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Liveview , then press the OK button.

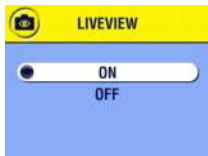



- 4 Highlight On, then press the OK button.

The live image is displayed whenever the camera is on. Press the OK button to manually turn it off and on.

- 5 Press the Menu button to exit the menu.

This setting remains until you change it.

Turning Off the Shutter Sound

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Shutter Sound , then press the OK button.



- 4 Highlight Off, then press the OK button.



No sounds plays when a picture is taken.

- 5 Press the Menu button to exit the menu.

This setting remains until you change it.

Setting Video Out

Video Out matches the camera's video signal to the standard for your location. Video Out must be set correctly to run a slide show on a television or other external device (see [page 41](#)).

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Video Out , then press the OK button.



- 4 Highlight an option:

NTSC—used in most countries except those in Europe and China. The United States and Japan use NTSC.



PAL—used in Europe and China.

- 5 Press the OK button to accept the change.
- 6 Press the Menu button to exit the menu.

This setting remains until you change it.

Selecting a Language

You can display menus and screen messages in different languages.

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Language , then press the OK button.



- 4 Highlight an option, then press the OK button.
- 5 Press the Menu button to exit the menu.

Text is displayed in the selected language.

This setting remains until you change it.

 

Formatting Internal Memory or MMC/SD Card



CAUTION:

Formatting a card erases all pictures and videos, including protected files. Formatting internal memory erases all pictures, videos, and email addresses. (To restore addresses, see KODAK EASYSHARE Software Help.)

Removing a card during formatting may damage the card.

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight Format , then press the OK button.



- 4 Highlight an option:

MEMORY CARD—deletes everything on the card; formats the card.



CANCEL—exits without making a change.

INTERNAL MEMORY—deletes everything in internal memory.

- 5 Press the OK button.
- 6 Highlight Continue Format, then press the OK button.

When the formatting is complete, the Setup menu appears.

Viewing Camera Information

- 1 Press the Menu button.
- 2 Highlight Setup , then press the OK button.
- 3 Highlight About , then press the OK button.
The camera model and the current firmware version appear.
- 4 Press the Menu button to exit the menu.



7 Installing the Software

WINDOWS System Requirements

- Personal computer for WINDOWS 98, 98SE, ME, 2000, or XP
- 233 MHz processor or greater
- 64 MB of available RAM (128 MB for WINDOWS XP)
- 200 MB of available hard disk space
- CD-ROM drive
- Available USB port
- Color monitor with a minimum resolution of 800 x 600 pixels; High Color (16-bit) or True Color (24-bit) recommended
- Internet access for online printing and emailing

MAC OS X System Requirements

- MACINTOSH computer with a G3 or G4 processor
- MAC OS 10.1.2, minimum
- 128 MB of available RAM
- 200 MB of available hard disk space
- CD-ROM drive
- Built-in USB port
- Color monitor with a minimum resolution of 800 x 600 pixels; thousands or millions of colors recommended
- Internet access for online printing and emailing


MAC OS 8.6/9.x System Requirements

- POWERPC-based MACINTOSH computer
- MAC OS 8.6/9.x
- 64 MB of available RAM
- 200 MB of available hard disk space
- CD-ROM drive
- Built-in USB port
- Color monitor with a minimum resolution of 800 x 600 pixels; thousands or millions of colors recommended
- Internet access for online printing and emailing

NOTE: OS 8.6/9.x do not support the Share button functions. OS X is recommended for full functionality.

Install the Software

For information on the software applications included on the KODAK EASYSHARE Software CD, see the Quick Start Guide or the KODAK EASYSHARE Software Help.

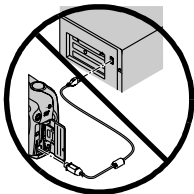

CAUTION:

Install the software from the KODAK EASYSHARE Software CD before connecting the camera or dock to the computer. Failure to do so may cause the software to load incorrectly.

- 1 Before you begin, close all software applications that are open on your computer.
- 2 Place the KODAK EASYSHARE Software CD into the CD-ROM drive.
- 3 Load the software:

WINDOWS-based computer—if the first install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.

MAC OS 8.6/9.x—on the install window, click Continue.

MAC OS X—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software. If prompted, restart the computer when the installation is complete.
 - Select Typical to automatically install the most commonly used applications.
 - Select Custom to choose the applications you wish to install.

NOTE: When prompted, take a few minutes to electronically register your camera and software. This lets you receive information regarding software updates and registers some of the products included with the camera. You must be connected to your Internet service provider to register electronically. To register later, see

www.kodak.com/go/register.

For further installation help, see the Quick Start Guide.

8 Connecting to the Computer




CAUTION:


Install the software from the **KODAK EASYSHARE Software CD** before connecting the camera or dock to the computer. Failure to do so may cause the software to load incorrectly.

Connecting to the Computer

You can transfer pictures and videos from the camera to the computer using either the provided USB cable or the optional KODAK EASYSHARE Camera Dock or Camera Dock II. See [page 61](#) for connecting with a Camera Dock.

Connecting With the USB Cable

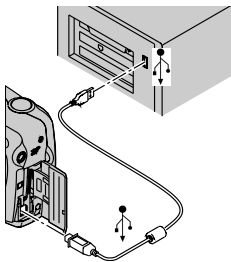

- 1 Turn off the camera.
- 2 Plug the labeled  end of the USB cable into the labeled USB port on your computer. See your computer User's Guide for details.
- 3 Plug the other end of the USB cable into the labeled USB port on the camera.

An optional 3VAC adapter is available for your camera; it saves battery power when transferring pictures (see [page 96](#)).

NOTE: You can also use a KODAK Multi-Card Reader or KODAK SD Multimedia Card Reader-Writer to transfer your pictures. See your KODAK retail dealer or visit <http://www.kodak.com/go/accessories>.

Transferring Pictures and Videos to Your Computer

For details on transferring pictures and videos, see the Quick Start Guide or the KODAK EASYSHARE Software Help.

Printing Pictures from Your Computer

For details on printing pictures from your computer, see the Quick Start Guide or the KODAK EASYSHARE Software Help.

Printing From an MMC/SD Card

- Automatically print tagged pictures when you insert your card into a printer with an MMC/SD slot. See your printer User's Guide for details.
- Make prints at an MMC/SD-capable KODAK Picture Maker. (We suggest contacting a location prior to visiting.)
- Take the card to your local photo retailer for professional printing.

Ordering Prints Online

KODAK EASYSHARE Print Service (provided by Ofoto <http://www.ofoto.com>), is just one of the many great online print services offered in the KODAK EASYSHARE Software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders.
- Store pictures, and share them with family and friends.
- Order high quality prints, photo greeting cards, frames, and albums—and have them delivered to your door.

9 Using the Optional EASYSHARE Camera Dock II

The KODAK EASYSHARE Camera Dock II makes it easy to transfer your pictures and videos to the computer.

The Camera Dock is also a rapid battery charger for the included KODAK EASYSHARE Ni-MH Rechargeable Battery Pack, and supplies power to the camera. (Only the Battery Pack can be recharged in the Camera Dock.) To keep the Battery Pack charged, store your camera in the Camera Dock.


You can purchase the KODAK EASYSHARE Camera Dock II at a dealer of KODAK products or at <http://www.kodak.com/go/accessories>.



CAUTION:

Install the software from the KODAK EASYSHARE Software CD before connecting the camera or dock to the computer. Failure to do so may cause the software to load incorrectly.

Camera Dock Package Contents

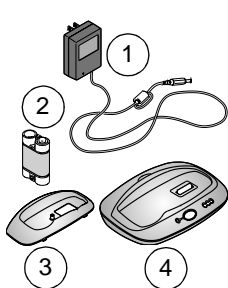


- 1 AC power adapter, 7V

Some AC adapters may be different from the one pictured.

- 2 KODAK EASYSHARE Ni-MH Rechargeable Battery Pack
- 3 Universal insert
- 4 Camera Dock
- 5 Quick Start Guide (not shown)

Installing the Camera Insert

KODAK EASYSHARE digital cameras are packaged with a custom camera insert, which is used to fit the camera to the Camera Dock.

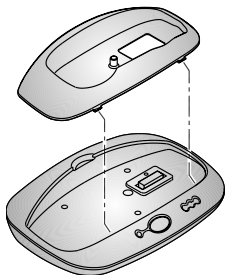

- 1 Place the front tabs on the custom insert into the slots in the Camera Dock cavity.
- 2 Fit the insert down into the cavity and snap the insert into place.

If You Do Not Have the Custom Insert

If you do not have the custom insert that was included with your camera, use the universal insert that is included with the Camera Dock II.

NOTE: The universal insert works with all KODAK EASYSHARE cameras.

However, it may not match the perfect fit that the custom camera insert provides. Take extra care when placing the camera in the Camera Dock so that the dock connector and pins are not damaged.


Order a custom camera insert at <http://www.kodak.com/go/accessories>.


Connecting the Camera Dock

After the KODAK EASYSHARE Software is loaded (see [page 55](#)), connect the Camera Dock to your computer and to an external power source. You need:

- The USB cable included with your camera
- The AC power adapter, 7V included with the Camera Dock

IMPORTANT: *Make sure your camera is NOT in the Camera Dock when you are connecting to power and the computer.*

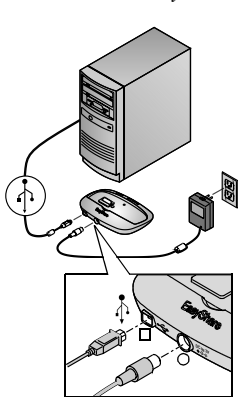

- 1 Plug the labeled  end of the USB cable into the labeled USB port on your computer. See your computer User's Guide for details.
- 2 Plug the other end of the USB cable into the square USB connector on the back of the Camera Dock.
- 3 Plug the 7V AC adapter into the round power connector on the back of the Camera Dock and into a power outlet.

 
Your AC adapter may be different from the one pictured or may have additional plugs. Use the plug that accommodates your type of power outlet.

Leave the Camera Dock connected to the computer for easy transferring of pictures and videos and for charging the Battery Pack.


IMPORTANT: *Use only the 7V AC adapter included with the Camera Dock. Other adapters may cause damage to your camera, Camera Dock, or computer.*

Installing the Battery Pack in the Camera

The Camera Dock will only charge the Battery Pack (not other batteries).



- 1 Turn off the camera.
- 2 Open the battery door.

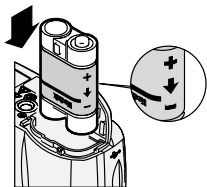

- 3 Install the Battery Pack as shown.



CAUTION:

 
The Battery Pack can only be inserted into the camera as shown. If the Battery Pack does not install, reposition it and try again. **DO NOT FORCE IT;** doing so can damage your camera.

- 4 Close the battery door.

IMPORTANT: *The Battery Pack is not charged when you receive it. See [page 66](#) for charging instructions.*


Docking the Camera

To transfer pictures and videos from the camera to the computer, or to charge the Battery Pack:



Dock connector
door

- 1 Turn **off** the camera.
- 2 On the camera bottom, slide the connector cover open.

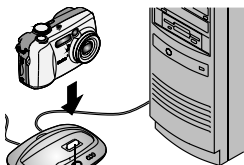

Connector
Power/
Transfer
light

- 3 Place the camera in the Camera Dock and push down to seat the connector.

The Power/Transfer light glows green when the camera is properly seated.


The camera is now powered by the Camera Dock instead of the camera batteries.

NOTE: If a KODAK EASYSHARE Ni-MH Rechargeable Battery Pack is installed in the camera, the Camera Dock immediately begins charging.

Charging the Battery Pack

The Battery Pack is not charged when you receive it.

- 1 Turn **off** the camera.
- 2 Make sure the Battery Pack is installed in the camera (see [page 64](#)).
- 3 Place the camera in the Camera Dock (see [page 65](#)).
 - Charging begins immediately.
 - The three green charging lights monitor the charging status:

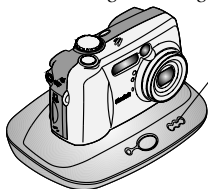

Charging Lights on Dock II


- ○ ○ battery low
- ● ○ battery partially charged
- ● ● battery fully charged

- Full charging takes about 2.5 hours. After the Battery Pack is fully charged, leave the camera in the Camera Dock to maintain the full charge.
- Charging stops if you turn on the camera. If the camera is left in the Camera Dock with the power on, charging resumes when the camera enters Auto Power-off (see [page 96](#)).

NOTE: The Camera Dock only charges the provided KODAK EASYSHARE Ni-MH Rechargeable Battery Pack. If you place the camera in the Camera Dock with any other type of batteries, rechargeable or not, no charging takes place. For further Troubleshooting information, see [page 81](#).

Transferring Pictures and Videos

To transfer pictures and videos from your camera to your computer:

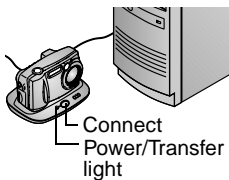

- 1 Place the camera in the Camera Dock. The camera can be on or off.

If the Battery Pack is being charged, charging pauses, then resumes after pictures and videos are transferred.

- 2 Press the Connect button.

The Power/Transfer light blinks green while the pictures are transferring.

- 3 For details on printing and emailing, see the Quick Start Guide or the KODAK EASYSHARE Software Help.


NOTE: After transferring pictures and videos, leave the camera in the Camera Dock. Eight minutes after the transfer is complete, the Camera Dock resumes charging as necessary.

Caution When Using a Tripod

Do not connect a tripod to the Camera Dock. Remove the camera from the Camera Dock and connect the tripod directly to the camera.

Earlier Camera Dock Model

If you have the KODAK EASYSHARE Camera Dock, not the Camera Dock II, the functionality is exactly the same as described in this chapter. The only difference is that the earlier Camera Dock has one indicator light.

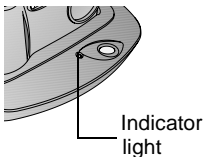

Indicator light status:

Steady green—camera is properly seated in the Camera Dock.

Blinking green— pictures and videos are transferring.

Steady red—Battery Pack is charging.

Blinking red—error condition.

IMPORTANT: *When using the earlier Camera Dock, several discharge/recharge cycles may be necessary so that the Battery Pack holds a full charge.*

10 Troubleshooting

There may be times when you have questions about using your camera or Camera Dock. Additional technical information is available in the ReadMe file located on the KODAK EASYSHARE Software CD. For updates to Troubleshooting information, see <http://www.kodak.com/go/dx4330support>.

Troubleshooting—Camera

Camera Problems

Camera		
Problem	Cause	Solution
Camera does not turn on.	Battery is not properly installed.	Remove and reinstall the batteries (page 5).
	Battery is not charged.	Replace (page 5) or recharge the batteries (page 66).
	Lens cap is on, preventing lens from extending.	Remove the lens cap.
Pictures remaining number does not decrease after taking a picture.	The picture does not take up enough space to decrease the number.	The camera is operating normally. Continue taking pictures.

Camera		
Problem	Cause	Solution
Camera does not turn off; lens does not retract.	Alkaline batteries were installed in the camera.	DO NOT USE ALKALINE BATTERIES. Turn the Mode dial off, remove the alkaline batteries, and replace with an approved battery type (page 95). If the Mode dial is not off when you replace the batteries, the camera may not turn back on. In that case, turn the Mode dial off, then back on.
Shutter button does not work.	Camera is not turned on.	Turn on the camera (page 7).
	The camera is processing a picture; the ready light (near the viewfinder) is blinking.	Wait until the light stops blinking before attempting to take another picture.
	The card or internal memory is full.	Transfer pictures to your computer (page 59), delete pictures from the camera (page 37), switch storage locations (page 11), or insert a card with available memory (page 10).
Stored pictures are damaged.	The card was removed when the ready light was blinking.	Make sure the ready light is not blinking before removing the card.

Camera		
Problem	Cause	Solution
Part of the picture is missing.	Something was blocking the lens when the picture was taken.	Keep hands, fingers, or other objects away from the lens when taking pictures.
	Your eye or the picture was not centered correctly in the viewfinder or LCD.	Leave space around subject when centering picture in viewfinder or LCD.
In Review mode, you do not see a picture (or the expected picture) on the LCD.	The camera may not be accessing the correct storage location.	Check the picture storage location setting (page 11).
In Review mode, pictures are displayed as black screens.	Lens cap is on, preventing lens from extending.	Remove the lens cap.
Picture orientation is not accurate.	The camera sensed that it was rotated or tilted while the picture was taken.	Set the Orientation Sensor. Turn off the Orientation Sensor when your subject is above or below you (such as in the sky or on the floor).
Camera freezes up when a card is inserted or removed.	Camera detects an error when the card was inserted or removed.	Turn the Mode dial off, then back on. Make sure the camera is turned off before inserting or removing a card.

Camera		
Problem	Cause	Solution
Picture is too dark.	Flash is not on or did not function.	Turn on the flash (page 22).
	The subject is too far away for the flash to have an effect.	Move so there is no more than 11.2 ft (3.4 m) between the camera and the subject; 6.6 ft (2.0 m) in Telephoto.
	The subject is in front of a bright light (backlit).	Use Fill flash (page 22) or change your position so the light is not behind the subject.
	Lighting condition is too dark.	Increase Exposure Compensation (page 26) or Long Time Exposure (page 27).
Picture is too light.	The flash is not needed.	Change to Auto flash (page 22).
	The subject was too close when the flash was used.	Move so there is at least 2.0 ft (0.6 m) between the camera and the subject.
	The light sensor is covered.	Hold the camera so your hands or other objects do not cover the light sensor.
	Lighting condition is too bright.	Decrease exposure compensation (page 26).

Camera		
Problem	Cause	Solution
Picture is not clear.	The lens is dirty.	Clean the lens (page 92).
	Subject too close when taking picture.	Move so there is at least 2.0 ft (0.6 m) between the camera and the subject, or at least 2.8 in. (7.0 cm) in Close-up mode.
	Subject or the camera moved while the picture was taken.	Hold the camera steady while taking the picture.
	The subject is too far away for the flash to be effective.	Move so there is no more than 11.2 ft (3.4 m) between the camera and the subject; 6.6 ft (2.0 m) in Telephoto.
Slide show does not run on external video device.	Video Out setting is incorrect.	Adjust the camera Video Out setting (NTSC or PAL, page 52).
	External device is set incorrectly.	Refer to the external device's user's guide.

Camera/Computer Communications

Camera Communications		
Problem	Cause	Solution
The computer cannot communicate with the camera.	Camera power is off.	Turn on the camera (page 7).
	Battery is not charged.	Replace (page 5) or recharge the batteries (page 66).
	Some Advanced Power Management utilities on laptops can turn off ports to save battery life.	See the Power Management section of your laptop user's guide to disable this feature.
	USB cable is not securely connected.	Connect cable to camera and computer port (page 59).
	Software is not installed.	Install the software (page 55).
	The Battery Monitor or similar software runs constantly.	Close that software before starting the KODAK EASYSHARE Software.
Cannot transfer pictures to computer. The Add New Hardware Wizard cannot locate drivers.	Software is not installed on computer.	Disconnect USB cable (if using Camera Dock, disconnect cable and remove camera from Dock). Install KODAK EASYSHARE Software (page 55).

MMC/SD Cards and Internal Memory

MMC/SD Card and Internal Memory		
Problem	Cause	Solution
The camera does not recognize your MMC/SD card.	Card may not be MMC/SD certified.	Purchase a certified MMC/SD card (page 10).
	Card may be corrupt.	Reformat the card (page 53). Caution: Formatting erases all pictures and videos, including protected files.
	No card is inserted in camera or card is not fully inserted.	Insert a card into the card slot, then push to seat the connector (page 10).
Camera freezes up when a card is inserted or removed.	Camera detects an error when the card was inserted or removed.	Turn the Mode dial off, then back on. Make sure the camera is off when inserting or removing a card.
Memory card full	Storage is full.	Transfer pictures and videos to the computer, then delete them from the camera.
	The maximum number of files or folders is reached (or other directory concern).	Transfer pictures and videos to the computer, then format the card or internal memory (page 53). Caution: Formatting a card erases all pictures and videos, including protected files. (Formatting internal memory also erases email addresses. To restore addresses, see KODAK EASYSHARE Software Help.)


Camera LCD Messages

LCD Messages		
Message	Cause	Solution
No images to display	There are no pictures in the current storage location.	Change your picture storage location setting (page 11).
Memory card requires formatting	Card is corrupted or formatted for another digital camera.	Insert a new card or format the card (page 53).
Memory card cannot be read (Please format card or insert another card)		
Internal memory requires formatting	Camera internal memory is corrupted.	Format the internal memory (page 53).
Internal memory cannot be read (Please format internal memory)		
No memory card (Files not copied)	No card in the camera. Your pictures were not copied.	Insert a card.
Not enough space to copy files (Files not copied)	There is not enough space in the location you are copying to (internal memory or the card).	Delete pictures from the location you are copying to (page 37), or insert a new card.
Read only card, change to internal memory to capture	Card in the camera is write-protected.	To take a picture, insert a new card or change storage location to internal memory (page 11).

LCD Messages		
Message	Cause	Solution
Card is protected (Reset switch on card)	Switch on card is in write-protect position.	Reset the switch as shown on LCD.
Card is locked (Insert a new card)	Card is write-protected.	To take a picture, insert a new card or change storage location to internal memory (page 11).
Card is unusable (Insert a new card)	Card is slow, corrupted, or unreadable.	Insert a new card (page 10).
Recording stopped. Record in internal memory (Card speed is slow)	Card cannot be used in the camera.	Change storage location to internal memory (page 11).
Memory card is full (Cannot save Share tagging)	There is no space remaining.	Insert a new card (page 10), transfer pictures (page 59), or delete pictures (page 37).
Internal memory is full (Cannot save Share tagging)		Insert a card (page 10), transfer pictures (page 59), or delete pictures (page 37).
Date/Time entry screen appears automatically	This is the first time you turned on the camera; or the batteries have been removed for an extended period of time; or the batteries are exhausted.	Reset the clock (page 8).

LCD Messages		
Message	Cause	Solution
Unrecognized File Format	Camera cannot read the picture format.	Transfer the unreadable picture to the computer (page 59), or delete the picture (page 37).
High camera temperature. (Camera will be turned off.)	The internal temperature of the camera is too high for the camera to operate. The viewfinder light glows red and the camera turns off in five seconds.	Leave the camera off for several minutes, then turn it back on. If the message reappears, repeat the sequence above until the message does not appear.
Memory Card is full	There is no more space on the card in the camera.	Delete pictures from the card (page 37), insert a new card, or change storage location to internal memory (page 11).
Internal Memory is full	There is no more space in the camera's internal memory.	Delete pictures from the internal memory (page 37) or change storage location to Auto and insert card (page 11).
No Address Book in Camera	No email addresses appear because there is no address book.	Create and copy address book from your computer. See KODAK EASYSHARE Software Help.
Other error code	An error is detected.	Turn the Mode dial off, then back on. If the error appears again, call for service.

Camera Ready Light Status

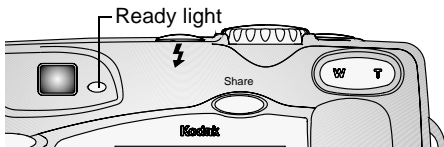

Camera Ready Light		
Problem	Cause	Solution
Ready light does not turn on and the camera does not work.	Camera is not turned on.	Turn on the camera (page 7).
	Batteries are exhausted.	Replace (page 5) or recharge the batteries (page 66).
	Mode dial was on when batteries were reloaded.	Turn Mode dial off, then back on.
Ready light glows steady green.	Camera is on; ready to take a picture or video.	The camera is operating normally.
Ready light blinks red.	Batteries are low or exhausted.	Replace (page 5) or recharge the batteries (page 66).
	Card is too slow for Video mode.	Change your storage location to internal memory (see page 11), or use a different card.


Camera Ready Light		
Problem	Cause	Solution
Ready light glows steady red.	Camera's internal memory or card is full.	Transfer pictures to your computer (page 59), delete pictures from the camera (page 37), switch storage locations (page 11), or insert a card with available memory (page 10).
	Camera processing memory is full.	Wait. Resume picture taking when the light turns green.
	Your card is read-only.	Change your storage location to internal memory (see page 11), or use a different card.
Ready light blinks green.	Picture is being processed and saved to the camera.	Camera is operating normally.
Ready light blinks yellow.	Flash is not charged.	Wait. Resume picture taking when the light stops blinking and turns green.
	Auto exposure or auto focus are not locked.	Release the Shutter button and recompose the picture.

Troubleshooting—Camera Dock II

Camera Dock II Problems

Camera Dock		
Problem	Cause	Solution
Pictures are not transferred to the computer	AC adapter or USB cable is not securely connected.	Check the connections (page 63).
	Software is not installed.	Install the software (page 55).
	Computer needs to be restarted.	Restart the computer and try again.
	Camera was removed from the Camera Dock during picture transfer.	Replace the camera on the Camera Dock and press the Connect button.
	Connect button was not pressed.	Press the Connect button.

 
Camera Dock II Light Status




Camera Dock Power/Transfer Light		
Light Status	Cause	Comment
Light glows steady green	Camera is properly seated in the Camera Dock.	The camera and Camera Dock are operating normally.
Light blinks green	Pictures and videos are being transferred to the computer.	
Light is off	Camera is not properly seated in Camera Dock.	Remove the camera and re-seat it (page 65).

Camera Dock Charging Lights		
Light Status	Cause	Comment
○○○ No lights	Charging has not started.	The camera is not seated in the Camera Dock (page 65). Camera is turned on. Turn off to begin charging. Battery in camera is not a KODAK EASYSHARE Ni-MH Rechargeable Battery Pack.
●○○ One green light	Battery is low.	The camera is charging.
●●○ Two green lights	Battery is partially charged.	

Camera Dock Charging Lights

Light Status	Cause	Comment
 Three green lights	Battery is fully charged.	Charging resumes when necessary.

Camera Dock Error Light

Light Status	Cause	Comment
 One blinking red light	Battery Pack is installed incorrectly.	Reinstall the Battery Pack (page 64).
	The Battery Pack or connector pins are damaged.	Check for damage.
	The camera and Battery Pack have been exposed to very high or low temperatures.	Slowly return the camera and Battery Pack to room temperature.

11 Getting Help

Helpful Web Links

Help with WINDOWS Operating System and working with digital pictures	www.kodak.com/go/pcbasics
Help with your KODAK EASYSHARE DX4330 Zoom Digital Camera	www.kodak.com/go/dx4330support
Download the latest camera software and firmware	www.kodak.com/go/dx4330downloads
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch
Get support for cameras, software, accessories, more	www.kodak.com/go/support
Purchase camera accessories	www.kodak.com/go/accessories
Register your camera	www.kodak.com/go/register

Help in this Manual

See [Troubleshooting, page 69](#) for help with problems you may have with your camera, camera/computer connections, Camera Dock, or MMC/SD cards.

Software Help

Refer to the Quick Start Guide or KODAK EASYSHARE Software Help.

Telephone Customer Support

If you have questions concerning the operation of the software or camera, you may speak with a customer support representative.

Before You Call

Please have the camera or Camera Dock connected to your computer, be at your computer, and have the following information available:

Operating system _____

Processor speed (MHz) _____

Computer model _____

Amount of memory (MB) _____

Exact error message you received _____

Version of installation CD _____

Camera serial number _____

Telephone Numbers

Australia	1800 147 701
Austria/Osterreich	0179 567 357
Belgium/Belgique	02 713 14 45
Brazil	0800 150000
Canada	1 800 465 6325
China	800 820 6027
Denmark/Danmark	3 848 71 30
Ireland/Eire	01 407 3054
Finland/Suomi	0800 1 17056
France	01 55 1740 77
Germany/Deutschland	069 5007 0035
Greece	00800 441 25605
Hong Kong	800 901 514
India	91 22 617 5823
Italy/Italia	02 696 33452
Japan	81 3 5644 5500
Korea	00798 631 0024
Netherlands/Nederland	020 346 9372
New Zealand	0800 440 786
Norway/Norge	23 16 21 33
Philippines	1 800 1 888 9600
Portugal	021 415 4125
Singapore	800 6363 036

Spain/Espana	91 749 76 53
Sweden/Sverige	08 587 704 21
Switzerland/Schweiz/Suisse	01 838 53 51
Taiwan	0080 861 008
Thailand	001 800 631 0017
UK	0870 243 0270
United States	1 800 235 6325
Outside the United States	585 726 7260
International Toll Line	+44 131 458 6714
International Toll Fax	+44 131 458 6962

For the most up-to-date listings, visit:

<http://www.kodak.com/US/en/digital/contacts/DAIInternationalContacts.shtml>

12 Appendix

Camera Specifications

KODAK EASYSHARE DX4330 Zoom Digital Camera		
Color		24-bit, millions of colors
Communication with computer	USB	Via USB cable or camera dock
Dimensions	Width	4.3 in. (110.5 mm)
	Depth	1.5 in. (39.0 mm)
	Height	2.6 in. (66.0 mm)
	Weight	7.4 oz (210 g) with battery and card
Exposure control		Multi-pattern TTL-AE with program modes (Standard, Sport, Night, Long Time Exposure, Exposure Compensation)
Flash	Modes	Auto, Fill, Red-eye, Off
	Range	Wide: 2.0 to 11.2 ft (0.6 to 3.4 m) Tele: 2.0 to 6.6 ft (0.6 to 2.0 m)
	Charging Time	< 7 seconds with charged battery
ISO		Automatic (120 to 200)
LCD		Transmissive reflective with anti-glare coating 1.8 in. (45.7 mm), color, 72,000 pixels Preview rate: 26 fps

KODAK EASYSHARE DX4330 Zoom Digital Camera

Lens	Type	Optical quality glass, 6 groups/7 elements (2 aspherical lenses)
	Maximum Aperture	f/2.8 - f/5.1
	Focal Length	38 - 114 mm
Focus Distance	Close-up	Wide angle: 2.8 to 28 in. (7 to 70 cm); Telephoto: 11 to 28 in. (28 to 70 cm)
	Standard	2 ft (0.6 m) to infinity
	Landscape	Fixed focus
Operating Temperature		32 to 104 ^o F (0 to 40 ^o C)
File format	Still	JPEG/EXIF v2.2 <i>Exif Print</i>
	Video	QUICKTIME movie
Picture storage		16 MB internal; SD Card or MMC
Pixel resolution	★★★	Best: 2160 x 1440 (3.1 M) pixels
	★★	Better: 1800 x 1200 (2.16 M) pixels
	★	Good: 1080 x 720 (778 K) pixels
Video resolution		309 x 206 pixels, 15 fps
Power	Battery	(1) CRV3 (included) (2) AA lithium (optional) (2) AA NiMH rechargeable (optional)
	AC adapter	3V DC (optional)
Self Timer		10 seconds
Tripod socket		Yes
Video Out		NTSC or PAL selectable
Viewfinder		Real image optical

KODAK EASYSHARE DX4330 Zoom Digital Camera

White balance	Automatic
Zoom (still capture)	3X optical, 3.3X digital

Original Factory Settings—Camera

Feature	Factory Setting
Date/Time	2002/1/1; 12:00
Date/Time Stamp	Off
Exposure Compensation	0.0
Flash	Auto: Auto Flash Sport, Night, Close-up: Auto Landscape, Video: Flash Off
Image Storage	Auto
Liveview	Off
Orientation Sensor	On
Shutter Sounds	On
Storage Location	Auto
Print Quantity	1
Picture Quality	Best
Quickview	On
Self Timer	Off
Slide Show Interval	5 seconds
Video Out	NTSC

Upgrading Your Software and Firmware

Download the latest versions of the software included on the KODAK EASYSHARE Software CD and the camera firmware (the software that runs on the camera). See <http://www.kodak.com/go/dx4330downloads>.

Tips, Safety, Maintenance

- Always follow basic safety precautions. Refer to the “Important Safety Instructions” booklet packed with your camera.
- Do not allow any chemicals, such as suntan lotion, to come into contact with the painted surface of the camera.
- If the camera has been subjected to inclement weather or you suspect water has gotten inside the camera, turn off the camera and remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera again.
- Clean the lens and back LCD:
 - 1 Blow gently on the lens or LCD to remove dust and dirt.
 - 2 Moisten the lens or LCD by breathing lightly on it.
 - 3 Wipe the lens or LCD gently with a soft, lint-free cloth or an untreated lens-cleaning tissue.

Do not use cleaning solutions unless they are designed specifically for camera lenses. **Do not wipe the camera lens or LCD with chemically treated eyeglass lens tissue. It may scratch the lens.**
- Wipe the outside of the camera with a clean, dry cloth. Never use harsh or abrasive cleaners or organic solvents on the camera or any of its parts.
- Service agreements are available in some countries. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, please contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or the Kodak Web site at www.kodak.com/go/dx4330support.

Storage Capacities

File sizes can vary. You may be able to store more or fewer pictures and videos. Purchase cards at <http://www.kodak.com/go/accessories>.

Picture Storage Capacity

	Number of pictures		
	Best Quality ★★★	Better Quality ★★	Good Quality ★
16 MB internal memory	16	22	69
16 MB MMC/SD	16	22	69
32 MB MMC/SD	32	46	138
64 MB MMC/SD	65	92	277
128 MB MMC/SD	131	185	556
192 MB MMC/SD	196	278	834

Video Storage Capacity

	Minutes/seconds of video
16 MB internal memory	1 min. 10 sec.
16 MB MMC/SD	1 min. 10 sec.
32 MB MMC/SD	2 min. 20 sec.
64 MB MMC/SD	4 min. 40 sec.
128 MB MMC/SD	9 min. 20 sec.
192 MB MMC/SD	14 min.

Locating Pictures and Videos on a Card

Pictures stored on MMC/SD Cards use a standard agreed upon by many camera manufacturers. This lets you use the cards in different cameras. If you use a card reader to retrieve your files, the following description of the card file structure may be helpful.

MISC folder—contains the order files created when you use the Share feature to tag files for printing, emailing, and as favorites.

SYSTEM folder—used for updating camera firmware.

DCIM folder—root level folder, contains the 100K4330 folder. Each time you turn on the camera or insert a different card, any empty folders within the DCIM folder are removed.

100K4330 subfolder—contains all the pictures on the card.

Card File Naming Conventions

- Pictures are named 100_nnnn.JPG, and are numbered in the order in which they are taken. The first picture is named 100_0001.JPG; the highest number allowed is 100_9999.JPG.
- When a card contains a picture named 100_9999.JPG in the \DCIM\100K4330 folder, subsequent pictures appear in a new folder (\DCIM\101K4330), beginning with picture 101_0001.JPG.
- Even if you transfer pictures to the computer or delete pictures from the camera, the camera continues to use consecutive numbers for all subsequent pictures. For example, if the last picture taken was 100_0007.JPG and you delete it, the next picture you take is named 100_0008.JPG.
- When you insert a different card into your camera, the next picture number is defined by incrementing the higher of the last picture taken by the camera, or the highest existing picture number in the folder.
- If you use the card in a camera other than the KODAK EASYSHARE DX4330 Zoom Digital Camera, and that camera manufacturer adheres to this file structure standard, the \DCIM folder contains a folder named by that

camera. For more information, refer to the documentation that accompanied that camera.

Using Your Batteries

- **Replacement Types**—your camera can use the following battery types:
 - 2, 1.5 volt AA lithium batteries
 - 1, KODAK CRV3 Lithium Battery *
 - 1, KODAK EASYSHARE Ni-MH Rechargeable Battery Pack, rechargeable in the KODAK EASYSHARE Camera Docks *
 - 2, 1.2 volt AA Nickel Metal Hydride (Ni-MH) batteries, rechargeable *
- * Purchase batteries at <http://www.kodak.com/go/accessories>.
- For acceptable battery life, and to make sure your camera operates dependably, **we do not recommend or support alkaline batteries.**
- **To lengthen battery life**, limit the following activities:
 - Using Liveview (using the LCD as the viewfinder, see [page 18](#))
 - Reviewing your pictures on the LCD (see [page 35](#))
 - Excessive use of the flash
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading batteries in the camera.
- Battery life depends significantly on battery age, usage conditions, type, and brand. Digital camera requirements are very demanding on batteries. Not all batteries perform well under these challenging conditions. For a comparison of different battery types, refer to the Battery Option sheet.
- Battery performance is reduced at temperatures below 41° F (5° C). Carry spare batteries when using your camera in cold weather, and keep them warm until you are ready to take pictures. Do not discard cold batteries that do not work. When they return to room temperature, they may be usable.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.

Expected Battery Life

Battery Type	Pictures per Set of Batteries (Approximate)*
2 AA KODAK Ni-MH Rechargeable Batteries	180
KODAK Ni-MH Rechargeable Battery Pack	180
2 KODAK AA Lithium Batteries	340
KODAK CRV3 Lithium Battery	410


* Based on Kodak customer simulation battery life test. Actual battery life may vary based on usage.

Power-Saving Features

If No Activity For	The	To Turn It Back On
1 minute	LCD turns off	Press the OK button.
8 minutes	Camera enters power-save mode	Press any button.
3 hours	Camera turns off	Turn camera off, then on.

Optional AC Adapter

 To save battery power when reviewing, copying, and transferring pictures, purchase a KODAK Digital Camera AC Adapter, 3-Volt at <http://www.kodak.com/go/accessories>.



Connect the 3-Volt adapter to the camera's DC-in port and to a power outlet.

NOTE: The 3-Volt adapter is NOT compatible with a KODAK EASYSHARE Camera Dock.

Regulatory Information

FCC Compliance and Advisory

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Canadian DOC Statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Class B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づきクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

English translation:

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

Index

A

- AA batteries, installing, 5
- about
 - camera information, 54
 - picture, video, 43
- AC adapter, 96
- accessories, buying, 85
- adjusting
 - exposure compensation, 26
 - picture quality, 28
- alkaline batteries, 5
- arrow buttons, ii
- audio speaker, iv
- auto
 - flash, 22
 - focus framing marks, 20
 - mode, 13
 - power-down, 96

B

- batteries
 - alkaline, 5, 95
 - charging Battery Pack, 66
 - extending battery life, 95
 - loading AA lithium, 5
 - loading Battery Pack, 64

- loading CRV3, 5
- power level, 9
- replacement types, 95
- tips, 95

buttons

- arrow, ii
- delete, 19
- flash, 22
- menu, 11
- OK, 7
- review, 35
- share, 45
- shutter, 13
- zoom, 21

C

- cable
 - audio/video, 3, 41
 - power, camera, 96
 - power, Camera Dock, 61
 - USB, 3, 59
- Camera Dock
 - charging Battery Pack, 66
 - charging lights, 66
 - connector door, iv
 - docking camera, 65

- earlier model, 68
 - installing insert, 62
 - lights status, 82
 - package contents, 61
 - power connection, 63
 - transferring pictures, 67
 - USB connection, 63
 - using, 61
 - Canadian compliance, 98
 - card, memory, 94
 - caring for your camera, 92
 - changing picture or video
 - location, 11
 - charging Battery Pack, 66
 - charging lights, Camera Dock, 66
 - checking location setting, 12
 - cleaning camera, lens, 92
 - clock, setting, 8
 - close-up mode, 17
 - communication problems, 74
 - computer
 - connecting camera, 59
 - connecting Camera Dock, 63
 - system requirements, 55
 - connecting Camera Dock, 63
 - connecting to computer, 59
 - copy pictures
 - card to memory, 42
 - to computer, 59
 - copy pictures and videos to
 - computer, 67
 - CRV3 battery, installing, 5
 - customer support numbers, 86
 - customizing camera settings, 49
- D**
- date
 - imprinting on pictures, 29
 - setting, 8
 - DCIM folder, card, 94
 - defaults
 - changing print quantity, 50
 - original settings, 91
 - deleting
 - by formatting, 53
 - during Quickview, 32
 - from internal memory, 37
 - from MMC/SD Card, 37
 - last picture, 19
 - last video, 32
 - protecting pictures, videos, 39
 - digital pictures, using, 60
 - digital zoom, 21
 - display problems, 71
 - displaying slide show, 40
 - disposal, recycling, 92

docking camera, 62, 65
downloading
 pictures, 59, 60, 67

E

early Camera Dock, 68
EASYSHARE Software,
 installing, 55
emailing pictures, videos, 47
error messages, 76
exposure
 compensation, 26
 long time, 27
external video device
 setting video out, 52
 viewing pictures, videos, 41

F

favorites, tagging for, 48
FCC compliance, 97
file names, card, 94
firmware
 upgrading, 92
 version, 54
flash, using, 22
focus framing marks, 20
folders, card, 94
formatting MMC/SD card, 53

G

guidelines, battery, 95

H

help
 camera, 69
 Camera Dock, 81
 software, 85
 telephone support, 86
 web links, 85

I

icons
 camera status, 9
 mode dial, 6
image storage menu, 11
information
 about camera, 54
 about pictures, videos, 43
insert, for Camera Dock, 62
installing
 AA lithium batteries, 5
 Battery Pack, 64
 CRV3 battery, 5
 insert, Camera Dock, 62
 MMC/SD card, 10
 software, 57
internal memory
 formatting, 53

setting picture, video
location, 11
storage capacity, 93

K

KODAK EASYSHARE Software
getting help, 85
installing, 57
transferring pictures, 60
upgrading, 92
Kodak web sites, 85

L

landscape mode, 16
language, setting, 52
large print, this user guide, 1
LCD

displaying languages, 52
error messages, 76
picture location icon, 9
reviewing last picture, 19
reviewing last video, 32
status bar, 9
turning off quickview, 50
turning on Liveview, 51
using as viewfinder, 18
viewing pictures on, 36

lens

accessory, 4

cap, 4
cleaning, 92

light

Camera Dock, 82
Camera Dock II, 82
charging, 66, 68
error, Camera Dock II, 83
ready, camera, 79
self-timer, camera, 25, 34

Liveview

turning on, 51
using LCD as viewfinder, 18

loading

AA lithium batteries, 5
Battery Pack, 64
CRV3 battery, 5
MMC/SD card, 10
software, 57

long time exposure, 27

M**MACINTOSH**

installing software on, 57
system requirements, 56

magnify picture, 38

maintenance, camera, 92

memory

storage location setting, 11

memory card

- inserting, 10
- storage capacities, 93
- menu button, 11
- menus
 - image storage, setting, 11
 - overview, 6
- MISC folder, card, 94
- MMC/SD card
 - file name conventions, 94
 - formatting, 53
 - inserting, 10
 - printing from, 60
 - problems, 75
 - setting picture or video
 - location, 11
 - storage capacities, 93
- mode dial, 6
- modes
 - auto, 13
 - close-up, 17
 - landscape, 16
 - night, 15
 - off, 6
 - sport, 14
 - video, 31
- monitor, requirements, 55
- N**
 - night mode, 15
 - NTSC, video out setting, 52
- O**
 - OK button, 7
 - online help, 85
 - online prints, ordering, 60
 - optical zoom, 21
 - orientation sensor, 30
 - overview, camera, ii
 - overview, camera menus, 6
- P**
 - package contents
 - camera, 3
 - Camera Dock, 61
 - PAL, video out setting, 52
 - parallax marks, 18
 - pictures
 - checking location, 12
 - copying, 42
 - date imprint, 29
 - deleting, 37
 - downloading, 60
 - emailing tagged, 47
 - file naming, 94
 - locating on card, 94
 - magnifying, 38
 - printing, 60
 - printing tagged, 46

- protecting, 39
 - quality, setting, 28
 - reviewing, 35
 - storage capacity, 93
 - taking, 13
 - transferring to
 - computer, 59, 67
 - using on computer, 60
 - viewing, 36
 - power
 - camera dock, 63
 - optional AC adapter, 96
 - turning camera on, 7
 - power-down, auto, 96
 - printing
 - changing default quantity, 50
 - from a card, 60
 - optimizing printer, 85
 - pictures, 60
 - this user guide, 1
 - product overview, ii
 - protecting pictures, videos, 39
- Q**
- quality
 - print, digital zoom, 21
 - setting, 28
 - Quickview
 - turning off, 50
 - using, 19, 32
- R**
- ReadMe file, 69
 - ready light
 - camera, 13
 - Camera Dock, 79
 - recycling, disposal, 92
 - red-eye, flash, 22
 - regulatory information, 97, 98
 - removable memory card, 10
 - replacement battery types, 95
 - requirements
 - MACINTOSH, 56
 - WINDOWS-based, 55
 - resolution, setting, 28
 - review button, 35
 - review mode, 35
 - reviewing pictures
 - as you take them, 19
 - deleting, 37
 - magnify, 38
 - on LCD, 36
 - protecting, 39
 - slide show, 40
 - reviewing videos
 - as you take them, 32
 - deleting, 37
 - on LCD, 36

- protecting, 39
- slide show, 40
- running slide show, 40
- S**
- safety, 92
- Secure Digital card, inserting, 10
- self-timer
 - pictures, 25
 - videos, 33
- sensor, orientation, 30
- service and support
 - telephone numbers, 86
 - Web site, 85
- setting
 - date and time, 8
 - flash, 22
 - language, 52
 - mode dial menus, 6
 - picture quality, 28
 - picture, video storage
 - location, 11
 - resolution, 28
 - self-timer, 25, 33
 - video out, 52
- setup mode, using, 49
- share button, 45
- shutoff, auto, 96
- shutter
 - problems, 70
 - self-timer delay, 25, 33
 - sounds, 51
 - taking pictures, 13
- sleep mode, 96
- slide show
 - continuous loop, 41
 - problems, 73
 - running, 40
- software
 - getting help, 85
 - installing, 57
 - transferring pictures, 60
 - upgrading, 92
- sounds, shutter, 51
- speaker, iv
- specifications
 - camera, 89
 - MACINTOSH, 56
 - WINDOWS-based, 55
- sport mode, 14
- status
 - bar, 9
 - camera, 9
 - picture storage location, 12
- storage capacity, memory, 93
- strap
 - lens cap, 4
 - wrist, 4

support, technical, 85, 86
System folder, card, 94
system requirements
 MACINTOSH, 56
 WINDOWS, 55

T

tagging

 for email, 47
 for favorites, 48
 for print, 46
 when to tag, 45

taking pictures, 13

taking videos, 31

telephone support, 86

television, slide show, 40

time, setting, 8

timer, shutter delay, 25, 33

tips

 battery guidelines, 95
 maintenance, 92
 ReadMe file, 69
 safety, 92

transferring to

 computer, 59, 60, 67

trash can, deleting, 19, 32

tripod, caution, 67

troubleshooting

 camera, 69

 camera communications, 74

 Camera Dock, 81

 camera ready light, 79

 LCD messages, 76

 MMC/SD card, 75

 turning camera on and off, 7

U

universal dock insert, 62

upgrading software,
 firmware, 92

URLs, Kodak web sites, 85

V

VCCI compliance, 98

video mode, using, 31

video out, setting, 52

videos

 checking location, 12

 copying, 42

 date display, 43

 deleting, 37

 downloading, 60

 emailing tagged, 47

 file naming, 94

 protecting, 39

 reviewing, 35

 storage capacities, 93

 taking, 31

- transferring to
 - computer, 59, 67
 - using on computer, 60
 - viewing, 36
- viewfinder, using LCD, 18
- viewing
 - camera information, 54
 - picture, video
 - information, 43
- viewing picture
 - after taking, 19, 36
 - from internal memory, 36
 - magnified, 38
 - on MMC/SD Card, 36
- viewing video, after taking, 32

W**WINDOWS**

- installing software, 57
 - system requirements, 55
- wrist strap, 4

Z

- zoom, digital, optical, 21

