 


Before You Begin

- Verify all of the contents of your accessory package
- Review safety guidelines in Owner's Manual
- Place HDTV so the rear connectors are accessible
- Install AA batteries into the VIZIO Remote Control
- Write down your JV50P Serial Number (located on the back)

Contents:

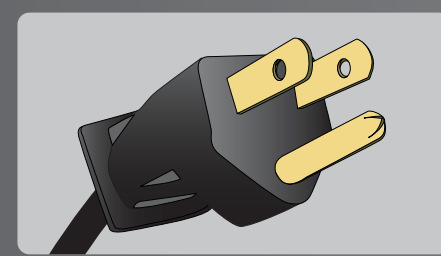


2 Power Cords



VIZIO JV50P User Manual, Warranty & Repair Info, VIP Brochure and Registration Card.



Remote Control
Includes 2 AA Batteries

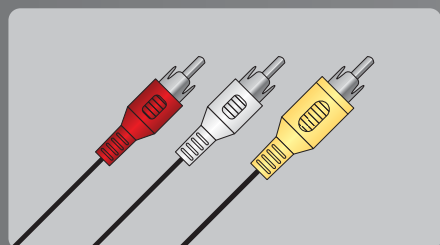

AV Cable

The Best Connection

For the best quality picture, we recommend using HDMI, DTV, RGB or Component inputs when possible. These are the only inputs capable of high definition (HD). Using these inputs does not guarantee high definition unless a high definition source is connected. However, not all equipment is capable of these connections. TV, AV and S-Video are not capable of HD signals.

+ Both DTV and TV share the same port. The television will automatically register which input type is connected.



Four Easy Steps Simply follow our color-coded Step Charts and you're done.

1) Choose items to connect to your JV50P

- Determine which type of Signal Source and any Additional Equipment you wish to connect to your JV50P.
- The colored dots under each Signal Source and Additional Equipment indicate which type of connections you may use to connect to your JV50P.

Signal Sources					Additional Equipment							
Cable	Antenna	Cable Box	Digital Cable Box	Satellite Box	Computer	Digital Camera	DVD	DVR	Game System	Sound System	VCR	Video Camera
			○	○			○	○				
			○	○			○	○				
			○	○			○	○				
●	●	●						●			●	
					●							
			●	●			●	●	●			
			●	●			●	●	●			
											○	

2) Choose equipment connection methods

- Using the colored dots from Step One, follow the row across to Step Two to match up the colored dots to the same colored connection method.
- Chose ONLY one method for each piece of equipment.

Connection Methods
HDMI 1 TYPE: Digital High Definition QUALITY: Best Digital
HDMI 2 TYPE: Digital High Definition QUALITY: Best Digital
HDMI 3 TYPE: Digital High Definition QUALITY: Best Digital
DTV / TV TYPE: Cable/Antenna QUALITY: Best Digital/Good Analog
RGB TYPE: RGB Analog QUALITY: Best Analog
COMPONENT 1 TYPE: Component Analog QUALITY: Better Analog
COMPONENT 2 TYPE: Component Analog QUALITY: Better Analog
AV1 TYPE: Analog QUALITY: Good Analog
AV2 TYPE: Analog QUALITY: Good Analog
OPTICAL TYPE: Digital Audio Out QUALITY: Best Digital
AUDIO OUT TYPE: Analog Audio Out QUALITY: Good Analog

3) Select cables and make connections

- Once you have determined the connection methods from Step Two, follow the row to Step Three to determine what kind of cables you need and what the connections look like on your equipment.
- Following the color-coded system, use the appropriate cables and connect your Signal Source and Additional Equipment to the color-coded inputs on your JV50P. (Refer to **Connection Map** at bottom of page.)
- Once connected, turn on your JV50P and all your equipment.


My Equipment Has	My JV50P Has	Cable Needed
HDMI	HDMI	HDMI*
HDMI	HDMI	HDMI*
HDMI OR DVI	HDMI	HDMI* or HDMI* to DVI* & RCA Audio
Coaxial (RF) Cable*	Coaxial (RF) Cable*	Coaxial (RF) Cable*
VGA Cable* & Optional Audio	VGA Cable* & Optional Audio	VGA Cable* & Stereo mini-jack
Component & Stereo RCA Cable*	Component & Stereo RCA Cable*	Component & Stereo RCA Cable*
Component & Stereo RCA Cable*	Component & Stereo RCA Cable*	Component & Stereo RCA Cable*
A/V RCA Cable	A/V RCA Cable	A/V RCA Cable
A/V RCA Cable	A/V RCA Cable	A/V RCA Cable
Optical Audio Cable**	Optical Audio Cable**	Optical Audio Cable**
Stereo RCA Cable	Stereo RCA Cable	Stereo RCA Cable

4) Use your JV50P

- Fill in the Connection Reference Chart below, noting how you will connect your equipment/signal source to your VX42L.
- If you are using the DTV/TV input, turn over this guide and follow the programming instructions and then return to this last step.
- If you are not using the DTV/TV input continue to next step.
- Press the INPUT button on your remote. The INPUT menu will appear. (See image below.)
- Continue pressing the INPUT button until you reach the corresponding connection.

(To program TV Channels, see back.)

Connection Reference

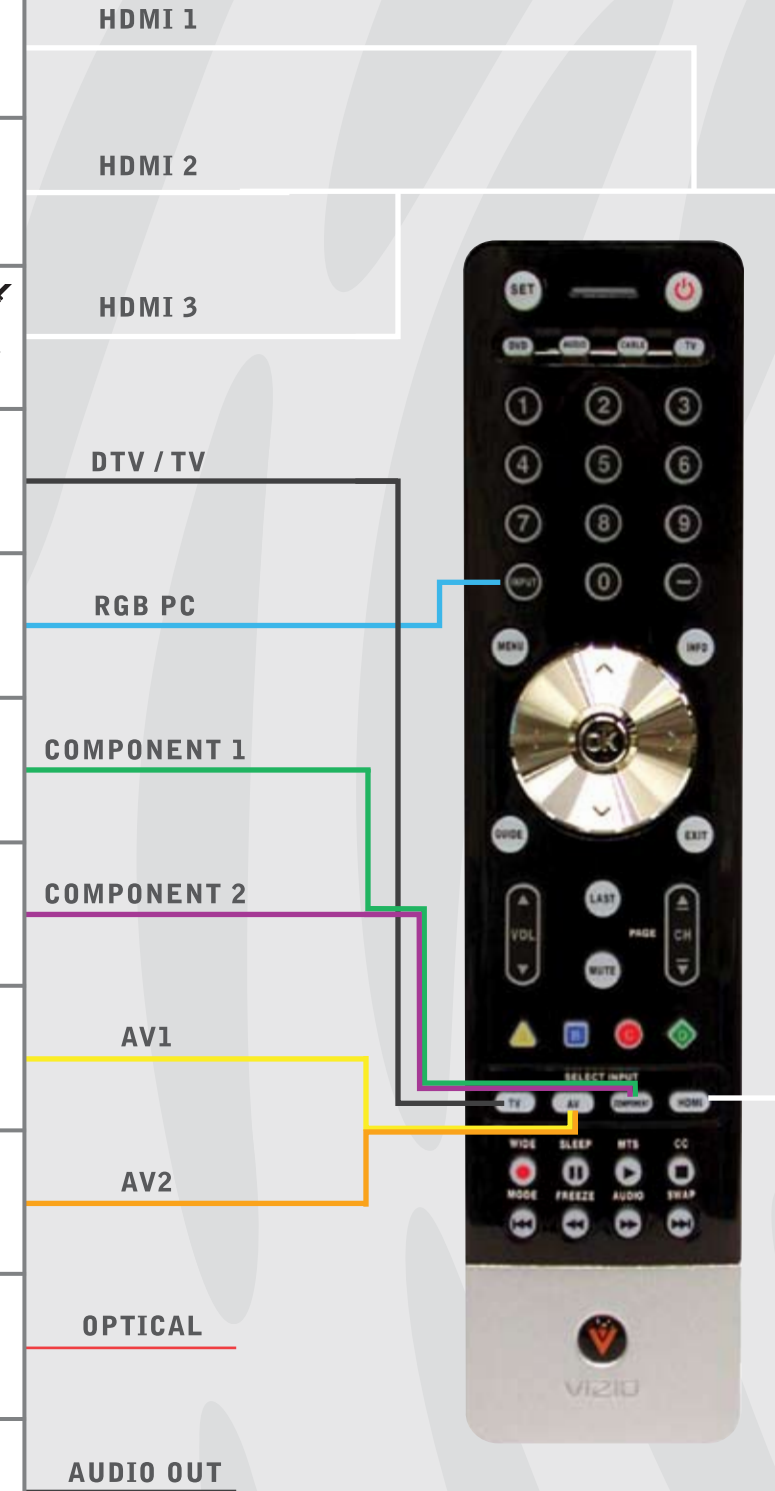


To Use This Chart: Write your equipment or signal source into the squares corresponding to your connection method.

* HDMI Cable, DVI-HDMI cable, VGA cable, Audio mini-jack and Component Cable are not included. These cables are available at www.VIZIO.com (View back for more details). For help with connecting components to your VIZIO TV, visit <http://ceaconnectionsguide.com/> for an interactive guide.

3 WAYS TO GET HDTV

- 1) Off-Air antenna (using the DTV antenna input). To see if you are able to receive HD signals off-air and for help choosing the right antenna, visit www.antennaweb.org.
- 2) Cable - Subscribe to HD programming through your local cable company (HD cable box required).
- 3) Satellite - Subscribe to HD programming through Direct TV or Dish Network (HD satellite receiver required).

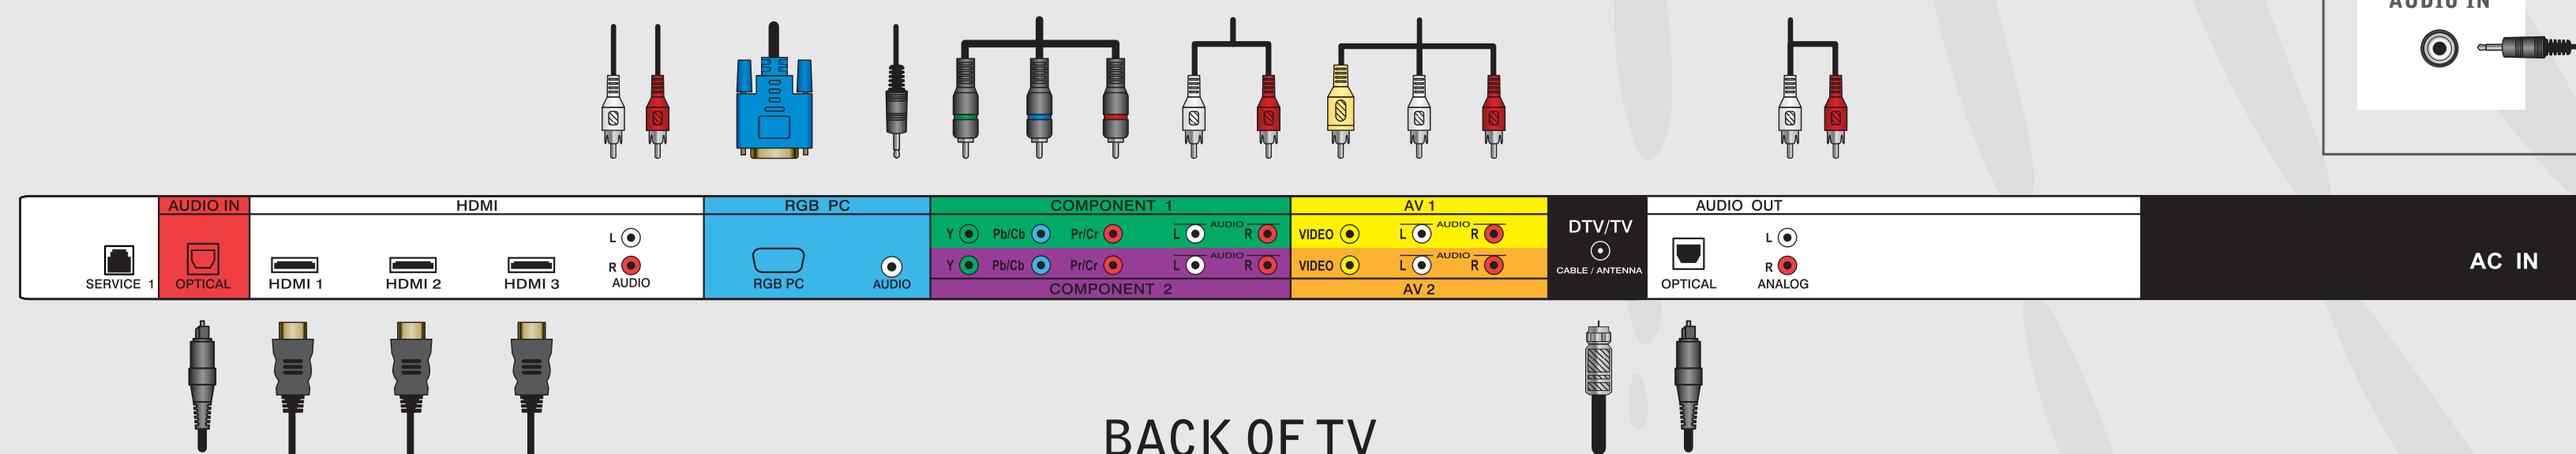

BACK OF TV




VIZIO provides wall mounts & Installation Services. (See Install with a Pro details on back) Visit www.VIZIO.com or call 1-888-849-4623 to order today.

Program your TV

Programming your JV50P is a simple TWO STEP process.
All you need is your Remote Control.

STEP 1

Connect your Signal Source to the **DTV/TV** connection, go to **STEP 2**.

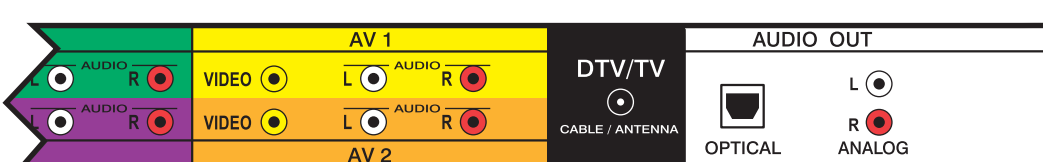

DTV/TV




Please Note:
• Be sure the batteries in your remote are inserted correctly.

For advanced setups, refer to chapter 3 of your JV50P User Manual.

STEP 2

On your Remote Control...

- 1 Turn on the TV, the Initial Setup screen should appear. If this screen does not appear see User Manual Chapter 3 for TV Tuner Setup.
- 2 Select Language; English, Français, Español.
- 3 Press **▲** or **▼** once to select Cable or Antenna. Select Cable if you are using cable from the wall or Air if you are using an antenna.
- 4 Press **▶** to continue to the next screen.
- 5 Press **OK** on remote to scan for channels. Scanning for available channels could take several minutes.
- 6 Once scanning is finished, programming is complete.
- 7 For more detailed information see Chapter 3 of your User Manual.

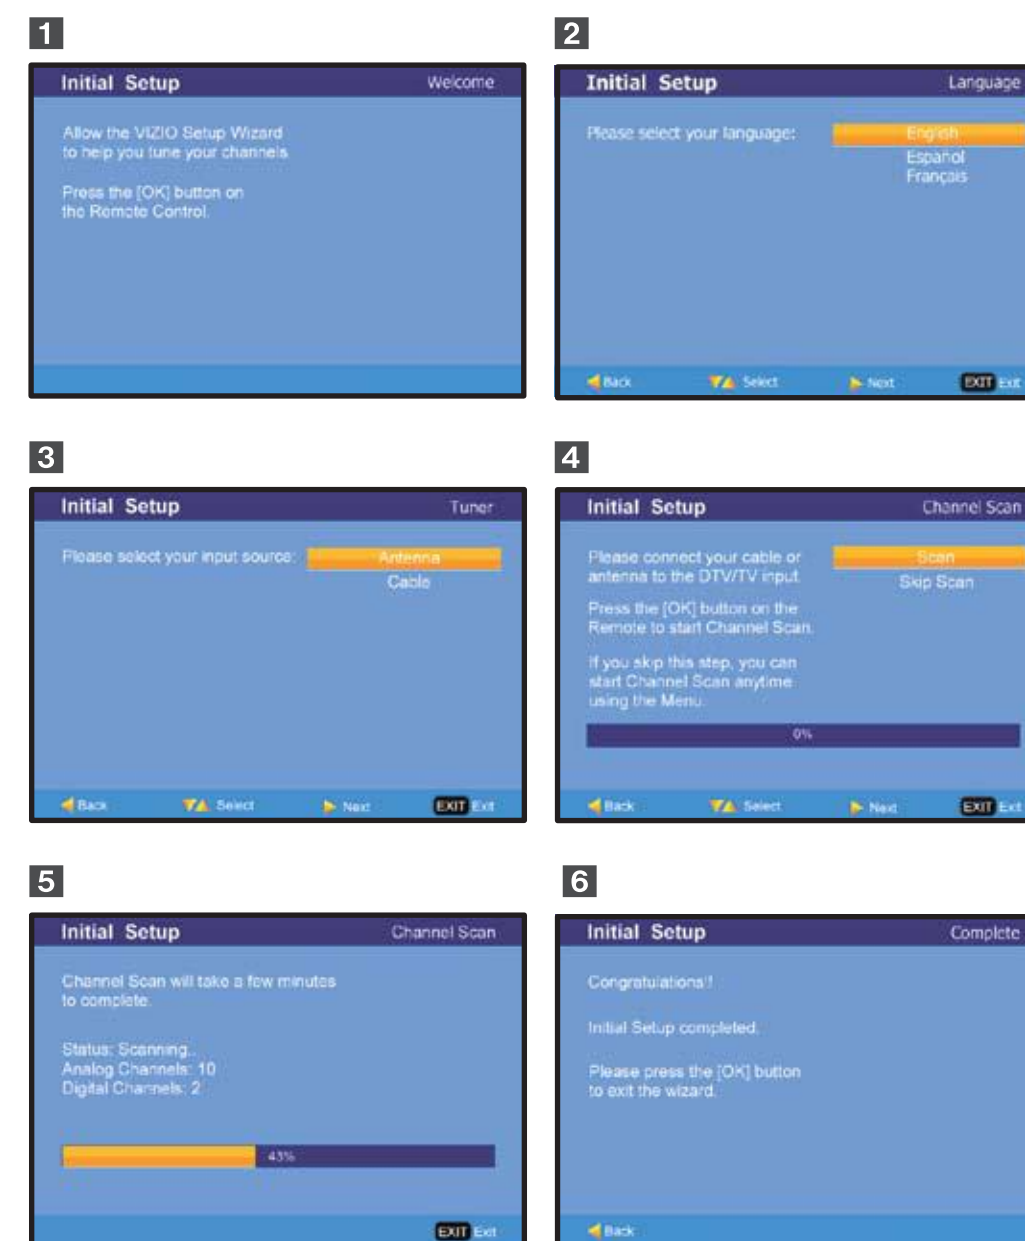


Programming Your Cable or Satellite Box Remote

Consult your Cable or Satellite Owner's Manual to determine if you need a 3, 4 or 5-digit code. If your Cable or Satellite Box requires:

- 3-digits, please use "627" (This code usually works with DISHNetwork.)
- 4-digits, please use "1758", "0178" or "0128"
- 5-digits, please use "11758", "10178" or "10128" (These codes usually work for DIRECTV.)

Pairing your TV and Wireless Speakers

Before trying to make any connection, please familiarize with your new wireless speaker's set supplied with your new VIZIO JV50P HDTV. The set consists of two satellite speakers; labeled left (white color connector) and right (red color connector), and a subwoofer. The subwoofer, being the brain of the set; is the one on which we will concentrate our attention. Please take a look at the back side of the subwoofer and notice the following; a three prong power (labeled AC IN) connector, two plug in sockets (labeled SPEAKER) and a little button or switch (labeled CH-SEARCH**, PAIRING). The AC IN is thru where power will be supplied to the set. The two connectors (SPEAKER) towards the bottom right hand side labeled LS (left speaker, white color) and RS (right speaker, red color) will be where the satellite speakers connect to by matching the colors. Now, the little button will be the one to keep attention to; it is the one to be used (press) when following instructions (Steps) to pairing TV and Wireless speaker setup.

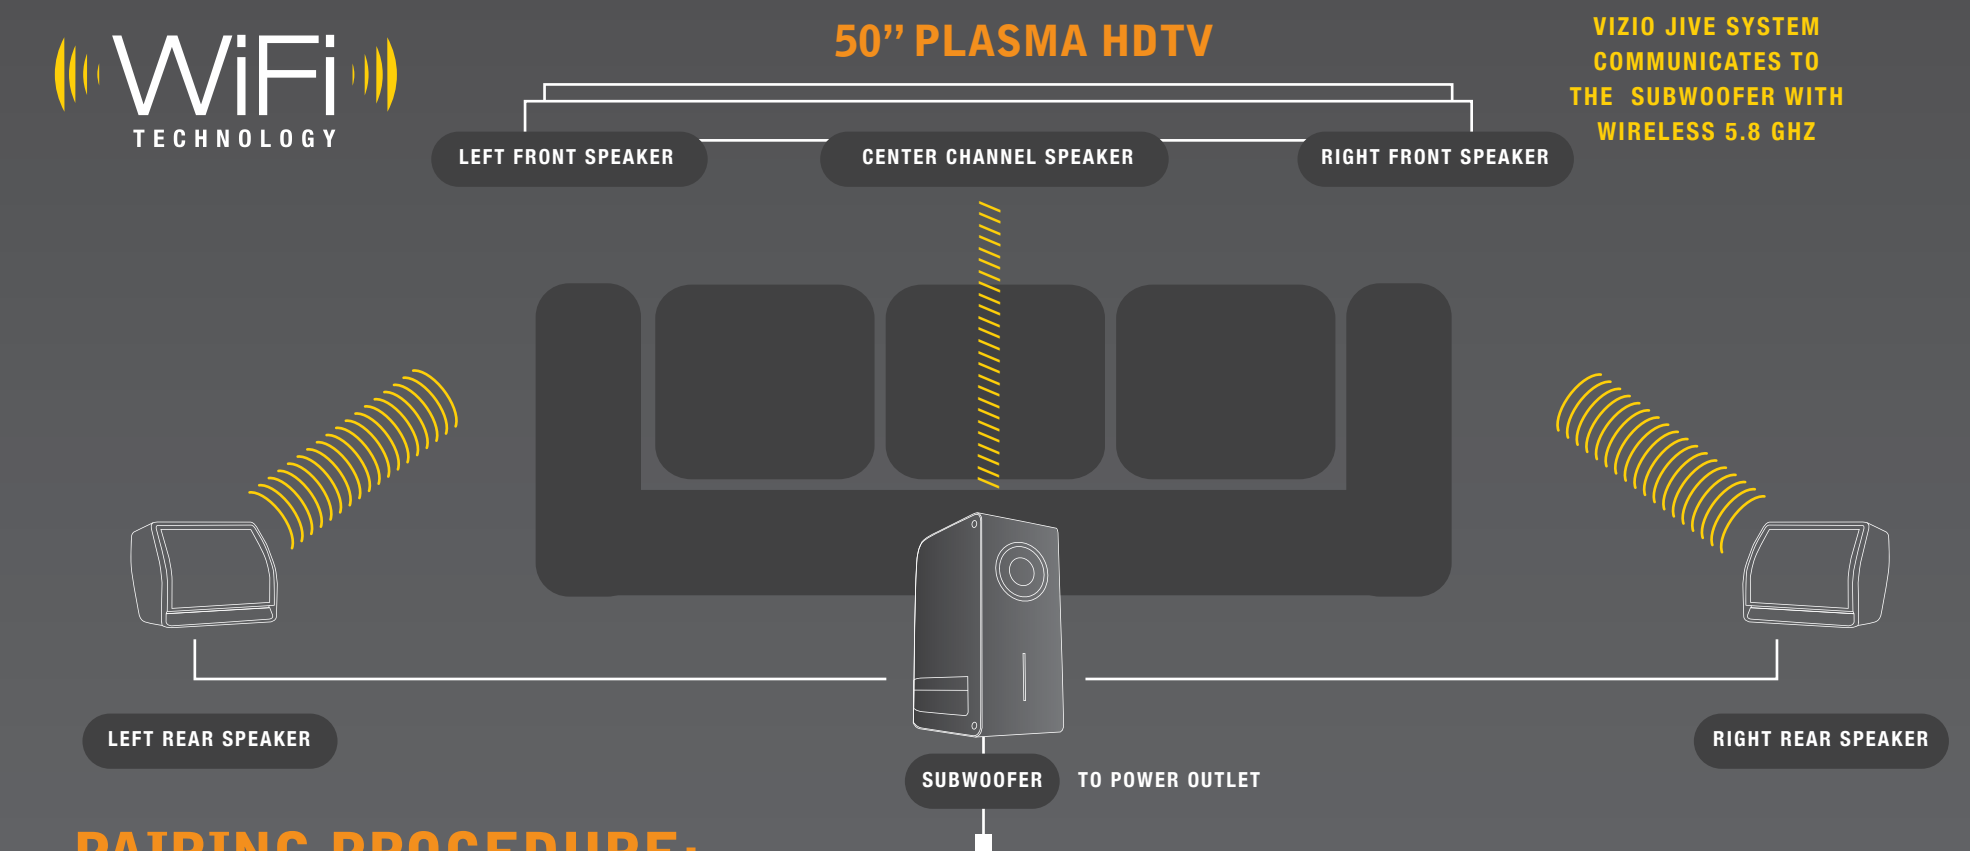

PAIRING PROCEDURE:

- 1) USING REMOTE CONTROL, TURN TV SET ON.
- 2) PRESS MENU KEY ON REMOTE CONTROL, SCREEN SHOULD DISPLAY A MENU WINDOW WITH FIVE ICONS (FIGURES) ACROSS THE TOP.
- 3) USING RIGHT HAND SIDE ARROW, RIGHT TO THE OK KEY; SELECT THE AUDIO ICON (LOOKS LIKE A MICROPHONE ON A STAND).
- 4) CHECK ON THIS MENU THAT THE SPEAKERS AND WIRELESS SPEAKERS OPTION ARE SELECTED TO BE ON. IF NOT, THEN SWITCH THEM ON BY USING THE RIGHT HAND SIDE ARROW AFTER SELECTING THEM INDIVIDUALLY.
- 5) PLACE SUBWOOFER 10 TO 12 FEET AWAY FROM TV SET, SUBWOOFER SHOULD FACE TV SCREEN.
- 6) TURN OFF THE TV SET.
- 7) PLUG WIRELESS SPEAKER SYSTEM POWER CORD INTO ELECTRICAL OUTLET TO POWER IT UP.
- 8) WHILE PRESSING AND HOLDING DOWN THE PAIRING (LINKING) SWITCH (BUTTON) AT THE BACK OF THE WOOFER, TURN THE TV SET ON USING THE REMOTE CONTROL.
- 9) THE LIGHT INDICATOR * ON FRONT OF SUBWOOFER WILL STOP FLASHING AND STAY ON, INDICATING THAT THE PAIRING HAS BEEN ACCOMPLISHED.
- 10) RELEASE THE PAIRING (LINKING) SWITCH (BUTTON) AND ENJOY THE SOUND.
- 11) IF PAIRING (LINKING) IS NOT SUCCESSFUL, PLEASE REPEAT STEPS 6) THRU 10).

*NOTE: PLEASE NOTICE THAT THE LIGHT INDICATOR REMAINS FLASHING AT SLOW RATE WHEN NO SIGNAL IS BEING FED TO THE WIRELESS SPEAKER SYSTEM.

**NOTE: IF WIRELESS TRANSMISSION INTERFERENCE OCCURS, SIMPLY TURN OFF AND THEN TURN ON THE TV FOR AUTOMATIC CHANNEL SCANNING OF NEXT AVAILABLE TRANSMISSION CHANNEL.

Optional Components



ENHANCE YOUR VIZIO EXPERIENCE.

When it comes to components and accessories, don't settle for less than VIZIO. We offer a full line of products specifically designed to accentuate your JV50P. To learn more about how you can enhance your VIZIO experience, call 888-849-4623 or visit www.VIZIO.com.



VIZIO HIGH-DEFINITION CERTIFIED CABLES

Our VIZIO Certified HD cables carry the same standards of excellence as all our VIZIO products. Available in: DVI, HDMI and Component in lengths of 2, 5, and 10 meters.



VIZIO CERTIFIED MOUNTS

FLUSH MOUNT- turn your HDTV into a work of art
TILT MOUNT- adjust your HDTV for the most comfortable viewing position
ARTICULATING ARM- position your HDTV exactly where you want it



EXTENDED SERVICE PLANS

For more information or to sign up for any VIZIO extended service plans call (800) 988-4196 or visit us online at:

www.VIZIO.com