



Dear VIZIO Customer,

Congratulations on your new VIZIO M420NV television purchase. To get the most out of your new VIZIO HDTV, read these instructions before making any adjustments, and retain them for future reference. We hope you will experience many years of enjoyment from your new VIZIO HDTV High Definition Television.

For assistance, call **877-MYVIZIO** (877-698-4946) or e-mail us at [www.VIZIO.com](http://www.VIZIO.com).

To purchase or inquire about accessories and installation services for your VIZIO HDTV, visit our website at [www.VIZIO.com](http://www.VIZIO.com) or call toll free at **888-849-4623**.

We recommend you register your VIZIO HDTV either at our website [www.VIZIO.com](http://www.VIZIO.com) or fill out and mail your registration card. For peace of mind and to protect your investment beyond the standard warranty, VIZIO offers on-site extended warranty service plans. These plans give additional coverage during the standard warranty period. Visit our website or call us to purchase a plan.

Write down the serial number located on the back of your HDTV for easy reference when obtaining warranty support:

Serial #: _____	Purchase Date _____
-----------------	---------------------

*VIZIO is a registered trademark of VIZIO, Inc. dba V, Inc.*

*HDMI logo and "High Definition Multimedia Interface" are registered trademarks of HDMI Licensing LLC.*

*Manufactured under license from Dolby Laboratories.*



*Dolby and the double-D symbol are trademarks of Dolby Laboratories.*



*TruSurround HD and TruVolume are trademarks of SRS Labs, Inc.*

*TruSurround HD and TruVolume technologies are incorporated under license from SRS Labs, Inc.*



This product qualifies for ENERGY STAR in the "factory default (Home Use)" setting and this is the setting in which power savings will be achieved. Changing the factory default picture setting or enabling other features will increase power consumption that could exceed the limits necessary to qualify for Energy Star rating.

**THE TRADEMARKS SHOWN HEREIN ARE THE PROPERTY OF THEIR RESPECTIVE OWNERS; IMAGES USED ARE FOR ILLUSTRATION PURPOSES ONLY. VIZIO, THE V LOGO, WHERE VISION MEETS VALUE AND OTHER VIZIO TRADEMARKS ARE THE INTELLECTUAL PROPERTY OF VIZIO INC. PRODUCT SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE. © 2010 VIZIO INC. ALL RIGHTS RESERVED.**

## Important Safety Instructions

Your HDTV is designed and manufactured to operate within defined design limits. Misuse may result in electric shock or fire. To prevent your HDTV from being damaged, the following rules should be observed for the installation, use, and maintenance of your HDTV. Read the following safety instructions before operating your HDTV. Keep these instructions in a safe place for future reference.

- To reduce the risk of electric shock or component damage, switch off the power before connecting other components to your HDTV.
- Unplug the power cord before cleaning your HDTV. A damp cloth is sufficient for cleaning your HDTV. Do not use a liquid or a spray cleaner for cleaning your HDTV. Do not use abrasive cleaners.
- Always use the accessories recommended by the manufacturer to insure compatibility.
- When moving your HDTV from an area of low temperature to an area of high temperature, condensation may form in the housing. Wait before turning on your HDTV to avoid causing fire, electric shock, or component damage.
- Use only with the cart, stand, tripod, bracket, or table specified by manufacturer or sold with your HDTV. When a cart is used, use caution when moving the cart/HDTV combination to avoid injury from tip-over. Do not place your HDTV on an unstable cart, stand, or table. If your HDTV falls, it can injure a person and cause serious damage to your HDTV. Use only a cart or stand recommended by the manufacturer or sold with your HDTV.
- A distance of at least three feet should be maintained between your HDTV and any heat source, such as a radiator, heater, oven, amplifier etc. Do not install your HDTV close to smoke. Operating your HDTV close to smoke or moisture may cause fire or electric shock.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of your HDTV and to protect it from overheating, be sure these openings are not blocked or covered. Do not place your HDTV in a bookcase or cabinet unless proper ventilation is provided.
- Never push any object into the slots and openings on your HDTV cabinet. Do not place any objects on the top of your HDTV. Doing so could short circuit parts causing a fire or electric shock. Never spill liquids on your HDTV.
- Your HDTV should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- Do not apply pressure or throw objects at your HDTV. This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.
- The power cord must be replaced when using different voltage than the voltage specified. For more information, contact your dealer.
- Your HDTV is equipped with a **three-pronged grounded plug (a plug with a third grounding pin)**. This plug will fit only into a grounded power outlet. This is a safety feature. If your outlet does not accommodate the three-pronged, have an electrician install the correct outlet, or use an adapter to ground your HDTV safely. **Do not defeat the safety purpose of the grounded plug.**
- When connected to a power outlet, power is always flowing into your HDTV. To totally disconnect power, unplug the power cord.



- The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of un-isolated, dangerous voltage within the inside of your HDTV that may be of sufficient magnitude to constitute a risk of electric shock to persons.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying your HDTV.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.



- The wall socket should be installed near your HDTV and easily accessible.
- Only power of the marked voltage can be used for your HDTV. Any other voltage than the specified voltage may cause fire or electric shock
- Do not touch the power cord during lightning. To avoid electric shock, avoid handling the power cord during electrical storms.
- Unplug your HDTV during a lightning storm or when it will not be used for long period of time. This will protect your HDTV from damage due to power surges.
- Do not attempt to repair or service your HDTV yourself. Opening or removing the back cover may expose you to high voltages, electric shock, and other hazards. If repair is required, contact your dealer and refer all servicing to qualified service personnel.
- Keep your HDTV away from moisture. Do not expose your HDTV to rain or moisture. If water penetrates into your HDTV, unplug the power cord and contact your dealer. Continuous use in this case may result in fire or electric shock.
- Do not use your HDTV if any abnormality occurs. If any smoke or odor becomes apparent, unplug the power cord and contact your dealer immediately. Do not try to repair your HDTV yourself.
- Avoid using dropped or damaged appliances. If your HDTV is dropped and the housing is damaged, the internal components may function abnormally. Unplug the power cord immediately and contact your dealer for repair. Continued use of your HDTV may cause fire or electric shock.
- Do not install your HDTV in an area with heavy dust or high humidity. Operating your HDTV in environments with heavy dust or high humidity may cause fire or electric shock.
- Follow instructions for moving your HDTV. Ensure that the power cord and any other cables are unplugged before moving your HDTV.
- When unplugging your HDTV, hold the power plug, not the cord. Pulling on the power cord may damage the wires inside the cord and cause fire or electric shock. When your HDTV will not be used for an extended period of time, unplug the power cord.
- To reduce risk of electric shock, do not touch the connector with wet hands.
- Insert batteries in accordance with instructions. Incorrect polarities may cause the batteries to leak which can damage the remote control or injure the operator.
- If any of the following occurs, contact the dealer:
  - The power cord fails or frays.
  - Liquid sprays or any object drops into your HDTV.
  - Your HDTV is exposed to rain or other moisture.
  - Your HDTV is dropped or damaged in any way.
  - The performance of your HDTV changes substantially.

## Television Antenna Connection Protection

### External Television Antenna Grounding

If an outside antenna/satellite dish or cable system is to be connected to the TV, make sure that the antenna or cable system is electrically grounded to provide some protection against voltage surges and static charges.


Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of the grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements of the grounding electrode.

### Lightning Protection

For added protection of the TV during a lightning storm or when it is left unattended or unused for long periods of time, unplug the TV from the wall outlet and disconnect the antenna or cable system.

### Power Lines

Do not locate the antenna near overhead light or power circuits, or where it could fall into such power lines or circuits.

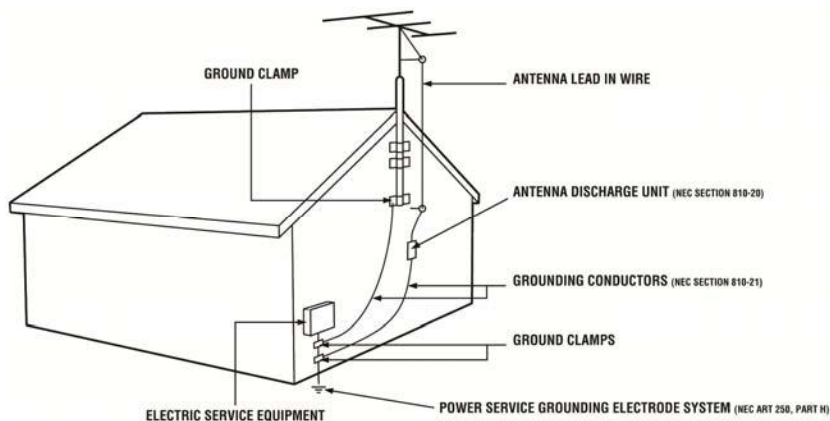

**Remember, the screen of the coaxial cable is intended to be connected to earth in the building installation.**

## Advisory of the DTV Transition

The nationwide switch to digital television broadcasting will be complete on June 12, 2009, but your local television stations may switch sooner. After the switch, analog-only television sets that receive TV programming through an antenna will need a converter box to continue to receive over-the-air TV. Watch your local stations to find out when they will turn off their analog signal and switch to digital-only broadcasting. Analog-only TVs should continue to work as before to receive low power, Class A or translator television stations and with cable and satellite TV services, gaming consoles, VCRs, DVD players, and similar products.

For additional information, contact the parties listed below, as appropriate:

FCC (US Federal Communications Commission)

<http://www.fcc.gov/>

Phone: 1-888-CALL-FCC (1-888-225-5322)

TTY: 1-888-TELL-FCC (1-888-835-5322)

Fax: 1-866-418-0232

E-mail: [fccinfo@fcc.gov](mailto:fccinfo@fcc.gov)

NTIA (National Telecommunications and Information Administration)

<http://www.ntia.doc.gov/>

1-888-DTV-2009

Listings of US Television Stations

<http://www.high-techproductions.com/usTVstations.htm>

**Note:** Your VIZIO HDTV is capable of receiving Digital Broadcasts, and no Digital Converter Box is required.

## Table of Contents

Important Safety Instructions.....	2
Television Antenna Connection Protection .....	4
Advisory of the DTV Transition.....	5
<b>CHAPTER 1 SETTING UP YOUR HDTV .....</b>	<b>11</b>
Attaching the TV Stand.....	12
Wall Mounting your HDTV .....	13
<b>CHAPTER 2 BASIC CONTROLS AND CONNECTIONS.....</b>	<b>14</b>
Front Panel.....	14
Jag Wheel Control.....	14
Side Panel Connections.....	15
Rear Panel Connections.....	15
<b>CHAPTER 3 VIZIO REMOTE CONTROL .....</b>	<b>16</b>
Installing the Batteries .....	16
Remote Control Range.....	16
VIZIO Remote Control Precautions.....	16
Remote Control Buttons .....	17
<b>CHAPTER 4 GETTING STARTED.....</b>	<b>18</b>
<b>CHAPTER 5 USING YOUR HDTV FOR THE FIRST TIME .....</b>	<b>19</b>
Select Input Source .....	19
Watching a TV Program .....	19
Viewing Digital TV Program Information .....	20
<b>CONNECTING EQUIPMENT .....</b>	<b>21</b>
Which Video Connection Should I Use? .....	21
Connecting Your Cable or Satellite Box.....	22
Using HDMI (Best).....	22
HDMI Connections for Cable or Satellite Boxes with DVI .....	22
Using Component Video (Better).....	23
Using Composite Video (Good) .....	23
Using Coaxial (Antenna) (Good).....	23
Connecting Your DVD Player.....	24
Using HDMI (Best).....	24
HDMI Connections for DVD Players with DVI .....	24
Using Component Video (Better).....	25
Using Composite (AV) Video (Good).....	25
Connecting Coaxial (RF) .....	26
Using Your Antenna or Digital Cable for Standard or Digital TV .....	26
Connecting Your VCR or Video Camera.....	26
Connecting a Home Theater System .....	27
Using RCA.....	27
Connecting the cables .....	27
Turning TV speakers off.....	27
Using Optical (S/PDIF) .....	27
Connecting a Computer.....	28
RGB (VGA) .....	28
Using HDMI.....	28

**CHAPTER 6 ENJOYING MULTIMEDIA ..... 29**

- Supported File Formats ..... 29
- Accessing Multimedia Content ..... 30
- Adjusting Photo Settings ..... 31
  - Slideshow Mode..... 31
  - Slideshow With Music..... 31
  - Audio Mode ..... 31
  - Repeat..... 31
  - Sort By ..... 31
  - Duration ..... 31
  - Slideshow Effect ..... 31
  - Thumbnail Size ..... 31
  - Info ..... 31
- Music Settings ..... 32
  - Sort By ..... 32
  - Play Mode ..... 32
  - Repeat..... 32
  - Audio Mode ..... 32
  - Info ..... 32
- Video Settings ..... 33
  - Sort By ..... 33
  - Play Mode ..... 33
  - Repeat..... 33
  - Picture Mode ..... 33
  - Wide Format ..... 33
  - Audio Mode ..... 33
  - Info ..... 33

**CHAPTER 7 ADJUSTING YOUR HDTV SETTINGS..... 34**

- Using the On-screen Display (OSD) ..... 34
- Input Menu..... 34
- Wide Menu ..... 35
  - Normal..... 35
  - Wide ..... 35
  - Zoom ..... 35
  - Panoramic..... 35
  - Stretch..... 35
- CC (Closed Caption) Menu ..... 36
  - Analog Closed Caption ..... 36
  - Digital Closed Caption ..... 36
  - Digital CC Style..... 36
- Sleep Timer Menu ..... 36
- Picture Menu ..... 36
  - Picture Mode ..... 36
  - Backlight ..... 36
  - Brightness ..... 36
  - Contrast ..... 37
  - Color..... 37
  - Tint ..... 37
  - Sharpness..... 37
  - More ..... 37
- PIP Menu..... 39
  - PIP Mode ..... 39
  - Source..... 39
  - Position ..... 39

Size .....	39
Audio .....	39
Settings Menu .....	40
Audio .....	40
Tuner .....	42
Tuner .....	42
Name Input .....	43
Parental Controls .....	43
Menu Language .....	45
Time & Local Settings .....	45
CEC .....	46
Media Menu .....	46
Adjusting Photo Settings .....	47
Slideshow Mode .....	47
Slideshow With Music .....	47
Audio Mode .....	47
Repeat .....	47
Sort By .....	47
Duration .....	47
Slideshow Effect .....	47
Thumbnail Size .....	47
Info .....	47
Music Settings .....	48
Sort By .....	48
Play Mode .....	48
Repeat .....	48
Audio Mode .....	48
Info .....	48
Video Settings .....	49
Sort By .....	49
Play Mode .....	49
Repeat .....	49
Picture Mode .....	49
Wide Format .....	49
Audio Mode .....	49
Info .....	49
Help Menu .....	50
System Info .....	50
Reset TV Settings .....	50
Clear Memory (Factory Default) .....	50
Start Setup Wizard .....	50
<b>CHAPTER 8 PROGRAMMING THE VIZIO UNIVERSAL REMOTE CONTROL .....</b>	<b>51</b>
Using a Cable or Satellite Box Remote .....	51
Programming other devices .....	51
Programming your Blu-Ray or DVD Player .....	51
Programming your Home Theater System .....	51
Programming your Cable or Satellite Set-Top Box .....	52
Searching for Device Codes .....	52
Reset Remote to Factory Settings .....	52
Remote Control Codes .....	53
Television Codes .....	53
Cable Box Codes .....	59
Satellite Receiver Codes .....	60
PVR Codes .....	61
DVD Player Codes .....	61



Amplifier / Receiver / Tuner Codes .....	63
Audio Accessory Codes .....	65
VCR Codes .....	65
<b>CHAPTER 9 MAINTENANCE AND TROUBLESHOOTING .....</b>	<b>67</b>
Cleaning the TV and Remote Control .....	67
Troubleshooting Guide .....	67
Telephone & Technical Support .....	70
Compliance .....	71
FCC Class B Radio Interference Statement .....	71
<b>CHAPTER 10 SPECIFICATIONS .....</b>	<b>72</b>
Specifications .....	72
Preset PC Resolutions .....	74
Resolution through RGB Input .....	74
<b>WARRANTY .....</b>	<b>75</b>
<b>INDEX .....</b>	<b>76</b>

## Opening the Package

Your HDTV and its accompanying accessories are carefully packed in a cardboard carton that has been designed to protect it from transportation damage. After you have opened the carton, check that your HDTV is in good condition and that all of the contents are included.

The screen can easily be scratched or broken, so handle your HDTV gently and never place your HDTV with the glass facing downwards on a surface without protective padding.

**IMPORTANT:** Save the carton and packing material for future shipping.

## Package Contents

- VIZIO M420NV
- VIZIO remote control VUR12
- AAA batteries for the remote control (2)
- Power cord
- Detachable base with thumbscrew
- Safety Strap
- Quick Setup Guide
- Registration Card



## HDTV Accessories and Services

**Additional certified accessories for your HDTV are sold separately, including:**

- Wall mounts
- High Definition cables
- Extra or replacement remote controls
- Sound Bars
- Blu-ray DVD Players

VIZIO also offers installation services and extended warranty services for your HDTV.

To purchase or inquire about additional accessories and services for your VIZIO HDTV, visit our website at [www.VIZIO.com](http://www.VIZIO.com) or call us toll free at **877-MYVIZIO** (877-698-4946).

**Caution:** Do not apply pressure or throw objects at your HDTV (including game controllers). This may compromise the integrity of the display. The manufacturer's warranty does not cover user abuse or improper installations.

## Chapter 1 Setting Up Your HDTV

- Read this user manual carefully before installing your HDTV.
- The power consumption of your HDTV is about 75W average. When an extension cord is required, use one with the correct power rating. The cord must be grounded and the grounding feature must not be compromised.
- Install your HDTV on a flat surface to avoid tipping.
- For proper ventilation, you must allow a 1" space between the back of your HDTV and the wall.
- Avoid installing your HDTV in places with high humidity, dust, or smoke so you do not shorten the service life of the electronic components.
- Install your HDTV in a level, landscape orientation, with the VIZIO logo at the bottom to prevent poor ventilation and excessive component damage.
- If you want to mount your HDTV on the wall, see below for additional information.
- Read this user manual carefully before installing your HDTV.

VIZIO offers professional installation services including home networking. Contact VIZIO for more information on these services at **877-MYVIZIO** (877-698-4946) or [www.VIZIO.com](http://www.VIZIO.com).

## Attaching the TV Stand

**Note:** We strongly recommend that two people perform the setup and assembly due to the weight and size of the TV.

### Unpack the TV and stand base:

1. Remove the remote control, batteries, and power cord from the foam end caps.
2. Remove the two top foam end caps.
3. Remove the stand base from packaging.
4. Remove the TV from the box and lay it face down on a clean, padded, flat surface.

**Note:** Make sure that the surface is free of debris to prevent the TV screen from getting scratched.

### Attach the TV stand base:

1. Align the stand base to the back of the TV.
2. Insert the four screws provided and tighten.



## Wall Mounting your HDTV


Your HDTV can be mounted on the wall for viewing. If you choose to mount your HDTV on the wall, follow the instructions below.

1. Write down the serial number located on the back of your HDTV in the space provided on page 1 to have it handy if you need to call for support.

2. Remove the stand base and neck:
  - a. Disconnect the cables from your HDTV.
  - b. Place your HDTV face down on a soft, flat surface to prevent damage to the screen.
  - c. Remove the four (4) screws holding the stand neck, and then remove the neck and base.

**Note:** To remove the base from the neck, unscrew thumbscrew on bottom.

3. Mount your HDTV on the wall:
  - a. Attach your HDTV to a wall mount (sold separately) using the mounting holes in the back panel of your HDTV.
  - b. Read the instructions that came with your specific wall mount to properly hang your HDTV.

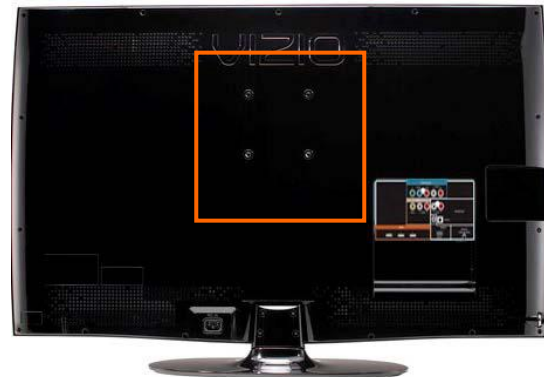

Wall Mounting Specifications	
Screw Size	M6
Screw Length	20.0 mm
Screw Pitch	1.0 mm
Hole Pattern	VESA standard 200 x 200 mm spacing

## Chapter 2 Basic Controls and Connections

### Front Panel

1. **Remote Control Sensor**—Point the remote control directly at this window on the lower left corner of your HDTV for the best response to the remote signal.
2. **POWER 'VIZIO' LIGHT**—The VIZIO name lights white when powered on and orange when powered off.



### Jag Wheel Control

The Jag wheel on the side of your HDTV performs all of the same functions you might see as buttons on other TVs, including volume, power, and channel change. All of these functions have been combined into a single wheel on your M420NV.

- Press the Jag wheel once to turn your HDTV on.
- Press and hold the Jag wheel for three seconds to turn your HDTV off.
- When watching TV, scroll the Jag wheel up and down to turn the volume up and down.
- To open the Quick Menu, press the Jag wheel for two seconds, scroll the wheel up and down to highlight an option, and then press in the wheel again to confirm your selection. If you do not press anything, the menu will automatically close after 10 seconds.




- **Volume**—Press to increase or decrease the speaker volume.
- **Channel**—Press to open a channel list. Choose the channel with the wheel and then press the wheel to go to that channel.
- **Input Source**—Press to cycle through the various devices connected to your TV (called Inputs). The inputs cycle in the following sequence: TV, AV, Comp, HDMI-1, HDMI-2, *HDMI-3*, HDMI SIDE, RGB, and Media. After you have stepped through the entire sequence, you will return to the beginning.
- **Exit**—Press to close the Quick Menu.
- **Power Off**—Press to turn your HDTV off.




**Note:** The Jag wheel does not operate in the OSD menu. Please use your remote control to change your HDTV settings.

## Side Panel Connections

1. **USB:**
  - Insert a FAT/FAT32 formatted USB drive to view pictures.
  - Service port for use by a professional service technician.
2. **HDMI SIDE**—Connect digital video devices such as a DVD player or Set-Top Box through this all digital connector. There are additional HDMI connectors on the back.

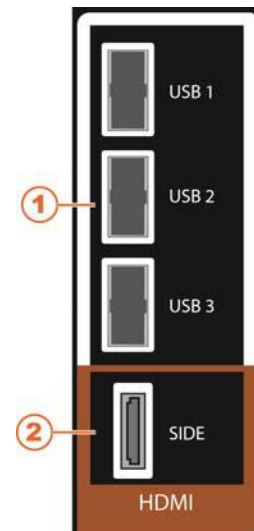

## Rear Panel Connections

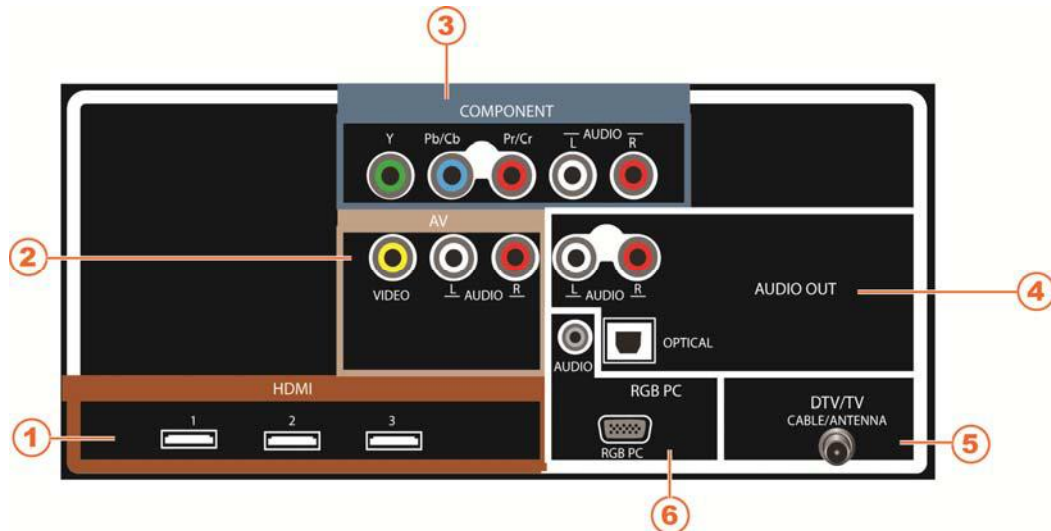

1. **HDMI 1, 2, and 3**—Connect digital video devices such as a DVD player or Set-Top Box through this all digital connector. There is an additional HDMI connector on the side.
2. **AV**—Connect Composite video devices, such as a VCR or game console. Use the white and red connectors to connect the external audio from the same source.
3. **COMPONENT (Y Pb/Cb Pr/Cr with L/R Audio)**—Connect Component video devices such as a DVD Player or Set Top Box here.
4. **AUDIO OUT:**
  - **OPTICAL**—When digital TV is selected for viewing, the audio associated with the programming will be available on the S/PDIF Optical connector for connection to a VIZIO Sound Bar or your Home Theater system.
  - **ANALOG L/R**—Connect the audio from the HDTV to an external device, such as a Home Theater System, external amplifier, or stereo. Speakers cannot be connected directly here.
5. **DTV/TV**— Connect to an antenna or digital cable source. For digital TV stations in your area visit [www.antennaweb.org](http://www.antennaweb.org). For Cable and Satellite Set Top Boxes, we recommend that you use a HDMI or Component cable connection for high definition image quality.
6. **RGB PC**—Connect the video and audio from a computer here. Connect a 1/8" mini plug stereo connector from the computer to the TV if you want the sound to come from the HDTV speakers.

## Chapter 3 VIZIO Remote Control

### Installing the Batteries

1. Remove the battery cover.
2. Insert two AAA batteries into the remote control. Make sure that you match the (+) and (-) symbols on the batteries with the (+) and (-) symbols inside the battery compartment.
3. Replace the battery cover.



#### Precautionary Tips for Inserting the Batteries:

- Only use AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage that may cause a fire or lead to personal injury.
- Inserting the batteries incorrectly may also result in cracking or leakage that may cause a fire or lead to personal injury.
- Dispose of batteries according to local hazardous waste regulations.
- Keep the batteries away from children and pets.

### Remote Control Range

- Point the remote control directly at this sensor for the best response to the remote signal.
- Do not place any obstacles between the remote control and the remote control sensor.
- The effective range of the remote control is approximately 22 feet (7 meters) from the front of the remote control sensor, 30° to the left and right, 20° up and down.




### VIZIO Remote Control Precautions

- The remote control should be kept dry and away from heat sources. Avoid humidity.
- If the TV responds erratically to the remote control or does not respond at all, check the batteries. If the batteries are low or exhausted, replace them with fresh batteries.
- When not using the remote control for a long period of time, remove the batteries.
- Do not take the batteries apart, heat them, or throw them into a fire.
- Do not subject the remote control to undue physical stress, such as striking or dropping it.
- Do not attempt to clean the remote control with a volatile solvent. Wipe it with a clean, damp cloth.



## Remote Control Buttons

**POWER** (  )—Press to turn the TV on from the Standby mode. Press it again to return to the Standby mode.

### Device Buttons:

- **DVD**—Press to select a DVD player that has been programmed to work with this remote.
- **AUDIO**—Press to select a Home Theater System or Audio Amplifier that has been programmed to work with this remote.
- **CABLE**—Press to select a Cable or Satellite Set Top Box that has been programmed to work with this remote.
- **TV**—Press to return to TV mode. If the remote is not working, press this button to return the functions back to TV.

### CEC-Supported Buttons:

CEC needs to be set up and enabled for these buttons to work. See CEC on page 46 for more information.

- (Record)—Press to begin recording on your CEC-supported device.
- ⏸ (Pause)—Press to pause playback on your CEC-supported device.
- ▶ (Play)—Press to start Playback on your CEC-supported device.
- (Stop)—Press to stop playback/recording on your CEC-supported device.
- ⏮ (Previous)—Press to skip the previous track on your CEC-supported device.
- ◀◀ (Reverse)—Press to reverses playback on your CEC-supported device.
- ▶▶ (Fast Forward)—Press to fast forward playback on your CEC-supported device.
- ⏭ (Next)—Press to skip to the next chapter on your CEC-supported device.

**EXIT**—Press to exit from open menus.

**MENU**—Press to open the On-Screen Display (OSD) menu.

**OK**—Press this button to display the Channel List. Press to confirm selections for On-Screen Display (OSD) menus.

▲ ▼ ◀ ▶—Press to navigate the OSD menu. They will also be used as value settings when the slide bar is shown on the screen and option settings to turn a feature off or on.

**BACK**—Press to return to a previous OSD menu. Press repeatedly to close the OSD.

**GUIDE**—Press to display detailed program information when viewing a digital TV program.

### Color Buttons (Yellow, Blue, Red, & Green):

- **Yellow**—This button performs the same function as the “A” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.
- **Blue**—This button performs the same function as the “B” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.
- **Red**—This button performs the same function as the “C” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.
- **Green**—This button performs the same function as the “D” button on your Cable or Satellite box when using the remote to control your pre-programmed Cable/Satellite Box DVR.

**VOL +/-** —Press to turn the volume up or down.

**MEDIA** – Use this button to access the USB drive to view your pictures.



**MUTE**—Press to turn the sound on and off.

**LAST**— Press to recall the previously viewed channel.

**CH +/-** —Press to change the channels up or down

**HDMI**—Press to select the HDMI input. Press repeatedly to cycle between both HDMI inputs.


**AV**—Press to select the AV input.

**TV**—Press to select the TV input.

**Number Button Pad**—Press to select a channel or enter a password.

**INPUT**—Press to cycle through the various devices connected to your TV (called Inputs). The inputs cycle in the following sequence: TV, AV, Comp, HDMI-1, HDMI-2, HDMI-3, HDMI SIDE, RGB, and Media. After you have stepped through the entire sequence, you will return to the beginning.


- (**DASH**)—Press to insert a dash between the main and sub-channels. For example, channel 28-2 would be selected by the button sequence 2, 8, DASH, 2.

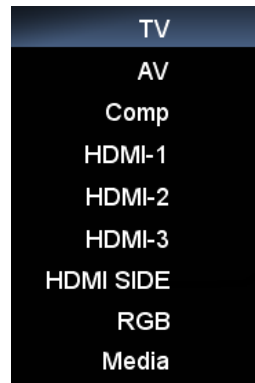

## Chapter 4 Getting Started

Your HDTV has a built-in setup App that runs when you turn on your TV for the first time. Follow the on-screen directions to easily setup your new HDTV.

1. Insert the batteries into the remote control.
2. Connect the power cord to the power cord connector on the back of your HDTV, and then plug the power cord into an AC wall socket.
3. Connect your devices to your HDTV (see Chapter 2 for detailed steps).
4. Turn on your TV. The Setup App will automatically play and guide you thru the initial setup of your HDTV. Use the Arrow and OK buttons to navigate through the setup App. During the setup process you will:
  - Choose your Menu language
  - Set the TV to Home Mode for the best picture and most efficient energy usage.
  - Set your Time Zone and Daylight Savings preferences
  - Add your TV channels (unless you have a Cable/Satellite Set-Top Box)

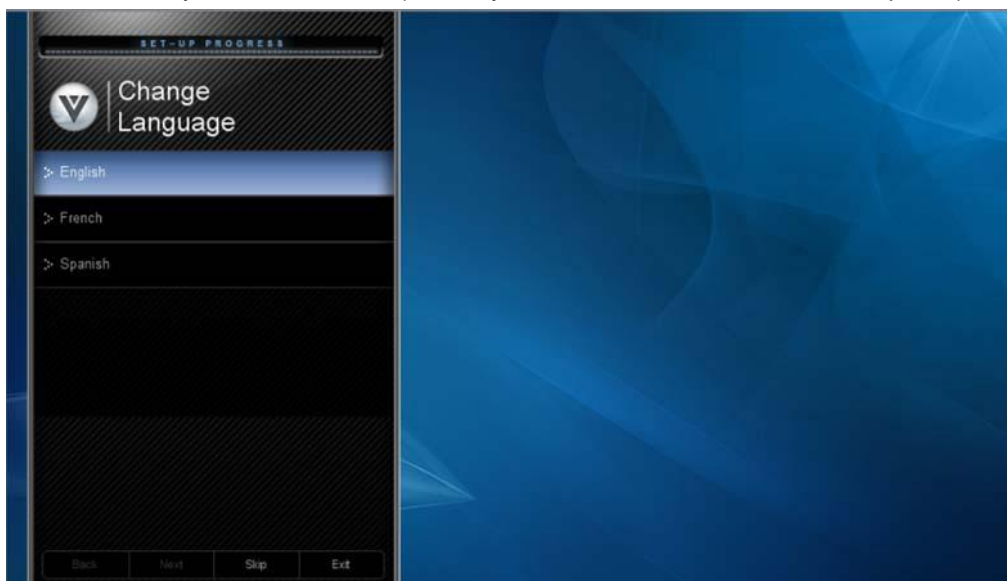


## Chapter 5 Using your HDTV for the first time

### Select Input Source

Select the input source for your HDTV by pressing the **INPUT** button on the remote control or the side of your TV. Pressing this button will cycle you through the following options: TV, AV, Comp, HDMI-1, HDMI-2, HDMI-3, HDMI SIDE, RGB, and Media.

Turn on your device and you will see a picture on your HDTV. If there is no picture, make sure you have selected the correct input on your HDTV.

**Note:** If the selected device is RF connected, your HDTV must be in **TV** mode and on either channel 3 or channel 4 matching the channel which has been selected on the back of the VCR, Cable Box, External TV Tuner or Satellite Receiver. Refer to Owner or User's Manual of such equipment for details.

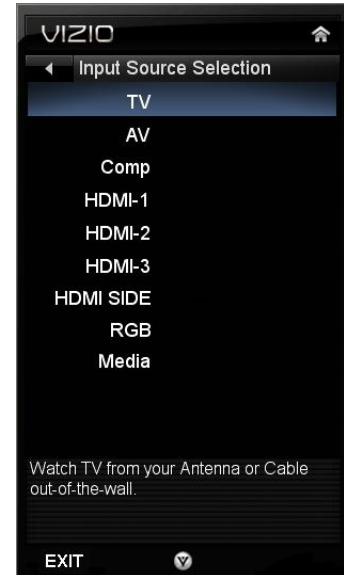

### Watching a TV Program

Before you start watching TV, make sure that any Cable, Satellite or off-air antenna connections are secure. Also, verify that the power cord is plugged into a correctly grounded electrical outlet or surge protector.

1. Press the power button on the remote control. The VIZIO logo on the front will light up white.
2. Select the input to which your device is connected that provides TV programming (e.g. TV, HDMI, COMP).

**Note:** You should be able to see a picture. If you do not, make sure that all of your HDTV connections are secure and you have selected the correct video input source. Each press of the **INPUT** button on the remote control will cycle through the available inputs. Press the button until the input associated with the device you want to view is shown.


3. When using the TV input, press the channel buttons on the remote control or press the Jag wheel on the TV to launch the Quick Menu to change the channel. The channel buttons will not work if you are watching a program using HDMI, Component, or AV inputs.

**Note:** If your HDTV is in **TV** mode, pressing **CH+** and **CH-** will not work until a channel scan has been run. See **Error! Reference source not found.** on page 42.

## Viewing Digital TV Program Information

When the channel is changed or when you press the **GUIDE** button, an information header is shown over the picture for a few seconds. Press **GUIDE** again to display more information about the program and schedule.

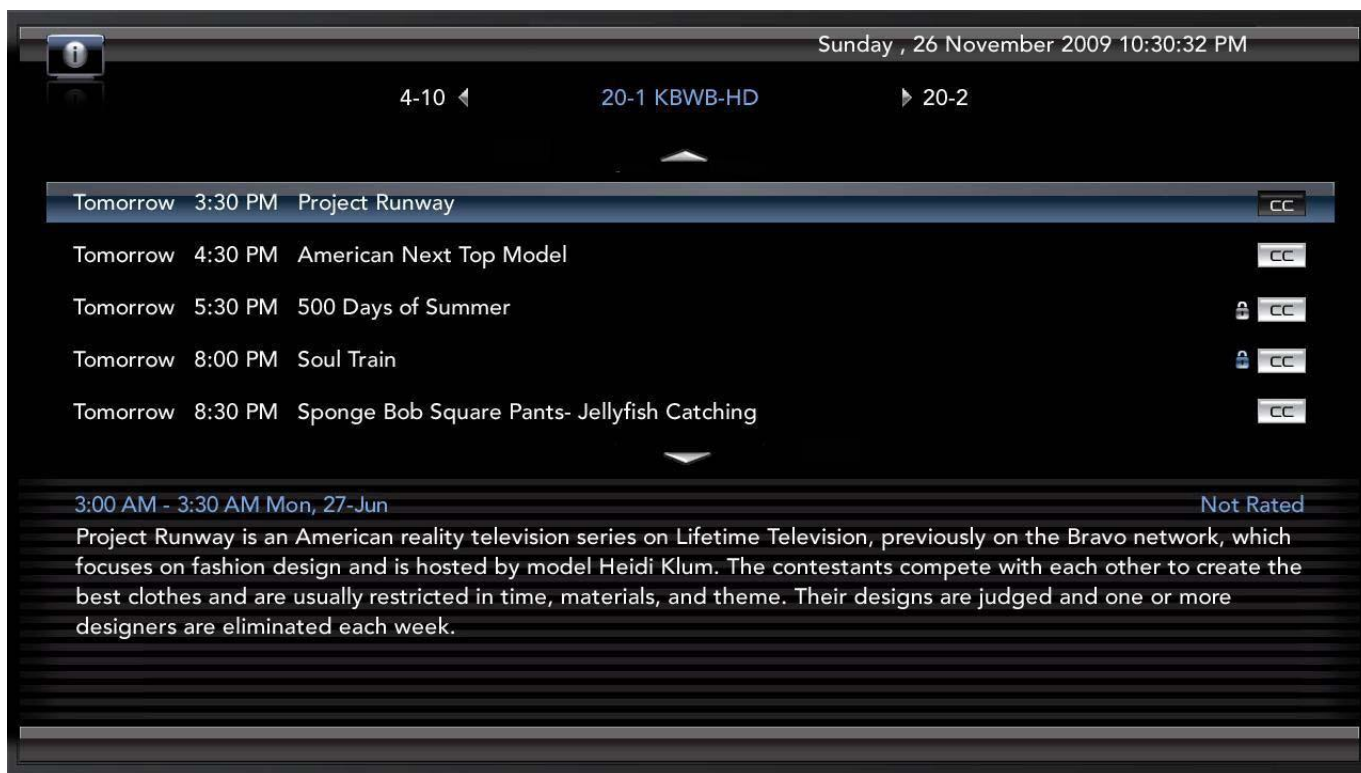




Time Warp: Mouse Trap			Ch 50-123	KCAL DTV	CABLE
11:00 AM - 12:00 AM	TV-PG (V)	CC-OFF	ENGLISH	DOLBY 5.1	720p HD
In this hour-long special, the Time Warp team runs off to join the circus with trap-testing Rev. Tommy Gunn and with high-flying Cirque du Soleil, explore their inner stuntmen, and put everything but wood in a chipper.					



## Connecting Equipment
  
### Which Video Connection Should I Use?

You have six options for connecting your video equipment box to your HDTV from a basic connection to the most advanced for digital displays. Based on your Home Theater configuration, you can decide which option is the right one for you.

Connection Quality (type)	Connector	Description
Best (digital)	 HDMI	<b>HDMI</b> delivers the best image quality of any of the cable types available and it's all done over one cable. You get a great picture and cut down on your cable clutter. HDMI provides digital quality and amazing sound so if your TV has HDMI, this is the connection type you should be using.
Best (digital) ----- Good (analog)		Connect your <b>antenna</b> or <b>coaxial</b> cable to watch TV programming. This cable usually comes from your Cable box or right out of the wall.
Best (analog)	 VGA	The <b>RGB (VGA)</b> port allows you to connect your computer so you can use the TV as your monitor.
Better (analog)	 Y Pb L Pr R	<b>Component</b> consists of three cables for transmitting video and two cables for transmitting audio: one red and one white. Component video provides a sharper image than Composite video and should be used instead of Composite when possible. However, because it is still an analog connection, it won't provide the high-quality video and audio that HDMI can produce.
Good (analog)	 VIDEO L R	<b>Composite</b> consists of one yellow cable for transmitting video and two cables for transmitting audio: one red and one white. It is capable of transmitting stereo sound and standard definition video (480i). While it provides a good image, it has lower image quality than HDMI or Component. So try to use one of those connections first.

**Note:** To maintain the display quality, use a VIZIO certified HDMI cable. This cable is available in 6, 8, and 12 foot lengths. Visit [www.vizio.com](http://www.vizio.com) or call 1-888-VIZIOCE (1-888-849-4623) for details.

## Connecting Your Cable or Satellite Box

### Using HDMI (Best)



Cable and Satellite Boxes that have a HDMI digital interface should be connected using HDMI for optimal results. To maintain image quality, use a VIZIO certified HDMI cable. This cable is available in 6, 15, and 30 foot lengths. Visit [www.VIZIO.com](http://www.VIZIO.com) or call **877-MYVIZIO** (877-698-4946) for details.

1. Turn off your HDTV and Cable/Satellite box.
2. Connect an HDMI cable to the **HDMI** output of your Cable/Satellite box and the other end to the **HDMI 1, 2, 3, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your Cable/Satellite box.
4. Select **HDMI-1, HDMI-2, HDMI-3, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

#### Note:

- The HDMI input on your HDTV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- Refer to your Cable/Satellite Set Top Box user manual for more information about the video output requirements of the product or consult your Cable or Satellite operator.



### HDMI Connections for Cable or Satellite Boxes with DVI



1. Turn off your HDTV and Cable/Satellite box.
2. Using a HDMI-DVI cable, connect the DVI end to your Cable/Satellite box and the HDMI end to the **HDMI 1, 2, 3, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your Cable/Satellite box.
4. Select **HDMI-1, HDMI-2, HDMI-3, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.



**Note:** There are no dedicated audio ports for HDMI so there may or may not be audio from the TV with this connection.

### Using Component Video (Better)

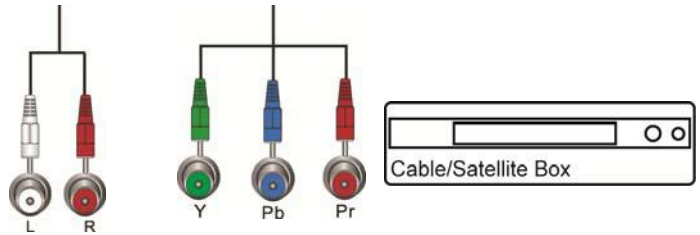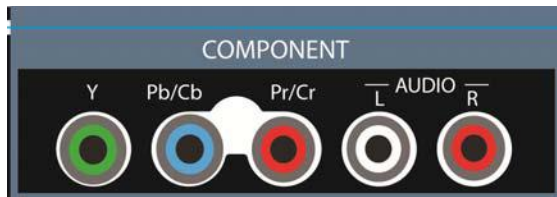

1. Turn off your HDTV and Cable/Satellite box.
2. Connect the Component cables (green, blue, and red) from your Cable/Satellite box to the **COMPONENT** jacks on your HDTV.
3. Connect the audio cables (white and red) from your Set Top Box to the **COMPONENT L and R AUDIO** jacks on your HDTV.
4. Turn on your HDTV and Cable/Satellite box.
5. Select **Comp** using the **INPUT** button on the remote control or side of the TV.

### Using Composite Video (Good)

 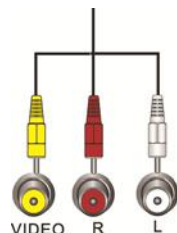


1. Turn off your HDTV and Set Top Box.
2. Connect the video cable (yellow) from your Set Top Box to the **AV** jack (yellow) on your HDTV.
3. Connect the audio cables (white and red) on your Set Top Box to the **AV L and R AUDIO** jacks on your HDTV.
4. Turn on your HDTV and Set Top Box.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

### Using Coaxial (Antenna) (Good)




 
COAXIAL



1. Turn off the power to your HDTV.
2. Connect the coaxial (RF) connector from your antenna or digital cable to the **DTV/TV CABLE/ANTENNA** connector on your HDTV.
3. Turn on the power to your HDTV.
4. Select **TV** using the **INPUT** button on the remote control or side of the TV.
5. Search for new channels. See Auto Channel Scan on page 42 for more information on scanning for channels.

## Connecting Your DVD Player
 
### Using HDMI (Best)

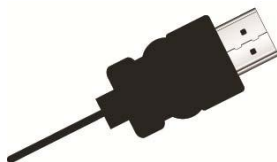


DVD players that have a HDMI digital interface should be connected using HDMI for optimal results. To maintain image quality, use a VIZIO certified HDMI cable. This cable is available in 6, 15, and 30 foot lengths. Visit [www.VIZIO.com](http://www.VIZIO.com) or call **877-MYVIZIO** (877-698-4946) for details.

1. Turn off your HDTV and DVD player.
2. Connect a HDMI cable to the HDMI output of your DVD player and the other end to the **HDMI 1, 2, 3, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your DVD player.
4. Select **HDMI-1, HDMI-2, HDMI-3, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

**Note:**

- The HDMI input on your HDTV supports High-bandwidth Digital Content Protection (HDCP). HDCP encrypts the transmission between the video source and the digital display for added security and protection.
- Refer to your DVD player user manual for more information about the video output requirements.

### HDMI Connections for DVD Players with DVI

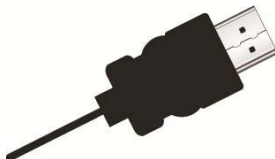


1. Turn off your HDTV and DVD player.
2. Using a HDMI-DVI cable, connect the DVI end to your DVD player and the HDMI end to the **HDMI 1, 2, 3, or HDMI SIDE** jack on your HDTV.
3. Turn on the power to your HDTV and your DVD player.
4. Select **HDMI-1, HDMI-2, HDMI-3, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

**Note:** There are no dedicated audio ports for HDMI so there may or may not be audio from the TV with this connection.




### Using Component Video (Better)

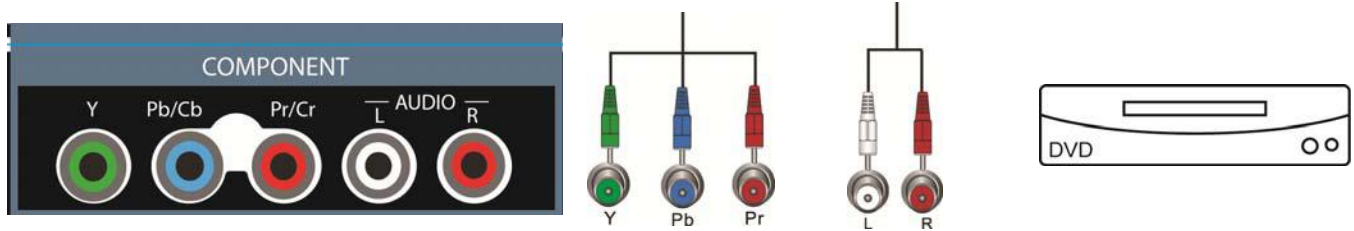

1. Turn off the power to your HDTV and DVD player.
2. Connect the Component cable (green, blue, and red) from your DVD player to the **COMPONENT** jacks on your HDTV.
3. Connect the audio cables (white and red) from your DVD player to the **COMPONENT L and R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and DVD player.
5. Select **COMP** using the **INPUT** button on the remote control or side of the TV.

### Using Composite (AV) Video (Good)

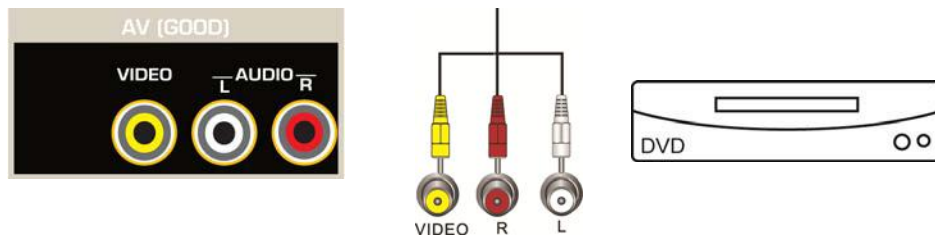


1. Turn off the power to your HDTV and DVD player.
2. Connect the Video cable (yellow) from your DVD player to the **AV** jack on your HDTV.
3. Connect the audio cables (white and red) on your DVD player to the **AV L and R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and DVD Player.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

## Connecting Coaxial (RF)
 
### Using Your Antenna or Digital Cable for Standard or Digital TV





COAXIAL



1. Turn off the power to your HDTV.
2. Connect the coaxial (RF) connector from your antenna or cable to the **DTV/TV CABLE/ANTENNA** connector on your HDTV.
3. Turn on the power to your HDTV.
4. Select **TV** using the **INPUT** button on the remote control or side of the TV.
5. Search for new channels. See Auto Channel Scan on page 42 for more information on scanning for channels.

## Connecting Your VCR or Video Camera

 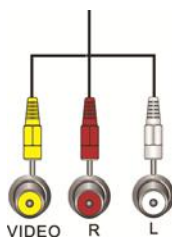


**Note:** Refer to your VCR or Video Camera user manual for more information about the video output requirements of the product.

1. Turn off the power to your HDTV and VCR or video camera.
2. Connect the yellow AV cable from your VCR or video camera to the **AV** jack on your HDTV.
3. Connect the audio cables on your VCR or video camera to the corresponding **L** and **R AUDIO** jacks on your HDTV.
4. Turn on the power to your HDTV and VCR or video camera.
5. Select **AV** using the **INPUT** button on the remote control or side of the TV.

## Connecting a Home Theater System

### Using RCA

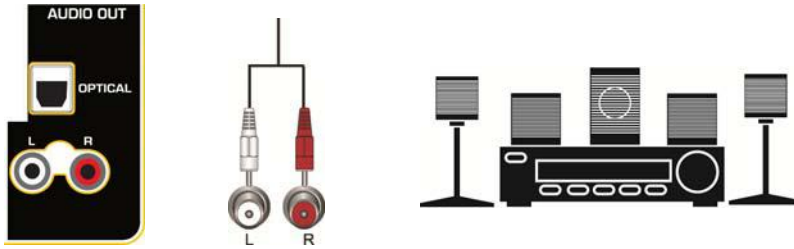

#### Connecting the cables


1. Turn off the power to the HDTV and Receiver/Amp.
2. Using an audio cable (white and red connectors), connect the cable to the audio input connectors on the Receiver/Amp and connect the other end to the **AUDIO OUT** audio connectors on the back of the HDTV.
3. Turn on the power to the HDTV and Receiver/Amp.

#### Turning TV speakers off

1. Press **MENU** to open the OSD.
2. Press **▼** to highlight *Settings*, and then press **OK** to select.
3. Press **OK** to select *Audio*, and then press **▼** to select **TV SPEAKERS**.
4. Press **▶** to select **OFF** so the sound from the HDTV will be routed through your Receiver/Amp system.

#### Notes:

- Refer to your Receiver/Amp user manual to select the corresponding audio input.
- The audio output is not amplified and cannot be connected directly to external speakers.

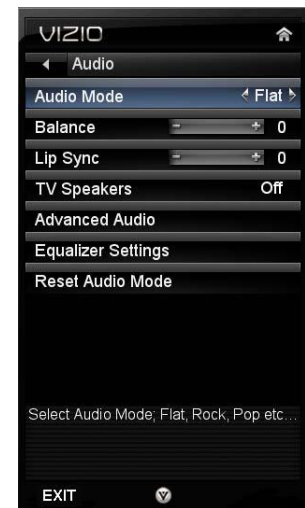

### Using Optical (S/PDIF)




If your sound system has a S/PDIF (optical) digital audio input you can connect it from your sound system to the **OPTICAL** digital audio out on your HDTV. This is active when receiving audio with the programs being viewed no matter what input is being used.

1. Connect one end of the optical cable to optical connectors on the Home Theater and the other end to the **OPTICAL** jack on your HDTV.
2. Turn on the power to your HDTV and home theater.
3. Change the input on your Home Theater to optical. See your Home Theater user manual for more information.

## Connecting a Computer

### RGB (VGA)

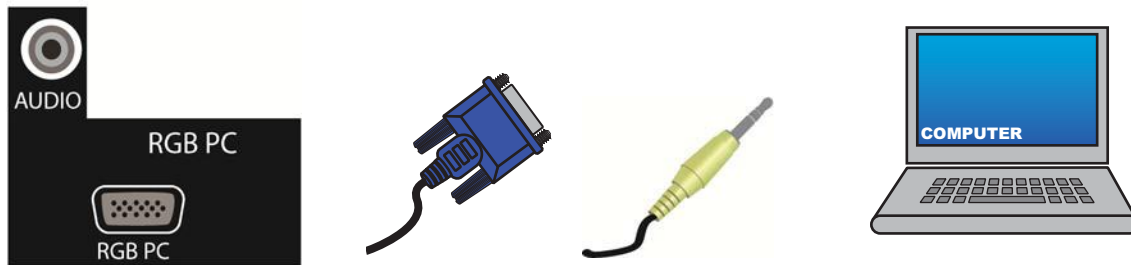

1. Set computer to a resolution supported by your HDTV (see *Preset PC Resolutions* on page 74). If your computer supports it, we recommend 1920x1080.
2. Turn off the power to your HDTV and computer.
3. Connect the RGB (VGA) cable from your computer to the **RGB PC** jack on of your HDTV.
4. Connect the 1/8-inch audio cable from your computer to the **RGB PC Audio** jack on your HDTV. This step is optional and only needed if you want to transmit audio from the computer through the TV.
5. Turn on the power to your HDTV and computer.
6. Select **RGB (VGA)** using the **INPUT** button on the remote control or side of the TV.

**Note:** Refer to your PC computer user manual for more information about the video output requirements.

### Using HDMI



1. Turn off your HDTV and computer.
2. Connect a HDMI cable to the HDMI output of your computer and the other end to the **HDMI 1, 2, 3, or HDMI SIDE** jack on your HDTV.
3. Connect the 1/8-inch audio cable from your computer to the **RGB PC Audio** jack on your HDTV. This step is optional and only needed if you want to transmit audio from the computer through the TV.
4. Turn on the power to your HDTV and your computer.
5. Select **HDMI-1, HDMI-2, HDMI-3, or HDMI SIDE** using the **INPUT** button on the remote control or side of the TV.

## Chapter 6 Enjoying Multimedia

With the USB port you can enjoy digital content such as photos, music, and movies on your HDTV using a USB flash drive connected to the USB port on the left-hand side of the TV.

USB drives that are USB 2.0 and FAT or FAT32 are supported but the Multi Media port does not support hard drives or USB hubs.

If your USB drive is oversized and does not physically fit in the port, use a USB extension cable. Connect one end of the cable to your USB drive and the other end to the USB port.

Multimedia Viewer Specifications	
<b>Supported File Extensions</b>	<b>Video:</b> .asf, .wmv, .avi, .mp4, .mov, .mpg, .mpeg, .vob (DVD) <b>Audio:</b> .mp3 <b>Image:</b> .jpg, .jpeg (up to 17,000 x 10,000 pixels)
<b>Readable Data Format</b>	FAT and FAT32
<b>Maximum folder depth</b>	Folders can be up to 20 levels deep. The first folder on the drive is Level 1. A folder within that folder is Level 2, a folder within that folder is Level 3, etc.
<b>Display Limits</b>	The Multimedia Viewer will show the first 1000 folders and 1000 files in the list

### Supported File Formats


The following are the supported file formats that can be played on your HDTV. Media server content protected by digital rights management such as WMDRM10 (Windows Media Digital Rights Management 10), may not play.

File Extension	Video Encoding Supported	Audio Encoding Supported	Resolutions Supported
.avi	H.264/AVC	AAC	Up to 1920 x 1080
.mp4	MPEG 4 ASP	AAC	Up to 1280 x 720
.asf .wmv	WMV7 (WMV1) WMV8 (WMV2) VC-1/WMV9 (WMV3/WVC1)	WMA7(V1) WMA8(V2)	Up to 1920 x 1080
.mov	H.264/AVC	AAC	Up to 1920 x 1080
.mpg .mpeg	MPEG2	AC3	Up to 1920 x 1080
.vob	MPEG2	AC3	Up to 1920 x 1080

**Note:** Even the supported format files listed above may or may not play properly or completely, depending on the USB device, bit rate stream and other content characteristics, as well as other factors.

## Accessing Multimedia Content

1. Insert a USB device with digital content such as photos, music, and movies into the USB port on the side of your HDTV. If a USB device is already connected, press **MEDIA** on the remote control. A message will appear asking if you want to play multimedia content.
2. Press **◀** to highlight **OK**, and then press **OK** to select it. The *Multimedia* folder will be displayed.
3. Press **◀** or **▶** to highlight *Photo*, *Music*, or *Video* and then press **OK** to select it. A menu will be displayed showing the folders and files that are on your USB device.
4. Press **◀** or **▶** to highlight the folder or file you want to play, and then press **OK** to select it. The file will play. See *Adjusting Photo Settings* on page 31, *Adjusting Music Settings* on page 32, and *Adjusting Video Settings* on page 33 to adjust various settings.
5. When finished, press **EXIT** once to return to the previous screen or repeatedly to return to the top level of the USB device. Press **MEDIA** to return to the previous TV input, or press an Input button to return to a desired input.

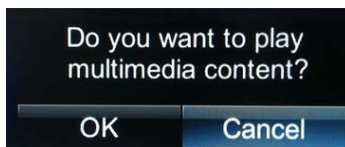

## Adjusting Photo Settings


When viewing pictures you can adjust various settings, including slideshow, and picture duration.

1. Insert a USB device and select the *Photo* Folder.
2. Select the folder or files that you want to play.
3. Press **MENU**. The *Photo* menu will be displayed.
4. Press **▲** or **▼** on the remote control to highlight a photo menu option, and then press **◀** or **▶** to adjust the setting.
5. Press **MENU** once to close the menu.

### Slideshow Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the slideshow mode. Press **OK** to start and stop the slideshow.

- **Single** displays one picture selected from the thumbnails for the interval set in the *Duration* option and return to the thumbnails. If the *Repeat* option is set to **On**, the selected picture will be displayed until you press **EXIT**.
- **Sequence** shows your pictures in the order they are listed on your USB device until you stop the slideshow.
- **Shuffle** shows your pictures in random order until you stop the slideshow.

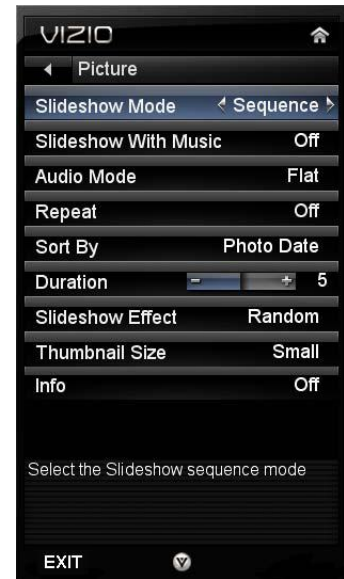

### Slideshow With Music

Choose from **Off**, **Single**, **Sequence**, and **Shuffle** to set the slideshow with music mode. The music will automatically stop when the slideshow stops. Press **OK** to start and stop the slideshow.

### Audio Mode

Choose from **Flat**, **Rock**, **Pop**, **Classic**, or **Jazz** to adjust the overall quality of the audio being played during the slideshow. Press **OK** to enter the Audio sub menus for additional adjustments to audio. See *Audio Menu* adjustment section on page 40. Turn SRS TruVolume off when listening to music.

### Repeat

Choose from **On** or **Off** to repeat the slideshow.

### Sort By

You can choose to sort the pictures on the USB device by **Photo Date**, **File Date**, or alphabetically (**File A-Z**).

### Duration

Set the amount of time the picture will remain on the screen during the slideshow. Choose a time between 5 seconds and 32 seconds.

### Slideshow Effect

Choose from **Random**, **Dissolve**, **Wipe Right**, **Wipe Left**, **Wipe Up**, **Wipe Down**, **Box In**, or **Box Out** to set the transition type when changing from one picture to another during a slideshow.

### Thumbnail Size

Set the size of the preview pictures (thumbnails) in the menu. Choose from **Small**, **Medium**, or **Large**.

### Info

When set to **On**, info

Information about the picture briefly appears on your HDTV.

## Music Settings

When listening to music you can adjust various settings, including selecting an audio mode, choosing repeat options, etc.

1. Insert a USB device and select the *Music* Folder.
2. Select the folder or files that you want to play.
3. Press the **MENU** button on the remote control. The Music menu will be displayed.
4. Press **▲** or **▼** on the remote control to highlight Music menu option, and then press **◀** or **▶** to adjust the setting.
5. Press the **MENU** button once to close the menu.

### Sort By

You can choose to sort the songs by **File/Title**, **Genre**, **Artist**, or **Album**.

### Play Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the play sequence mode. **Single** will play a single song once and stop playing at the end of that song, **Sequence** will play the songs in the order they are listed on your USB device until you stop it, and **Shuffle** will play the songs in random order until you stop it.

### Repeat


When set to **On**, the music will continue playing until you stop it.

### Audio Mode

Choose from **Flat**, **Rock**, **Pop**, **Classic**, and **Jazz** to adjust the overall quality of the audio being played.

### Info

When set to **On**, information about the song briefly appears on the TV.

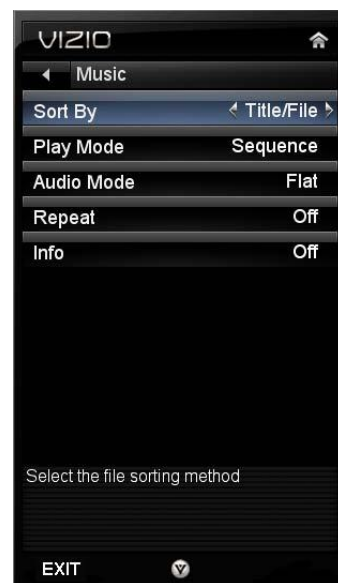



## Video Settings

When watching videos you can adjust various settings, including selecting an audio mode, setting to a wider format, etc.

1. Insert a USB device and select the *Video* Folder.
2. Select the folder or files that you want to play.
3. Press the **MENU** button on the remote control. The Video menu will be displayed.
4. Press **▲** or **▼** on the remote control to highlight Video menu option, and then press **◀** or **▶** to adjust the setting.
5. Press the **MENU** button once to close the menu.

### Sort By

You can choose to sort the videos by **Type**, **Date**, or, **File Name**.

### Play Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the video sequence mode. **Single** will play a video once and stop playing at the end of that song. **Sequence** will play the videos in the order they are listed on your USB device until you stop it. **Shuffle** will play the videos in random order until you stop it.

### Repeat

When set to **On**, the video(s) will continue playing until you stop it.

### Picture Mode

Choose from **Custom**, **Standard**, **Movie**, **Game**, **Vivid**, **Football**, **Golf**, **Basketball** and **Baseball** to adjust the overall quality of the picture. Press **OK** to enter the Picture sub menus for additional adjustments to video. See Picture Menu adjustment section below.

### Wide Format

Set the way the picture looks on the screen:

- 4:3 videos: choose **Normal**, **Wide**, or **Zoom**.
- 16:9 videos: choose **Normal**, **Wide**, **Zoom**, or **Stretch**.

### Audio Mode

Choose from **Flat**, **Rock**, **Pop**, **Classic**, and **Jazz** to adjust the overall quality of the audio being played.

### Info

When set to **On**, information about the video briefly appears on the TV.

## Chapter 7 Adjusting Your HDTV Settings

### Using the On-screen Display (OSD)

The remote control or the control buttons on the side of the TV can control all the function settings. The *OSD* allows you to adjust contrast, brightness and other settings. The TV will save changes made to the settings, even if the TV is turned off.

The OSD consists of several menu options. The main menu options may vary depending on your selected input source.

**Note:** Some of the main menu options may have additional submenus, for example, the TV Rating submenu for Parental Controls.

1. Press **MENU**. The *OSD* opens.
2. Press **◀**, **▶**, **▲**, or **▼** on the remote control to select one of the menu options:
  - Input
  - Wide
  - CC
  - Sleep Timer
  - Picture
  - PIP
  - Settings
  - Media
  - Help
3. Press **OK** to select the option or feature you want to adjust.
4. After the menu option is displayed, press **▲** or **▼** on the remote control to select one of the items to adjust.
5. Press **OK** to select it, and then press **◀**, **▶**, **▲**, or **▼** to adjust the selection.
6. Press **BACK** once to return to the previous screen. To return to your program once adjustments have been completed, you can do one of the following:
  - a. Press the **EXIT** button on the remote control.



### Input Menu

Select the Input Source for your HDTV. Choose from *TV*, *AV*, *Comp*, *HDMI-1*, *HDMI-2*, *HDMI-3*, *HDMI SIDE*, *RGB*, and *Media*.




## Wide Menu

Select how the picture displays on the screen. As you select an option, you will see the screen adjusting to the different sizes. The options vary depending on the selected input and the TV program:

### Normal

The original 4:3 aspect ratio (1.33:1 source) is preserved, so black bars are added to the left and right of the display image. Standard TV broadcasts are displayed with a 4:3 Aspect Ratio. Movies in 4:3 Aspect Ratio may be referred to as pan-and-scan or full frame. These movies were originally filmed in 16:9 (widescreen), and then modified to fit a traditional TV screen (4:3).

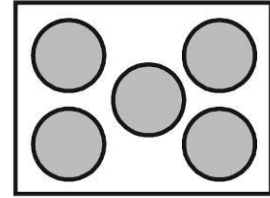

### Wide


Wide mode allows you to view the entire picture. This is recommended for HDMI and RGB (Computer) viewing so you can see the complete picture without the image overstretching beyond the viewing area. For 720p, 1080i, 1080p only.

### Zoom

Zoom mode will "zoom in" to the center of the image, allowing 4:3 images to be viewed in original aspect ratio without stretching the black bars. The top and the bottom of the image are cropped out, though.


### Panoramic

When watching a standard broadcast or full frame movie in this mode, the 4:3 Aspect Ratio (1.33:1 source) display image is stretched horizontally on the left and right sides to fill the TV screen. The center of the image is not stretched.

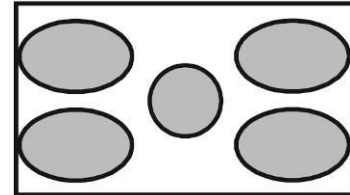

### Stretch

When watching a widescreen program (1.78:1 source) with black bars on the top and bottom, the image will stretch to fill the TV screen. People will appear wider than they really are. If watching a widescreen (1.85:1 or 2.35:1 source) program or movie, there will still be black bars on the top and bottom. This mode is available only when watching a widescreen program.

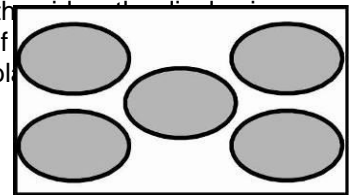

## CC (Closed Caption) Menu

Adjust closed caption options.

### Analog Closed Caption

The CC feature is available when watching regular analog TV. Select from **Off**, **CC1**, **CC2**, **CC3**, and **CC4**. Closed Caption for regular TV is usually **CC1** or **CC2**.


### Digital Closed Caption

The CC feature is available when watching digital TV. Select from **CC1**, **CC2**, **CC3**, **CC4**, or **CS1**, **CS2**, **CS3**, **CS4**, **CS5**, **CS6**, or **Off**.

### Digital CC Style

The Digital CC Style feature is available when watching digital TV.

- **Caption Style:** Select either **As Broadcaster** or **Custom**. If Custom is selected you can customize the way Closed Caption is displayed. The options available are:
  - **Text Size:** Make CC text larger or smaller.
  - **Color:** Choose a text color for CC display
  - **Opacity:** Make text more or less transparent.
  - **BG Color:** Choose a background color for CC text.
  - **BG Opacity:** Make the background for CC text more or less transparent.
  - **Window Color:** Choose a text frame color for CC text.
  - **Window Opacity:** Make the text frame for CC text more or less transparent.

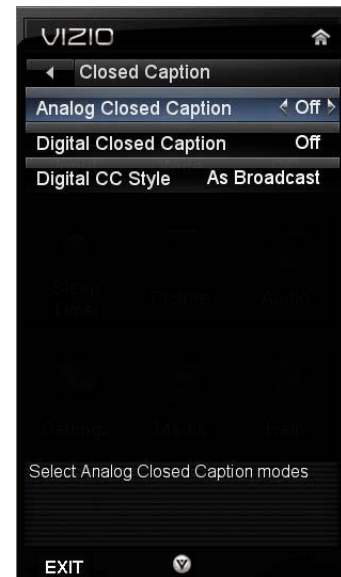

## Sleep Timer Menu

Select the timer to turn off the TV in **30**, **60**, **90**, **120** or **180** minutes.

## Picture Menu

Adjust picture options including brightness, contrast, and advanced picture settings.

### Picture Mode

Choose from **Standard**, **Movie**, **Game**, **Vivid**, **Football**, **Golf**, **Basketball**, **Baseball**, or **Custom**. Each input (i.e. HDMI, COMP, etc) remembers the custom setting you created.


### Backlight

Adjust the brightness to affect the overall brilliance of the picture not the Brightness (black level) or Contrast (white level) of the picture. Press **OK** to select this option and then press ◀ or ▶ to adjust it.

**Note:** Backlight is only available when *Ambient Light Sensor* is set to **Off**.

### Brightness

Adjust black levels in the picture. If the brightness is too low you will not be able to see the detail in darker parts of the picture and if the brightness is too high the picture will look washed out. Press **OK** to select this option and then press ◀ or ▶ to adjust it.

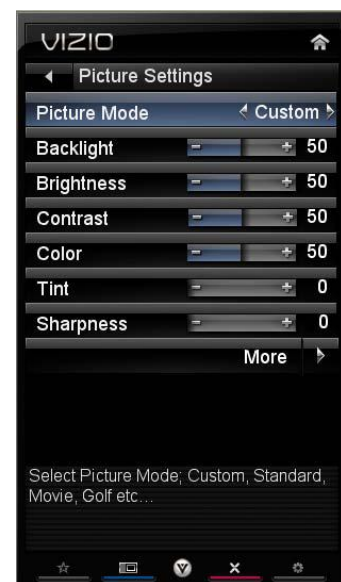

## Contrast

Adjust the white levels in the picture. If the contrast is too low the picture will look washed out and if the contrast is too high you will not be able to see any detail in the bright parts of a picture. Press **OK** to select this option and then press ◀ or ▶ to adjust it.

## Color

Adjust the amount of color in the picture. Press **OK** to select this option and then press ◀ or ▶ to adjust it.

## Tint

Adjust the hue of the picture. The easiest way to set tint is to look at flesh tones and adjust for a realistic appearance. In most cases, the default middle position is correct. If people's faces look too orange try reducing the level of color first. Press **OK** to select this option and then press ◀ or ▶ to adjust it.

## Sharpness

Adjust the sharpness of the edges of elements in the picture. It does not produce detail that otherwise does not exist. This adjustment is helpful when viewing Standard Definition sources. Press **OK** to select this option and then press ◀ or ▶ to adjust it.

## More


Select **More** to adjust advanced options for fine tuning the picture.

### Size & Position

To select the options in the Size & Position sub-menu, press **OK**. A new menu will be displayed showing the following Size & Position settings:

- **Horiz. Position**  
Adjust the horizontal position of the picture.
- **Vertical Position**  
Adjust the vertical position of the picture.
- **Horizontal Size**  
Adjust the horizontal size of the picture.
- **Vertical Size**  
Adjust the vertical size of the picture.

**Note:** The Size & Position function is only available in Component, Composite, and RGB modes. In HDMI mode, only the Position function is only available.

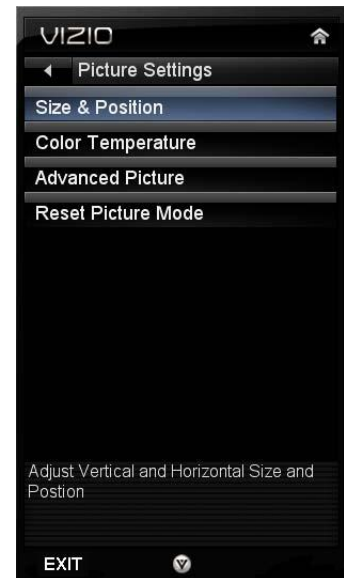

## Color Temperature

Color Temperature is the “warmness” or “coolness” of the white areas of the picture. Choose from **Custom**, **Cool**, **Computer**, or **Normal**. **Normal** is the setting for television broadcasting. **Custom** allows you to set a preset calibrated for a white point to suit individual preferences. **Cool** produces a blue-hued image. **Computer** sets the white point at the established setting for a computer display (9300K). Each preset may also be adjusted for a customized setting.

## Advanced Picture

To select the options in the Advanced Picture sub-menu, press **OK**. A new menu will be displayed showing the advanced functions available for fine tuning of the picture.

- **Smooth Motion Effect**

The Smooth Motion™ Effect option activates Motion Estimation/Motion Compensation (ME/MC), which suppresses motion judder, or “stuttering” of the image when the camera pans across a scene, or there is horizontal motion in the scene. Choose from **Off**, **Low**, **Middle**, or **High**.

- **Real Cinema Mode**

The Real Cinema Mode option allows selection of the type of compensation used for the Smooth Motion™ Effect option. Choose from **Off**, **Precision** and **Smooth**.

- **Noise Reduction**

This feature diminishes picture artifacts caused by the digitizing of image motion content that may be present in the picture. Choose from **Off**, **Low**, **Medium**, or **High**.

- **MPEG NR**

Reduces white areas between color boundaries. Choose from **Off**, **Low**, **Medium** or **Strong**.

- **Color Enhancement**

This feature increases the picture reproduction performance of the picture by reducing oversaturation of certain colors and improving flesh tones. Choose from **Off**, **Normal**, **Rich Color**, **Grn/Flesh**, and **Grn/Blue**.

- **Adaptive Luma**

Large areas of brightness in the picture will result in a higher Average Picture Level (APL) and the overall picture will look too light. This feature will lower the APL to counteract this effect. Choose from **Off**, **Low**, **Medium**, **Strong**, or **Extend**.

- **Film Mode**


Choose from **Off** or **Auto**. When set to **Off** it will stay at 60 fps. When set to **Auto**, the TV will detect the cadence (for example at 24 frames/second for film, or normal video at 60 fps).

- **Backlight Control**

Set this feature to **OFF**, **DCR**, or **OPC**. **DCR** (Dynamic Contrast Ratio) improves the black level performance and increases contrast ratio. **OPC** (Optimum Power Control) Reduces power consumption while maintaining the same picture brightness.

- **Ambient Light Sensor**

Choose **Off**, **Low**, **Medium**, or **High**. When set to **Low**, **Medium**, or **High** your HDTV will automatically adjust to light changes in the room.

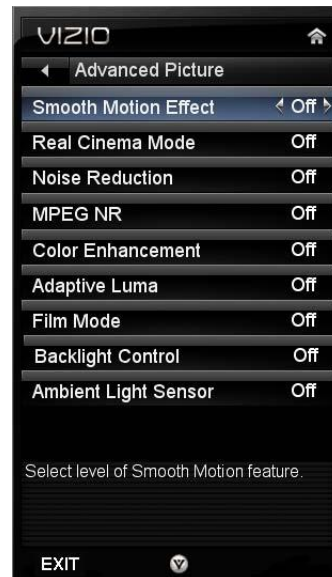

### Reset Picture Mode

Return all Picture settings to factory default. A screen will come up to confirm your selection or to cancel it. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

**Note:** Only settings under the Picture will be reset.

### PIP Menu

Your TV features PIP mode so you can watch two pictures at the same time. One picture is displayed as the full screen (main screen) and the other picture is displayed in a small window (sub screen).

**Note:** PIP is only available when the *Rating Enable* option in *Parental Controls* is set to **Off**.

### PIP Mode

Select from **Off**, **PIP** (Picture-inside-picture) or **POP** (Picture-outside-picture). In **PIP** mode a smaller sub-screen is displayed on top of the main screen. In **POP** mode the main screen and sub-screen are of equal size and are positioned side-by-side.

### Source

Select the input source for the sub-screen. The input sources available will vary according to which input is used for the main screen.

MAIN \ SUB	SUB				
	TV	AV (Composite)	Component	HDMI-1 HDMI-2 HDMI-3 HDMI SIDE	RGB (Computer)
TV			✓	✓	✓
AV (Composite)			✓	✓	✓
Component	✓	✓		✓	
HDMI-1	✓	✓	✓		✓
HDMI-2	✓	✓	✓		✓
HDMI-3	✓	✓	✓		✓
HDMI Side	✓	✓	✓		✓
RGB (Computer)	✓	✓		✓	

“✓” – Indicates which inputs are available for PIP and POP modes.

### Position

Select where you want the PIP screen positioned over the main screen. Choose from **Top Left**, **Top Right**, **Bottom Left**, and **Bottom Right**.

### Size

Set the size of the PIP window. Choose from **Small**, **Medium** or **Large**.

### Audio

Select which source will play the audio. Choose from the **Main** screen or the **PIP** (sub) screen.

## Settings Menu

Adjust various option including audio settings, tuner settings (e.g. channel scan), Parental Controls, and Date and Time.

### Audio

Adjust audio options including balance, equalizer, and advanced audio settings.

#### Audio Mode

Choose from Flat, Rock, Pop, Classic or Jazz.

#### Balance


Adjust the sound to the left or the right.

#### Lip Sync

Lip Sync is designed to adjust the audio of the program being viewed so that it matches the movement of the lips of someone talking on the screen.

#### TV Speakers

Turn the internal speakers On or Off. You may want to turn the internal speakers off when listening to the audio through your Home Theater System.

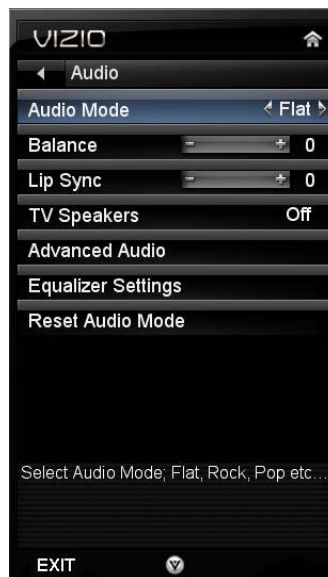



### Advanced Audio

To select the options in the Advanced Audio sub-menu, press **OK**. A new menu will be displayed showing the advanced functions available for fine tuning of the audio.

- **SRS TruSurround HD**

When watching TV or a movie, TruSurround HD™ creates an immersive surround sound experience from only two speakers and provides rich bass, clear dialog and high frequency detail.

**Note:** When SRS TruSurround HD is ON, Equalizer adjustments are not available.

- **SRS TruVolume**


When the programming switches to a commercial or when changing from channel to channel, volume fluctuations occur. When turned ON, SRS TruVolume™ provides the listener with a comfortable and consistent volume level. Turn this option Off when listening to music.

- **Digital Audio Out**

This option allows selection of the type of processing for the S/PDIF (Optical connector) when used with a Receiver/Amplifier/Home Theater system. Select to choose from OFF, Dolby Digital or PCM.

- **Analog Audio Out**

This option sets the volume control properties when using the RCA (white and red) connectors as audio line out to connect a Receiver/Amplifier/Home Theater system. Choose from Fixed or Variable. When set to Variable, volume from the external speakers will change according to the volume setting on the TV. If it is set to Fixed, the volume can only be changed by the settings on the external stereo system.

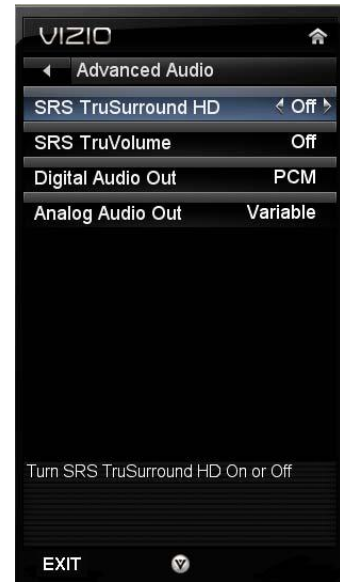

### Equalizer Settings

To select the options in the Equalizer Settings sub-menu, press **OK**. A new menu will be displayed showing the available equalizer functions. Press **◀** or **▶** to select *Basic* or *Advanced*.

- **EQ Mode (Basic)**

Adjust Bass and Treble.



- **EQ Mode (Advanced)**

Adjust boost or attenuation of different frequencies.

Starting from lowest to the highest, they are 120 Hz, 500Hz, 1.5 kHz, 5 kHz and 10 kHz.

1. Press **▼** then **◀** or **▶** to select the frequency to be adjusted. Press **OK**.
2. Press **▲** or **▼** to adjust the selected frequency to your preference. Values above 0 will boost the frequency and values below 0 will attenuate the frequency.

**Note:** The Equalizer adjustment will only be available when SRS TSHD is set to Off.

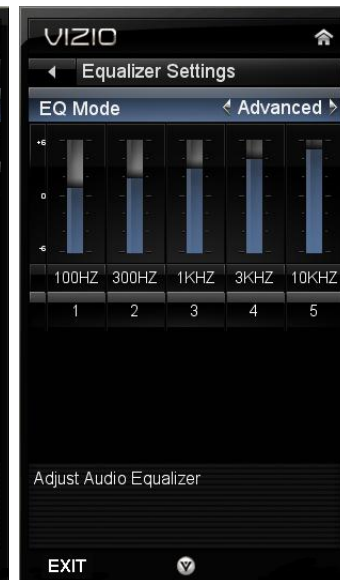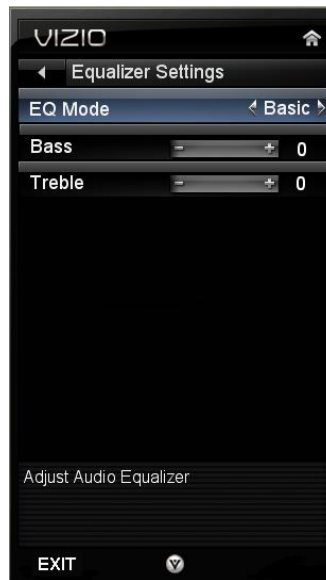

## Tuner

**Note:** The tuner option can only be selected when your HDTV is in TV input mode.

## Tuner

**Note:** The tuner option can only be selected when your HDTV is in TV input mode.

### Tuner Mode

Select Cable or Antenna depending upon which you have attached to the DTV / TV Input.

### Auto Channel Scan

Automatically search for TV channels that are available in your area. Be sure to first select the correct tuner mode above. The TV will search for analog and digital channels. When the search is done, press **OK** to begin watching your programs.

### Partial Channel Search

If you believe channels are missed from the auto search, you can do a partial channel search to look for channel in a certain channel range again. Select to scan for Analog, Digital, or both Analog/Digital channels, then press **▼** to highlight the “From” and “To” selection. Press **OK** to select the range of channel numbers you want to start searching in. Enter a channel number using the remote control and then press **▼** to select **Start**. Press **OK** to start the channel search.

### Add Analog Channel


If your are in fringe/marginal reception areas or you want to receive local broadcasts where *Auto Channel Search* may not pick up the signals you can manually add channels. Press **OK** and a new menu will open. Enter the channel number, press **▼** to select *Add Channel*, and then press **OK** to add the channel.

### Skip Channel

After the TV has stored all of the available digital channels in memory you will find that some channels are too weak to watch comfortably or they may be channels you do not want to see. Press **OK** to select the channel to be skipped when using **CH+** or **CH-**. An X will appear in channels you have selected to skip. You will still be able to select this channel using the number buttons on the remote control. To add the channel back, press **OK** to remove the X.

### Analog MTS

This feature allows you to select the different languages the broadcaster is transmitting the audio with the program you are watching. This signal is usually Spanish. Choose from **Mono**, **Stereo**, or **SAP**.

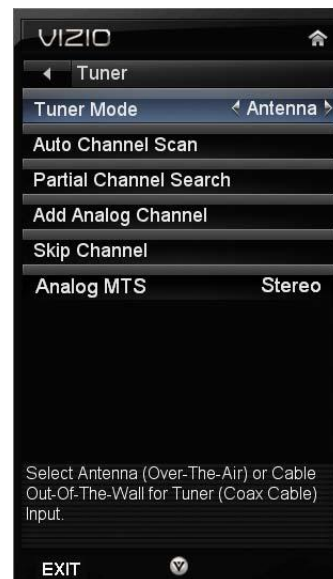


## Name Input

This feature makes it easier for you to recognize the devices you have connected to your HDTV when you press **INPUT**. For example, if you have a Blu-Ray DVD player connected to the HDMI-1 input, you can have the input label read *HDMI-1 BluRay* instead of just *HDMI-1*. You can select from nine preset labels.

### To use one of the nine preset labels:

1. Select *Input Source*, and then press **OK** to show the list of inputs.
2. Press **▼** to select the input label you want to change, and then press **OK**.
3. Press **▼** to select *Input Labels*, and then press **OK** to show the list of nine preset labels.
4. Press **▼** to select the new input label name, and then press **OK**.
5. If *Custom* is selected, press **▼** to select the label name, and then press **OK**. A keyboard will open, allowing you to enter a custom name, up to 10 characters.

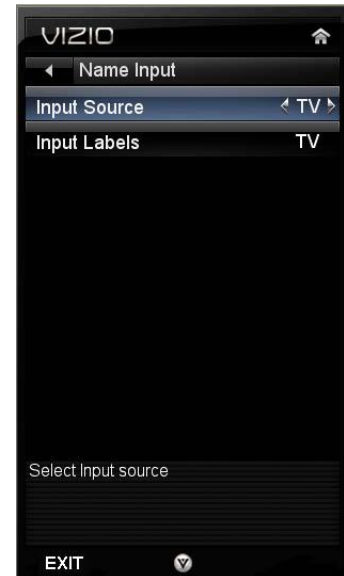

## Parental Controls

If you want to restrict certain channel and program viewing, you can do this by turning on the Parental Controls. Selected programs, movies and channels can then be made available only after an authorized password has been entered and accepted by the TV.

To select the options in the Parental sub-menu, press **OK** and then create and/or enter a password. A new menu will be displayed showing the following Parental settings:

**Note:** The Parental menu does not appear when the input mode is set to HDMI or RGB.

### Rating Enable

Block or allow access to programs from channels that have been blocked or devices selected as PIP inputs. Turn **On** to block or **Off** to allow rated content.

### Channel Locks

Block individual channels from being displayed. Press **▲** or **▼** to select a channel to block and then press **OK**.



### USA-TV


**Note:** When Rating Enable is **OFF**, the USA-TV Rating adjustments are not enabled.

Press **OK** to block (locked) or allow (unlocked) channels by the following US TV ratings:

- TV-Y – All children
- TV-Y7 – Older children
- TV-G – General audience
- TV-PG – Guidance suggested
- TV-14 – Strongly cautioned
- TV-MA – Mature audience

You can also customize the TV ratings for the following content:

- A – All sub-ratings
- FV – Fantasy violence
- D – Sexual dialog
- L – Adult language
- S – Sexual situations
- V - Violence

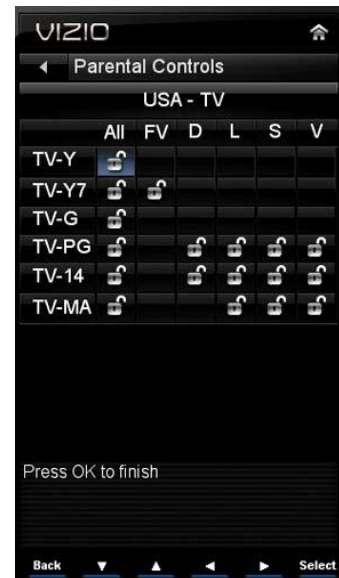

### USA-Movie

**Note:** When Rating Enable is **OFF**, USA-Movie Rating adjustments are not enabled.

Press the **OK** button to block (locked) or allow (unlocked) channels by the following US Movie ratings:

- G – General audience
- PG – Parental guidance suggested
- PG-13 – Recommended for children 13 years of age or older
- R – Mature audience
- NC-17 – No one under 17 years of age
- X – No one under 17 years of age



### CAN-English

**Note:** When Rating Enable is **OFF**, Canadian English Rating adjustments are not enabled.

Press the **OK** button to block (locked) or allow (unlocked) channels by the following Canadian English ratings:

- C – Children
- C8+ – Children 8 years or older
- G – General Programming, suitable for all audiences
- PG – Parental guidance
- 14+ – Viewers 14 years or older
- 18+ – Adult programming

## CAN-French

**Note:** When Rating Enable is **OFF**, Canadian French Rating adjustments are not enabled.

Press the **OK** button to block (locked) or allow (unlocked) channels by the following Canadian French ratings:

- G – General audience
- 8 ans+ – General – not recommended for young children
- 13 ans+ – Not suitable for children under 13 years of age
- 16 ans+ – Not suitable for under 16 years of age
- 18 ans+ – Adults only

## Alt Rating Region

This is reserved for future use in the event the parental control system is ever updated. Your HDTV will be able to receive and update the new rating system to it.

## Block Unrated TV

Block programming that does not have a rating.


## Change PIN (Password)

Enter a new, 4-digit password using the number buttons on the remote control. Enter it a second time to confirm you entered it correctly.

**Note:** Make sure you write down and store the new password in a secure place. The *Reset Locks* feature does NOT reset the password.

## RESET LOCKS

Return all Parental Control lock settings to factory default. A screen will come up to confirm your selection or to cancel it. Press **◀** or **▶** to make the selection, and then press **OK** to accept it.

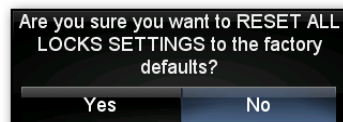

## Menu Language

Select to change the language of the menu. The default is **English**. You can also select **French** or **Spanish**.

## Time & Local Settings

### Time Zone

Setting the correct Time Zone for your area will ensure that the correct time is shown after pressing the **GUIDE** button on the remote control.

### Daylight Saving

Setting the daylight saving time for your area will ensure that the correct time is shown after pressing the **GUIDE** button on the remote control.

## CEC

Consumer Electronics Control allows you to control other devices using your HDTV remote control when those devices are connected via HDMI. For example, if a CEC-supported Blu-ray DVD player is connected to your HDTV through HDMI-2 and that player is powered on, your HDTV will automatically change to the HDMI-2 input. Similarly, if your HDTV is powered on first and you change the input to HDMI-2, your Blu-ray player will automatically power on.

Also, you can control your CEC-supported device using the transport keys on your HDTV remote control (e.g. Play, Stop, Prev, etc.). When you press one of the buttons on your HDTV, the action will occur on your device.

Contact your devices' user manual or manufacturer to check whether your device supports CEC.

### CEC Function

Turn CEC On or Off. When set to Off, your HDTV will not send or receive any CEC commands.

### Device Discovery

Register device with TV. Before CEC will work, perform a Device Discovery to see if there are any CEC supported devices connected to your HDTV.



## Media Menu

1. Insert a USB device with digital content such as photos, music, and movies into the USB port on the side of your HDTV.
2. Press ◀ or ▶ to highlight *Photo*, *Music*, or *Video* and then press **OK** to select it. A menu will be displayed showing the folders and files that are on your USB device.
3. Press ◀ or ▶ to highlight the folder or file you want to play, and then press **OK** to select it. The file will play. See *Adjusting Photo Settings* on page 47, *Adjusting Music Settings* on page 48, and *Adjusting Video Settings* on page 49 to adjust various settings.
4. When finished, press **MEDIA** once to return to the previous screen or repeatedly to return to the main menu.



## Adjusting Photo Settings


When viewing pictures you can adjust various settings, including slideshow, and picture duration.

1. Insert a USB device and select the *Photo* Folder.
2. Select the folder or files that you want to play.
3. Press **MENU**. The *Photo* menu will be displayed.
4. Press **▲** or **▼** on the remote control to highlight a photo menu option, and then press **◀** or **▶** to adjust the setting.
5. Press **MENU** once to close the menu.

### Slideshow Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the slideshow mode. Press **OK** to start and stop the slideshow.

- **Single** displays one picture selected from the thumbnails for the interval set in the *Duration* option and return to the thumbnails. If the *Repeat* option is set to **On**, the selected picture will be displayed until you press **EXIT**.
- **Sequence** shows your pictures in the order they are listed on your USB device until you stop the slideshow.
- **Shuffle** shows your pictures in random order until you stop the slideshow.

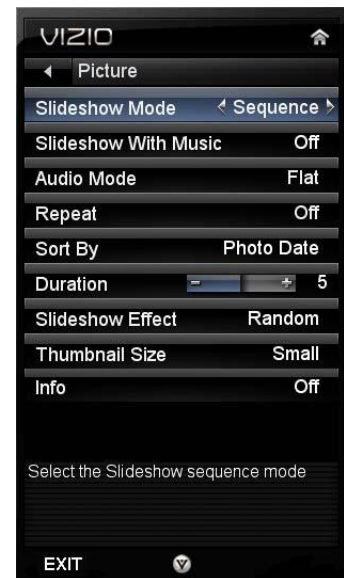

### Slideshow With Music

Choose from **Off**, **Single**, **Sequence**, and **Shuffle** to set the slideshow with music mode. The music will automatically stop when the slideshow stops. Press **OK** to start and stop the slideshow.

### Audio Mode

Choose from **Flat**, **Rock**, **Pop**, **Classic**, or **Jazz** to adjust the overall quality of the audio being played during the slideshow. Press **OK** to enter the Audio sub menus for additional adjustments to audio. See *Audio Menu* adjustment section on page 40. Turn SRS TruVolume off when listening to music.

### Repeat

Choose from **On** or **Off** to repeat the slideshow.

### Sort By

You can choose to sort the pictures on the USB device by **Photo Date**, **File Date**, or alphabetically (**File A-Z**).

### Duration

Set the amount of time the picture will remain on the screen during the slideshow. Choose a time between 5 seconds and 32 seconds.

### Slideshow Effect

Choose from **Random**, **Dissolve**, **Wipe Right**, **Wipe Left**, **Wipe Up**, **Wipe Down**, **Box In**, or **Box Out** to set the transition type when changing from one picture to another during a slideshow.

### Thumbnail Size

Set the size of the preview pictures (thumbnails) in the menu. Choose from **Small**, **Medium**, or **Large**.

### Info

When set to **On**, information about the picture briefly appears on your HDTV.

## Music Settings

When listening to music you can adjust various settings, including selecting an audio mode, choosing repeat options, etc.

1. Insert a USB device and select the *Music* Folder.
2. Select the folder or files that you want to play.
3. Press the **MENU** button on the remote control. The Music menu will be displayed.
4. Press **▲** or **▼** on the remote control to highlight Music menu option, and then press **◀** or **▶** to adjust the setting.
5. Press the **MENU** button once to close the menu.

### Sort By

You can choose to sort the songs by **File/Title**, **Genre**, **Artist**, or **Album**.

### Play Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the play sequence mode. **Single** will play a single song once and stop playing at the end of that song, **Sequence** will play the songs in the order they are listed on your USB device until you stop it, and **Shuffle** will play the songs in random order until you stop it.

### Repeat


When set to **On**, the music will continue playing until you stop it.

### Audio Mode

Choose from **Flat**, **Rock**, **Pop**, **Classic**, and **Jazz** to adjust the overall quality of the audio being played.

### Info

When set to **On**, information about the song briefly appears on the TV.

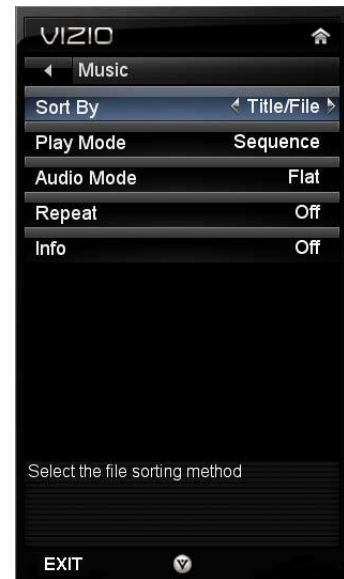



## Video Settings

When watching videos you can adjust various settings, including selecting an audio mode, setting to a wider format, etc.

1. Insert a USB device and select the *Video* Folder.
2. Select the folder or files that you want to play.
3. Press the **MENU** button on the remote control. The Video menu will be displayed.
4. Press **▲** or **▼** on the remote control to highlight Video menu option, and then press **◀** or **▶** to adjust the setting.
5. Press the **MENU** button once to close the menu.

### Sort By

You can choose to sort the videos by **Type**, **Date**, or, **File Name**.

### Play Mode

Choose from **Shuffle**, **Single**, and **Sequence** to set the video sequence mode. **Single** will play a video once and stop playing at the end of that song. **Sequence** will play the videos in the order they are listed on your USB device until you stop it. **Shuffle** will play the videos in random order until you stop it.

### Repeat

When set to **On**, the video(s) will continue playing until you stop it.

### Picture Mode

Choose from **Custom**, **Standard**, **Movie**, **Game**, **Vivid**, **Football**, **Golf**, **Basketball** and **Baseball** to adjust the overall quality of the picture. Press **OK** to enter the Picture sub menus for additional adjustments to video. See Picture Menu adjustment section below.

### Wide Format

Set the way the picture looks on the screen:

- 4:3 videos: choose **Normal**, **Panoramic**, **Zoom1**, or **Zoom2**.
- 16:9 videos: choose **Stretch**, **Zoom1**, or **Zoom2**

### Audio Mode

Choose from **Flat**, **Rock**, **Pop**, **Classic**, **Jazz**, and **Soft** to adjust the overall quality of the audio being played.

### Info

When set to **On**, information about the video briefly appears on the TV.

## Help Menu

### System Info

Display the technical information including model name, version and revision of firmware, source type, and resolution.

### Reset TV Settings

Return all Picture and Audio settings to factory default. A screen will come up to confirm your selection or to cancel it. Press Left or Right Navigation buttons to make the selection, and then press **OK** to accept it.

**Note:** This does **NOT** reset the Parental Control Password.

### Clear Memory (Factory Default)

Use this function to reset the TV to the default factory settings. The screen will display a message to confirm that you want to reset the values to factory settings. Press ◀ or ▶ to make the selection, and then press **OK** to accept it.

**Note:** This does **NOT** reset the Parental Control Password.

### Start Setup Wizard

Use this function to return to the Initial Setup menu. Use this function if you want to have a guided setup when you move your TV. Refer to Chapter 3 for more information.

**Note:** Previously scanned channels will be removed.



## Chapter 8 Programming the VIZIO Universal Remote Control

### Using a Cable or Satellite Box Remote

Your VIZIO remote uses codes 000, 047, 050, 067, 329, 331 and 339 to work your HDTV. To use a Cable or Satellite remote to work the HDTV, refer to your Cable or Satellite remote user guide for more information on how to program the remote.

If your Cable or Satellite remote uses a 5-digit code (like most Direct TV units), first try 11758 and then, if that does not work, 10178. If your Cable or Satellite remote uses a 4-digit code, try 1758 and then 0178 as an alternative. If your Cable or Satellite remote uses a 3-digit code (Echostar or Dish Network for example), use code 627.

**Note:** Some buttons may not function as expected on your Cable or Satellite remote. Typically power, volume and mute will work.

### Programming other devices

Your remote control is programmable and supports up to three different devices. Listed below are the steps for programming your DVD player, Home Theater System, and a Cable or Satellite box. After you find your codes, write them in the table provided.

### Programming your Blu-Ray or DVD Player

1. Turn on the DVD player.
2. Press and release the **DVD** button on your VIZIO universal remote control.
3. Press and hold the **SET** button until the LED flashes twice.
4. Find the programming code for your DVD player in the code list below and enter it using the number buttons. If the code is accepted, the LED flashes twice after the last digit is entered. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed.
5. Point the remote control at the DVD player and press **POWER**. The DVD player will turn off. If the DVD player does not turn off, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

#### Notes:

- If the codes do not work or your brand is not listed, see "Searching for Component Codes."
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

### Programming your Home Theater System

1. Turn on the Home Theater System.
2. Press and release the **AUDIO** button on your VIZIO universal remote control.
3. Press and hold the **SET** button until the LED flashes twice.
4. Find the programming code for your Home Theater System and enter it using the number buttons. If the code is accepted, the LED flashes twice after the last digit is entered. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed.
5. Point the remote control at the Home Theater System and press **POWER**. The Home Theater System will turn off. If the Home Theater System does not turn off, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

#### Notes:

- If the codes do not work or your brand is not listed, see "Searching for Component Codes."
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

### Programming your Cable or Satellite Set-Top Box

1. Turn on the Cable or Satellite Set-Top Box.
2. Press and release the **CABLE** button on your VIZIO universal remote control.
3. Press and hold the **SET** button until the LED flashes twice.
4. Find the programming code for your Cable or Satellite Set-Top Box and enter it using the number buttons. If the code is accepted, the LED flashes twice after the last digit is entered. If the LED does not flash twice, repeat Steps 2 through 4 with the next code listed.
5. Point the remote control at the Cable or Satellite Set-Top Box and press **POWER**. The Cable or Satellite Set-Top Box will turn off. If the Cable or Satellite Set-Top Box does not turn off, repeat Steps 2 through 4 with the next code listed for the component and manufacturer.

My Codes	
DVD Player	
Home Theater	
Cable Box	
Satellite Box	
VCR	
Other	
Other	
Other	

**Notes:**

- If the codes do not work or your brand is not listed, see “Searching for Component Codes.”
- Sometimes a code listed will only include limited functions. Try other codes that may include more functionality.

### Searching for Device Codes

If you cannot find the manufacturer in the list or the program code does not work, you can use the remote control to search for the correct device code.

1. Turn on the device.
2. Press the matching device button on your VIZIO universal remote control.
3. Press and hold **SET** until the LED flashes twice.
4. Press **9 9 1**. The LED flashes twice.
5. Point the remote control at the device and then press and hold **POWER** until the device turns off.

### Reset Remote to Factory Settings

1. Press and hold **SET** until the LED flashes twice.
2. Press **9 1 9 1 9**. The LED flashes twice.

## Remote Control Codes

### Television Codes

#### (Including TV/DVD, TV/VCR, and TV/DVD/VCR)

3M 10195, 888, 10462	Asberg 10353	Bush 10348, 10352, 10353
A.R. Systems 10352	Astar 10163	byd:sign 10214
Abex 10065, 10256	Atlantic 10353	Caihong 10360, 10362, 10368, 10457, 10460
ACE 10449	Audinac 10234, 10278	Cailing 10464
Acer 10164	Audiosonic 10352, 10353	Caixing 10366, 10367, 10378, 10380, 10390, 10461
Addison 10048, 10231	Audiovox 10054, 10099, 10231, 10234, 10248, 10280, 10287, 10326	Candle 10047, 10049, 10050, 10066, 10229, 10254, 10261, 10265
Admiral: 10045, 10078, 10232, 10236	Aventura 10042	Carena 10353
Advent 10221, 10291	Awa 10048, 10351	Carnivale 10229, 10254
Adventura 10066, 10261	Axion 10154, 10326	Carver 10034, 10044, 10271
Aiko 10053, 10231	Baihehua 10461	Cascade 10353
Aim 10353	Baihua 10460, 10462	Casio 10353
Aiwa 10178, 10207	Baile 10458, 10460	Cathay 10353
Akai 10027, 10046, 10127, 10153, 10196, 10229, 10238, 10240, 10254, 10267, 10304, 10353	Bang & Olufsen 10244	Caton 10355
Akiba 10353	BaoHuaShi 10462	CCE 10246, 10258, 10353
Akito 10348, 10353	Baosheng 10457, 10460	Celebrity 10046
Akura 10277, 10353	Barco 10282	Celera 10075
Alaron 10246, 10273, 10275	Basic Line 10352, 10353	Centurion 10051, 10353
Alba 10353	Baur 10249, 10281, 10353	Changcheng 10357, 10360, 10362, 10363, 10364, 10366, 10367, 10368, 10369, 10370, 10371, 10372, 10373, 10374, 10376, 10378, 10379, 10380, 10384, 10385, 10392, 10448, 10455, 10457, 10458, 10460, 10461, 10462
Albatron 10219, 10222, 10286	Baysonic 10234	Changfei 10360, 10362, 10368, 10379, 10457, 10460, 10467
Alfide 10240	Beijing 10358, 10360, 10362, 10364, 10365, 10366, 10367, 10368, 10369, 10370, 10371, 10372, 10373, 10374, 10376, 10377, 10378, 10379, 10380, 10383, 10384, 10385, 10392, 10394, 10428, 10431, 10448, 10457, 10458, 10460, 10461, 10462	Changfeng 10360, 10367, 10376, 10381, 10382, 10384, 10385, 10392, 10457, 10462
Alleron 10055	Belcor 10047, 10252	Changhai 10360, 10362, 10368, 10457, 10460, 10467
Allstar 10353	Bell & Howell 10045	Changhong 10075, 10356, 10358, 10359, 10360, 10361, 10362, 10369, 10371, 10376, 10383, 10386, 10387, 10388, 10389, 10393, 10394, 10412, 10427, 10433, 10436, 10448, 10457, 10460
A-Mark 10248	Benq 10116, 10159, 10226, 10300	Chaparral 10442
America Action 10234	Beon 10353	Chengdu 10360, 10368, 10457
Ampro 10220, 10289	Bestar 10352, 10353	Chimei 10217
Amstrad 10279, 10353	Bestar-Daewoo 10352	Ching Tai 10231
Amtron 10054	Blaupunkt 10281	Chun Yun 10222, 10231, 10234, 10329, 10342
Anam 10234	Blue Sky 10282, 10353	
Anam National 10054, 10264	Boots 10348	
Anhua 10455	Boxlight 10290	
Anitech 10353	BPL 10275, 10353	
AOC 10047, 10048, 10049, 10112, 10229, 10248, 10252, 10254, 10263, 10274, 10316	Bradford 10054, 10234	
Aolinpiya 10462	Brilliant 10160	
Aolinpu 10465	Brinkmann 10353	
Apex 10075, 10095, 10233	Brockwood 10047, 10252	
Apex Digital 10288	Broksonic 10078, 10234, 10236, 10248	
Archer 10248		
Archos 10156		
Ardem 10353		
Aristona 10353		

Chunfeng 10362, 10368, 10376, 10384, 10385, 10392, 10405, 10460, 10462  
 Chung Hsin 10048, 10234, 10332  
 Chunlan 10397, 10468  
 Chunsun 10360, 10362, 10368, 10457, 10460  
 Cinego 10327  
 Cinal 10231, 10280  
 Citizen 10047, 10049, 10050, 10053, 10054, 10062, 10064, 10229, 10231, 10238, 10254, 10259, 10261, 10265, 10325, 10347  
 Clairtone 10274  
 Clarion 10234  
 Clarivox 10353  
 Clatronic 10353  
 Coby 10108  
 Colortyme 10047, 10049  
 Colt 10344  
 Commercial Solutions 10230  
 Concerto 10047, 10049, 10265  
 Condor 10353  
 Conrowa 10422, 10460, 10462  
 Contec 10234, 10268, 10269, 10274, 10353  
 Contec/Cony 10052, 10054  
 Cosmel 10353  
 Craig 10054, 10234  
 Crosley 10034, 10044, 10076  
 Crown 10054, 10058, 10234, 10240, 10259, 10353  
 Crown Mustang 10240  
 CTX 10115  
 Curtis Mathes 10016, 10027, 10034, 10044, 10047, 10049, 10062, 10064, 10229, 10230, 10232, 10238, 10239, 10254, 10259, 10265, 10280  
 CXC 10054, 10234  
 CyberHome 10294  
 Cytron 10152, 10310  
 Daewoo 10047, 10048, 10049, 10053, 10064, 10076, 10231, 10240, 10252, 10259, 10280, 10325, 10347, 10352, 10353  
 Dansai 10353  
 Dawa 10353  
 Daytron 10047, 10049, 10064, 10252, 10352, 10353  
 Dayu 10458  
 De Graaf 10275  
 Decca 10348, 10353  
 Dell 10019, 10124  
 Denon 10239  
 Denstar 10284  
 Denver 10353  
 Desmet 10353  
 Diamant 10353  
 Diamond Vision 10216, 10328  
 Digatron 10353  
 Dimensia 10016  
 Disney 10093  
 Dixi 10353  
 DongBao 10448  
 DongDa 10362, 10368, 10448, 10460  
 Donghai 10362, 10368, 10460  
 DongHua 10448  
 Donglin 10391  
 Dual 10353  
 Dumont 10020, 10047, 10228, 10252, 10266  
 Durabrand 10042, 10078, 10227, 10234, 10236, 10248, 10272  
 Dux 10353  
 D-Vision 10353  
 Dwin 10232, 10293  
 Dynatech 10262  
 Dynatron 10353  
 Dynex 10143, 10189  
 Ectec 10278  
 Eiki 10169, 10170  
 Electroband 10046, 10274  
 Electrograph 10206, 10321  
 Electrohome 10046, 10047, 10049, 10078  
 Elektra 10228  
 Element 10136  
 ELG 10353  
 Elin 10353  
 Emerson 10042, 10047, 10049, 10052, 10054, 10055, 10064, 10076, 10078, 10135, 10234, 10236, 10252, 10259, 10269, 10272, 10273, 10274, 10325, 10347, 10353  
 Emprex 10215  
 Envision 10047, 10049, 10112, 10229, 10254, 10316  
 Epson 10113, 10302  
 Erres 10250, 10353  
 ESA 10042, 10127  
 ESC 10353  
 Ether 10330  
 Euroman 10353  
 Europa 10353  
 Exquisit 10353  
 Feilang 10362, 10368, 10460  
 Feilu 10360, 10362, 10368, 10457, 10460  
 Feiyan 10376, 10384, 10385, 10392, 10462  
 Feiyue 10360, 10362, 10366, 10367, 10368, 10378, 10380, 10457, 10460, 10461  
 Fenmenti 10353  
 Fenner 10352  
 Ferguson 10048  
 Fidelity 10353  
 Filmnet 10440  
 Finlandia 10275  
 Finlux 10266  
 Firstline 10352, 10353  
 Firstar 10340  
 Fisher 10270, 10275  
 FlexVision 10287  
 Flint 10353  
 Fraba 10353  
 Friac 10353  
 Frontech 10277  
 Fujitsu 10050, 10055, 10208, 10273  
 Funai 10042, 10054, 10055, 10234, 10273, 10324  
 Furi 10336  
 Futuretech 10054, 10234, 10277  
 Galaxis 10353  
 Ganxin 10457, 10461  
 Gateway 10119, 10206, 10241, 10322  
 GBC 10352  
 GE 10016, 10047, 10049, 10056, 10057, 10070, 10088, 10230, 10253, 10264, 10272, 10280, 10345  
 GEC 10353  
 Geloso 10352  
 Genexxa 10353  
 GFM 10040, 10140  
 Gibraltar 10020, 10047, 10228, 10229, 10252, 10254

GoldStar 10047, 10048, 10049, 10052, 10064, 10065, 10229, 10252, 10254, 10256, 10272, 10346, 10353  
 Goodmans 10352, 10353  
 Gradiente 10036, 10118, 10265, 10271  
 Granada 10048, 10275, 10353  
 Grandin 10352, 10353  
 Great Wall 10349  
 Grundig 10240, 10258, 10266, 10281, 10353  
 Grunpy 10054, 10055, 10234, 10273  
 Haier 10139, 10148, 10174, 10209, 10227, 10247, 10354, 10380, 10395, 10396, 10399, 10403, 10404, 10414, 10416, 10417, 10418, 10419, 10421, 10423, 10424, 10466  
 HaiHong 10362, 10368, 10369, 10370, 10371, 10372, 10373, 10391, 10395, 10448, 10460  
 Haile 10375  
 Haiyan 10360, 10366, 10367, 10376, 10378, 10380, 10384, 10385, 10392, 10457, 10461, 10462  
 Hallmark 10047, 10049, 10272  
 Hankook 10234, 10330, 10339  
 Hannspree 10315  
 Hanseatic 10353  
 Hantarex 10313, 10353  
 Hantor 10353  
 Harley Davidson 10260, 10273, 10324  
 Harman/Kardon 10034, 10044  
 Harvard 10054, 10234  
 Harwood 10353  
 Hauppauge 10353  
 Havermy 10232  
 HCM 10279, 10353  
 Helios 10145  
 Hello Kitty 10210, 10280  
 Hewlett Packard 10101, 10301  
 Highline 10353  
 Himitsu 10234, 10284  
 Hinari 10353  
 Hisense 10121, 10288, 10338, 10350, 10356, 10358, 10361, 10368, 10381, 10382, 10386, 10395, 10396, 10397, 10400, 10401, 10407, 10408, 10416, 10417, 10418, 10419, 10426, 10428, 10431, 10459  
 Hitachi 10047, 10048, 10049, 10052, 10131, 10184, 10239, 10256, 10265, 10324, 10353  
 Hitachi Fujian 10048, 10457, 10459, 10461, 10462  
 Hornyphone 10353  
 Hongmei 10359, 10360, 10362, 10366, 10367, 10368, 10376, 10378, 10380, 10385, 10386, 10387, 10392, 10457, 10460, 10461, 10462  
 Hongyan 10457, 10462  
 Hotel TV 10447  
 HP 10301  
 Huafa 10460  
 Huanghaimei 10362, 10368, 10460  
 Huanghe 10360, 10362, 10366, 10367, 10368, 10378, 10380, 10383, 10395, 10406, 10457, 10460, 10461  
 Huanglong 10362, 10368, 10460  
 Huangshan 10360, 10362, 10366, 10367, 10368, 10375, 10376, 10378, 10380, 10384, 10385, 10392, 10457, 10460, 10461, 10462  
 Huanyu 10352, 10359, 10360, 10366, 10367, 10376, 10378, 10380, 10384, 10385, 10386, 10387, 10392, 10457, 10459, 10461, 10462  
 Huaqiang 10376, 10384, 10385, 10392, 10462  
 Huari 10462  
 Humax 10197  
 Huodateji 10455  
 Hypson 10277, 10353  
 Hyundai 10171, 10224  
 Iberia 10353  
 ICE 10277  
 Ilo 10149, 10151, 10307, 10320  
 IMA 10054  
 Imperial 10353  
 Imperial Crown 10458, 10462  
 Indiana 10353  
 Infinity 10034, 10044, 10058  
 InFocus 10125, 10290  
 Initial 10151, 10320  
 Innova 10258  
 Insignia 10141, 10142, 10143, 10181, 10310  
 Inteq 10228  
 Interbuy 10353  
 Interfunk 10353  
 Internal 10353  
 Intervision 10277, 10353  
 IR 10351, 10352, 10353  
 Irradio 10353  
 IRT 10280, 10284  
 Isukai 10353  
 ITS 10353  
 ITV 10352, 10353  
 Janeil 10066, 10261  
 JBL 10034, 10044, 10058  
 JC Penney 10016, 10047, 10048, 10049, 10050, 10056, 10057, 10062, 10064, 10065  
 JCB 10046  
 Jean 10231, 10331, 10338, 10340  
 Jensen 10047, 10049, 10291  
 Jiahua 10357, 10363, 10375, 10376, 10411, 10455  
 JiaLiCai 10414, 10448, 10460, 10462  
 Jinfeng 10357, 10360, 10365, 10455, 10457  
 Jinhai 10359, 10386, 10387  
 Jinlipu 10386  
 Jinqe 10457, 10460, 10462  
 Jinta 10460, 10461, 10462  
 Jinxing 10333, 10336, 10338, 10358, 10360, 10367, 10368, 10375, 10376, 10377, 10383, 10386, 10389, 10390, 10392, 10394, 10397, 10408, 10426, 10457, 10462  
 Juhua 10457, 10461, 10462  
 JVC 10036, 10037, 10038, 10052, 10057, 10059, 10078, 10257  
 Kaige 10457, 10460, 10461, 10462  
 Kaisui 10353  
 Kamp 10246  
 Kangchong 10359, 10386, 10387  
 Kanghua 10395

Kangli 10422, 10448, 10457, 10458, 10460, 10461, 10462  
 Kangyi 10390, 10460, 10462  
 Kawasho 10046, 10047, 10049, 10246, 10269  
 Kaypani 10263  
 KDS 10295  
 KEC 10234  
 Kendo 10353  
 Kenwood 10047, 10049, 10229, 10252, 10254  
 Kioto 10034, 10282  
 Kiton 10353  
 KLH 10075  
 Kloss 10261  
 Kloss Novabeam 10054, 10066  
 Kneissel 10352, 10353  
 Kolin 10048, 10234, 10337  
 Kongque 10457, 10460, 10461, 10462  
 Konka 10211, 10237, 10284, 10353, 10355, 10360, 10363, 10372, 10375, 10388, 10389, 10391, 10392, 10397, 10402, 10430  
 Korpel 10353  
 Kost 10306  
 Kreisen 10298  
 KTV 10054, 10064, 10229, 10234, 10246, 10254, 10259, 10274  
 Kuaile 10460, 10462  
 Kunlun 10357, 10360, 10365, 10368, 10376, 10377, 10378, 10379, 10455, 10457, 10458, 10462  
 Lecson 10353  
 Lenco 10352, 10353  
 Leyco 10277, 10353  
 LG 10019, 10048, 10100, 10129, 10167, 10175, 10185, 10198, 10199, 10200, 10219, 10225, 10245, 10254, 10265, 10272, 10286, 10323, 10353  
 Liesenk & Tter 10353  
 Lifetec 10352, 10353  
 Lihua 10457  
 Lloyd's 10324  
 Local India TV 10275  
 Loewe 10058  
 Loewe Opta 10353  
 Logik 10045, 10351  
 Longjiang 10360, 10376, 10384, 10385, 10392, 10457, 10462  
 Lumatron 10353  
 Lux May 10353  
 Luxman 10047, 10049, 10265  
 LXI 10016, 10034, 10044, 10049, 10058, 10230, 10233, 10272  
 M & S 10034  
 Melectronic 10352, 10353  
 Madison 10353  
 MAG 10295  
 Magnasonic 10325, 10347  
 Magnavox 10034, 10044, 10047, 10049, 10050, 10058, 10073, 10086, 10089, 10134, 10229, 10254, 10257, 10273, 10316, 10324, 10351  
 Magnin 10345  
 Magnum 10353  
 Majestic 10045  
 Manesth 10277, 10353  
 Manhattan 10353  
 Marantz 10034, 10044, 10047, 10049, 10058, 10114, 10212, 10229, 10254, 10258, 10353  
 Mark 10352, 10353  
 Matsui 10275, 10348, 10351, 10353  
 Matsushita 10235, 10285  
 Maxent 10144, 10201, 10206, 10292  
 Mediator 10250, 10353  
 Medion 10353  
 Megapower 10219, 10286  
 Megatron 10049, 10239, 10248, 10272  
 MEI 10274  
 Meile 10457, 10461, 10462  
 MeiShi 10390  
 Memorex 10042, 10045, 10048, 10049, 10078, 10236, 10272, 10273, 10343, 10346  
 Mengmei 10461  
 Mercury 10353  
 Metz 10281, 10353  
 MGA 10047, 10048, 10049, 10229, 10252, 10254, 10272, 10345  
 Micromaxx 10353  
 Midland 10020, 10057, 10064, 10065, 10228, 10230, 10256, 10259  
 Minato 10353  
 Minerva 10048, 10266, 10281  
 Minoka 10279, 10353  
 Mintek 10151, 10320  
 Minutz 10056, 10253  
 Mitsubishi 10047, 10048, 10049, 10092, 10182, 10183, 10232, 10252, 10267, 10272, 10281, 10353  
 MoDeng 10390  
 Monivision 10219, 10222, 10286  
 Montgomery Ward 10045  
 Morgans 10353  
 Motorola 10232, 10264, 10295  
 Moxell 10295  
 MTC 10047, 10048, 10049, 10062, 10229, 10238, 10246, 10252, 10254, 10262, 10265, 10274  
 MTEC 10348  
 MuDan 10380, 10411, 10438, 10455, 10457, 10460, 10462  
 Multitec 10353  
 Multitech 10054, 10234, 10246, 10262, 10353  
 Multivision 10060  
 NAD 10049, 10233, 10258, 10265, 10272  
 Naiko 10353  
 Nakamichi 10318  
 Nanbao 10460, 10462  
 Nansheng 10360, 10376, 10384, 10385, 10392, 10457, 10462  
 NEC 10047, 10048, 10049, 10162, 10212, 10218, 10229, 10252, 10254, 10257, 10265, 10271, 10351, 10352  
 Neckermann 10353  
 NEI 10353  
 Neovia 10313  
 Netsat 10258, 10353  
 Net-TV 10158, 10206, 10292  
 Neufunk 10353  
 New Tech 10353  
 Newave 10231, 10335, 10339  
 Nikkai 10277, 10353  
 Nikko 10049, 10053, 10229, 10231, 10254, 10272  
 Nisato 10278  
 Nokia 10352  
 Norcent 10112, 10288, 10301, 10316



Nordmende 10353  
 Normerel 10353  
 Norwood Micro 10307  
 Noshi 10251  
 Novatronic 10352, 10353  
 NTC 10053, 10231  
 Okano 10353  
 Olevia 10096, 10105, 10111, 10242, 10243, 10303, 10305, 10311  
 Olympus 10314  
 Onwa 10054, 10234  
 Opera 10353  
 Oppo 10155  
 Optimus 10235, 10285, 10343  
 Optoma 10126, 10194  
 Optonica 10061, 10232  
 Orbit 10353  
 Orion 10078, 10193, 10236, 10273, 10351, 10353  
 Orline 10353  
 Osaki 10277, 10279, 10348, 10352, 10353  
 Osio 10353  
 Osume 10353  
 Otto Versand 10249, 10281, 10353  
 Palladium 10353  
 Palsonic 10353  
 Panama 10277, 10353  
 Panasonic 10010, 10011, 10012, 10013, 10014, 10015, 10048, 10057, 10058, 10080, 10085, 10102, 10173, 10176, 10235, 10264, 10285, 10343  
 Panasonic/National 10353  
 Panavision 10353  
 Panda 10357, 10359, 10360, 10362, 10365, 10366, 10367, 10368, 10369, 10371, 10376, 10378, 10380, 10383, 10384, 10385, 10386, 10387, 10390, 10392, 10394, 10405, 10406, 10415, 10422, 10455, 10457, 10460, 10461, 10462  
 Penney 10229, 10230, 10233, 10238, 10248, 10251, 10252, 10253, 10254, 10256, 10259, 10272, 10345, 10346  
 Perdio 10353  
 Perfekt 10353  
 Philco 10034, 10044, 10047, 10048, 10049, 10050, 10052, 10058, 10078, 10229, 10252, 10254, 10353  
 Philips 10029, 10030, 10031, 10032, 10033, 10034, 10035, 10044, 10047, 10048, 10050, 10052, 10058, 10072, 10074, 10104, 10134, 10177, 10187, 10250, 10258, 10282, 10352, 10353  
 Philips Magnavox 10031, 10034, 10072, 10073  
 Phoenix 10353  
 Phonola 10250, 10353  
 Pilot 10047, 10064, 10229, 10252, 10254, 10259, 10450, 10451, 10452, 10453, 10454  
 Pioneer 10047, 10049, 10212, 10353  
 Pionier 10353  
 Plantron 10353  
 Plasmsync 10165  
 Playsonic 10353  
 Polaroid 10075, 10100, 10109, 10136, 10145, 10190, 10295, 10306, 10310  
 Polestar 10441  
 Portland 10047, 10048, 10049, 10053, 10064, 10231, 10252, 10259, 10352  
 Powerpoint 10353  
 Praxis 10443  
 Price Club 10062  
 Prima 10117, 10148, 10213, 10221, 10291  
 Princeton 10219, 10286  
 Prism 10057  
 Profitronic 10353  
 Proline 10353  
 Proscan 10016, 10230  
 Prosonic 10352, 10353  
 Protech 10277, 10353  
 Proton 10047, 10049, 10052, 10248, 10255, 10263, 10272  
 Prottron 10106, 10309  
 Proview 10120, 10136, 10295  
 Provision 10353  
 Pulsar 10020, 10047, 10228, 10252  
 Pye 10250, 10352, 10353  
 Qingdao 10455, 10457, 10462  
 Quasar 10057, 10235, 10264, 10285, 10343  
 Quelle 10249, 10266, 10281, 10351, 10353, 10437  
 Radio Shack/Realistic 10016, 10047, 10049, 10052, 10054, 10061, 10064, 10065  
 Radiola 10250, 10353  
 Radiomarelli 10353  
 RadioShack 10016, 10229, 10230, 10234, 10252, 10254, 10256, 10259, 10265, 10272, 10324, 10353  
 Radiotone 10353  
 RBM 10266  
 RCA 10016, 10017, 10018, 10047, 10048, 10049, 10068, 10077, 10081, 10188, 10230, 10238, 10251, 10252, 10345  
 Realistic 10016, 10229, 10234, 10252, 10254, 10256, 10259, 10265, 10272  
 Recor 10353  
 Rectiligne 10353  
 Reflex 10353  
 Revox 10353  
 Rex 10277  
 RFT 10353  
 Rhapsody 10246, 10274  
 R-Line 10353  
 Roadstar 10277, 10353  
 Rowa 10429  
 Runco 10020, 10212, 10218, 10228, 10229, 10254  
 Ruyi 10457, 10459, 10461  
 Saige 10457, 10460  
 Saisho 10277, 10351  
 Saivod 10353  
 Sampo 10047, 10049, 10064, 10065, 10161, 10206, 10229, 10254, 10256, 10259, 10263, 10292  
 Samsung 10026, 10027, 10028, 10047, 10048, 10049, 10052, 10062, 10064, 10065, 10127, 10128, 10132, 10137, 10138, 10168, 10229, 10238, 10252, 10254, 10256, 10258, 10265, 10272, 10277, 10353  
 Samsux 10259  
 Sanjian 10462  
 Sansei 10280  
 Sansui 10078, 10107, 10236, 10324, 10353

Sanyo 10047, 10048, 10097, 10192, 10202, 10270, 10275, 10345, 10351  
 Sanyuan 10360, 10362, 10366, 10367, 10368, 10378, 10380, 10457, 10460, 10461  
 SBR 10250, 10353  
 Sceptre 10123  
 Schneider 10353  
 Scimitsu 10252  
 Scotch 10049, 10272  
 Scott 10047, 10049, 10052, 10054, 10055, 10150, 10234, 10252, 10272, 10273  
 Sears 10016, 10034, 10042, 10044, 10047, 10049, 10055, 10059, 10067, 10160, 10230, 10233, 10265, 10270, 10272, 10273, 10324, 10346  
 Seg 10277, 10353  
 SEI 10249, 10353  
 SEI-Sinudyne 10353  
 Semivox 10234  
 Shancha 10457, 10462  
 Shangguangdian 10445  
 Shanghai 10359, 10360, 10362, 10363, 10366, 10367, 10368, 10376, 10378, 10380, 10384, 10385, 10386, 10387, 10392, 10457, 10460, 10461, 10462, 10467  
 Shanshui 10358  
 Shaofeng 10356, 10360, 10366, 10457, 10459, 10461  
 Sharp 10022, 10023, 10024, 10025, 10047, 10049, 10052, 10061, 10064, 10103, 10232, 10259, 10268  
 Shen Ying 10231  
 Shencai 10362, 10368, 10376, 10384, 10385, 10392, 10460, 10462  
 Sheng Chia 10232, 10335  
 ShengCai 10386, 10448  
 Shengli 10456  
 Shenyang 10360, 10362, 10368, 10376, 10381, 10382, 10457, 10460, 10462  
 Sherwood 10460  
 Shintoshii 10353  
 Shivaki 10353  
 Shogun 10047, 10252  
 Shuyuan 10422  
 Siemens 10281, 10353  
 Signature 10045  
 Signet 10306  
 Silva 10353  
 Silva Schneider 10353  
 SIM2 Multimedia 10308  
 Simpson 10050  
 Singer 10353  
 Sinudyne 10249, 10353  
 Sky 10258, 10353  
 Skygiant 10234  
 Skyworth 10360, 10368, 10376, 10381, 10382, 10389, 10390, 10392, 10397, 10409, 10413, 10415, 10420, 10432, 10457, 10462  
 Solavox 10353  
 Songbai 10460  
 SongRi 10448  
 Soniko 10353  
 Sonitron 10275  
 Sonneclair 10353  
 Sonoko 10353  
 Sonolor 10275  
 Sontec 10353  
 Sony 10000, 10001, 10002, 10003, 10004, 10005, 10046, 10071, 10084, 10130, 10172, 10249, 10324, 10351, 10353  
 Sound & Vision 10352  
 Soundesign 10047, 10049, 10050, 10054, 10055, 10234, 10272, 10273  
 Soundwave 10353  
 Sova 10309  
 Sowa 10334, 10338  
 SOYO 10180, 10319  
 Spectricon 10248  
 Spectroniq 10295  
 Squareview 10042, 10067  
 Srypton 10353  
 SSS 10047, 10054, 10234, 10252  
 Standard 10352, 10353  
 Starlite 10054, 10234, 10353  
 Strato 10353  
 Studio Experience 10222  
 Sunstar 10353  
 Sunwood 10353  
 SuperScan 10041, 10232, 10297  
 SuperTech 10353  
 Supre-Macy 10066, 10261  
 Supreme 10046  
 SVA 10145, 10247, 10283, 10288  
 Sylvania 10034, 10035, 10039, 10040, 10041, 10042, 10043, 10044, 10047, 10049, 10050, 10058, 10133, 10229, 10254  
 Symphonic 10041, 10042, 10054, 10067, 10234, 10324  
 Synco 10231, 10280, 10329, 10334, 10335, 10339  
 Syntax 10105, 10243, 10303, 10305, 10311  
 Syntax-Brilliant 10105, 10160  
 Sysline 10353  
 Tacico 10231, 10339  
 Tactus 10348  
 Tai Wah 10444  
 Taishan 10360, 10362, 10368, 10370, 10371, 10372, 10373, 10374, 10379, 10457, 10460  
 Tandy 10232  
 Tantec 10348  
 Tashiko 10353  
 Tatung 10147, 10179, 10241, 10248, 10262, 10264, 10307, 10322, 10331, 10334, 10338, 10348, 10351  
 TCL 10383, 10384, 10389, 10390, 10398, 10410, 10420, 10425, 10429, 10463  
 Teac 10277, 10279, 10353  
 Tec 10353  
 Tech Line 10353  
 Technics 10057, 10235  
 Technol Ace 10273  
 Technovision 10446  
 Techview 10223, 10296  
 Techwood 10047, 10049, 10057, 10248, 10265  
 Teco 10331, 10335, 10339  
 Teknika 10034, 10044, 10045, 10047, 10048, 10049, 10050, 10052, 10053, 10054, 10055, 10062, 10064, 10231, 10234, 10238, 10252, 10259, 10265, 10273  
 Telecaption 10063  
 Telecor 10353  
 Telefunken 10027, 10265, 10353  
 Telefusion 10353

Telegazi 10353  
 Telesonic 10353  
 Telestar 10353  
 Teletech 10353  
 Teleview 10353  
 Tennessee 10353  
 Tensai 10352, 10353  
 Tera 10255  
 Tevion 10353  
 Texet 10352  
 Thomas 10324  
 Thomson 10016, 10353  
 Thorn 10348, 10353  
 Thorn-Ferguson 10438  
 Tiane 10457  
 TMK 10047, 10049, 10265, 10272  
 TNCi 10228  
 TOBO 10460, 10462  
 Tokai 10352, 10353  
 Tongguang 10376, 10384, 10385, 10392, 10462  
 Tophouse 10234  
 Toshiba 10006, 10007, 10008, 10009, 10062, 10063, 10079, 10082, 10083, 10087, 10090, 10091, 10212, 10233, 10238, 10245, 10257, 10266, 10285  
 Tosonic 10274  
 Totevision 10064, 10259  
 Trans Continens 10353  
 Transonic 10353  
 Trical 10268  
 Trutech 10146  
 Tuntex 10231, 10330  
 TVS 10078, 10236  
 Uher 10352, 10353  
 Ultra 10278  
 Ultravox 10353  
 Unic Line 10353  
 United 10353  
 Universal 10056, 10353  
 Universum 10277, 10281, 10351, 10353  
 Univox 10353  
 US Logic 10307  
 Vector Research 10229, 10254  
 Vegavox 10439  
 Vestel 10353  
 Vexa 10353

Vibrant 10348  
 Victor 10036, 10059  
 Video Concepts 10267  
 Videocon 10436  
 Videosystem 10353  
 Vidikron 10034, 10044, 10212, 10276  
 Vidtech 10047, 10048, 10049, 10252, 10257, 10272  
 Viewsonic 10094, 10110, 10191, 10203, 10204, 10205, 10206, 10297, 10299, 10314  
 Viking 10066, 10261  
 Viore 10149, 10304  
 Visart 10312  
 Visco 10157  
 Vision 10353  
 Vito 10434  
 Vizio 10047, 10094, 10122, 10166, 10241, 10297, 10299, 10322, 10323, 11000  
 Vortec 10353  
 Waltham 10353  
 Wards 10016, 10034, 10044, 10045, 10047, 10048, 10049, 10055, 10056, 10058, 10061, 10229, 10252, 10253, 10254, 10265, 10272, 10273  
 Warumaia 10458  
 Watson 10353  
 Wega 10353  
 Wega Color 10435  
 Weipai 10460  
 Westinghouse 10094, 10098, 10186, 10299  
 Wharfedale 10353  
 White Westinghouse 10076, 10078, 10236, 10353  
 WinBook 10317  
 Wyse 10316  
 Xiahua 10360, 10362, 10367, 10368, 10370, 10376, 10380, 10384, 10385, 10390, 10392, 10425, 10457, 10460, 10462  
 Xiangyang 10376, 10384, 10385, 10392, 10462  
 Xiangyu 10362, 10368, 10375, 10460  
 Xihu 10360, 10366, 10367, 10376, 10378, 10380, 10384, 10392, 10422, 10457, 10461, 10462  
 Xinaghai 10460, 10462

Xingfu 10362, 10368, 10460  
 Xinghai 10362, 10368, 10376, 10384, 10385, 10392  
 Xinsida 10467  
 Xuelian 10359, 10366, 10367, 10378, 10380, 10386, 10387, 10461  
 Yamaha 10047, 10048, 10049, 10229, 10252, 10254  
 Yamishi 10353  
 Yapshe 10341  
 YingGe 10448, 10460, 10461  
 Yoko 10277  
 Yonggu 10460, 10461  
 Youlanasi 10457, 10461  
 Yousida 10460  
 Yuhang 10362, 10368, 10460  
 Zenith 10019, 10020, 10021, 10045, 10047, 10069, 10078, 10198, 10228, 10231, 10236, 10245, 10272, 10324  
 Zhuhai 10362, 10368, 10379, 10460  
 Zonda 10248

**Cable Box Codes  
 (Including Cable / PVR Boxes)**

ABC 40030, 40031, 40032, 40034, 40053, 40107, 40126, 40127  
 Adelphia 40001  
 Allegro 40038  
 Antronix 40036, 40037  
 Apache 40124  
 Archer 40037, 40038, 40123  
 AT&T 40003  
 BBT 40129  
 Belcor 40125  
 Bell & Howell 40033  
 Bell South 40113  
 Cable Star 40125  
 Cable Vision 40005  
 Cabletenna 40036  
 Cableview 40035  
 Century 40038  
 Citizen 40038, 40118  
 Clearmaster 40112  
 ClearMax 40112  
 Colour Voice 40039  
 Comcast 40000, 40007  
 Comtronics 40040

Contec 40041  
Coolmax 40112  
COX 40000  
Daeryung 40071  
Digi 40117  
Director 40007  
Dumont 40117  
Eastern 40042  
Emerson 40123  
Everquest 40040, 40108  
Focus 40111  
Garrard 40038  
GC Electronics 40037, 40125  
GE 40030, 40031  
Gehua 40007  
Gemini 40043, 40108, 40123  
General Instrument 40007,  
40031, 40105  
GoldStar 40040, 40109  
Goodmind 40123, 40124  
Hamlin 40044, 40045  
Hitachi 40031  
Hytex 40126  
Illico 40119  
Jasco 40038, 40108  
Jerrold 40007, 40031, 40043,  
40053, 40067, 40105, 40108  
LG 40116  
Linsay 40132  
Magnavox 40046  
MegaCable 40007  
Memorex 40047, 40107  
Motorola 40000, 40003, 40007,  
40072, 40105  
Movie Time 40048  
Multitech 40112  
Multivision 40120  
NEC 40033  
NET Brazil 40070  
Nexus 40124  
Nova Vision 40121  
Novaplex 40134  
NSC 40048  
Oak 40041, 40126  
Pace 40006, 40110  
Panasonic 40051, 40107  
Panther 40117  
Paragon 40107  
Philips 40038, 40039, 40046

Pioneer 40002, 40049, 40071,  
40109  
Popular Mechanics 40111  
Prelude 40124  
Proscan 40030, 40031  
Pulsar 40107  
Quasar 40107  
RadioShack 40108, 40112,  
40123  
RCA 40035  
Realistic 40037  
Recoton 40111  
Regal 40045  
Regency 40042  
Rembrandt 40031  
Rogers 40119  
Runco 40107  
Samsung 40006, 40040, 40049,  
40069, 40109  
Scientific Atlanta 40001, 40002,  
40003, 40034, 40071, 40106  
Signal 40040, 40043, 40108  
Signature 40031  
SL Marx 40040  
Sony 40005, 40114  
Standard Component 40050  
Starcom 40043, 40053, 40108  
Stargate 40040, 40043, 40108,  
40123, 40124  
Starquest 40043, 40108  
StarSight 40131  
Supercable 40105  
Supermax 40112  
Sylvania 40127  
Tandy 40128  
Telecaption 40130  
TeleView 40040  
Texscan 40127  
TFC 40133  
Time Warner 40004  
Timeless 40040  
Tocom 40032  
Torx 40115  
Toshiba 40107  
Trans PX 40105  
Tristar 40112  
TS 40115  
Tusa 40043, 40108  
TV86 40048  
US Electronics 40105

Unika 40036, 40037, 40038  
United Artists 40126  
United Cable 40053  
Universal 40036, 40037, 40038,  
40125  
V2 40112  
Videotron 40122  
View Star 40041, 40046, 40048  
Viewmaster 40112  
ViewStar 40128  
Vision 40112  
Vortex View 40112  
Zenith 40052, 40068, 40107,  
40113  
Zentek 4011

### **Satellite Receiver Codes (Including Sat / PVR Boxes)**

AccessHD 40096  
Alpha Digital 40096  
AlphaStar 40064  
Apex Digital 40103  
Artec 40092  
CaptiveWorks 40088  
Channel Master 40097  
Chaparral 40056  
Coolsat 40089  
Coship 40093  
Crossdigital 40146  
Digital Stream 40102  
DirecTV 40014, 40015, 40016,  
40017, 40018, 40019, 40020,  
40023, 40024, 40025, 40028,  
40029, 40054, 40055, 40077,  
40078, 40079, 40135, 40136,  
40138, 40141  
Dish Network System 40008,  
40009, 40010, 40011, 40021,  
40137, 40139, 40144  
Dishpro 40137, 40139, 40144  
Drake 40057  
Echostar 40008, 40021, 40137,  
40139, 40144, 40145  
Expressvu 40139, 40144, 40145  
GE 40012, 40013, 40098  
General Instrument 40058,  
40142  
GOI 40144  
Goodmind 40098  
Hisense 40143  
Hitachi 40029, 40065

HTS 40144  
 Hughes Network Systems 40016, 40018, 40019, 40023, 40025, 40054, 40135  
 Humax 40090  
 Ilo 40143  
 Insignia 40082  
 Jerrold 40142  
 JVC 40008, 40021, 40144  
 Lasonic 40099  
 LG 40082  
 Magnavox 40028, 40094  
 Memorex 40028  
 MicroGem 40100  
 Mitsubishi 40023, 40085  
 Motorola 40140, 40142  
 Next Level 40142  
 Panasonic 40017, 40083  
 Pansat 40086  
 Paysat 40028  
 PCT 40097  
 Philco 40094  
 Philips 40016, 40023, 40025, 40027, 40028, 40079, 40135  
 Pioneer 40016  
 Primestar 40063  
 Proscan 40012, 40013, 40138  
 Proton 40143  
 RadioShack 40142  
 RCA 40012, 40013, 40014, 40025, 40055, 40073, 40075, 40077, 40078, 40080, 40091  
 Realistic 40059  
 Samsung 40016, 40018, 40024, 40025, 40026, 40081  
 Sharp 40084  
 Sonicview 40101  
 Sony 40015, 40022, 40074, 40076, 40136  
 Star Choice 40140, 40142  
 STS 40066  
 STS1 40060  
 STS3 40061  
 STS4 40062  
 Tivax 40096  
 Tivo 40016, 40025  
 Toshiba 40019  
 UltimateTV 40136  
 Uniden 40028  
 US Digital 40143

Viewsat 40087  
 Voom 40142  
 Winegard 40104  
 Zenith 40020, 40082  
 Zentech 40095

### **PVR Codes**

ABS 20410  
 Alienware 20410  
 AT&T 20245  
 Bang & Olufsen 20412  
 CyberPower 20410  
 Dell 20410  
 DirecTV 20238, 20240, 20241, 20243, 20405, 20406, 20409, 20411  
 Dish Network 20408  
 Dishpro 20408  
 EchoStar 20408  
 ExpressVu 20408  
 Gateway 20410  
 GOI 20408  
 Hewlett Packard 20410  
 Howard Computers 20410  
 HTS 20408  
 Hughes Network Systems 20240, 20238, 20241, 20243, 20407  
 Humax 20238  
 Hush 20410  
 iBUYPOWER 20410  
 JVC 20238, 20408  
 Linksys 20410  
 Media Center PC 20410  
 Microsoft 20410  
 Mind 20410  
 Niveus Media 20410  
 Northgate 20410  
 Panasonic 20245  
 Philips 20238, 20240, 20241, 20242, 20243, 20407  
 RCA 20238, 20243, 20407, 20409, 20411  
 ReplayTV 20244  
 Samsung 20241, 20243, 20407  
 Sonic Blue 20244  
 Sony 20239, 20410  
 Stack 20410  
 Systemax 20410  
 Tagar Systems 20410

Tivo 20238, 20239, 20240, 20242, 20243  
 Toshiba 20410  
 Touch 20410  
 UltimateTV 20411  
 Viewsonic 20410  
 Voodoo 20410  
 ZT Group 20410  
**Blu-Ray DVD Player Codes**  
 Denon 20143, 20144  
 Insignia 20142  
 LG 20132  
 Marantz 20145, 20146  
 Panasonic 20128, 20129, 20130, 20197, 20198  
 Pioneer 20134, 20147  
 Samsung 20015, 20125  
 Sharp 20139, 20140, 20141  
 Sony 20005  
 Vizio 22000

### **DVD Player Codes**

Accele Vision 20137  
 Accurian 20311  
 Advent 20288  
 Aiko 20348  
 Aiwa 20207  
 Akai 20161, 20282, 20317  
 Akishi 20349  
 Akustic 20348  
 Alco 20286  
 Allegro 20306  
 Alpine 20152  
 Amphion Media Works 20151, 20330  
 AMW 20151  
 Anam 20392  
 Aodeiong 20358  
 Apex 20024, 20025, 20026, 20027, 20085, 20111, 20300, 20301  
 Apple 20189  
 Arrgo 20307  
 Aspire 20209, 20290  
 Astar 20181  
 ATLM 20369  
 Audiovox 20106, 20116, 20286  
 Axion 20162  
 Bang & Olufsen 20302  
 Blaupunkt 20136, 20301

## VIZIO M420NV User Manual

Blue Parade 20298  
Bose 20076, 20086, 20393, 20394  
BOSS 20138  
Boston Acoustics 20331  
Brand 20383  
Broksonic 20007, 20282  
Caixing 20389  
California Audio Labs 20284  
Cambridge Sound Works 20203  
Caravell 20362  
CAVS 20210  
Changhong 20285, 20345  
CineVision 20114, 20306  
Clarion 20154  
Classic 20131  
Coby 20087, 20095, 20123, 20289  
Conic 20370  
Curtis 20095  
Curtis Mathes 20308  
CyberHome 20028, 20070, 20307, 20323, 20326  
Cytron 20160  
Daewoo 20093, 20306, 20317  
Dayu 20388  
DCS 20363  
Denca 20367  
Denon 20108, 20115, 20143, 20144, 20284  
Desay 20185  
Diamond Vision 20237  
Dihe 20338  
Ding Tian 20342  
Disney 20090, 20096  
Dual 20172  
Durabrand 20309  
DVD2000 20295  
Dynex 20193  
Eclipse 20126  
Electrohome 20395  
Emerson 20041, 20135, 20283, 20303, 20310  
Enterprise 20303  
ESA 20182, 20310  
Fisher 20168, 20304  
Funai 20310  
Gateway 20327  
GE 20082, 20296, 20301  
Gewang 20361  
GFM 20149  
Giec 20355  
Go Video 20306, 20327, 20396  
GoldStar 20167  
GPX 20112  
Gradiente 20158, 20284  
Greenhill 20301  
Grundig 20297  
Haier 20165, 20340  
Haitai 20364  
Haoji 20384  
Harman/Kardon 20124, 20305  
Hisense 20344  
Hitachi 20013, 20232  
Hiteker 20300  
Huabao 20375  
Huabaojamo 20334  
iLive 20205  
Ilo 20159  
iLuv 20174  
Initial 20159, 20301  
Insignia 20142, 20150, 20164, 20202, 20310  
Integra 20285, 20298  
iSymphony 20190  
Jamo 20206  
JBL 20104, 20305  
Jensen 20171, 20289, 20397  
Jieke 20390  
Jingewangpai 20375  
Jingwei 20336  
Jinwang 20377  
Jugao 20359  
JVC 20029, 20030, 20031, 20032, 20033, 20034, 20035, 20036, 20037, 20098, 20119, 20195, 20299  
Jwin 20169, 20219  
Kawasaki 20286  
KEF 20398  
Kennood 20386  
Kenwood 20122, 20284  
Ketai 20376  
KLH 20286, 20301  
Klipsch 20332  
Konka 20316  
Koss 20101, 20199, 20292  
Lafayette 20351  
Landel 20312  
Lasonic 20155, 20220, 20399  
Legend-V 20365  
Lennox 20291, 20309  
Lexicon20314  
LG 20091, 20100, 20117, 20132, 20180, 20303, 20306  
Linshuma 20378  
Liquid Video 20292  
LiteOn 20102, 20235, 20236, 20311, 20327  
Loewe 20313, 20320  
Longzhipai 20354  
Magnavox 20081, 20142, 20283, 20294, 20297, 20310  
Malata 20346  
Marantz 20145, 20146, 20297  
Maxview 20368  
McIntosh 20211  
Memorex 20090, 20282  
Microsoft 20296  
Mintek 20159, 20301  
Mitsubishi 20092, 20295  
Mitsui 20353  
Mitzu 20348  
NAD 20156, 20333  
Nakamichi 20170, 20400  
Napa 20350  
Nesa 20301  
Next Base 20312  
NexxTech 20187  
Niro 20401  
Norcent 20095, 20221  
Okon 20385  
Onkyo 20099, 20110, 20285, 20294  
Oppo 20163, 20188  
Oritron 20101, 20292  
Other Brand 20373  
Pai Gao 20360  
Panasonic 20016, 20017, 20018, 20019, 20020, 20021, 20022, 20023, 20073, 20075, 20080, 20118, 20128, 20129, 20130, 20197, 20198, 20222, 20229, 20230, 20232, 20233, 20284, 20294  
Panda 20379  
Parasound 20212  
Philco 20286, 20351  
Philips 20006, 20040, 20041, 20081, 20294, 20297, 20314

Pioneer 20042, 20043, 20044, 20045, 20134, 20147, 20234, 20298  
 Polaroid 20027, 20133, 20208, 20402  
 Polk Audio 20297  
 Portland 20317  
 Power Sound 20348  
 Prima 20192, 20403  
 Primas 20335  
 Princeton 20315  
 Proceed 20300  
 Proscan 20082, 20296  
 Prottron 20213  
 Pye 20166  
 Qinghuatongfang 20382  
 Qisheng 20372  
 Qixing 20391  
 Qwestar 20101  
 RCA 20038, 20039, 20082, 20286, 20296, 20298, 20301  
 Regent 20291  
 Rio 20306  
 Rotel 20214, 20299  
 Rowa 20287  
 Royal 20351  
 Saba 20404  
 Sampo 20157, 20325, 20328  
 Samsung 20011, 20012, 20013, 20014, 20015, 20077, 20079, 20083, 20088, 20125, 20176, 20191, 20231, 20284  
 Sansui 20127, 20282  
 Sanyo 20200, 20282, 20304  
 Sast 20336  
 Sensory Science 20327  
 Shanshui 20374  
 Sharp 20120, 20139, 20140, 20141, 20204, 20328  
 Sharper Image 20323  
 Sherwood 20203, 20317  
 Shinco 20136  
 Shinsonic 20159, 20293  
 Shumaling 20337  
 Sigma Designs 20315  
 Skyworth 20375  
 Sonashi 20356  
 Sonic Blue 20306, 20396  
 Sonico 20352

Sony 20000, 20001, 20002, 20003, 20004, 20005, 20071, 20074, 20078, 20084, 20089, 20177, 20178, 20179, 20194, 20223, 20224, 20225, 20293  
 Sowa 20347  
 Spectroniq 20215  
 Sungale 20184  
 Superscan 20103, 20283  
 Supersonic 20351  
 SVA 20319  
 Sylvania 20041, 20103, 20148, 20149, 20283, 20310, 20329  
 Symphonic 20103, 20183  
 Tatung 20366  
 TCL 20371  
 Teac 20136, 20286  
 Technics 20284  
 Techwood 20153  
 Terapin 20321  
 Theta Digital 20298  
 Tianli 20343  
 Toshiba 20006, 20007, 20008, 20009, 20010, 20072, 20105, 20109, 20121, 20196, 20226, 20227, 20228, 20282, 20294  
 Tredex 20318  
 Trutech 20186, 20218  
 Tsinghuatongfang 20357  
 Tview 20173  
 Urban Concepts 20294  
 US Logic 20159  
 Venturer 20201, 20286  
 Victor 20380  
 Vizio 20322, 20324, 22000  
 Vocopro 20175, 20216  
 VocoStar 20217  
 Wanbao 20355  
 Wanyan 20346  
 Weifa 20381  
 Westinghouse 20113  
 Xbox 20296  
 Xianpai 20338  
 Xindai 20387  
 Yamaha 20016, 20107, 20284, 20297  
 YMT 20356  
 Youbishen 20341  
 Yuxing 20339  
 Zenith 20091, 20094, 20097, 20294, 20303, 20306

## **Amplifier / Receiver / Tuner Codes**

Accurian 30164  
 ADA 30165  
 ADC 30133  
 Adcom 30104  
 Aiwa 30087, 30162, 30260  
 Alco 30139  
 Altec Lansing 30166  
 AMC 30167  
 Amphion Media Works 30140, 30145  
 Amplifier Technologies 30200  
 AMW 30140  
 Anam 30135, 30149  
 Antex 30168  
 Apex 30099  
 Apple 30169  
 Aragon 30201  
 Atlantic Technology 30170  
 Audio Access 30202  
 Audio Authority 30203  
 Audio Tron 30171  
 Audiophase 30204  
 AudioSource 30205  
 Audiotronic 30136  
 Audiovox 30098, 30139  
 B & K 30105  
 Bang & Olufsen 30144  
 Blaupunkt 30206  
 Bondstec 30207  
 Bose 30062, 30076, 30150, 30151, 30261  
 Boston Acoustics 30146  
 Cambridge Soundworks 30121  
 Capetronic 30133, 30208  
 Carver 30136, 30162  
 Casio 30209  
 Celestion 30210  
 Clarion 30211  
 Classic 30109  
 Clatronic 30212  
 Coby 30092, 30213, 30262  
 Compaq 30172  
 Creative 30173  
 Crown 30214  
 Curtis 30103, 30215  
 Curtis Mathes 30129  
 Daewoo 30216

DBX 30174  
Dell 30217  
Delphi 30218  
Denon 30051, 30052, 30053,  
30054, 30055, 30102  
D-Link 30175  
EAD 30219  
Eclipse 30220  
Elan 30176  
Electrohome 30152  
Emerson 30112, 30256  
Fahrenheit 30221  
Felston 30177  
Fonmix 30163  
Fosgate 30170  
GE 30046, 30128  
Go Video 30153  
GPX 30100, 30257  
Griffin 30178  
Hanwah 30222  
Harman/Kardon 30130, 30162  
iHome 30263  
iLive 30124  
iLuv 30258  
Imerge 30179  
Inkel 30223  
Insignia 30120  
Insten 30180  
Integra 30132  
iPort 30181  
iSymphony 30125, 30258  
Jamo 30126  
JBL 30097  
Jensen 30154  
Jerrold 30182  
JVC 30031, 30032, 30033,  
30034, 30035, 30259  
Jwin 30265  
KEF 30155  
Kenwood 30036, 30037, 30038,  
30039, 30040, 30065, 30071,  
30077, 30137  
KLH 30139  
Klipsch 30147  
Koss 30117, 30138  
Krell 30110  
Lasonic 30156  
Left Coast 30130  
Lexicon 30224  
LG 30093, 30264  
Ligitek 30183  
Linn 30162  
Luxman 30184  
LXI 30225  
Magnadyne 30226  
Magnat 30227  
Magnavox 30066, 30133, 30136,  
30162  
Magnum Dynalab 30228  
Marantz 30106, 30130, 30136,  
30162  
Mark Levinson 30185  
Matrix Audio 30229  
MCE 30230  
McIntosh 30111  
Mediacom 30231  
Memorex 30186  
Meridian 30232  
Micromega 30233  
Mitsubishi 30096  
Motorola 30234  
Musical Fidelity 30235  
NAD 30143, 30148  
Nakamichi 30142, 30157  
NEC 30131, 30236  
Netgear 30187  
Nikko 30237  
Niles 30238  
Niro 30158  
Nubert 30188  
Nuvo 30239  
Olive 30189  
Omnifi 30190  
Onkyo 30041, 30042, 30043,  
30044, 30045, 30067, 30069,  
30070, 30075, 30080, 30091  
Optimus 30129, 30133, 30134,  
30135  
Oritron 30138  
Panasonic 30019, 30020, 30021,  
30022, 30023, 30115, 30116,  
30255  
Parasound 30113  
Penney 30240  
Performance Technique 30241  
Philips 30094, 30130, 30136,  
30162  
Pioneer 30024, 30025, 30026,  
30027, 30028, 30029, 30030,  
30060, 30063, 30078, 30127,  
30129, 30133, 30134  
Polaroid 30159  
Polk Audio 30107, 30130, 30162  
Prima 30160  
Primare 30242  
Proscan 30046  
RCA 30046, 30047, 30048,  
30049, 30088, 30129, 30133,  
30134, 30135, 30139  
Revox 30243  
Rio 30141  
Roku 30191  
Russound 30244  
Saba 30161  
Samsung 30073  
Sangean 30245  
Sansui 30162, 30246  
Sanyo 30118  
Sharp 30101, 30122, 30259  
Sherwood 30089, 30123  
Shure 30131  
SII 30247  
Sonic Blue 30141, 30153  
Sony 30000, 30001, 30002,  
30003, 30004, 30005, 30006,  
30007, 30056, 30057, 30058,  
30059, 30061, 30064, 30074,  
30077, 30082, 30083, 30084,  
30085, 30086  
Soundesign 30128  
Soundmatters 30114  
Soundstream 30248  
Spatializer 30192  
SpeakerCraft 30249  
Stereophonics 30134  
Sunfire 30137  
SuperTech 30250  
Teac 30135, 30139, 30258  
Technics 30022, 30050  
Techwood 30251  
Teknika 30193  
Thorens 30136  
Tivoli Audio 30194  
Topline 30252  
Toshiba 30108  
Universum 30253  
Vector Research 30254  
Velodyne 30195



Venturer 30119, 30139  
 Wards 30127, 30128, 30162  
 Xantech 30196  
 Xitel 30197  
 Yamaha 30008, 30009, 30010,  
 30011, 30012, 30013, 30014,  
 30015, 30016, 30017, 30018,  
 30068, 30072, 30079, 30081,  
 30095, 30132  
 Zektor 30198  
 Zenith 30090  
 Zon 30199

**Audio Accessory Codes  
 (Including CD Players and  
 Soundbars)**

Acoustic Research 30294  
 ADC 30291  
 ADS 30295  
 Aiwa 30283  
 Akai 30292  
 ASI 33000  
 Audiophase 30282  
 Bose 30284  
 California Audio Labs 30296  
 Cambridge Audio 30297  
 Capetronic 30298  
 Carrera 30299  
 Carver 30300, 30331, 30332  
 Cary Audio Design 30301  
 CCE 30302  
 Clarion 30303  
 Classic 30304  
 Coby 30287  
 Cox Cable 33001  
 Creative 30305  
 DBX 30306  
 Denon 30267  
 Direct TV 33002  
 Dish Network 33003  
 DKK 30328  
 DMX Electronics 30331  
 Dynamic Bass 30332  
 Emerson 30279  
 Garrard 30307  
 Genexxa 30329  
 GPX 30280  
 Harman/Kardon 30273  
 Hitachi 30308  
 iHome 30288

iLuv 30286  
 Inkel 30309  
 iSymphony 30286  
 JVC 30269, 30281  
 Jwin 30290  
 Kenwood 30310, 30330  
 KLH 30311  
 Koss 30312  
 Krell 30331  
 LG 30289  
 Linn 30331  
 Luxman 30293  
 Magnavox 30313  
 Marantz 30314  
 Mark Levinson 30315  
 McIntosh 30316  
 Memorex 30317  
 Miro 30328  
 Mission 30331  
 Musical Fidelity 30318  
 NAD 30319  
 Nakamichi 30320  
 NEC 30321  
 Nikko 30322  
 NSM 30331  
 Onkyo 30268  
 Optimus 30328, 30329, 30332  
 Panasonic 30278  
 Philips 30275, 30276  
 Pioneer 30272  
 Polk Audio 30331  
 Proton 30331  
 QED 30331  
 Quad 30331  
 RCA 30266  
 Realistic 30332  
 Rotel 30331  
 SAE 30331  
 Samsung 30323  
 Sansui 30331  
 Sanyo 30324  
 SAST 30331  
 Sharp 30281  
 Sherwood 30325  
 Silsonic 30330  
 Sonic Frontiers 30331  
 Sony 30270, 30271, 30274  
 Super Atlas 33004  
 TAG McLaren 30331

Teac 30286  
 Technics 30277  
 Techwood 30326  
 Tivoli Audio 30327  
 Vizio 33005  
 Wards 30331  
 Yamaha 30285  
 Zonda 30331

**VCR Codes**

ABS 20410  
 Adventura 20050, 20250  
 Aiwa 20050, 20250  
 Akai 20061  
 Alienware 20410  
 American High 20249  
 Apex 20415  
 Asha 20054, 20247  
 Audio Dynamics 20058  
 Audiovox 20248, 20267  
 Beaumark 20054, 20247  
 Bell & Howell 20246  
 Broksonic 20279  
 Calix 20248  
 Candle 20247, 20248  
 Canon 20249  
 CineVision 20280  
 Citizen 20247, 20248, 20420  
 Colortyme 20058  
 Colt 20417  
 Craig 20054, 20247, 20248  
 Curtis Mathes 20058, 20247,  
 20249  
 Cybernex 20054, 20247  
 CyberPower 20410  
 Daewoo 20060, 20250, 20420  
 Davidson 20050  
 DBX 20058  
 Dell 20410  
 Denon 20055  
 DIRECTV 20407  
 Durabrand 20067  
 Dynatech 20050, 20250  
 Electrohome 20052, 20248  
 Electroponic 20248  
 Emerson 20050, 20052, 20062,  
 20248, 20249, 20250, 20420  
 Fisher 20246  
 Fuji 20249

## VIZIO M420NV User Manual

Funai 20050, 20062, 20250  
Garrard 20050, 20250  
Gateway 20410  
GE 20054, 20247, 20249, 20418  
Go Video 20054  
GoldStar 20058, 20066, 20248, 20419  
Gradiente 20050, 20250  
Harley Davidson 20250  
Harman/Kardon 20058  
Headquarter 20246  
Hewlett Packard 20410  
Hitachi 20050, 20055  
Howard Computers 20410  
Hughes Network Systems 20055, 20407  
Humax 20407  
Hush 20410  
IBUYPOWER 20410  
Instant Replay 20249  
JC Penney 20058, 20246, 20247, 20248, 20249  
JCL 20249  
JVC 20056, 20057, 20058, 20246, 20254, 20264, 20265, 20266, 20268, 20269, 20270, 20271  
Kenwood 20058, 20246  
Kodak 20248, 20249  
LG 20248  
Linksys 20410  
Lloyd's 20050, 20250  
LXI 20248  
Magnasonic 20062, 20420  
Magnavox 20050, 20062, 20067, 20069, 20249  
Magnin 20054, 20248, 20418  
Marantz 20058, 20246, 20249  
Marta 20248  
Matsushita 20249  
Media Center PC 20410  
MEI 20249  
Memorex 20050, 20054, 20067, 20246, 20247, 20248, 20249, 20250, 20414, 20416, 20419  
MGA 20052, 20054, 20418  
MGN Technology 20054, 20247  
Microsoft 20410  
Mind 20410  
Minolta 20055  
Mitsubishi 20052, 20255  
Motorola 20249  
MTC 20050, 20054, 20247  
Multitech 20050, 20247, 20250  
NEC 20058, 20246  
Nikko 20248  
Niveus Media 20410  
Noblex 20054, 20247  
Northgate 20410  
Olympus 20249  
Optimus 20062, 20248, 20416  
Optonica 20065  
Orion 20258, 20414  
Panasonic 20017, 20018, 20019, 20046, 20249, 20273, 20274, 20413, 20416  
Penney 20054, 20055, 20418, 20419  
Pentax 20055  
Philco 20249  
Philips 20065, 20249, 20256, 20278, 20407  
Philips Magnavox 20256  
Pilot 20248  
Polaroid 20415  
Profitronic 20054  
Pulsar 20067  
Pye 20281  
Quarte 20246  
Quartz 20246  
Quasar 20249, 20416  
RadioShack 20050, 20065, 20248, 20249, 20065, 20246, 20247, 20250  
Radix 20248  
Randex 20248  
RCA 20053, 20054, 20055, 20247, 20249, 20252, 20275, 20276, 20418  
Realistic 20050, 20065, 20246, 20247, 20248, 20249, 20250, 20065  
ReplayTV 20413  
Ricavision 20410  
Runco 20067  
Samsung 20054, 20059, 20060, 20061, 20247, 20263, 20277, 20407  
Sankyo 20067  
Sansui 20050, 20258, 20414  
Sanyo 20054, 20246, 20247, 20418  
Scott 20052, 20060  
Sears 20050, 20055, 20246, 20248, 20249, 20419  
Sharp 20064, 20065, 20257  
Shogun 20054, 20247  
Singer 20249  
Sonic Blue 20413  
Sony 20047, 20048, 20049, 20050, 20251, 20253, 20260, 20261, 20262, 20272, 20410  
Stack 20410  
STS 20055, 20249  
SuperScan 20063  
Sylvania 20050, 20052, 20062, 20063, 20249, 20250  
Symphonic 20050, 20062, 20063, 20250  
Systemax 20410  
Tagar Systems 20410  
Tandy 20246  
Tashiko 20248  
Teac 20050, 20250  
Technics 20249  
Teknika 20050, 20248, 20249, 20250  
Thomas 20050  
Tivo 20407  
TMK 20054, 20247  
Toshiba 20051, 20052, 20060, 20259, 20410  
Totevision 20054, 20247, 20248  
Touch 20410  
Unitech 20054, 20247  
Vector 20060  
Vector Research 20058  
Video Concepts 20058, 20060  
Videasonic 20054, 20247  
Viewsonic 20410  
Villain 20050  
Voodoo 20410  
Wards 20050, 20054, 20055, 20065, 20247, 20248, 20249, 20250  
XR-1000 20050, 20249, 20250  
Yamaha 20058, 20246  
Zenith 20050, 20066, 20067, 20068  
ZT Group 20410

## Chapter 9 Maintenance and Troubleshooting

### Cleaning the TV and Remote Control

1. Remove the power adapter cable from the TV.
2. Use a soft cloth moistened with diluted neutral cleaner to clean the TV and remote control. VIZIO recommends using an HDTV cleaning solution which can be purchased at any major retailer.
3. Wring liquid out of the cloth before cleaning to prevent water from penetrating into the housing.
4. Wipe the TV and remote control with a dry cloth after cleaning.

**Important:**

- Do not use volatile solvent (such as toluene, rosin and alcohol). Such chemicals may damage the housing, screen glass, and remote control, and cause labeling to peel.
- The screen glass is very fragile. Do not scrape it with any sharp object.
- Do not press or tap the screen to avoid cracking.

### Troubleshooting Guide

If the TV fails or the performance changes dramatically, check the following troubleshooting guide for possible solutions. Remember to check the peripherals to pinpoint the source of the failure. If the display still fails to perform as expected, contact the VIZIO for assistance by calling 1-877-MYVIZIO (698-4946) or e-mail us at [techsupport@vizio.com](mailto:techsupport@vizio.com).

General TV Problems	Solution
Receive the error message "No Signal."	<ul style="list-style-type: none"> <li>• Press the INPUT button on the remote control to select a different input source.</li> <li>• If you are using cable connected directly to the TV or an antenna, scan for channels from the Tuner menu in the OSD.</li> <li>• Press the TV button on the top of the remote to return to the TV mode.</li> </ul>
No power.	<ul style="list-style-type: none"> <li>• Make sure the power button is ON (VIZIO logo glows white).</li> <li>• Make sure the AC power cord is securely connected to the AC socket.</li> <li>• Plug another electrical device to the power outlet to verify that the outlet is working.</li> </ul>
No sound.	<ul style="list-style-type: none"> <li>• Press Volume + (Up) on the remote control.</li> <li>• Press MUTE on the remote control to make sure that MUTE is not ON.</li> <li>• Check your audio settings. The audio may be set to SAP, or the speakers are set to off.</li> <li>• Check the audio connections of external devices that may be connected to the HDTV.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> </ul>
If the screen is black.	<ul style="list-style-type: none"> <li>• Make sure the power button is ON (VIZIO Logo glows white).</li> <li>• Press the INPUT button on the remote control to select a different input source.</li> <li>• Check the connections of external devices that may be connected to the HDTV.</li> <li>• Press the TV button on the top of the remote to return to the TV mode.</li> </ul>

General TV Problems	Solution
Power is ON but there is no image on the screen.	<ul style="list-style-type: none"> <li>• Make sure all cables attached to the HDTV are connected to the correct output on the external device.</li> <li>• Adjust brightness, contrast or backlight.</li> <li>• Press the INPUT button on the remote control to select a different input source.</li> <li>• Press the TV button on the top of the remote to return to the TV mode.</li> </ul>
Wrong or abnormal colors appear.	<ul style="list-style-type: none"> <li>• Check Color and Tint settings in Picture Menu.</li> <li>• Reset Picture settings.</li> <li>• Check the video cables to make sure they are securely connected.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> </ul>
Control buttons do not work.	<ul style="list-style-type: none"> <li>• Press only one button at a time.</li> <li>• Press the TV button on the top of the remote to return to the TV mode.</li> </ul>
There appear to be image quality issues.	<ul style="list-style-type: none"> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> <li>• For best image quality, view HD wide-screen programs where possible.</li> <li>• If HD content is not available view "Standard Definition" from a digital source.</li> <li>• Standard, analog TV will always be noticeably inferior to HD because your digital flat panel TV has video that is many times better than old TV so you will see interference and deficiencies you did not know you had.</li> </ul>
You cannot see a picture.	<ul style="list-style-type: none"> <li>• Make sure the power button is ON (VIZIO logo glows white).</li> <li>• Make sure the AC power cord is securely connected to the AC socket.</li> <li>• Press the INPUT button on the remote control to select a different input source.</li> <li>• Press the TV button on the top of the remote to return to the TV mode.</li> <li>• Check the connections of external devices that may be connected to the HDTV.</li> <li>• If your HDTV is connected to a computer, press any button on your keyboard to "wake" your computer.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> </ul>
You see a distorted picture or hear unusual sound.	<ul style="list-style-type: none"> <li>• You may be getting interference from electrical appliances, cars, motorcycles, or fluorescent lights. If you have not mounted it on the wall, try moving your HDTV to another location to see if this is the cause of the problem.</li> </ul>
The picture has abnormal patterns.	<ul style="list-style-type: none"> <li>• Check the connections of external devices that may be connected to the HDTV.</li> <li>• Make sure the specifications of external devices meet the specifications of your HDTV (like resolution).</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> </ul>
There is a bar with logos on the bottom of the screen.	<ul style="list-style-type: none"> <li>• Press <b>EXIT</b> to exit retail mode.</li> </ul>
The display image does not cover the entire screen.	<ul style="list-style-type: none"> <li>• If you are in RGB mode (Computer), make sure that H-Size and V-Position in the On Screen Display (OSD) are set correctly.</li> <li>• If you are using TV, AV1, AV2 or Component with 480i input, press the WIDE button on the remote control to scroll through various screen modes.</li> </ul>

General TV Problems	Solution
The TV keeps shutting off when I try to open the Quick Menu	<ul style="list-style-type: none"> <li>• Press and hold the Jag wheel for two (2) seconds to open the Quick Menu. Holding it for too long will shut off the TV.</li> </ul>
You can see a picture but you cannot hear sound.	<ul style="list-style-type: none"> <li>• Press Volume + (Up) on the remote control.</li> <li>• Press MUTE on the remote control to make sure that MUTE is not ON.</li> <li>• Check your audio settings. The audio may be set to SAP, or the speakers are set to off.</li> <li>• Check the audio connections of external devices that may be connected to the HDTV.</li> </ul>
The TV has pixels (dots) that are always dark or colored.	<ul style="list-style-type: none"> <li>• Your HDTV is manufactured using an extremely high level of precision technology, however, sometimes some pixels of your HDTV may not display. Pixel defects within industry specifications are inherent to this type of product and do not constitute a defective product.</li> </ul>
You see “noise” or “trash” on the screen.	<ul style="list-style-type: none"> <li>• When your HDTV’s digital capabilities exceed a digital broadcast signal, the signal is up-converted (increased) to match your TV’s display capabilities. Up-converting can cause noise or trash.</li> <li>• If you are using an antenna, the signal strength of the channel may be low. Make sure your antenna is connected securely to the TV and move the antenna around the room or close to a window.</li> </ul>
You switch to a different input and the volume changes.	<ul style="list-style-type: none"> <li>• The TV remembers the volume level from the last time you adjusted it. If the sound level is higher or lower from another source, then the volume will change.</li> </ul>
You switch to a different input and the screen size changes.	<ul style="list-style-type: none"> <li>• The TV remembers the viewing mode from the last time you used a particular input (AV-1, AV-2, Component, HDMI and TV).</li> </ul>
Tips for High-Definition Users.	<ul style="list-style-type: none"> <li>• Your HDTV is an ideal platform for viewing High Definition Content.</li> <li>• Best image quality will be achieved by HDMI. The next best is Component, followed by Composite.</li> <li>• Due to variances in broadcast practices, it is possible some image distortions can occur.</li> </ul>
Tips for Letterbox Content Users.	<ul style="list-style-type: none"> <li>• Some Letterboxed (or “Widescreen”) versions of DVD movies are formatted for standard 4:3 Televisions. Your HDTV has the ability to expand this content so the entire screen is filled at the expense of image accuracy. To use this function, press ZOOM on the remote control to cycle among the options.</li> </ul>

Remote Control Problems	Solution
Remote control does not work.	<ul style="list-style-type: none"> <li>• Point the remote control directly at the remote sensor on your TV.</li> <li>• Remove any obstacles between the remote control and the remote sensor.</li> <li>• Replace dead batteries with new ones.</li> <li>• Press the TV button on the top of the remote to return to the TV mode.</li> </ul>
The remote control is not working with my devices.	<ul style="list-style-type: none"> <li>• Move closer to the device. The minimum operating distance is approximately 30 feet (9.1 meters).</li> <li>• Point the remote control directly at the remote sensor on your device.</li> <li>• Remove any obstacles between the remote control and the remote sensor.</li> <li>• Replace dead batteries with new ones.</li> <li>• Make sure you have pressed the correct device button at the top of the remote.</li> </ul>

Remote Control Problems	Solution
The remote control does not work with my device even after programming it.	Set the remote control code correctly. If the code that is listed first for your device does not work, try all the codes for your device in the order in which they are listed in <i>Remote Control Codes</i> .

Media Viewer Problems	Solution
USB device is not recognized.	<ul style="list-style-type: none"> <li>• Make sure the device is correctly inserted.</li> <li>• Make sure the device is FAT or FAT32</li> <li>• Make sure it contains the supported files.</li> </ul>
Image or sound is interrupted or distorted.	<ul style="list-style-type: none"> <li>• Make sure the device is correctly inserted.</li> <li>• Make sure that the file complies with the supported format, bit rate and/or profile. Also check the file for damage.</li> <li>• Some files that comply with the supported format may not play back or display properly.</li> </ul>
Slideshow doesn't start.	<ul style="list-style-type: none"> <li>• Make sure the viewer isn't in pause, rotation, or zoom mode.</li> </ul>

## Telephone & Technical Support

Products are often returned due to a technical problem rather than a defective product that may result in unnecessary shipping charges billed to you. Our trained support personnel can often resolve the problem over the phone. For more information on warranty service or repair, after the warranty period, contact our Support Department at the number below.

Customer support and quality service are integral parts of VIZIO's commitment to service excellence. For technical assistance contact our VIZIO Technical Support Department via email or phone.

Email: [techsupport@VIZIO.com](mailto:techsupport@VIZIO.com)

(877) 698-4946 Fax: (949) 585-9563

Hours of operation: Monday - Friday: 6 am to 9 pm

Saturday – Sunday: 8 am to 4 pm

Have your VIZIO model number, serial number, and date of purchase available before you call.

### VIZIO

Address:

39 Tesla

Irvine, CA 92618, USA

Telephone: (888) 849-4623 (949) 428-2525 Fax: (949) 585-9514

Web: [www.VIZIO.com](http://www.VIZIO.com)

## Compliance

Caution: Always use a power cable that is properly grounded. Use the AC cords listed below for each area.

**USA:** UL

**Canada:** CSA

**Germany:** VDE

**UK:** BASE/BS

**Japan:** Electric Appliance Control Act

## FCC Class B Radio Interference Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC AC/DC power adapter, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference.

## Chapter 10 Specifications

Product specifications may change without notice or obligation.

### Specifications

M420NV Specifications	
Panel	42.02" Diagonal, 16:9 Aspect Ratio
Resolution	1920 x 1080 pixels
Pixel (Dot) Pitch	0.4845mm (H) x 0.4845mm (H)
Display Compatibility	1080P (FHDTV)
Colors	1.06 billion @ 10 bit
Brightness cd/m2 (typical)	450nits
Contrast	Dynamic Contrast Ratio: 100,000:1
Response Time	6.5ms (typical)
Viewing Angle	178° (horizontal/vertical)
Inputs	4 x HDMI with HDCP 1 x RF (F connector for internal tuner) 1x Composite Video and Stereo Audio 1x Component YPbPr plus Stereo Audio 1x Computer RGB plus Stereo Audio 3x USB (side)
Outputs	1x 5.1 S/PDIF Optical Digital Audio, 1x Stereo Audio
Features	1080P FHDTV, MEMC, HDMI v1.3, 3D Comb Filter, Digital Audio Amplifier, Dolby Digital for ATSC/QAM, Signal Compatibility: 480I(SDTV), 480P(EDTV), 720P(HDTV), 1080I(HDTV), 1080P(FHDTV), Channel Skip/Add, VIDEO/INPUT Naming Capability, Closed Caption, Parental Control/V-CHIP 2.0, Programmable Timer, PIP/POP, SRS TSHD, SRS TruVolume, HD Game Port, Noise Reduction, 10-bit video processing, MTS Stereo Decoder, Dolby Digital for ATSC/QAM, VESA Mount Compatible, Multimedia
Special Features	<ul style="list-style-type: none"> <li>• MEMC, 120Hz panel</li> <li>• Multimedia(JPEG)</li> <li>• HDMI CEC</li> <li>• Jag Wheel Key</li> <li>• Light sensor</li> <li>• 1080 FHDTV</li> <li>• HDMI v1.3</li> <li>• DOLBY DIGITAL FOR ATSC/QAM</li> <li>• SRS TSHD</li> <li>• DETACHABLE BASE</li> </ul>
	<ul style="list-style-type: none"> <li>• DYNAMIC CONTRAST RATIO TECHNOLOGY</li> <li>• SIGNAL COMPATIBILITY: 480I(SDTV), 480P(EDTV), 720P(HDTV), 1080I(HDTV), 1080P (FHDTV)</li> <li>• CHANNEL SKIP VIDEO/INPUT NAMING CAPABILITY</li> <li>• CLOSED CAPTION</li> <li>• PARENTAL CONTROL/V-CHIP 2.0</li> <li>• PROGRAMMABLE TIMER</li> </ul>
Speakers	2xBuilt-in, 10W Speakers
Panel Life	30,000 hours to half the original brightness
<b>Power</b>	
Input	IEC Connector for direct power line connection
Voltage Range	100~240 Vac at 50/60 Hz



Power Consumption	75W (Avg), 0.37W standby
<b>Environmental Conditions</b>	
Operating	Temperature: 5°C~35°C, Relative Humidity: 20~80%, Altitude: 0~14,000 ft
Non-Operating	Temperature: -20°C~50°C, Relative Humidity: 10~70%, Altitude: 0~40,000 ft
Dimensions	43.89" W x 27.58" H x 9.41" D with stand; 43.89" W x 24.88" H x 1.99" D without stand 1114.7 x 700.4 x 239.1 mm with stand; 1114.7 x 631.9 x 50.6 mm without stand
Net Weight	39.51 lbs with stand; 36.4 lbs without stand 17.9 kg with stand; 16.5 kg without stand
Gross Weight	48.88 lbs; 22.17 kg
Certifications	CSA, CSA-US, FCC Class B
Compliances	Energy Star 4.0. ATSC Spec A/65, EIA/CEA-766-A

## Preset PC Resolutions

If connecting to a PC through the RGB PC input, set the TV timing mode to VESA 1920x1080 at 60Hz for best picture quality (refer to the graphic card's user guide for questions on how to set this timing mode). See the table below for the factory preset resolutions.

Mode No.	Resolution	Refresh Rate (Hz)	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Horizontal Sync Polarity (TTL)	Vertical Sync Polarity (TTL)	Pixel Rate (MHz)	Remark
1	640 x 480	60	31.469	59.941	N	N	25.175	Windows
2	640 x 480	75	37.500	75.000	N	N	31.500	Windows
3	800 x 600	60	37.879	60.317	P	P	40.000	Windows
4	800 x 600	72	48.077	72.188	P	P	50.000	Windows
5	800 x 600	75	46.875	75.000	P	P	49.500	Windows
6	1024 x 768	60	48.363	60.004	N	N	65.000	Windows
7	1024 x 768	70	56.476	70.069	N	N	75.000	Windows
8	1024 x 768	75	60.023	75.029	P	P	78.750	Windows
9	720 x 400	70	31.469	70.087	N	P	28.322	DOS
10	Ⓢ1920 x 1080	60	66.587	59.934	P	N	138.50	Windows

**Note:** P: positive, N: negative, Ⓢ: Primary mode

## Resolution through RGB Input

If your PC supports VESA Reduce Blanking timing via the VGA card drive program (usually offered by the VGA Card Manufacturer), your TV set is equipped to have the 1920x1080 resolution display through this connection using the following timing 138.5MHz. The following parameters are often the values required by the software or programs to set up the display:

Parameters	Horizontal Values (Pixels)	Vertical Values (Lines)
Address	1920	1080
Front Porch	48	3
Sync Width	32	5
Back Porch	80	23
Total	2080	1111
Frequency	66.587 KHz	59.934 Hz
Sync Polarity	P	N
Pixel Rate (MHz)	138.5	
Refresh Rate (Hz)	60	

## Warranty

### ONE-YEAR LIMITED WARRANTY ON PARTS AND LABOR

*(Covers units purchased as new in United States and Puerto Rico Only)*

VIZIO provides a warranty to the original purchaser of its products against defects in materials and workmanship for a period of one year of non-commercial usage and ninety (90) days of commercial use. If a VIZIO product is defective within the warranty period, VIZIO will either repair or replace the unit at its sole option and discretion.

To obtain warranty service, contact VIZIO Technical Support via email: TechSupport@VIZIO.com or via phone at 877 MY VIZIO (877.698.4946) from 6:00AM to 9:00PM Monday through Friday and 8:00AM to 4:00PM Saturday and Sunday, Pacific Time, or visit [www.VIZIO.com](http://www.VIZIO.com). Proof of purchase in the form of a purchase receipt or copy thereof is required.

#### Parts and Labor

There will be no charge for parts or labor during the warranty period. Replacement parts and units may be new or recertified at VIZIO's option and sole discretion. Replacement parts and units are warranted for the remaining portion of the original warranty or for ninety (90) days from warranty service or replacement, whichever is later.

#### Types of Service

Units 30" or larger will usually be serviced in-home. In-home service requires complete and easy access to the unit and does not include de-installation or re-installation of the product. However, in some cases, it may be necessary to send the unit to a VIZIO service center. VIZIO will cover the transportation charges to and from the same customer location.

Units less than 30" must be sent to a VIZIO service center. VIZIO is not responsible for transportation costs to the service center, but VIZIO will cover return shipping to the customer. **PRE-AUTHORIZATION IS REQUIRED BEFORE SENDING ANY UNIT IN FOR SERVICE.**

Any returns to VIZIO's service centers must utilize either the original carton box and shipping material or a replacement box and material provided by VIZIO. VIZIO technical support will provide instructions for packing and shipping the unit to the VIZIO service center.

#### Limitations and Exclusions

VIZIO's one-year limited warranty only covers defects in materials and workmanship. Items not covered include but are not limited to cosmetic damage, normal wear and tear, misuse, signal issues, power surges, and damages from shipping, acts of God, any sort of customer misuse, installation, customer modifications, adjustments, and set-up issues. Units with unreadable or removed serial numbers, "image burn-in", and routine maintenance are not covered. This warranty does not cover products sold "AS IS", "FACTORY RECERTIFIED", or by a non-authorized reseller.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED OR DESCRIBED ABOVE. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE PERIOD OF TIME SET FORTH ABOVE. VIZIO'S TOTAL LIABILITY FOR ANY AND ALL LOSSES AND DAMAGES RESULTING FROM ANY CAUSE WHATSOEVER SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE DISPLAY. VIZIO SHALL NOT BE RESPONSIBLE FOR LOSS OF USE, COMMERCIAL LOSS, LOST REVENUE OR LOST PROFITS, OR OTHER INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE. THIS WARRANTY IS SUBJECT TO CHANGE WITHOUT NOTICE. CHECK [www.VIZIO.com](http://www.VIZIO.com) FOR THE MOST CURRENT VERSION.

#### Personal Data

If your VIZIO product is capable of storing personal data and other information, **ALL CONTENTS AND INFORMATION WILL BE DELETED IN THE COURSE OF SOME IN-HOME AND ALL SHIP-IN WARRANTY SERVICE.** If this occurs, your product will be restored to you configured **as originally purchased.** You will be **responsible for restoring all applicable data and passwords.** Recovery and reinstallation of user data is not covered under this Limited Warranty. **In order to protect your personal information, VIZIO recommends that you always clear all personal information from the unit before it is serviced, regardless of the servicer.**

#### ZERO BRIGHT PIXEL DEFECT GUARANTEE

This policy covers "zero bright pixel" defects for the duration of the limited "ONE YEAR WARRANTY" on select new product purchases. To determine if this guarantee applies to your product, refer to the "DETAILS" tab of the model's product information page ([www.VIZIO.com](http://www.VIZIO.com)) or look for the "zero bright pixel" guarantee on the box.

## Index

16:9.....	35	Daylight Savings setting.....	45
4:3.....	35	DTV Transition.....	5
Accessories.....	10	DVD Player	
Adjustments		Connecting.....	24
Advanced.....	34	DVI	
Advanced Adjustments.....	34	Cable Box.....	22
Ambient Light Sensor.....	38	DVD Player.....	24
Antenna.....	21	Satellite Box.....	22
Aspect Ratio.....	35	EPG.....	20
Audio Menu		Equalizer Settings.....	41
Advanced Audio.....	41	Getting Started.....	18
Analog Audio Out.....	41	Grounding.....	4
Audio Mode.....	40	GUIDE Button.....	20
Balance.....	40	HDMI.....	21
Digital Audio Out.....	41	Help Menu	
Equalizer adjustments.....	41	Reset All Settings.....	50
Lip Sync.....	40	Setup Wizard.....	50
SRS TruSurroundHD.....	41	System Info.....	50
SRS TruVolume.....	41	Help Menu.....	50
TV Speakers.....	40	Home Theater	
AV connector.....	21	Connecting.....	27
Blackbars.....	35	Horizontal/Vertical Position adjustments.....	37
Blocking Channels.....	43	Input Source	
Brightness.....	36	Choosing.....	19
Cable Box		Inputs	
Connecting.....	22	Antenna.....	4
CC Closed Caption.....	36	Connectors.....	21
CEC.....	46	Jag Wheel.....	14
Cleaning.....	67	Maintenance of TV.....	67
Coaxial connection		Media Menu.....	46
Satellite box.....	26	Menu Language.....	45
Coaxial Connection		Multimedia.....	29
Cable TV.....	26	Accessing.....	30
Color.....	37	Music Settings.....	48
Component Connector.....	21	Music Settings.....	32
Composite Connector.....	21	Photo Settings.....	47
Computer		Photo Settings.....	31
Connecting.....	28	Supported Formats.....	29
Preset Resolutions.....	74	Video Settings.....	33, 49
Resolution through RGB.....	74	Music	
Connecting		Playing.....	29
Computer.....	28	Settings.....	32, 48
RGB.....	28	Music Menu	
VGA.....	28	Audio Mode.....	32, 48
Connecting Equipment		Info.....	32, 48
Cable.....	22	Play Mode.....	32, 48
DVD.....	24	Repeat.....	32, 48
Home Theater.....	27	Sort.....	32, 48
Rear Panel Connections.....	15	Name Input.....	43
Satellite Box.....	22	OSD.....	34
Sound system.....	27	CC Menu.....	36
Stereo.....	27	Help Menu.....	50
VCR.....	26	Input Menu.....	34
Video Camera.....	26	Media Menu.....	46
Contents.....	10	Picture Menu.....	36
Contrast.....	37	PIP Menu.....	39
Controls		Sleep Timer Menu.....	36
Front Panel.....	14	Wide Menu.....	35
Jag Wheel.....	14	Parental Controls	

Alt Rating Region .....	45	Batteries .....	16
Block Unrated TV .....	45	Buttons .....	17
Canadian English Rating .....	44	Codes .....	53
Canadian French Rating .....	45	Precautions .....	16
Change the Password .....	45	Programming .....	51
Channel Block .....	43	Programming Cable Box .....	52
Rating Enable .....	43	Programming DVD Player .....	51
Reset Locks .....	45	Programming Home Theater System .....	51
USA Movie Rating .....	44	Range .....	16
USA TV Rating .....	44	Reset	
Parental Controls .....	43	All TV Settings .....	50
Password .....	45	Factory Default .....	50
Photo Menu		Picture Settings .....	39
Audio Mode .....	31, 47	RGB .....	21
Duration .....	31, 47	Safety Instructions .....	2
Info .....	31, 47	Satellite Box	
Repeat .....	31, 47	Connecting .....	22
Slideshow .....	31, 47	Search for channels .....	42
Slideshow Effect .....	31, 47	Setting Up .....	11
Slideshow With Music .....	31, 47	Settings Menu	
Sort By .....	31, 47	Audio .....	40, 43
Thumbnail Size .....	31, 47	CEC .....	46
Photos		Menu Language .....	45
Settings .....	47	Parental Controls Menu .....	43
Settings .....	31	Time & Local Settings .....	45
Sort .....	31, 47	Tuner .....	42
Viewing .....	29	Setup Wizard .....	18
Picture		Sharpness .....	37
Reset Picture Mode .....	39	Skip Channel .....	42
Picture Menu .....	36	Slideshow	
Adaptive Luma .....	38	Duration .....	31, 47
Advanced Video .....	38	Effect .....	31, 47
Ambient Light Sensor .....	38	Mode .....	31, 47
Backlight .....	36	Slideshow With Music .....	31, 47
Backlight Control .....	38	Specifications .....	72
Brightness .....	36	Media Port .....	29
Color .....	37	Stereo	
Color Enhancement .....	38	Connecting .....	27
Color Temperature .....	38	Surround Sound .....	41
Contrast .....	37	System Information .....	50
Film Mode .....	38	Technical Support .....	70
MPEG NR .....	38	Time Zone setting .....	45
Noise Reduction .....	38	Tint .....	37
Picture Mode .....	36	Troubleshooting .....	67
Real Cinema .....	38	Tuner Menu	
Sharpness .....	37	Analog MTS .....	42
Smooth Motion .....	38	Auto Search .....	42
Tint .....	37	Skip Channel .....	42
Pictures		Tuner Mode .....	42
Create Slideshow .....	31, 47	TV Menu .....	34
Info .....	31, 47	Partial Channel Search .....	42
Thumbnail Size .....	31, 47	TV Stand	
Viewing .....	29	Attaching .....	12
PIP .....	39	USB Port .....	29
Audio .....	39	Music Settings .....	48
Mode .....	39	Music Settings .....	32
Position .....	39	Photo Settings .....	31, 47
Size .....	39	Video Settings .....	33, 49
Source .....	39	VCR	
Remote		Connecting .....	26
Programming Satellite Box .....	52	Video	
Remote Control .....	16	Watching .....	29

Video		
Settings .....	33	
Video		
Settings .....	49	
Video Camera		
Connecting .....	26	
Video Menu		
Audio Mode .....	33, 49	
Info .....	33, 49	
Picture Mode .....	33, 49	
Play Mode		
		Repeat .....
		Sort .....
		Wide Format.....
		Wall mounting .....
		Warranty .....
		Watching TV
		Getting your Programs .....
		Program Information .....
		Wide.....
		Wizard.....