

COMMUNITY  
  
IN UKRAINE  
MIUI.UA

COMMUNITY  
  
IN UKRAINE  
MIUI.UA



User manual

# Xiaomi Steel Gun Bluetooth Speaker 2


COMMUNITY  
  
IN UKRAINE  
MIUI.UA

COMMUNITY  
  
IN UKRAINE  
MIUI.UA

COMMUNITY  
  
IN UKRAINE  
MIUI.UA

COMMUNITY  
  
IN UKRAINE  
MIUI.UA


## Xiaomi Steel Gun Bluetooth Speaker 2

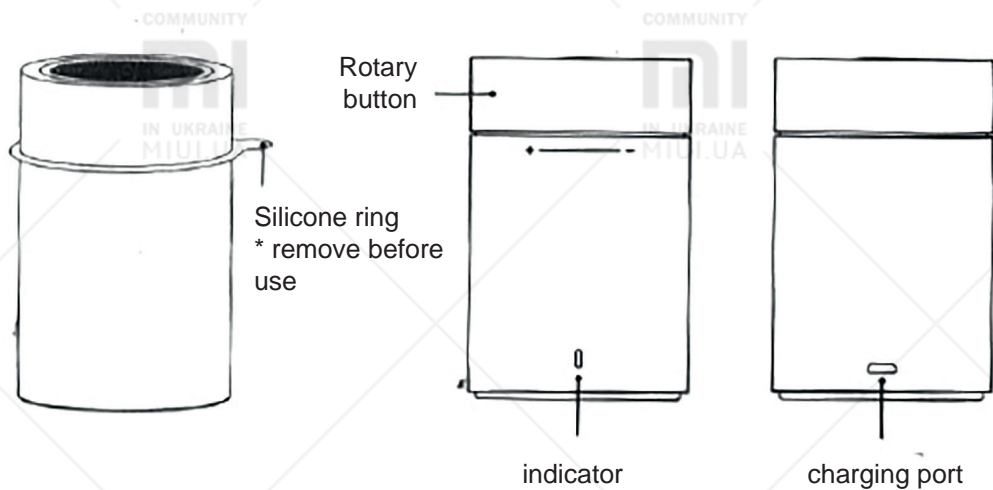

## Operating Instructions



easily press the rotary button  
\* click on any area of the button

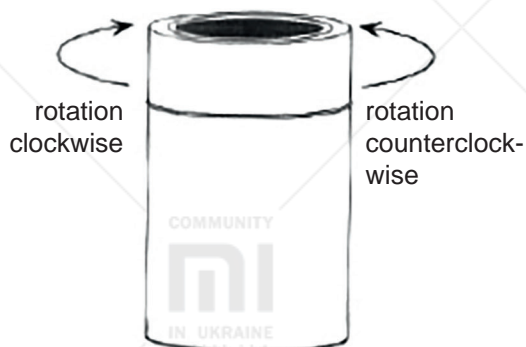

rotate the rotary button

## 1. Enable Audio Speaker

Press and hold the rotary button for 2 seconds, release the button when the device activates with a sound alert.

The indicator blinks rapidly in blue, which means the audio is in visibility mode for connecting to other devices.

## 2. Connecting to mobile devices

Turn on Bluetooth on your mobile device, select Xiaomi Steel Gun Bluetooth Speaker from the list of visible devices.

After a successful connection, a sound notification will sound, the indicator will start to blink slowly in blue color.

In the future, you only need to turn on Bluetooth on your mobile device and the audio plug-in will connect to it automatically.



## Other instructions

### Connect to a new mobile device

When the device is turned on, make two short presses for the rotary button, sound indicates that the speaker will return to the connection search mode, then connect to the audio speaker from the new mobile device.

## Standard features

### Play via Bluetooth

When the phone is connected to the speaker via Bluetooth, it acts as a control panel, and the speaker acts as a speakerphone.



### Making calls

When the phone is connected to the audio speaker via Bluetooth, a ringing tone will be heard when the call is received, by briefly pressing the rotary button you can accept or reject the call.



### Volume settings

You can adjust the volume when you call or play music. Rotate the rotary button clockwise to increase volume, counterclockwise - reduce volume.



### Charging

During charging, the indicator light will be red, after charging - blue light.

\* Use a charger 1 A/5 V power adapter to charge the device, and using an incompatible charger may damage the device components.

## Button Functions

| Operation with buttons  | Executed function  |
|---|--|
| Short press of the rotary button when the device is turned on     | 1. Pause / play  |
|   | 2. Accept / reject the call                                      |
| Two short press of the rotary button when the device is turned on | 1. Break the connection, go to the connection search mode        |
|   | 2. If no new device is connected, connect to the previous device |
|   | 3. When making an incoming call, reject the call                 |
| Long press (about 2 seconds) of the rotary button                 | 1. Turn on the device  |
|   | 2. Turn off the device   |
| Rotate the rotary button clockwise                                | Increase volume  |
| Rotate the rotary knob counterclockwise                           | Decrease volume  |

## Indication

| Audioscole mode          | Indicator mode        |
|--------------------------|-----------------------|
| Waiting for connection   | Fast flashing blue    |
| Connection is being made | Slowly blinking blue  |
| Incoming call            | Fast blinking white   |
| A call is in progress    | Slowly blinking white |
| Charger is running       | Illuminates in red    |
| Charge completed         | Illuminates in blue   |
| Low battery charge       | Blinking red          |

## Basic parameters

|                                       |   |
|---------------------------------------|---|
| The name of the device                | Xiaomi Steel Gun Bluetooth Speaker 2        |
| Device model                          | LYYX01ZM                                    |
| Bluetooth version                     | v4.1  |
| Effective working distance            | 10 meters                                   |
| Continuous listening period for music | up to 7 hours at full charge of the battery |
| Maximum output power                  | 5 W   |
| Resistance to loudspeaker             | 4 Ohm                                       |
| Battery capacity                      | 1200 mAh 3,7 V                              |
| USB power input                       | 5 V = 1 A                                   |
| Dimensions                            | 60 mm × 60 mm × 93.3 mm                     |
| Operating temperature                 | -10 °C ~ +40 °C                             |

Note: Connecting this device to a mobile phone or other Bluetooth device is done with a wireless signal. This connection type is not stable and reliable in all locations. In an emergency, do not rely on communication through this device.

## The stated content of harmful and toxic substances

| The name of the component                                | Harmful and toxic materials or elements |              |              |                   |                         |                                     |
|--|---|--------------|--------------|-------------------|-------------------------|-------------------------------------|
|  | Lead (Pb)                               | Mercury (Hg) | Cadmium (Cd) | Six-chrome (CRVI) | Polybromodiphenyl (PBB) | Polybrominated diphenylether (PBDE) |
| Printed circuit board                                    | X                                       | O            | O            | O                 | O                       | O                                   |
| Housing  | O                                       | O            | O            | O                 | O                       | O                                   |
| Pads, rubber belts and other small constructive elements | O                                       | O            | O            | O                 | O                       | O                                   |

O: means that the content of this harmful and toxic material in all homogeneous materials of this component is within the scope of SJ / T11363-2006 Requirements for the Quantity of Harmful and Toxic Substances in Electronic Information Products

X: means that the content of this harmful and toxic material in at least one of the homogeneous materials of this component exceeds the limits of the requirements of SJ / T11363-2006.

This product meets the requirements of the RoHS Directive: The lead contained in the electronic components of the PCB is currently technologically and economically indispensable.

The term safe term means that under normal operating conditions, hazardous substances and elements contained in the device and its accessories will not be exposed outward, as well as that the user during the operation of this product will not cause serious pollution to the environment, will not cause serious damage to their body and material values.



## Warranty service and support

Warranty Terms of Xiaomi Small Steel Gun Bluetooth Speaker 2.

Warranty service is carried out in accordance with the Law of the People's Republic of China «On Consumer Rights Protection», the Law of the People's Republic of China «On Product Quality», which includes:

1. In the period up to 7 days after receipt, if this device has questions that are included in the «Table of typical faults», which has been checked and confirmed by the Xiaomi service center, a free return or replacement of the product is performed;
2. In the period from 8 to 15 days after receipt, if this device has questions that are included in the «Table of characteristic faults», which has been checked and confirmed by the Xiaomi service center, a free replacement or repair of the product is performed;
3. In the period up to 12 months after receipt, if this device has questions that are included in the «Table of characteristic faults», which has been checked and confirmed by the Xiaomi service center, free repair of the product is performed.

Table of typical device malfunctions

| Name  | Characteristic malfunctions   |
|---|---|
| Audio Column Xiaomi Small Steel Gun Bluetooth Speaker 2 | <ol style="list-style-type: none"><li>1. Cracks of the case that arose due to the materials used and the structure of the body</li><li>2. When connected to a power source, it is not possible to turn on the device and play music</li></ol> |

## Non-warranty cases

1. Unauthorized repairs, improper use, strokes, non-use, misuse, inaccessibility, inaccessibility of the device, accidents, re-equipment, incorrect use of non-contained accessories;
2. Cases, occurring after the expiration of the warranty period;
3. Damage, caused by force majeure circumstances;
4. Cases, not specified in the «List of characteristic faults»;
5. Cases, arising from the human factor cause damage to the convector and other elements specified in the «List of characteristic faults».

Online Support: <http://mi.com/service>

Hotline: 400-100-5678

Manufacturer: Jiangsu Zimi Electronic Technology Co., LTD.

Address: Jiangyin city, Chengjiang Central Street 159, A913

