


Roomba Anatomy

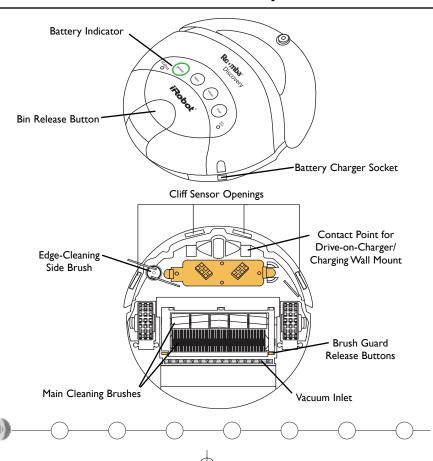


Roomba Set-up


Place battery into Roomba Robotic Floorvac.

(press down on both ends)

Charge for 3 hours — while you're waiting, load batteries in your Virtual Wall and Remote.

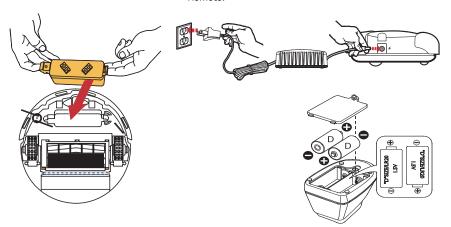


 3 Clean the floor of loose stuff like you would before using a traditonal vacuum. If you don't vacuum over it, don't use Roomba over it (e.g., rug tassels, power and blind cords).




Roomba Set-up

Set up your Virtual Wall to keep Roomba where you want it and away from where you don't.

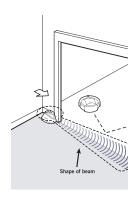


Battery indicator

 




Roomba setup - Self-Charging Home Base

 Set up the Home Base against a wall in a location with a clear approach and no obstructions in front.




When Roomba completes a mission or the battery is running low, it will find its way back to the Home Base and re-charge for the next mission. There will be times Roomba can't find its Home Base. If this happens, place Roomba on the Home Base or plug into the wall. To manually send me back to recharge, I need to be placed within 4-5 feet in front of the Home Base. Then press both the "Clean" and "Spot" button at the same time.

 To restart Roomba when it is on the Home Base, just press "Clean" and watch Roomba GO!



Roomba at Work

 Place Roomba in the center of the room and press "Clean." Roomba will automatically calculate how long it needs to clean your entire room.



or

2 Use "Spot" to intensively clean a 3 ft. diameter area.



- Use "Max" for extended cleaning time. Roomba will clean for up to 120 minutes before shutting off.
- "Dirt Alert" will illuminate when Roomba has detected dirt that requires special attention. When the dirt is gone, Roomba will continue in its standard cleaning mode.

In dirtier areas, I increase my cleaning intensity.


5 To pause Roomba, hit any button on the panel. To stop, pick it up.



Roomba at Work


6 When Roomba stops, check the indicator light.

Roomba stops for 3 reasons

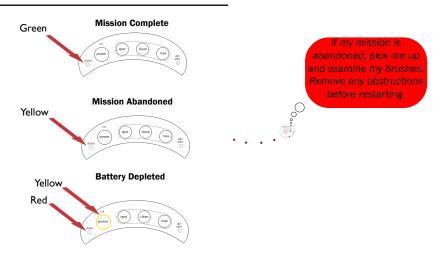

- When Roomba is not cleaning it is recommened that you keep it plugged in. That will help the battery stay in peak condition.
- Use your remote to power up, start a cleaning cycle, direct Roomba to the dirt.

Keep Roomba Running

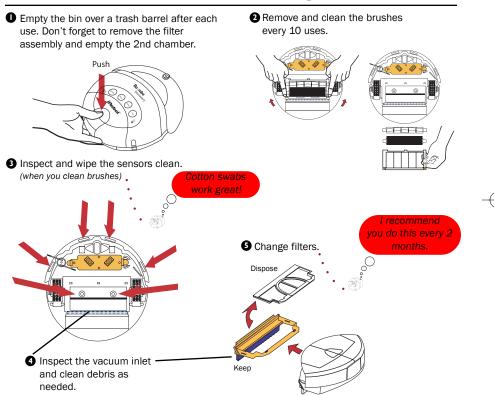

Roomba Last Thoughts

The Roomba Robotic Floorvac is easy to use, but under the hood it's a complex robot. We're Roboticists, the retailer is not. If you have questions or comments, we're anxious to help.

Please visit us at www.irobot.com

or

call 877-855-8593

iRobot, Roomba, Roomba Discovery, Virtual Wall and "if it's down there, we'll get it" are trademarks of iRobot Corporation

© 2004 iRobot Corporation. All Rights Reserved

US Pat Nos 6,594,844 and 6,690,134. Additional Patents Pending Burlington, MA 01803

Version: 4210-V1



