
Kodak EasyShare M1033/M2008 digital camera



User's guide

www.kodak.com

For interactive tutorials:

www.kodak.com/go/howto

For help with your camera:

www.kodak.com/go/m1033support, [m2008support](http://www.kodak.com/go/m2008support)

Kodak

Eastman Kodak Company

Rochester, New York 14650


© Eastman Kodak Company, 2008

All screen images are simulated.

Kodak, EasyShare, and Perfect Touch are trademarks of Eastman Kodak Company.


4F8048_en

Front view

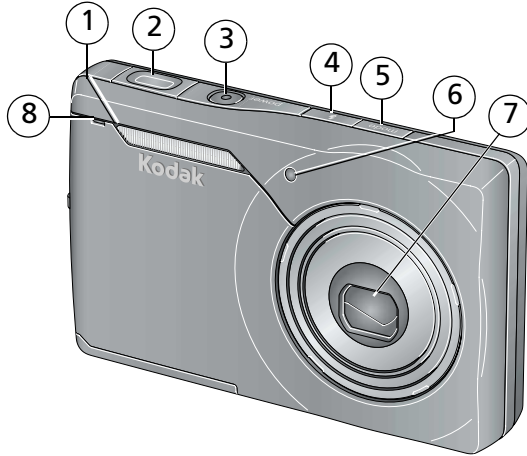

- | | | | |
|---|--------------------------------------|---|----------------------------------|
| 1 | Flash | 5 | Mode button |
| 2 | Shutter button | 6 | Self-timer light/AF assist light |
| 3 | Power button, Battery Charging light | 7 | Lens/Cover |
| 4 | Flash button | 8 | Microphone |

Back view

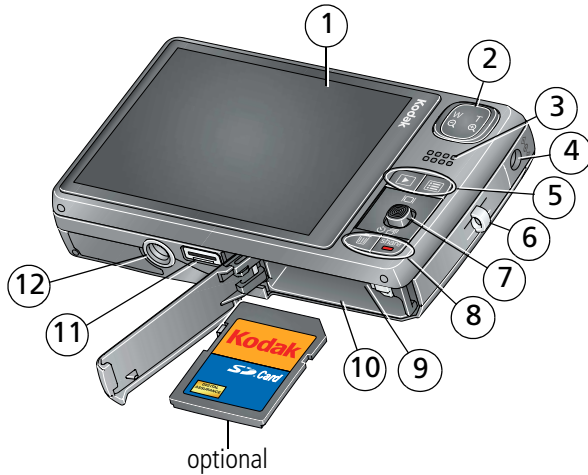

- | | |
|--------------------------|--|
| 1 LCD | 7 Joystick, OK button
Display ▲
Self-timer/Burst ▼ |
| 2 Zoom/Wide Angle button | 8 Delete, Share buttons |
| 3 Speaker | 9 Slot for optional SD or SDHC card |
| 4 DC-In (5V) | 10 Battery compartment |
| 5 Review, Menu buttons | 11 USB, A/V Out, Dock connector |
| 6 Strap post | 12 Tripod socket |

Table of contents

1	Setting up your camera	1
	Attaching the strap	1
	Loading the KLIC-7004 battery	1
	Charging the battery	2
	Turning on the camera	3
	Setting the language and date/time	4
	Storing pictures on an SD or SDHC card	4
2	Taking pictures/videos	5
	Taking a picture	5
	Using the framing marks to take pictures	6
	Using the optical zoom	6
	Using the flash	7
	Using different modes	8
	Taking a video	10
	Using the self-timer	11
	Using camera Help	12
	Understanding the picture-taking icons	12
3	Working with pictures/videos	13
	Reviewing pictures/videos	13
	Deleting pictures/videos	14
	Understanding the review icons	15
	Using the menu button in review	16
	Cropping pictures	17
	Adding sound tags	17
	Using Kodak Perfect Touch technology	18
	Editing videos	19
	Running a slide show	22
	Viewing pictures/videos in different ways	25
	Selecting multiple pictures/videos	26
	Copying pictures/videos	26

4	Doing more with your camera	27
	Using the menu button to change settings	27
	Using the Setup menu	32
	Taking panoramic pictures	34
	Using exposure compensation to adjust picture brightness	35
	Using the histogram to view picture brightness	35
	Using the framing grid to compose a picture	35
5	Transferring, printing, tagging	36
	Installing the software	36
	Transferring pictures/videos	37
	Printing pictures	38
	Tagging your pictures	40
6	Troubleshooting	44
7	Getting help	48
8	Appendix	50
	Camera specifications	50
	Care and maintenance	52
	Upgrading your software and firmware	53
	Storage capacities	53
	Important safety instructions	53
	Battery replacement, battery life	54
	Limited warranty	55
	Regulatory compliance	57

1


Setting up your camera

IMPORTANT: *For package contents, see your product package.*

Attaching the strap




Loading the KLIC-7004 battery

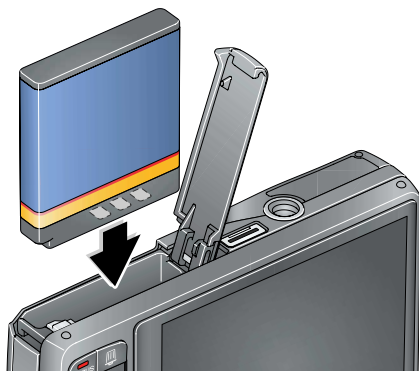

For information on replacing batteries and extending battery life, see [page 54](#).

Charging the battery

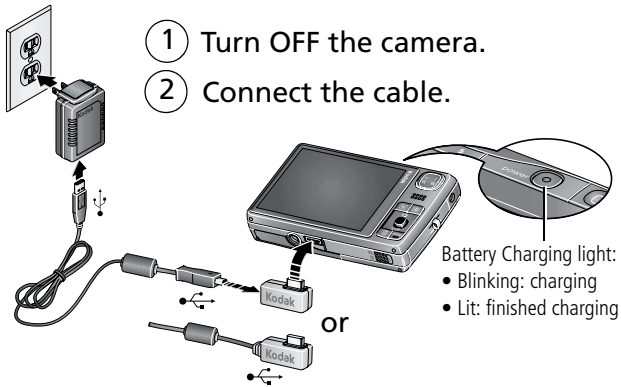

Learn more about USB charging www.kodak.com/go/USBcharging

More information on batteries See [page 54](#)

Charging the battery using other accessories

First, turn OFF the camera. Charge until the Battery Charging light stays on.

Kodak 5V AC adapter


(May be sold separately.)



Kodak EasyShare camera or printer dock; EasyShare HDTV dock


(May be sold separately.)

For dock compatibility, see [page 39](#).

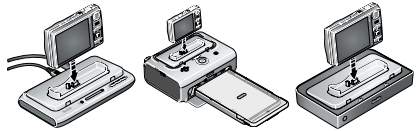

Kodak USB cable and a USB computer port

Ensure that the USB cable is connected to a powered USB port and the computer is turned on (not in sleep mode). See www.kodak.com/go/USBcharging.

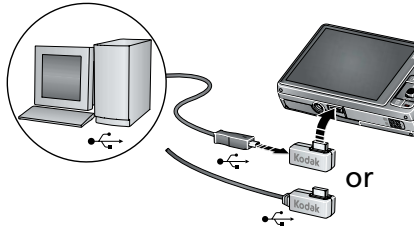


Purchase accessories


www.kodak.com/go/m1033accessories, [m2008accessories](http://www.kodak.com/go/m2008accessories)

Turning on the camera

Press the Power button to turn the camera on in Smart Capture mode.

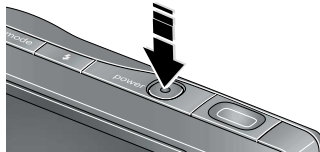

Setting the language and date/time

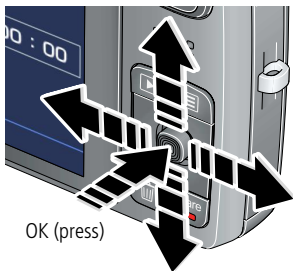

- ① Language:
 - ① ▲/▼ to change.
 - ② OK to accept.
- ① Date/Time:
 - ① At the prompt, press OK.
 - ② ▲/▼ to change.
 - ◀/▶ for previous/next field.
 - OK to accept.

NOTE: To change language in the future, [see page 33](#). To change date & time, [see page 32](#).

Storing pictures on an SD or SDHC card

Your camera has internal memory. You can purchase an SD or SDHC card to conveniently store more pictures/videos.



CAUTION:

A card can only be inserted one way; forcing it may cause damage. Inserting or removing a card while the camera is on may damage the pictures, the card, or the camera.

- ① Turn off the camera.
- ② Insert or remove the optional card.
- ③ Turn on the camera.



Purchase accessories www.kodak.com/go/m1033accessories, [m2008accessories](http://www.kodak.com/go/m2008accessories)

2

Taking pictures/videos

Taking a picture



Framing marks



- 1 Press the Power button to turn on the camera.
- 2 Compose the picture.
- 3 Press the Shutter button **halfway** to focus and set exposure. When the framing marks turn green, press the Shutter button **completely down**.



NOTE: You can repeatedly press  (Display ) to turn on/off status icons, histogram, and framing grid.

Reviewing the picture/video just taken

After you take a picture/video, the LCD displays a quickview for approximately 5 seconds. (To exit the quickview sooner, press the Shutter button halfway.)



Delete

-  Play/pause a video
-  Adjust volume

To review pictures/videos anytime, see [page 13](#).

Using the framing marks to take pictures

Framing marks indicate the camera focus area. In Smart Capture mode (and in SCN modes designed for pictures of people), the camera attempts to focus on faces.



Framing marks

- 1 Press the Shutter button **halfway**.
When the framing marks turn green, focus is accomplished.
- 2 If the camera is not focusing on the desired subject (or if the framing marks disappear), release the Shutter button and recompose the scene.
- 3 Press the Shutter button **completely down** to take the picture.

NOTE: Multiple framing marks may appear when faces are detected. Framing marks do not appear in Landscape or Video mode.

Using the optical zoom



- 1 Use the LCD to frame your subject.
- 2 To zoom in, press Telephoto (T).
To zoom out, press Wide Angle (W).
- 3 Take the picture or video.


NOTE: For focus distances, see Specifications starting on [page 50](#).

Using digital zoom





Use digital zoom in any picture-taking mode to get up to 5X magnification beyond optical zoom. Press Telephoto (T) until the slider is at the end of the optical zoom range. Release Telephoto (T), then press it again.

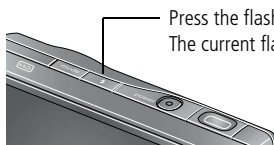NOTE: You may notice decreased image quality when using digital zoom. The slider pauses and turns red when the picture quality reaches the limit for an acceptable 4 x 6-in. (10 x 15 cm) print. You cannot use digital zoom while taking a video.

Using the flash




Press the flash button repeatedly to scroll through flash modes. The current flash mode is shown in the LCD status area.



Flash modes	Flash fires
 Auto	When the lighting conditions require it.
 Fill	Every time you take a picture, regardless of the lighting conditions. Use when the subject is in shadow or is “backlit” (when the light is behind the subject). In low light, hold the camera steady or use a tripod. NOTE: (Not available in Smart Capture mode.)
 Red Eye	Once to shrink the eye pupil, then again to light the subject.
 Off	Never



Your camera saves the flash setting, even after you turn off the camera.

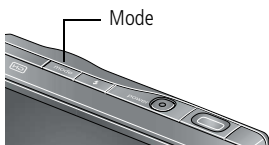Using different modes

Choose the mode that best suits your subjects and surroundings.



- 1 Press the Mode button.
- 2 Press   to highlight a mode, then press the OK button.

Use this mode	For
 Smart Capture	<p>General picture taking—it offers excellent image quality and ease of use.</p> <ul style="list-style-type: none">■ Faces are detected.■ The scene is analyzed for other content and for lighting.■ Kodak Perfect Touch technology is applied, for better pictures. <p>You can choose the best picture size and aspect ratio for your needs—just press the Menu button and choose Picture Size.</p> <ul style="list-style-type: none">■ 3:2 (the best choice when making 4 x 6 prints)■ 16:9 (wide screen)■ 4:3 (the default setting)
P Program	Advanced picture taking—allows more access to manual settings than Smart Capture.
SCN Scene	Point-and-shoot simplicity when taking pictures in practically any situation. (See page 9 .)
 Video	Capturing video with sound. (See page 10 .)

Using Scene (SCN) modes

Choose a Scene mode—for great pictures in practically any situation!

- 1 Press the Mode button.
- 2 Press ◀/▶ to highlight SCN, then press the OK button.
- 3 Press ◀/▶ ▲/▼ to view scene mode descriptions.
If the mode description turns off before you finish reading it, press the OK button.
- 4 Press the OK button to choose a Scene mode.

SCN mode	For
Portrait	Full-frame portraits of people.
Panorama L-R, R-L	See page 34 .
Blur Reduction	Reducing blur caused by camera shake or subject motion.
Sport	Subjects that are in motion.
Landscape	Distant scenes.
Close-up	Close range. Use available light instead of flash, if possible.
Night Portrait	Reduces red eye of people in night scenes or low-light conditions.
Night Landscape	Distant scenery at night. Flash does not fire.
Snow	Bright snow scenes.
Beach	Bright beach scenes.
Text	Documents. Place the camera on a steady surface or tripod.
Fireworks	Fireworks. Place the camera on a steady surface or tripod.
Flower	Close-ups of flowers or other small subjects in bright light.
Manner/ Museum	Quiet occasions, like a wedding or lecture. Flash and sound are disabled. Place the camera on steady surface or tripod.

SCN mode	For
Self-Portrait	Close-ups of yourself. Assures proper focus and minimizes red eye.
High ISO	People indoors, in low-light scenes.
Children	Action pictures of children in bright light.
Backlight	Subjects that are in shadow or “backlit” (when light is behind the subject).
Panning Shot	Shooting a fast-moving subject. The background gives the sense of movement, while the subject appears still.
Candle Light	Subjects illuminated by candle light.
Sunset	Subjects at dusk.

Taking a video



- 1 Press the Mode button.
- 2 Press ◀/▶ to highlight Video, then press the OK button.
- 3 Press the Shutter button **completely down**, then release it. To stop recording, press and release the Shutter button again.

To review and work with videos, see [page 13](#).

Using the self-timer

Use the self-timer when you want to be included in a picture, or to ensure a steady Shutter button press. Place the camera on a tripod or flat surface.



- 1 In any Still mode, press ▼ until the desired self-timer icon appears for:
 - 10 seconds**—A picture is taken after a 10-second delay (so you have time to get into the scene).
 - 2 seconds**—A picture is taken after a 2-second delay (for a steady, shutter release on a tripod).
 - 2 shot**—The first picture is taken after a 10-second delay. A second picture is taken 8 seconds later.
- 2 Compose the scene. Press the Shutter button **halfway**, then **completely down**.

The camera takes the picture/pictures after the delay.

NOTE: In Panoramic modes (page 34), only the 2- and 10-second options are available.

Use the same procedure to take a 2- or 10-second self-timer video, but press the Shutter button **completely down**.

Using burst


Use burst to take up to 3 pictures in quick succession. (Burst is not available in Panorama mode.)




- 1 In any picture-taking mode, repeatedly press ▼ until the Burst icon appears at the top of the LCD.
- 2 Press the Shutter button **halfway** to focus and set exposure. Press the Shutter button **completely down and hold it** to take pictures.

Using camera Help

To better understand each menu option, use camera Help.

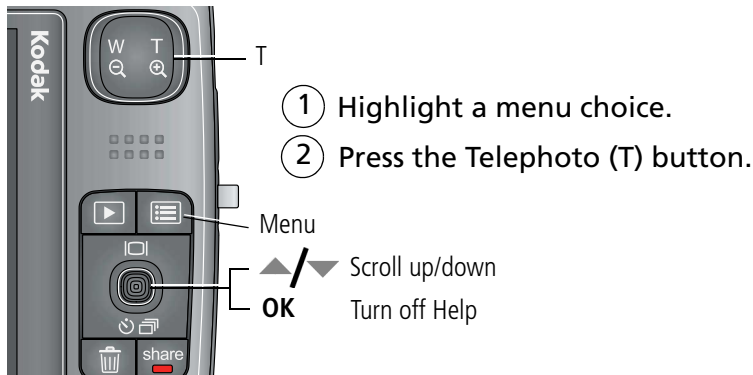


Understanding the picture-taking icons

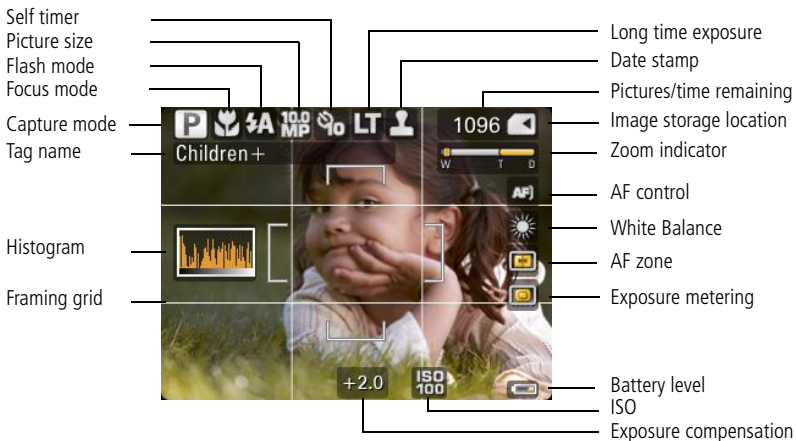

3

Working with pictures/videos

Reviewing pictures/videos

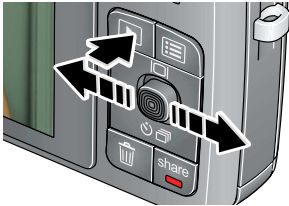


- 1 Press the Review button.
- 2 Press ◀/▶ for previous/next picture/video.
 - To exit, press the Review button.

Magnifying a picture



- 1 Press T to magnify 1X–8X.
- 2 Press ▲/▼ ◀/▶ to view other parts of a picture.
 - Press OK to return to 1X.

Playing a video

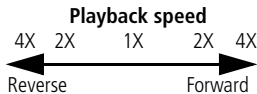

Press ▼ to play a video. Press OK to pause/unpause. During playback:

- Press ▲/▼ to adjust the volume.
- Press ▶ to play at 2X speed; press again for 4X.
- Press ◀ to reverse at 2X speed; press again for 4X.
- Press and hold ◀/▶ for 4 seconds to jump to a bookmark (see [page 21](#)).

Deleting pictures/videos

- 1 Press the Review button.
- 2 Press ◀/▶ for previous/next picture/video.
- 3 Press the Delete button.
- 4 Follow the screen prompts.


NOTE: To delete protected pictures/videos, remove protection before deleting. (See [Protecting pictures/videos from deletion.](#))

Using the undo delete feature

If you accidentally delete a picture/video, you may be able to use Undo Delete to retrieve it. This feature is only available immediately after you delete a picture/video.

Protecting pictures/videos from deletion

- 1 Press the Review button.
- 2 Press ◀/▶ for previous/next picture/video.
- 3 Press the Menu button.
- 4 Press ▲/▼ to highlight Protect, then press the OK button.

The picture/video is protected and cannot be deleted. The Protect icon  appears with the protected picture/video.

- Press the Menu button to exit the menu.




CAUTION:

Formatting internal memory or an SD or SDHC card deletes all (including protected) pictures/videos. (Formatting internal memory also deletes email addresses and tag names. To restore them, see EasyShare software Help.)

Understanding the review icons

Pictures

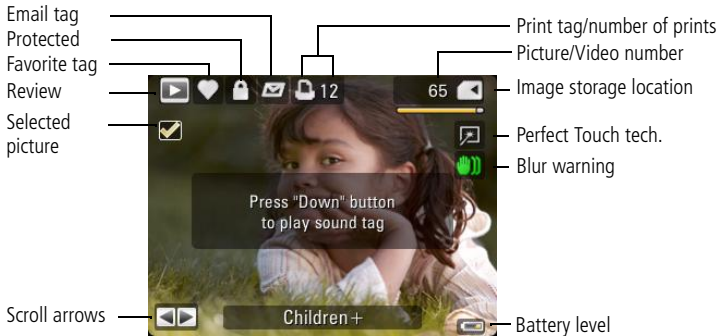

Blur Warnings:


Green: Picture is sharp enough for an acceptable 4 x 6-inch (10 x 15 cm) print.

Yellow: Picture may be sharp enough for an acceptable 4 x 6-inch (10 x 15 cm) print or sharpness is not determined. (You may want to view on a computer monitor before printing.)


Red: Picture is not sharp enough for an acceptable 4 x 6-inch (10 x 15 cm) print.

White: Print sharpness is not determined.

Videos

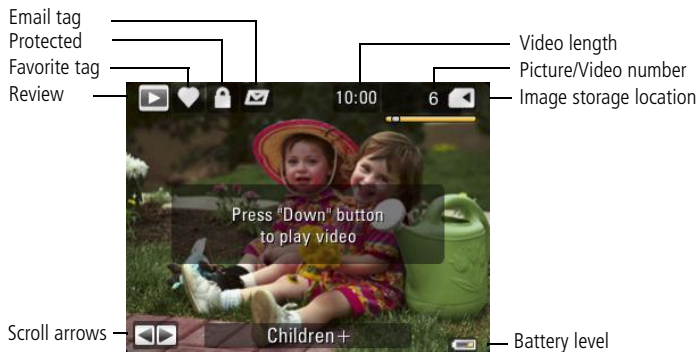

Viewing picture/video information


- 1 Press the Review button.
- 2 Repeatedly press ▲ (Display ) to turn on/off status icons, histogram, and picture/video info.
 - Press the Review button to exit Review.

Using the menu button in review

- 1 Press the Review button, then the Menu button.
- 2 Press ◀/▶ to highlight a tab:
 - **Review** to view pictures/videos
 - **Edit** to edit pictures/videos
 - **Setup** for other camera settings ([page 32](#))
- 3 Press ▲/▼ to highlight a setting, then press the OK button.
- 4 Highlight an option, then press the OK button.

Cropping pictures

You can crop a picture so that only the desired portion of the picture remains.

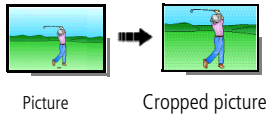

- 1 Press the Review button, then ◀/▶ to find a picture to crop.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Crop, then press the OK button.
- 3 Press Telephoto (T) to zoom in, or ◀/▶▲/▼ to move the crop box. Press the OK button.
- 4 Follow the screen prompts.

The picture is cropped. (The original is saved.) Cropped pictures cannot be cropped again on the camera.

 - Press the Menu button to exit the menu.

Adding sound tags

You can add a recorded voice or sound tag (up to 1 minute long) to a picture.

NOTE: Only one sound tag can be added to each picture (not to videos).

Recording a sound tag

- 1 Press the Review button, then ◀/▶ to find a picture.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab.
- 3 Press ▲/▼ to highlight Sound Tag. Press the OK button.
- 4 Highlight Record, then press OK.
- 5 Follow the screen prompts.

The sound tag is applied to your picture.

 - Press the Menu button to exit the menu.

Playing a sound tag

- 1 Press the Review button, then ◀/▶ to find a sound-tagged picture.
- 2 Press ▼ to play the sound tag.
- 3 Press ▲/▼ to adjust the volume.
- 4 Press OK to stop playback.

Using Kodak Perfect Touch technology

Kodak Perfect Touch technology helps ensure better, brighter pictures. Perfect Touch is automatically applied to pictures taken in Smart Capture mode. (You cannot enhance videos, panoramic pictures, pictures that are already enhanced, or pictures taken in Smart Capture mode.)


- 1 Press the Review button.
 - 2 Press ◀/▶ for previous/next picture.
 - 3 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Perfect Touch tech, then press the OK button.
The enhancement is previewed. Press ◀/▶ to view other parts of the picture.
 - 4 Press the OK button. Follow the screen prompts to replace the original picture or to save the enhanced picture as a new one.
- Press the Menu button to exit the menu.

Editing videos

You can do incredible things with your videos!

Making a picture from a video


You can choose a single frame from a video, then make a picture suitable for a 4 x 6-inch (10 x 15 cm) print.

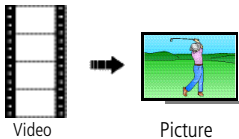

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Make Picture, then press the OK button.
- 3 Follow the screen prompts.
A picture is created. (The original video is saved.)
 - Press the Menu button to exit the menu.

Trimming a video


You can remove an unwanted start or end from a video, saving only the desired portion.

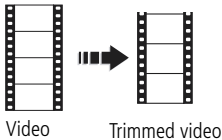

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Trim, then press OK.
- 3 Follow the screen prompts.
The video is trimmed. (You can save it as a new video or replace the original.)
 - Press the Menu button to exit the menu.

Making a video action print

From a video, you can make a 4-, 9-, or 16-up picture, suitable for a 4 x 6-inch (10 x 15 cm) print.

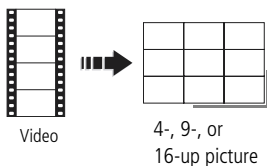

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Action Print, then press the OK button.
- 3 Highlight an option, then press the OK button.

Auto: The camera includes the first and last frames, then 2, 7, or 14 equally spaced frames.

Manual: Choose the first and last frames; the camera chooses 2, 7, or 14 spaced frames.

Full Manual: Choose 4, 9, or 16 frames.

Use Bookmarks: The camera uses bookmarked frames.


A 4-, 9-, or 16-up picture is created. If you have less than 4 or 9 bookmarks, equally spaced video frames are used.

- Press the Menu button to exit the menu.

Using video bookmarks


You can set bookmarks at interesting places in your video, then jump from one bookmark to another.

Setting bookmarks

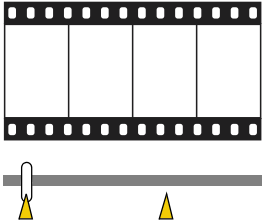

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press the Menu button, then ◀/▶ to highlight the Edit tab. Highlight Bookmark, then press OK.
- 3 While the video plays, press ▼ to add bookmarks. When finished adding up to 9 bookmarks, press ▲.
 - Press the Menu button to exit the menu.

Using bookmarks

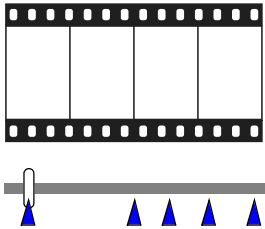

- 1 Press the Review button, then ◀/▶ to find a video.
- 2 Press ▼ to play the video. To jump to the first bookmark, press and hold ◀/▶ for 4 seconds while the video is playing.
 - After you jump to a bookmark, press ◀/▶ to jump to other bookmarks.
 - To view all bookmarked video frames, press the Zoom wide angle (W) button. To return to normal view, press the telephoto (T) button.

Running a slide show

Use Slide Show to display your pictures/videos on the LCD.

NOTE: If you have a Kodak EasyShare HDTV dock, see its Getting Started Guide.

- 1 Press the Review button.
- 2 Press the Menu button, then **◀/▶** to highlight the Review tab. Highlight Slide Show, then press the OK button.
- 3 Press **▲/▼** to highlight Begin Show, then press the OK button.
Each picture/video is displayed once. To interrupt the Slide Show, press the OK button.

Changing the slide show display interval

You can set the display interval for each picture from 3–60 seconds.

- 1 On the Slide Show menu, press **▲/▼** to highlight Display Interval, then press the OK button.
- 2 Select a display interval.
To scroll through the seconds quickly, press and hold **▲/▼**.
- 3 Press the OK button.
The display interval setting remains until you change it.

Running a continuous slide show loop

When you turn on Loop, the slide show is continuously repeated.

- 1 On the Slide Show menu, press **▲/▼** to highlight Loop, then press the OK button.
- 2 Press **▲/▼** to highlight On, then press the OK button.
- 3 Press **▲/▼** to highlight Begin Show, then press the OK button.
The slide show repeats until you press the OK button or until the battery is exhausted.

Choosing a slide show transition

Choose how the slide show transitions from one picture to another.

- 1 On the Slide Show menu, press ▲/▼ to highlight Transition, then press the OK button.
- 2 Press ▲/▼ to select a transition, then press the OK button.

Running a multimedia slide show

Multimedia Slide Show is similar to Slide Show, but also offers music and visual effects. First, select 2-20 pictures (see [page 26](#)). Then:


- 1 Press the Review button.
- 2 Press the Menu button, then ◀/▶ to highlight the Review tab. Highlight Multimedia Slide Show, then press the OK button.
- 3 Press ▲/▼ to highlight a choice from the menu below, then press the OK button.
 - Begin Show
 - Music
 - Effect
 - Play Order

Each picture/video is displayed once. To interrupt the slide show, press the OK button. After the slide show plays, you may save or modify it.

NOTE: If you have a Kodak EasyShare HDTV dock, see its Getting Started Guide.

Displaying pictures/videos on a television

For a true HDTV experience on your television, dock your camera on the Kodak EasyShare HDTV dock.

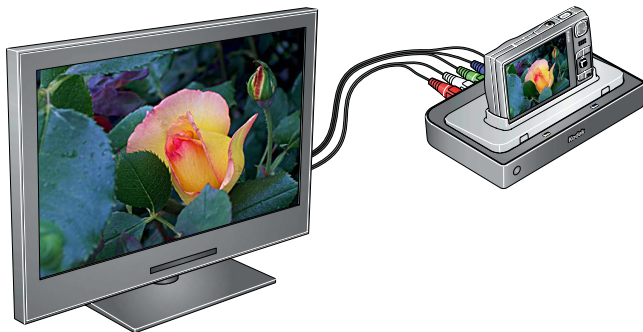

To connect the camera directly to a non-HDTV television, use an A/V cable and a Kodak USB / A/V adapter (may be sold separately). You can display pictures/videos on a television, computer monitor, or any device equipped with a video input.

Purchase accessories www.kodak.com/go/m1033accessories, [m2008accessories](http://www.kodak.com/go/m2008accessories)

NOTE: Ensure that the Video Out setting (NTSC or PAL) is correct ([see page 33](#)). The slide show stops if you connect or disconnect the cable while the slide show is running. (Image quality on a television screen may not be as good as on a computer monitor or when printed.)

Viewing pictures/videos in different ways

Viewing as thumbnails (multi-up)

- 1 Press the Review button.
- 2 Press W to change from single-picture view to multi-up thumbnails.
- 3 Press T to return to single-picture view.
 - To select multiple pictures/videos, see [page 26](#).
 - Press the Review button to exit Review.

Searching pictures by date, Favorites, or other tag

If you have many pictures on your camera or card, you can sort them so that only some are visible at a time. You can sort by the date a picture was taken or—if you've tagged pictures with a Favorites tag or a tag that you created—you can sort by tag.


- 1 Press the Review button, then the Menu button.
- 2 Press $\blacktriangle/\blacktriangledown$ to highlight Search, then press the OK button.
- 3 Press $\blacktriangleleft/\blacktriangleright$ to highlight Date, Favorite, or Tag, then \blacktriangledown to select a folder.
- 4 Press $\blacktriangleleft/\blacktriangleright$ to select a folder.
- 5 To see the results of your search, highlight Exit then press the OK button. Press Save, then press the OK button.

Pictures are displayed in multi-up view. Press $\blacktriangleleft/\blacktriangleright$ $\blacktriangle/\blacktriangledown$ to view them. Press the Telephoto (T) button to view the picture full-screen. Press the Wide Angle (W) button to return to multi-up view.

- Press the Review button to exit Review.
- For more about tags, see [page 40](#).
- To select multiple pictures/videos, see [page 26](#).

Selecting multiple pictures/videos

Use the multi-select feature when you have two or more pictures/videos to print, transfer, delete, etc. Multi-select is used most effectively in Multi-Up mode, [page 25](#).

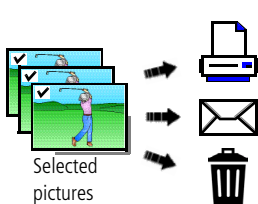

- 1 Press the Review button, then ◀/▶ to find a picture/video.
- 2 Press the OK button to select pictures/videos.

A check mark appears on the picture. You can now print, transfer, delete, etc. the selected pictures. You can press OK a second time to remove a check mark.

Copying pictures/videos

You can copy pictures/videos from a card to internal memory or from internal memory to a card.

Copy pictures/videos:

- 1 Press the Review button.
- 2 Press the Menu button, then ◀/▶ to highlight the Review tab.
- 3 Press ▲/▼ to highlight Copy, then press the OK button. Highlight Memory Card or Internal Memory, then press the OK button.

NOTE: Pictures/videos are copied, not moved. To remove pictures/videos from the original location after copying, delete them (see [page 14](#)). Tags that you applied for print, email, and favorites are not copied. Protection settings are not copied. To apply protection to a picture/video, see [page 14](#).

4

Doing more with your camera

Using the menu button to change settings





You can change settings to get the best results from your camera.

NOTE: Some modes offer limited settings. Some settings remain until you change them; others, until you change modes or turn off the camera.

- 1 Press the Menu button.
- 2 Press **◀/▶** to highlight a tab:
 - **Capture** for the most common picture-taking settings
 - **Capture +** for other picture-taking settings
 - **Video** for video-taking settings
 - **Setup** for other camera settings
- 3 Press **▲/▼** to highlight a setting, then press the OK button.
- 4 Highlight an option, then press the OK button.

Using the capture tab

Press Menu, ◀/▶ , ▲/▼ , and OK to access settings	Capture Options
Exposure Compensation Make a picture lighter or darker.	0.0, -0.3, -0.7, -1.0, -1.3, -1.7, -2.0, +0.3, +0.7, 1.0, 1.3, 1.7, 2.0

Press Menu,  ,  ,  ,  , and OK to access settings	Capture Options
<p>Picture Size (Smart Capture mode) Choose a picture resolution.</p>	<p>10.0 MP: (4:3) 8.9 MP: (3:2) 7.5 MP: (16:9) 5.0 MP: (4:3) 4.5 MP: (3:2) 3.8 MP: (16:9) 3.1 MP: (4:3) 2.8 MP: (3:2) 2.4 MP: (16:9)</p>
<p>Picture Size (all other modes) Choose a picture resolution.</p>	<p>10.0 MP (4:3) 8.9 MP (3:2) 7.5 MP (16:9) 5.0 MP (4:3) 3.1 MP (4:3) 2.2 MP (3:2) 2.1 MP (16:9) 1.2 MP (4:3)</p>
<p>Long Time Exposure Choose how long the shutter stays open.</p>	<p>None 0.5, 1.0, 2.0, 4.0, or 8.0 seconds</p>
<p>Color Mode Choose color tones. Unavailable in Video mode.</p>	<p>High Color Natural Color Low Color Black & White Sepia—for a reddish-brown, antique look. NOTE: EasyShare software also lets you change a color picture to black-and-white or sepia.</p>





Press Menu, ◀/▶, ▲/▼, and OK to access settings	Capture Options
<p>AF Control Choose an auto-focus setting.</p>	<p>Continuous AF—because the camera is always focusing, there is no need to press the Shutter button halfway down to focus.</p> <p>Single AF—uses TTL-AF (through-the-lens auto focus) when the Shutter button is pressed halfway down.</p>

Using the capture + tab

Press Menu, ◀/▶, ▲/▼, and OK to access settings	Capture + Options
<p>White Balance Choose your lighting condition. Available in Smart Capture mode.</p>	<p>Auto—automatically corrects white balance. Ideal for general picture taking.</p> <p>Daylight—for pictures in natural lighting.</p> <p>Tungsten—corrects the orange cast of household light bulbs. Ideal for indoor pictures under tungsten or halogen lighting without flash.</p> <p>Fluorescent—corrects the green cast of fluorescent lighting. Ideal for indoor pictures under fluorescent lighting without flash.</p> <p>Open Shade—for pictures in shade in natural lighting.</p>
<p>Face Detection Choose if faces get focus priority.</p>	<p>On—In P mode (and in SCN modes designed for pictures of people), the camera attempts to focus on faces.</p> <p>Off NOTE: Not available in Smart Capture mode because face detection is always on.</p>
<p>Red Eye Preflash Choose whether a preflash fires when the flash is in Red Eye mode.</p>	<p>On—red eye flash fires before the picture is taken.</p> <p>Off—red eye flash does not fire. NOTE: The camera automatically corrects red eye, even if the Red Eye is set to Off.</p>





Press Menu, ◀/▶, ▲/▼, and OK to access settings	Capture + Options
<p>Exposure Metering Evaluate light levels at specific areas of a scene.</p>	<p>Multi-Pattern—evaluates lighting conditions throughout the image to give an optimum picture exposure. Ideal for general picture taking.</p> <p>Center-Weight—evaluates the lighting conditions of the subject centered in the lens. Ideal for backlit subjects.</p> <p>Center-Spot—similar to Center-weight, except the metering is concentrated on a smaller area of the subject centered in the lens. Ideal when you need an exact exposure of a specific area in the picture.</p>
<p>AF Zone Select a large or concentrated area of focus.</p>	<p>Multi-Zone—evaluates 5 zones to give an even picture focus. Ideal for general picture taking.</p> <p>Center-Zone—evaluates the small area centered in the lens. Ideal when you need precise focus.</p>
<p>ISO Speed Control the sensitivity of the camera sensor.</p>	<p>Auto ISO 80, 100, 200, 400, 800, 1600, 3200, 6400 (ISO 6400 available for picture sizes of 3.1 MP or less.)</p>
<p>Sharpness Control picture sharpness.</p>	<p>High Normal Low</p>
<p>Blur Warning See page 15.</p>	<p>On Off NOTE: Not available in Smart Capture mode.</p>






Using the video tab

Press Menu,  ,  ,  ,  , and OK to access settings	Video Options
<p>Video Size Choose a video resolution.</p>	<p>1280 x 720 (HD720p) HQ—HDTV format; uses the least compression, gives the highest video quality.</p> <p>1280 x 720 (HD720p)—HDTV format; uses compression to save space.</p> <p>640 x 480 HQ—medium quality and file size.</p> <p>640 x 480—medium quality and file size; uses compression to save space.</p> <p>320 x 240—lowest quality; smallest file size.</p>
<p>Focus Mode Select a large or concentrated area of focus.</p>	<p>Auto—for general picture-taking.</p> <p>Macro—for sharpness and detail in pictures at close range. Use available light instead of flash, if possible. The camera automatically sets the focus distance depending on the zoom position.</p> <p>Infinity—for distant subjects; auto-focus framing marks are unavailable.</p>
<p>AF Control Choose an auto-focus setting.</p>	<p>Continuous AF—camera is always focusing.</p> <p>Single AF—camera focuses once, when the Shutter button is pressed.</p>
<p>Image Stabilizer Improve video stability.</p>	<p>On</p> <p>Off</p>

Using the Setup menu

Use Setup to customize your camera.

Press Menu,  /  to highlight Setup, then  /  to access settings	Setup Options
Camera Sounds Choose sound effects.	Theme —applies the same sound effect set to all functions. Individual —choose a sound for each function.
Sound Volume	Off High Medium Low
Digital Zoom Turn digital zoom on or off.	On Off
LCD Brightness Choose LCD brightness.	Power Save High Power
LCD Dimmer Choose inactivity time until LCD dims.	30 seconds 20 seconds 10 seconds Off (no dimming)
Auto Power Off Choose inactivity time until camera turns off.	10 minutes 5 minutes 3 minutes 1 minute
Date Stamp Imprint the date on pictures. Not available on panoramic pictures.	Choose a date option, or turn off the feature.
Date & Time	Set date and time.

<p>Press Menu,   to highlight Setup, then   to access settings</p>	<p>Setup Options</p>
<p>Video Out Choose the regional setting that lets you connect the camera to a television or other external device.</p>	<p>NTSC—used in North America and Japan; most common format. PAL—used in Europe and China.</p>
<p>Image Storage Choose a storage location for pictures/videos.</p>	<p>Auto—the camera uses the card if one is in the camera. If not, the camera uses internal memory. Internal Memory—the camera always uses internal memory, even if a card is installed.</p>
<p>Set Tag Create tag names and assign them to pictures/videos. See page 40.</p>	<p>Add Tag—create a tag. Delete Tag—delete a tag. Clear All—selected tags are cancelled.</p>
<p>Orientation Sensor Orient pictures/videos so that they are displayed with the correct side up.</p>	<p>On, Off</p>
<p>Reset Camera Reset settings to their default.</p>	
<p>Language</p>	<p>Choose your language.</p>
<p>Format</p> <p> CAUTION: Formatting deletes all pictures/videos, including those that are protected. Removing a card during formatting may damage the card.</p>	<p>Memory Card—deletes everything on the card; formats the card. Cancel—exits without making a change. Internal Memory—deletes everything in internal memory including email addresses, and tag names; formats the internal memory.</p>
<p>About View camera information.</p>	

Taking panoramic pictures

Use panorama to “stitch” up to 3 pictures into a panoramic scene.

NOTE: For best results, use a tripod. Only the panoramic picture is saved; individual pictures are not. (Exposure and white balance are set with the first picture. The flash is set to Off.)

- 1 Press the Mode button.
- 2 Press **◀/▶** to highlight SCN, then press the OK button.
- 3 Press **◀/▶ ▲/▼** to highlight Panorama Left-Right or Panorama Right-Left (depending on the direction you want to pan), then press the OK button.
- 4 Take the picture.
After a quickview, the LCD displays the liveview and an “overlay” from the first picture.
- 5 Compose the second picture. Make the overlay from the first picture cover the same portion in the new picture. (You can press the Delete button to re-take a picture.)
- 6 If you are taking only 2 pictures, press the OK button to stitch them together.
After you take 3 pictures, the pictures are automatically stitched together.

Take 2 or 3 pictures.



Get 1 panoramic picture.



NOTE: To use the self-timer 10-second or 2-second setting, see [page 11](#).

Using exposure compensation to adjust picture brightness


Before you take a picture, you can adjust exposure compensation to make pictures darker or lighter.


- Press ▼ to decrease exposure compensation.
- Press ▲ to increase exposure compensation.

The exposure compensation level is shown on the LCD; the LCD gets brighter or dimmer.


Using the histogram to view picture brightness

Use the histogram to evaluate the distribution of light before or after you take a picture. Optimal exposure is achieved when the peak is in the middle of the histogram. The flash may affect a picture's light and shadow.


To turn on the histogram in Capture mode or in Review, press ▲ (Display ) until the histogram appears.

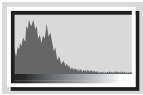

Dark picture

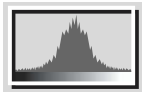

Balanced picture

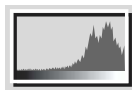

Bright picture

Using the framing grid to compose a picture

The framing grid divides the LCD into thirds—vertically and horizontally. This is helpful if, for example, you want to balance a picture between water, earth, and sky.



Press ▲ (Display ) until the grid appears.

5

Transferring, printing, tagging



CAUTION:

Before connecting any cables, install the software that was included with your camera. Failure to do so may cause the software to load incorrectly.

Installing the software

- 1 Close all open software applications before starting the installation.

NOTE: If running Windows OS and installing EasyShare software from the Kodak Web site, do not close the WinZip application. If prompted, allow EasyShare software to access the Internet.

- 2 Place the Kodak EasyShare software CD into the CD-ROM drive.

- 3 Load the software:

Windows OS—if the install window does not appear, choose Run from the Start menu and type **d:\setup.exe** where **d** is the drive letter that contains the CD.

Mac OS X—double-click the CD icon on the desktop, then click the Install icon.

- 4 Follow the on-screen instructions to install the software.

NOTE: When prompted, register your camera and software. Registering lets you sign up for information that keeps your system up-to-date. To register later, visit www.kodak.com/go/register.

- 5 If prompted, restart the computer.


For software help, click the Help button in EasyShare software.

Transferring pictures/videos

Using the USB cable

If you do not have an EasyShare dock, use a Kodak USB cable, model U-8 and the USB / A/V adapter.

Connect,
then
turn on
the
camera.

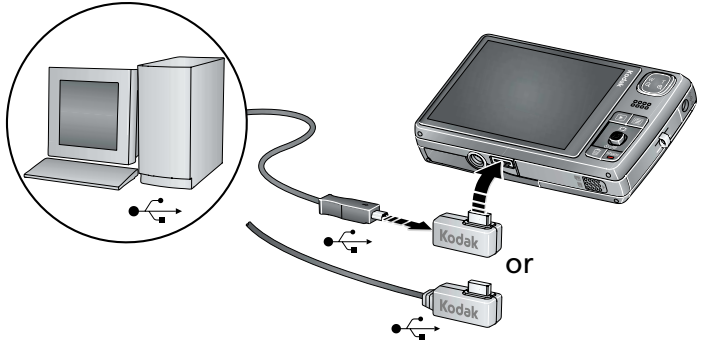

Using other options

You can also use these Kodak products to transfer your pictures/videos:

- Kodak EasyShare camera dock, Kodak EasyShare printer dock (see [page 39](#))
- Kodak card readers

Purchase accessories www.kodak.com/go/m1033accessories, m2008accessories

Learn more about connecting www.kodak.com/go/howto

Printing pictures

Direct printing with an EasyShare all-in-one printer

Your camera is compatible with PictBridge technology, so you can print directly to PictBridge enabled printers. You need a camera with fully charged battery, a PictBridge enabled printer, and a USB cable.

Connecting the camera to an EasyShare all-in-one printer

- 1 Turn off the camera and printer.
- 2 Connect the appropriate USB cable from the camera to the printer.

Printing from an EasyShare all-in-one printer

- 1 Turn on the printer. Turn on the camera.

The PictBridge logo is displayed, followed by the current picture and menu. (If no pictures are found, a message is displayed.) If the menu turns off, press any button to redisplay it.

- 2 Highlight a printing option, then press OK.

Current Picture—Press ◀/▶ to choose a picture. Choose the number of copies.

Tagged Pictures—If your printer is capable, print pictures that you tagged for printing and choose a print size.

Index Print—Print thumbnails of all pictures. (This option requires one or more sheets of paper.) If the printer is capable, choose a print size.

All Pictures—Print all pictures in internal memory, on a card, or in Favorites. Choose the number of copies.

Image Storage—Access Auto or Internal Memory.

NOTE: During direct printing, pictures are not permanently transferred or saved to the printer. To transfer pictures to your computer, see [page 36](#). In Favorites mode, the current favorite picture is displayed.

Purchase cables, accessories www.kodak.com/go/m1033accessories_m2008accessories

Dock compatibility www.kodak.com/go/dockcompatibility

Disconnecting the camera from an EasyShare all-in-one printer

- 1 Turn off the camera and printer.
- 2 Disconnect the USB cable from the camera and the printer.

Using a printer that is not PictBridge enabled

After you transfer pictures from the camera to your computer, you can print them from EasyShare software. For details, see Help in EasyShare software.

Ordering prints online

Kodak EasyShare Gallery (www.kodakgallery.com) is one of the many online print services offered in EasyShare software. You can easily:

- Upload your pictures.
- Edit, enhance, and add borders to your pictures.
- Store pictures, and share them with family and friends.
- Have prints, photo greeting cards, frames, and albums delivered to your door.

Printing from an optional SD or SDHC card

- Automatically print tagged pictures when you insert your card into a printer with an SD/SDHC card slot. See your printer user's guide for details.
- Make prints at an SD/SDHC card-capable Kodak picture maker/picture kiosk. (Contact a location prior to visiting. Visit www.kodak.com/go/picturemaker.)
- Take the card to your local photo retailer for professional printing.

Printing with an EasyShare print dock

Dock your camera to the Kodak EasyShare printer dock and print directly—with or without a computer. To see which EasyShare camera and printer docks are compatible with your camera, visit www.kodak.com/go/dockcompatibility.

Tagging your pictures

You can tag your pictures so they are easy to:

- Print
- Email
- Organize with a favorite tag
- Organize with a tag name that you create

Tagging pictures for printing

- 1 Press the Share button. Press ◀/▶ to locate a picture.
- 2 Press ▲/▼ to highlight Print, then press OK.
- 3 Press ▲/▼ to select the number of copies.

Optional: You can apply a print quantity to other pictures. Press ◀/▶ for previous/next. Keep the print quantity as is, or press ▲/▼ to change it. Repeat this step until the desired print quantity is applied to the pictures.

- 4 Press OK.

The Print icon  appears in the status area.

- Press the Share button to exit the menu.

Printing tagged pictures

When you transfer the tagged pictures to your computer, the EasyShare software print screen opens. For details on printing, see Help in EasyShare software.

Tagging pictures/videos for emailing

First, create a new email address: highlight Add Email, press OK, then use the on-camera keyboard.

- 1 Press the Share button. Press ◀/▶ to locate a picture, then press OK.
- 2 Press the Menu button, highlight Email, then press OK.
- 3 Press ▲/▼ to locate an email address, then press OK.

To tag other pictures/videos with the same address, scroll through them. When the picture you want is displayed, press OK.

To send the pictures/videos to more than one address, repeat step 3.

- To remove a selection, highlight a checked address and press OK. To remove all email selections, highlight Clear All, then press OK.
- To exit the menu, highlight Exit, then press OK.

The Email icon appears in the status area.

When you transfer the tagged pictures/videos to your computer, EasyShare software prompts you to send the pictures/videos. For details, see Help in EasyShare software.

Assigning the favorite tag to pictures/videos

To make your favorite pictures/videos easier to locate, you can assign the favorite tag.

- 1 Press the Share button, then locate a picture/video.
- 2 Highlight Favorite, then press OK.
 - To assign the tag to other pictures, press ◀/▶ to locate a picture, then press OK.
 - To view favorites on your camera, see [page 25](#).

The favorite tag appears with the picture. When you transfer the tagged pictures/videos to your computer, EasyShare software opens and categorizes your pictures/videos with the appropriate tag.

Assigning other tags to pictures/videos

First, create a new tag name: highlight Add Tag, press OK, then use the on-camera keyboard.

- 1 Press the Review button, then locate a picture/video.
- 2 Press the Menu button.
- 3 Highlight Tag, then press OK.
- 4 Highlight a tag name, then press OK.

To assign the tag to other pictures, press ◀/▶ to locate a picture, then press OK.

The tag name appears with the picture. A plus (+) means the picture has more than one tag assigned.

To remove a selection, highlight a tag name and press OK. To remove all tag selections, highlight Clear All, then press OK.

When you transfer the tagged pictures/videos to your computer, EasyShare software opens and categorizes your pictures/videos with the appropriate tag.

Assigning a tag to pictures/videos you take next

Use the Set Tag feature to assign a tag name to the next pictures/videos you take. First, create a new tag name: highlight Add Tag, press OK, then use the on-camera keyboard.

- 1 Press the Menu button.
- 2 Highlight the Setup tab.
- 3 Highlight Set Tag, then press OK.
- 4 Highlight a tag name, then press OK.
- 5 Press the Menu button to exit the menu.

The selected tag is displayed on the LCD.

When you transfer the tagged pictures/videos to your computer, EasyShare software opens and categorizes your pictures/videos with the appropriate tag.

6

Troubleshooting

Camera problems

Status	Solution
Camera does not turn on	<ul style="list-style-type: none">■ Make sure the battery is charged and installed correctly (see page 1).■ Turn the camera off, then on again.
Camera does not turn off	
Camera buttons and controls do not function	
In Review, a blue or black screen is displayed instead of a picture	<ul style="list-style-type: none">■ Transfer <i>all</i> pictures to the computer (see page 36).■ Take another picture.
Pictures remaining number does not decrease after taking a picture	<ul style="list-style-type: none">■ Continue taking pictures. The camera is operating normally. (The camera estimates the number of pictures remaining after each picture is taken, based on picture size and content.)
Flash does not fire	<ul style="list-style-type: none">■ Check the flash setting, and change as needed (see page 7). <p>NOTE: The flash does not fire in all modes.</p>
Memory card is almost or entirely full	<ul style="list-style-type: none">■ Transfer the pictures to the computer (see page 36).■ Delete pictures from the card or insert a new card.
The battery does not charge using USB charging	<ul style="list-style-type: none">■ See page 2 or visit www.kodak.com/go/USBcharging.■ Insert a new battery (see page 1).

Status	Solution
Battery life is short	<ul style="list-style-type: none"> ■ Make sure the correct battery type is installed (see page 54). ■ Wipe the contacts with a clean, dry cloth before inserting a battery in the camera. ■ Insert a new or charged battery (see page 1).
You cannot take a picture	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. ■ Depress the Shutter button all the way (see page 5). ■ Insert a new or charged battery (see page 1). ■ Memory is full. Transfer pictures to the computer (see page 36), delete pictures (see page 14), or insert another card.
Error message appears on LCD	<ul style="list-style-type: none"> ■ Turn the camera off, then on again. ■ Remove the memory card. ■ Turn off the camera. Remove the battery. Wipe the contacts with a clean, dry cloth. ■ Insert a new or charged battery. ■ If the problem still exists, get help (see page 48).
Memory card not recognized or camera freezes with card	<ul style="list-style-type: none"> ■ Card may be corrupted. Format the card in the camera (see page 33). ■ Use another memory card. Only SD or SDHC cards are supported.
Cannot find the desired picture/video	<ul style="list-style-type: none"> ■ To view pictures on a card or in internal memory, see page 13.

Computer/connectivity problems

Status	Solution
Pictures do not transfer to computer	<ul style="list-style-type: none"> ■ See Help in EasyShare software.
Slide Show does not run on an external video device	<ul style="list-style-type: none"> ■ Adjust the camera Video Out setting to NTSC or PAL (see page 33). ■ Make sure the external device settings are correct. (See the device's user's guide).

Status	Solution
Computer does not communicate with the camera	<ul style="list-style-type: none"> ■ Make sure the battery is charged and installed correctly (see page 1). ■ Turn on the camera. ■ Make sure the USB cable model U-8 is connected to the camera and the computer (see page 37). (If using an EasyShare dock, check all cable connections. Make sure the camera is seated on the dock.) ■ Make sure EasyShare software is installed (see page 36).

Picture quality problems

Status	Solution
Picture is not clear	<ul style="list-style-type: none"> ■ To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. ■ Clean the lens (see page 52). ■ Make sure the camera is not in Macro mode if you are more than 27.6 in. (70 cm) from your subject. ■ Place the camera on a flat, steady surface or use a tripod (especially in high-zoom settings or in low light).
Picture is too dark	<ul style="list-style-type: none"> ■ Reposition the camera for more available light. ■ Use Fill flash (see page 7) or change your position so light is not behind the subject. ■ Move so that the distance between you and the subject is within the effective flash range. (See camera specifications starting on page 50.) ■ To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture.

Status	Solution
Picture is too light	<ul style="list-style-type: none"> ■ Reposition the camera to reduce the amount of available light. ■ Turn the flash off (see page 7). ■ Move so that the distance between you and the subject is within the effective flash range. (See camera specifications starting on page 50.) ■ To automatically set exposure and focus, press the Shutter button halfway. When the framing marks turn green, press the Shutter button completely down to take the picture. ■ In Smart Capture modes, adjust the Exposure Compensation (see page 35).

Direct printing (PictBridge enabled printer) problems

Status	Solution
Cannot find the desired picture	<ul style="list-style-type: none"> ■ Make sure you're not in Favorites mode. ■ Use the Direct print menu to change the image storage location.
The Direct print menu interface turns off	<ul style="list-style-type: none"> ■ Press any camera button to redisplay the menu.
Cannot print pictures	<ul style="list-style-type: none"> ■ Make sure there is a connection between the camera and the printer (see page 38). ■ Make sure the printer and the camera have power.
Camera or printer display an error message	<ul style="list-style-type: none"> ■ Follow the prompts to resolve the issue.

7

Getting help

Camera

Email, write, or phone Kodak	www.kodak.com/go/contact
Get support for your product (FAQs, troubleshooting information, arrange for repairs, etc.)	www.kodak.com/go/m1033support www.kodak.com/go/m2008support
Purchase camera accessories (camera docks, printer docks, lenses, cards, etc.)	www.kodak.com/go/m1033accessories www.kodak.com/go/m2008accessories
Download the latest camera firmware and software	www.kodak.com/go/m1033downloads www.kodak.com/go/m2008downloads
See online demonstrations of your camera	www.kodak.com/go/howto

Software

Get information on EasyShare software	www.kodak.com/go/easysharesw (or see Help in EasyShare software)
Get help with the Windows operating system and working with digital pictures	www.kodak.com/go/pcbasics

Other

Get support for cameras, software, accessories, more	www.kodak.com/go/support
Get information on Kodak EasyShare printer docks	www.kodak.com/go/printerdocks
Get information on Kodak inkjet products	www.kodak.com/go/inkjet
Optimize your printer for truer, more vibrant colors	www.kodak.com/go/onetouch
Register your camera	www.kodak.com/go/register

NOTE: If you have questions concerning this product, you may speak with Kodak customer support.

Australia	1800 267 588	Netherlands	020 346 9372
Austria	0179 567 357	New Zealand	0800 880 120
Belgium	02 713 14 45	Norway	23 16 21 33
Brazil	0800 891 42 13	Philippines	1 800 1 888 9600
Canada	1 800 465 6325	Poland	00800 4411625
China	800 820 6027	Portugal	021 415 4125
Czech Republic	00 800 56325000	Russia	8 495 929 9166
Denmark	3 848 71 30	Singapore	800 6363 036
Finland	0800 1 17056	Slovakia	00 800 56325000
France	01 55 1740 77	Spain	91 749 76 53
Germany	069 5007 0035	Sweden	08 587 704 21
Greece	00800 44140775	Switzerland	044 838 53 51
Hong Kong	800 901 514	Taiwan	0800 096 868
Hungary	06 80 456 325	Thailand	001 800 631 0017
India	91 80 41374555 (toll free 000800 440 1227)	Turkey	00800 448827073
Ireland	01 407 3054	United Kingdom	0870 243 0270
Italy	02 696 33452	United States	1 800 235 6325
Japan	03 5540 9002	International Toll Line	+44 131 458 6714
Korea	080 708 5600	International Toll Fax	+44 131 458 6962

Camera specifications

CCD—1/2.3 in. CCD

ISO speed—Auto (in Smart Capture): 64–1600; Manual: 64, 100, 200, 400, 800, 1600, 3200, 6400 (ISO 6400 available for picture sizes of 3.1 MP or less.)

Taking lens—3X optical zoom; f/3.1 (@ wide)–f/5.7; 35 mm equivalent: 35–105 mm

Lens protection—Built-in

Digital zoom—5X continuous

Shutter speed—8–1/1448 seconds

LCD—3 in. (7.6 cm) LCD; 230K pixels; 30 fps

Image storage—Optional SD/SDHC Card  (The SD logo is a trademark of the SD Card Association.)

Internal storage capacity—32 MB internal memory (21.1 MB available for image storage. 1 MB equals one million bytes.)

Image file format—

Still: EXIF 2.21 (JPEG compression); file organization DCF

Video: QuickTime (video: CODEC MPEG-4; audio: G.711)

Color modes—High Color, Natural Color, Low Color, Black & White, Sepia

Sharpness modes—High, Normal, Low

White Balance—Auto, Daylight, Tungsten, Fluorescent, Open Shade

Capture modes—Smart Capture, Program, Scene, Video

Picture size—**Smart Capture mode**

10.0 MP (4:3): 3648 x 2736 pixels
 8.9 MP (3:2): 3648 x 2432 pixels
 7.5 MP (16:9): 3648 x 2064 pixels
 5.0 MP (4:3): 2592 x 1944 pixels
 4.5 MP (3:2): 2592 x 1728 pixels
 3.8 MP (16:9): 2592 x 1456 pixels
 3.1 MP (4:3): 2048 x 1536 pixels
 2.8 MP (3:2): 2048 x 1360 pixels
 2.4 MP (16:9): 2048 x 1152 pixels

All other modes

10 MP (4:3): 3648 x 2736 pixels
 8.9 MP (3:2): 3648 x 2432 pixels
 7.5 MP (16:9): 3648 x 2064 pixels
 5.0 MP (4:3): 2592 x 1944 pixels
 3.1 MP (4:3): 2048 x 1536 pixels
 2.2 MP (3:2): 1800 x 1200 pixels
 2.1 MP (16:9): 1920 x 1080 pixels
 1.2 MP (4:3): 1280 x 960 pixels

Video capture—

1280 x 720 (HD720p) HQ @ 30 fps
 1280 x 720 (HD720p) @ 30 fps
 640 x 480 HQ @ 30 fps
 640 x 480 @ 30 fps
 320 x 240 @ 30 fps

Focus system—TTL-AF (through-the-lens auto focus); Auto: Multi-Zone, Center-Zone. Working range:

23.6 in. (60 cm)—infinity @ wide, normal
 23.6 in. (60 cm)—infinity @ telephoto, normal
 2.6–27.6 in. (7–70 cm) @ wide, Macro mode
 15.7–27.6 in. (40–70 cm) @ telephoto, Macro mode
 32.8 ft (10 m)—infinity @ wide, Landscape mode
 32.8 ft (10 m)—infinity @ telephoto, Landscape mode

Exposure metering—TTL-AE; Multi-Pattern, Center-Weight, Center-Spot**Exposure compensation—**+/-2.0 EV with 1/3 EV step**Burst mode—**Maximum 3 pictures @ 1.7 fps; Auto Exposure, Auto Focus, Auto White Balance executed for first shot only

Electronic Flash—Auto flash; Auto, Fill, Red Eye, Off; Guide No. 6.6; working range: 2–13.8 ft (0.6–4.2 m) @ wide, ISO 400; 2–7.5 ft (0.6–2.3 m) @ telephoto, ISO 400

Communication with computer—USB 2.0 high speed (PIMA 15740 protocol); via USB cable model U-8; EasyShare camera dock, printer dock, or HDTV dock

Video output—NTSC or PAL

PictBridge support—Yes

Power—Kodak Li-Ion rechargeable digital camera battery KLIC-7004; 5V AC adapter; EasyShare camera dock, printer dock, or HDTV dock

Size—3.7 x 2.3 x 0.8 in. (93.7 x 57.8 x 19.8 mm) @ power off

Weight—4.4 oz (126 g) without card or battery

Operating temperature—32–104° F (0–40° C)

Tripod mount—1/4 inch

Care and maintenance

- If you suspect water has gotten inside the camera, remove the battery and card. Allow all components to air-dry for at least 24 hours before using the camera.
- Blow gently on the lens or LCD to remove dust and dirt. Wipe gently with a soft, lint-free cloth or an untreated lens-cleaning tissue. Do not use cleaning solutions unless designed specifically for camera lenses. Do not allow chemicals, such as suntan lotion, to contact painted surfaces.
- Service agreements may be available in your country. Contact a dealer of Kodak products for more information.
- For digital camera disposal or recycling information, contact your local authorities. In the US, visit the Electronics Industry Alliance Web site at www.eiae.org or www.kodak.com/go/m1033support, m2008support.

Upgrading your software and firmware

Download the latest versions of the software included on the Kodak EasyShare software CD and the camera firmware (the software that runs on the camera). Visit www.kodak.com/go/m1033downloads, [m2008downloads](http://www.kodak.com/go/m2008downloads).

Storage capacities

The LCD displays the approximate number of pictures (or minutes/seconds of video) remaining. For average SD card capacities, visit www.kodak.com/go/SDcapacities. Actual storage capacity varies depending on subject composition, card size, and other factors. You may be able to store more or fewer pictures and videos. Favorites take up additional space in internal memory.

Important safety instructions



CAUTION:

Do not disassemble this product; there are no user-serviceable parts inside. Refer servicing to qualified service personnel. Kodak AC adapters and battery chargers are intended for indoor use only. The use of controls, adjustments, or procedures other than those specified herein may result in exposure to shock and/or electrical or mechanical hazards. If the LCD breaks, do not touch the glass or liquid. Contact Kodak customer support.

- The use of an accessory that is not recommended by Kodak may cause fire, electric shock, or injury. For approved accessories, visit www.kodak.com/go/accessories.
- Use only a USB-certified computer equipped with a current-limiting motherboard. Contact your computer manufacturer if you have questions.
- If using this product in an airplane, observe all instructions of the airline.
- When removing the battery, allow it to cool; it may be hot.
- Follow all warnings and instructions supplied by the battery manufacturer.
- Use only batteries approved for this product to avoid risk of explosion.

- Keep batteries out of the reach of children.
- Do not allow batteries to touch metal objects, including coins. Otherwise, a battery may short circuit, discharge energy, become hot, or leak.
- Do not disassemble, install backward, or expose batteries to liquid, moisture, fire, or extreme temperature.
- Remove the battery when the product is stored for an extended period of time. In the unlikely event that battery fluid leaks inside the product, contact Kodak customer support.
- In the unlikely event that battery fluid leaks onto your skin, wash immediately with water and contact your local health provider. For additional health-related information, contact your local Kodak customer support.
- Dispose of batteries according to local and national regulations. Visit www.kodak.com/go/kes.
- Do not charge non-rechargeable batteries.

For more information on batteries, visit www.kodak.com/go/batterytypes.

Battery replacement, battery life

Kodak Li-Ion rechargeable digital camera battery KLIC-7004: 220 pictures per charge. Battery life per CIPA testing method. (Approx. number of pictures in Smart Capture mode, using 128 MB SD card.) Actual life may vary based on usage.

Extending battery life

- Use power-saving features (see [Using the Setup menu, page 32](#)).
- Dirt on the battery contacts can affect battery life. Wipe the contacts with a clean, dry cloth before loading the battery in the camera.
- Battery performance is reduced at temperatures below 41° F (5° C). When using your camera in cold weather, carry spare batteries and keep them warm. Do not discard cold batteries that do not work; when they return to room temperature, they may be usable.

Limited warranty

Kodak warrants Kodak consumer electronic products and accessories ("Products"), excluding batteries, to be free from malfunctions and defects in both materials and workmanship for one year from the date of purchase. Retain the original dated sales receipt. Proof of the date of purchase will be required with any request for warranty repair.

Limited warranty coverage

Warranty service is only available from within the country where the Products were originally purchased. You may be required to ship Products, at your expense, to the authorized service facility for the country where the Products were purchased. Kodak will repair or replace Products if they fail to function properly during the warranty period, subject to any conditions and/or limitations stated herein. Warranty service will include all labor as well as any necessary adjustments and/or replacement parts. If Kodak is unable to repair or replace a Product, Kodak will, at its option, refund the purchase price paid for the Product provided the Product has been returned to Kodak along with proof of the purchase price paid. Repair, replacement, or refund of the purchase price are the sole remedies under the warranty. If replacement parts are used in making repairs, those parts may be remanufactured, or may contain remanufactured materials. If it is necessary to replace the entire Product, it may be replaced with a remanufactured Product. Remanufactured Products, parts and materials are warranted for the remaining warranty term of the original Product, or 90 days after the date of repair or replacement, whichever is longer.

Limitations

This warranty does not cover circumstances beyond Kodak's control. This warranty does not apply when failure is due to shipping damage, accident, alteration, modification, unauthorized service, misuse, abuse, use with incompatible accessories or attachments (such as third party ink or ink tanks), failure to follow Kodak's operation, maintenance or repacking instructions, failure to use items supplied by Kodak (such as adapters and cables), or claims made after the duration of this warranty.

Kodak makes no other express or implied warranty for this product, and disclaims the implied warranties of merchantability and fitness for a particular purpose. In the event that the exclusion of any implied warranty is ineffective under the law, the duration of the implied warranty will be one year from the purchase date or such longer period as required by law. The option of repair, replacement, or refund is Kodak's only obligation. Kodak will not be responsible for any special, consequential or incidental damages resulting from the sale, purchase, or use of this product regardless of the cause. Liability for any special, consequential or incidental damages (including but not limited to loss of revenue or profit, downtime costs, loss of the use of the equipment, cost of substitute equipment, facilities or services, or claims of your customers for such damages resulting from the purchase use or failure of the Product), regardless of cause or for breach of any written or implied warranty is expressly disclaimed.

Your rights

Some states or jurisdictions do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states or jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights which vary from state to state or by jurisdiction.

Outside the United States and Canada

In countries other than the United States and Canada, the terms and conditions of this warranty may be different. Unless a specific Kodak warranty is communicated to the purchaser in writing by a Kodak company, no warranty or liability exists beyond any minimum requirements imposed by law, even though defect, damage, or loss may be by negligence or other act.

Regulatory compliance

FCC compliance and advisory



Kodak EasyShare M1033/M2008 digital camera

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed or used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) reorient or relocate the receiving antenna; 2) increase the separation between the equipment and the receiver; 3) connect the equipment to an outlet on a circuit different from that to which the receiver is connected; 4) consult the dealer or an experienced radio/TV technician for additional suggestions. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Where shielded interface cables have been provided with the product or specified additional components or accessories elsewhere defined to be used with the installation of the product, they must be used in order to ensure compliance with FCC regulation.

Waste Electrical and Electronic Equipment labeling



In Europe: For human/environmental protection, it is your responsibility to dispose of this equipment at a collection facility established for this purpose (separate from municipal waste). For more information, contact your retailer, collection facility, or appropriate local authorities; or visit www.kodak.com/go/recycle. (Product weight: 126 g.)

VCCI Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

Korean Class B ITE

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Australian C-Tick



N137

Russian GOST-R



Eastman Kodak Company
Rochester, NY 14650

Фотокамера изготовлена в Китае, остальные элементы -
A10-40 в соответствии с маркировкой.

China RoHS

环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限(以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○
锂电池	×	○	○	○	○	○
USB A/V 连接器	×	○	○	○	○	○
交流变压器	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。
 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

环保使用期限 (EPUP)

在中国大陆, 该值表示产品中存在的任何危险物质不得释放, 以免危及人身健康、财产或环境的时间期限(以年计)。该值根据操作说明中所规定的产品正常使用而定。

有毒有害物质或元素名称及含量标识表						
部件名称	有毒有害物质或元素					
	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
数码相机电路板元件	×	○	○	○	○	○
锂电池	×	○	○	○	○	○
USB A/V 连接器	×	○	○	○	○	○
交流变压器	×	○	○	○	○	○
存储卡	×	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T 11363-2006规定的限量要求以下。
 ×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出SJ/T 11363-2006规定的限量要求。



USB 数据线

MPEG-4

Use of this product in any manner that complies with the MPEG-4 visual standard is prohibited, except for use by a consumer engaging in personal and non-commercial activities.

Canadian DOC statement

DOC Class B Compliance—This Class B digital apparatus complies with Canadian ICES-003.

Observation des normes-Classe B—Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

FCC and Industry Canada

This device complies with Industry Canada RSS-210 and FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC et Industrie Canada

Cet appareil est conforme à la norme RSS-210 d'Industrie Canada et aux réglementations de la FCC. Son utilisation est soumise aux deux conditions suivantes : (1) cet appareil ne doit pas provoquer d'interférences nuisibles, et (2) cet appareil doit supporter les interférences reçues, y compris celles susceptibles de nuire à son bon fonctionnement.

Index

A

- A/V out, 24
- about
 - picture, video, 16
- accessories, 37
 - battery, 54
 - buying, 48
 - SD/SDHC card, 4
- AF assist light, i
- auto, 8
 - enhancement, 18
 - focus control, 29, 31
 - focus framing marks, 6
 - power off, 32
- auto focus (AF)
 - zone, 30

B

- backlight, 10
- battery
 - charging, 2, 3
 - expected life, 54
 - extending life, 54
 - loading, 1
 - types, 54
- beach, 9
- blur reduction, 9
- blur warning, 30
- bookmarks, 21
- burst, using, 11
- button
 - delete, 5

- drive, 11
- favorites mode, i
- macro/landscape, ii
- OK, ii
- power, i
- review, ii
- Share, ii
- telephoto/zoom, 6
- video mode, i

C

- cable
 - audio/video, 24
 - USB, 37
- camera screen
 - getting help, 12
- camera sounds, 32
- Canadian compliance, 60
- care and maintenance, 52
- charging the battery, 2, 3
- children, 10
- clock, setting, 4
- color mode, 28
- compatibility
 - docks, 39
- computer
 - connecting camera, 36
 - transfer to, 36
- connector, USB / A/V, 24, 37
- copy pictures
 - card to memory, 26
 - memory to card, 26

to computer via USB cable, 36
cropping pictures, 17
customer support, 49
customize camera, 32

D

date setting, 4
date stamp, 32
deleting
 during quickview, 5
 from internal memory, 14
 from SD/SDHC card, 14
 protecting pictures, videos, 14
digital zoom, 6
 setting, 32
displaying slide show, 22
disposal, recycling, 52
dock
 compatibility, 39
downloading pictures, 36

E

EasyShare software, 36
edit videos, 19
emailing pictures, videos, 41
expected battery life, 54
exposure
 compensation, 35
 long time, 28, 31
 metering, 30
external video device
 viewing pictures, videos, 24

F

favorites

 tagging, 42
favorites mode button, i
FCC compliance, 57
filter pictures, videos, 25
fireworks, 9
firmware, upgrading, 53
flash, using, 7
flower, 9, 10
focus
 framing marks, 6
format, 33
framing grid, 35
framing marks, 5

G

grid, framing, 35
guidelines, battery, 54

H

help
 camera help, 12
 Web links, 48
high ISO, 10
histogram, 35

I

icons, modes, 8
Image stabilizer, 31
image storage, 33
information
 about pictures, videos, 16
installing
 battery, 1
 SD/SDHC card, 4
 software, 36

internal memory
 storage capacity, 53
ISO speed, 30

K

Kodak EasyShare software
 installing, 36
 upgrading, 53
Kodak Perfect Touch technology, 18
Kodak Web sites, 48

L

language, 33
LCD, ii
 brightness, 32
 dimmer, 32
 reviewing pictures, 13
 reviewing videos, 13
lens, i
 cleaning lens, 52
loading
 battery, 1
 SD/SDHC card, 4
 software, 36
long time exposure, 28, 31

M

Mac OS, installing software, 36
macro/landscape button, ii
magnify a picture, 13
maintenance, camera, 52
make picture from video, 19
manner/museum, 9
memory
 inserting card, 4

 storage capacities, 53
menu settings, 27
microphone, i
modes, 8
 auto, 8
 backlight, 10
 beach, 9
 blur reduction, 9
 children, 10
 fireworks, 9
 flower, 9, 10
 high ISO, 10
 manner/museum, 9
 night landscape, 9
 night portrait, 9
 scene (SCN), 9
 self-portrait, 10
 snow, 9
 sport, 9
 text, 9
modes, capture
 smart capture, 8
multimedia slide show, 23
multiple selections, 26
multi-up, 25

N

night landscape, 9
night portrait, 9

O

OK button, ii
online prints, ordering, 39
optical zoom, 6

orientation sensor, 33

P

panoramic pictures, 34

Perfect Touch technology, 18

PictBridge enabled printer, 38

picture size, 27, 28

pictures

copying, 26

cropping, 17

emailing tagged, 41

Kodak Perfect Touch, 18

printing, 39

printing tagged, 40

protecting, 14

review icons, 15

reviewing, 13

storage capacity, 53

tagging, 40

taking, modes, 8

transfer via USB cable, 36

pictures/video

deleting, 14

playing a video, 13

power

camera, 3

power button, i

pre-tagging, 43

printing

from a card, 39

from computer, 39

optimizing printer, 48

order online, 39

PictBridge, 38

tagged pictures, 39

protecting pictures, videos, 14

Q

quickview, using, 5

R

recycling, disposal, 52

regulatory information, 57

repair, 48

review button, ii

reviewing pictures/video

as you take them, 5

deleting, 14

LCD, 13

protecting, 14

slide show, 22

running slide show, 22

S

safety, 53

scene modes (SCN), 9

SD/SDHC card

inserting, 4

printing from, 39

storage capacities, 53

search pictures, videos, 25

select multiple pictures/videos, 26

self-portrait, 10

self-timer, 11

light, i

service and support telephone

numbers, 49

setting

AF zone, 30

- auto power off, 32
- auto-focus, 29, 31
- blur warning, 30
- camera sounds, 32
- color mode, 28
- date and time, 4
- date stamp, 32
- digital zoom, 32
- exposure metering, 30
- image storage, 33
- ISO, 30
- language, 33
- LCD brightness, 32
- LCD dimmer, 32
- long time exposure, 28, 31
- orientation sensor, 33
- picture size, 27, 28
- picture-taking mode, 8
- self-timer, 11
- sharpness, 30
- sound volume, 32
- video out, 33
- video size, 31
- white balance, 29
- setting up the camera, 1
- setup menu, 32
- Share button, ii
- sharpness, 30
- shutter
 - problems, 45
 - self-timer delay, 11
- slide show
 - continuous loop, 22, 23
 - running, 22

- smart capture, 8
- snow, 9
- software
 - installing, 36
 - upgrading, 53
- sound volume, 32
- sounds, 32
- specifications, camera, 50
- sport, 9
- storage capacity, 53
- strap, 1
- support, technical, 49

T

- tagging
 - creating tags, 42
 - favorites, 42
 - for email, 41
 - for print, 40
 - pre-tagging, 43
- taking pictures, videos, 5
- telephone support, 49
- television, slide show, 24
- text, 9
- time, setting, 4
- timer, shutter delay, 11
- tips
 - battery guidelines, 54
 - care & maintenance, 52
- transfer, via USB cable, 36
- trash can, deleting, 5
- trimming a video, 19
- troubleshooting, 44
- turning camera on and off, 3

U

undelete, undo, 14
upgrading software, firmware, 53
URLs, Kodak Web sites, 48
USB
 transferring pictures, 36
USB, A/V out, ii

V

VCCI compliance, 58
video
 action print, 20
 copying, 26
 edit, 19
 emailing tagged, 41
 light, i
 mode button, i
 out, 33
 playback, 13
 protecting, 14
 review icons, 15
 size, 31
 storage capacities, 53
 transfer to computer, 36
 viewing, 13
video bookmarks, 21
viewing
 by date, tag, 25
 by multi-up, 25
 picture, after taking, 5, 13
 picture/video information, 16
volume, 32

W

warranty, 55
white balance, 29
Windows OS, installing software, 36

Z

zoom
 digital, 6
 optical, 6