

DIGITAL CAMERA


**OLYMPUS**<sup>®</sup>

# FE-280/X-820/ C-520

## Instruction Manual

### Quick Start Guide

Get started using your camera right away.

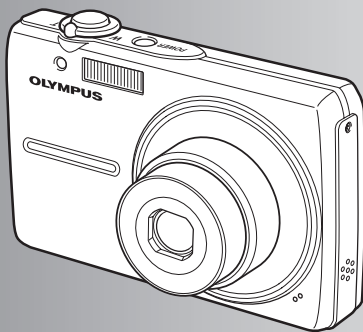

Button operations

Menu operations

Printing pictures

Using OLYMPUS Master

Getting to know your camera better

Appendix

- Thank you for purchasing an Olympus digital camera. Before you start to use your new camera, please read these instructions carefully to enjoy optimum performance and a longer service life. Keep this manual in a safe place for future reference.
- We recommend that you take test shots to get accustomed to your camera before taking important photographs.
- In the interest of continually improving products, Olympus reserves the right to update or modify information contained in this manual.

## Quick Start Guide P. 3

---

### Button operations P. 11

---

Test out the functions of the camera buttons by following along with the illustrations.

### Menu operations P. 17

---

Learn about the menus that control the functions and settings for basic operation.

### Printing pictures P. 29

---

Learn how to print pictures you have taken.

### Using OLYMPUS Master P. 35

---

Learn how to transfer and save pictures to a computer.

### Getting to know your camera better P. 42

---

Find out more about camera operations and how to take better pictures.

### Appendix P. 50

---

Read about convenient functions and safety precautions on how to use your camera more effectively.


## Gather these items (box contents)




Digital Camera



Strap




Lithium Ion Battery  
(LI-42B)

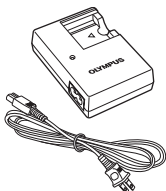

Battery Charger  
(LI-40C)



USB Cable




AV Cable



OLYMPUS Master 2  
CD-ROM

Items not shown: Instruction Manual (this manual) and the Warranty Card. Contents may vary depending on purchase location.


### Attach the strap

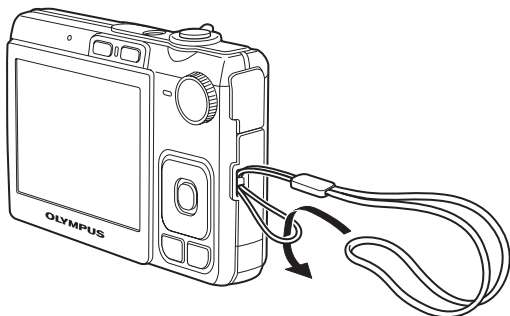

- Pull the strap tight so that it does not come loose.



# Prepare the camera

## a. Charge the battery.

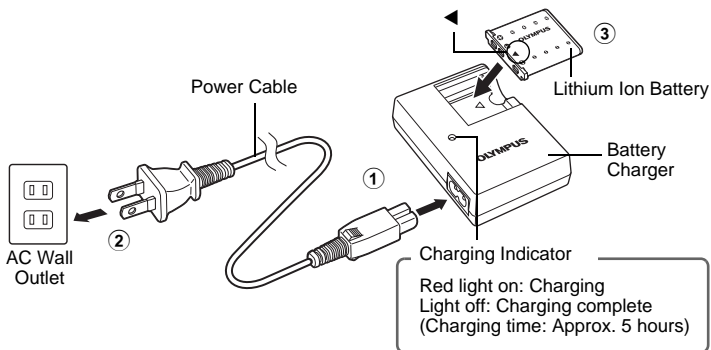


- Battery comes partially charged.

## b. Insert the battery and an xD-Picture Card (optional).

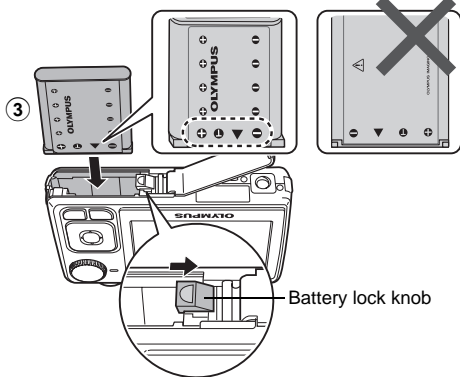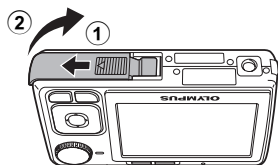


- Insert the battery by putting in the ▼ marked side first, with the ◯ marks toward the battery lock knob.  
If you insert the battery incorrectly, you will not be able to remove it. Do not use force. Contact authorized distributors/service centers.  
Damage to the battery exterior (scratches, etc.) may produce heat or an explosion.

- To remove the battery, press the battery lock knob in the direction of the arrow.

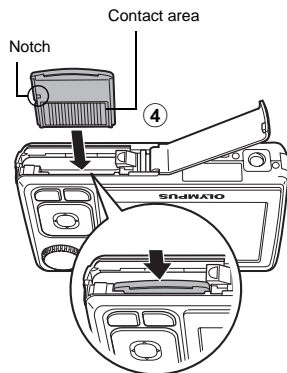

- Orient the card as shown, and insert the card straight in until it clicks into place.

- To remove the card, push the card all the way in, release slowly, grasp the card, then remove.

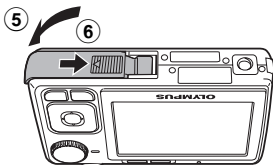


- With this camera, you can take pictures without inserting the optional xD-Picture Card™ (hereinafter referred to as “the card”). If you shoot pictures with this camera without using an xD-Picture Card, the pictures will be recorded in the internal memory. For details on the card, please refer to “The card” (P. 53).

## Turn the camera on

This explains how to turn on the camera in shooting mode.


### a. Set the mode dial to **AUTO**.

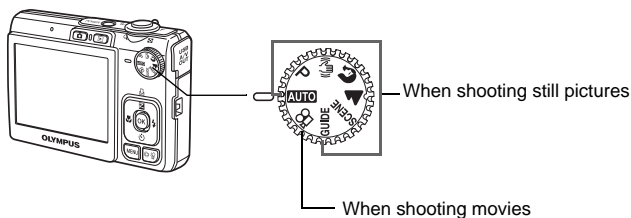

### Still picture shooting modes

|              |  |
|--------------|--|
| <b>AUTO</b>  | The camera determines the optimum settings for the shooting conditions automatically.              |
| <b>P</b>     | The camera automatically sets the optimum aperture value and shutter speed.                        |
|              | This function reduces the blur incurred by a moving subject, or camera shake when taking pictures. |
|              | Suitable for taking pictures of people.  |
|              | Suitable for taking pictures of a landscape.   |
| <b>SCENE</b> | Select from 15 available scene modes according to the shooting conditions.                         |
| <b>GUIDE</b> | Use the shooting guide displayed on the screen to shoot pictures according to the situation.       |


### b. Press the **POWER** button.

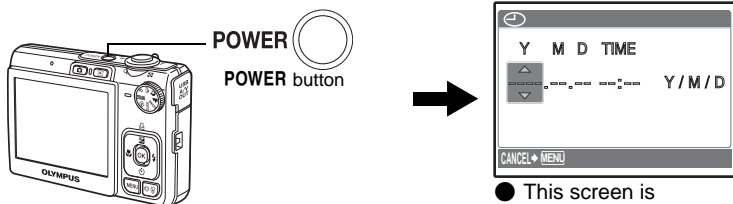

- To turn off the camera, press the **POWER** button once again.


### Hint

The directions of the arrow pad is indicated with  $\Delta \nabla \leftarrow \rightarrow$  in the supplied instruction manual.

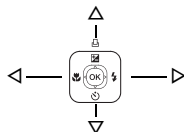


# Set the date and time

## About the date and time setting screen

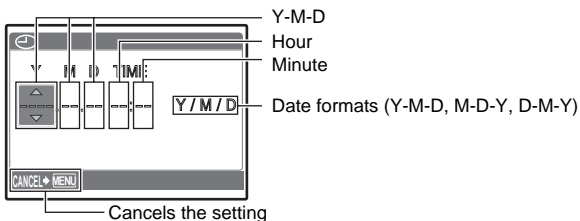


### a. Press the $\Delta$ and $\nabla$ buttons to select [Y].


- The first two digits of the year are fixed.

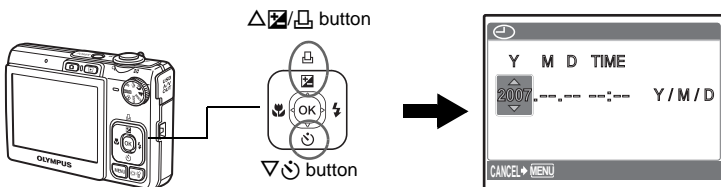

### b. Press the $\triangleright$ button.

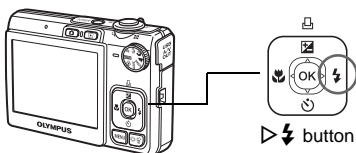


### c. Press the $\Delta$ and $\nabla$ buttons to select [M].

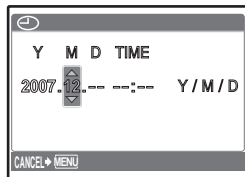


## Set the date and time

- d. Press the button.
- e. Press the / and buttons to select [D].

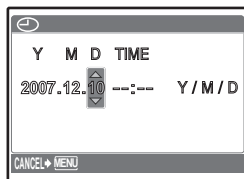


- f. Press the button.
- g. Press the / and buttons to select the hours and minutes.


- The time is displayed in the 24-hour format.

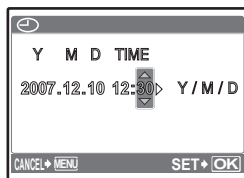

- h. Press the button.
- i. Press the / and buttons to select [Y/M/D].

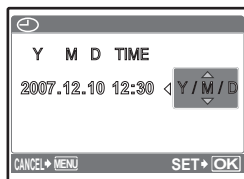


- j. After all settings have been set, press .
- For a more accurate setting, press when the time signal hits 00 seconds.

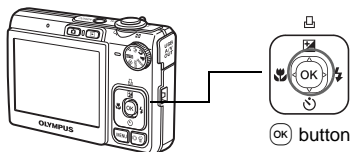




# Take a picture

## a. Hold the camera.

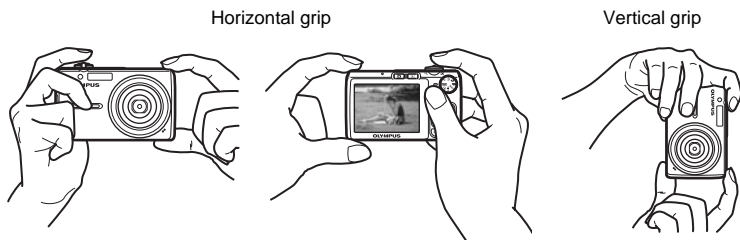

## b. Focus.

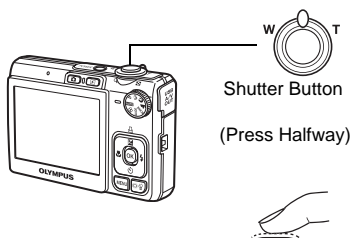


Place this mark over your subject.



The number of pictures that can be taken is displayed.

When the focus and exposure are locked, the green lamp lights up, and the shutter speed and aperture value are displayed.

## c. Shoot.

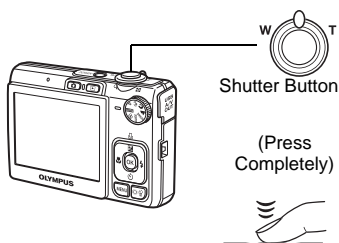


The card access lamp blinks.





## Review your pictures

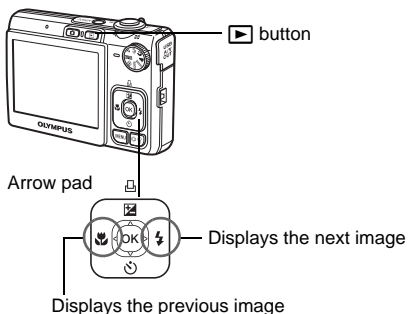

- a. Press the  button.





### Erase pictures

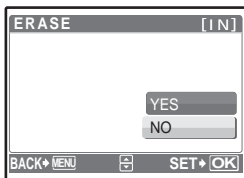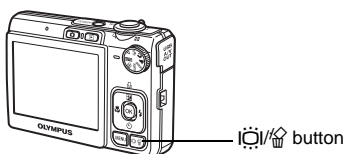
- a. Press the  and  buttons to display the picture you want to erase.
- b. Press the  button.



- c. Press the  button, select [YES], and press .

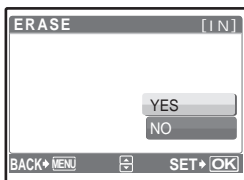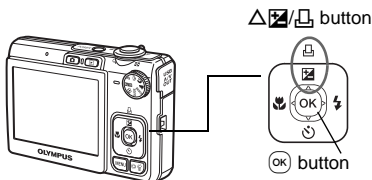

# Button operations

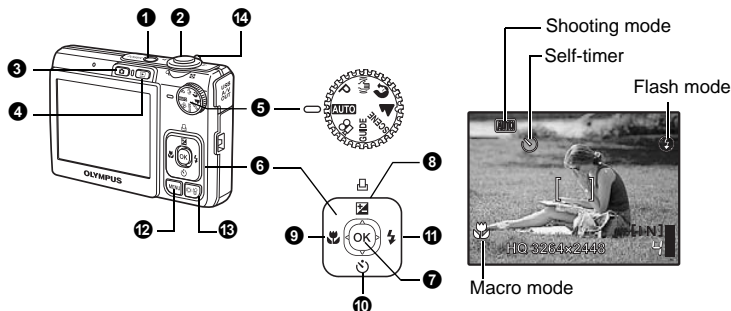

## 1 POWER button



### Turning the camera on and off


- Power on:
- Camera turns on in shooting mode.
  - Lens extends
  - Monitor turns on

## 2 Shutter button

### Shooting pictures/movies

#### Shooting still pictures


Set the mode dial to a setting other than , and lightly press the shutter button (halfway). When the focus and exposure are locked, the green lamp lights up (focus lock), and the shutter speed and aperture value are displayed (only when the mode dial is set to **AUTO**, **P**, ). Now press the shutter button all the way (completely) to shoot a picture.

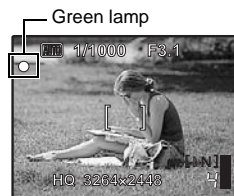




#### Locking the focus and then composing the shot (focus lock)


Compose your picture with the focus locked, and then completely press the shutter button to shoot a picture.

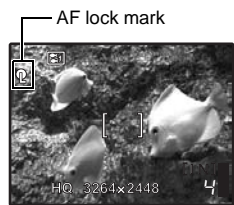- When the green lamp blinks, the focus is not adjusted properly. Try locking the focus again.




#### AF Lock - Locking the focus position

When the scene is , you can lock the focus position by pressing . Press  again to cancel the AF lock.

 "SCENE Shooting pictures by selecting a scene mode according to the situation" (P. 12)

- AF lock is automatically canceled after one shot.

#### Recording movies




Set the mode dial to , and lightly press the shutter button to lock the focus, and then press the shutter button completely to start recording. Press the shutter button again to stop recording.

**3**  **button (Shooting)**

Selecting shooting mode/Turning the camera on

Shooting mode is selected.



This function is used to set the camera to turn on in shooting mode when  is pressed with the camera off.




 "Turning on the camera with the  or  button" (P. 27)

**4**  **button (Playback)**

Selecting playback mode/Turning the camera on

The last picture taken is displayed.

- Press the arrow pad to view other pictures.
  - Use the zoom lever to switch between close-up playback and index display.
  - Press  to hide the information displayed on the screen for 3 seconds during single-frame playback.
- This function is used to set the camera to turn on in playback mode when  is pressed with the camera off.

 "Turning on the camera with the  or  button" (P. 27)

 Movie playback "MOVIE PLAY Playing back movies" (P. 22)

**5** **Mode dial**

Switching shooting modes

Set the mode dial to the desired shooting mode.

**AUTO** Shooting pictures with automatic settings


The camera determines the optimum settings for shooting pictures.

[CAMERA MENU] settings such as [WB], [ISO] cannot be changed.



**P** Set the optimum aperture value and shutter speed

The camera automatically sets the optimum aperture value and shutter speed for the brightness of the subject.

[CAMERA MENU] settings such as [WB], [ISO] can be changed.

 Shooting pictures using digital image stabilization


This function reduces the blur incurred by a moving subject, or camera shake when taking pictures.















  Shooting pictures according to the situation


Use PORTRAIT and LANDSCAPE to shoot pictures with the optimal settings.

**SCENE** Shooting pictures by selecting a scene mode according to the situation

Select from 15 available scene modes, according to the shooting conditions.

Press  to set.

 NIGHT+PORTRAIT /  SPORT /  INDOOR /  CANDLE /  SELF PORTRAIT  
 /  SUNSET /  FIREWORKS /  BEHIND GLASS /  CUISINE  
 /  DOCUMENTS /  AUCTION /  SMILE SHOT /  UNDER WATER WIDE<sup>1</sup>  
 /  UNDER WATER WIDE<sup>2</sup><sup>1</sup><sup>2</sup><sup>3</sup> /  UNDER WATER MACRO<sup>1</sup>

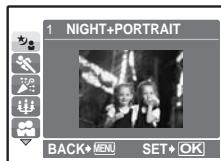

- The scene selection screen displays sample images and the shooting mode to best suit the situation.
- To switch to a different scene mode after a scene mode has been selected, press **MENU** to select [SCENE] from the top menu and display the scene selection screen.
- By switching to another scene, most settings will be changed to the default settings of each scene.

<sup>1</sup> Use an underwater housing in this setting.


<sup>2</sup> The focus distance is fixed at approximately 5 m (16.4ft.).

<sup>3</sup> The image that has just been taken does not show up on the monitor while recording.

## SMILE SHOT

- When the camera detects a smiling face in shooting standby mode, 3 frames are taken in high speed sequential shooting mode automatically. You can also shoot pictures manually by pressing the shutter button in this mode.
- There may be cases in which the camera cannot detect a smiling face.
- When [SMILE SHOT] is selected, the self-timer lamp lights. Shooting is not available while the self-timer lamp is blinking.


### GUIDE Follow the shooting guide for setting

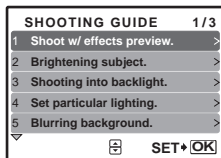

Follow the shooting guide displayed on the screen to set the target items.

- Press **MENU** to display the shooting guide again.
- To change the setting without using the shooting guide, set the shooting mode to another one.
- The content set using the shooting guide will change to the default setting by pressing **MENU** or changing the mode using the mode dial.

### Shoot pictures by comparing previews of different effects

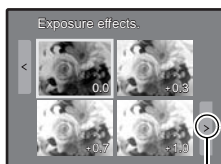

Select one of the [1 Shoot w/ effects preview.] options from the [SHOOTING GUIDE] menu to preview a live, multi-frame window on the monitor showing four different levels of the selected shooting effect. You can use the four preview frames to compare and select your desired setting/effect.



- Use the arrow pad to select the frame with the settings you want, and press **OK**. The camera automatically switches to shooting mode and allows you to shoot with the selected effect.


When [Exposure effects.] is selected

Use  $\triangleleft \triangleright$  to change the display.

## Recording movies

Audio is recorded with the movie.

- During audio recording, only the digital zoom can be used. To record the movie with the optical zoom, set  to [OFF].
-  "🎧 (movies) Recording movies with or without sound" (P. 21)

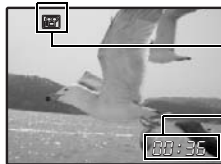

This lights red during movie recording.


The remaining recording time is displayed. When the remaining recording time reaches 0, recording stops.






## 6 Arrow pad ( $\triangle \nabla \triangleleft \triangleright$ )

Use the arrow pad to select scenes, playback picture, and the items on the menus.

## 7 button



This button is used to confirm your selection.

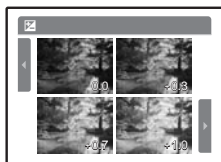
**8**   **button****Changing picture brightness (Exposure compensation)/Printing pictures****Shooting mode: Changing picture brightness**

Press   in shooting mode, select a picture in your desired brightness with  , and press .



- Adjustable from -2.0 EV to +2.0 EV



**Playback mode: Printing pictures**

Display a picture to print out in playback mode, connect the camera to the printer, and then press   to print the picture.



 "Direct printing (PictBridge)" (P. 29)


**9**  **button****Shooting pictures close to the subject**


Press  in shooting mode to select the macro mode. Press  for setting.

|   |             |  |
|---|-------------|--|
| OFF   | Macro off   | Cancels macro mode.  |
|  | Macro on    | This mode lets you shoot from as close as 10 cm/3.9 in. (when the zoom is set for the zoom-out angle) and as close as 60 cm/23.6 in. (when the zoom is set for the zoom-in angle) to your subject. |
|  | Super macro | This mode lets you shoot from as close as 5 cm/2.0 in. to your subject.<br>The zoom position is fixed automatically and cannot be changed.   |



**10**  **button****Self-timer shooting**




Press  in shooting mode to select on or off for the self-timer.  
Press  for setting.

|   |                |                        |
|---|----------------|------------------------|
| OFF   | Self-timer off | Cancel the self-timer. |
|  | Self-timer on  | Set the self-timer.    |

- After setting the self-timer, press the shutter button completely. Then the self-timer lamp lights for approximately 10 seconds, blinks for approximately 2 seconds, and the shutter is released.
- To cancel the self-timer, press .
- Self-timer shooting is automatically canceled after one shot.

**11**  **button****Flash shooting**

Press  in shooting mode to select the flash mode.  
Press  for setting.

|   |            |   |
|---|------------|---|
| AUTO  | Flash auto | The flash fires automatically in low light or backlight conditions. |
|  | Redeye     | This emits pre-flashes for red-eye reduction.                       |
|  | Fill-in    | The flash fires regardless of the available light.                  |
|  | Flash off  | The flash does not fire.  |


**12** **MENU button****Displaying the top menu**

Displays the top menu.

### 13 button

Increasing the brightness of the monitor (Backlight boost)/  
Erasing pictures


#### Increasing the brightness of the monitor

Press  in shooting mode. The monitor becomes brighter. If there is no operation for 10 seconds, the previous brightness resumes.

#### Erasing pictures

In playback mode, select the picture you want to erase, and press .

- Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

 "Protecting pictures" (P. 25)

### 14 Zoom lever


Zooming while shooting/Close-up playback

#### Shooting mode: Zooming in on your subject

Optical zoom: 3x

Digital zoom: 4x (optical zoom × digital zoom: Max. 12x)

**Zoom out:**  
Turn the zoom lever to the W-side.

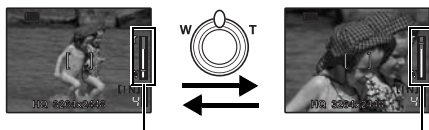

**Zoom in:**  
Turn the zoom lever to the T-side.


Zoom bar

The white area is the optical zoom area. The red area is the digital zoom area. When the slider enters the red area, the digital zoom activates and the image is further enlarged.






# Menu operations

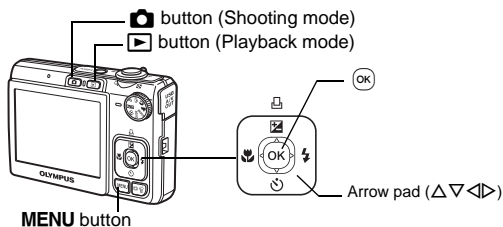

## About the menus

Press **MENU** to display the top menu on the monitor.


- The contents displayed on the top menu differ according to the mode.

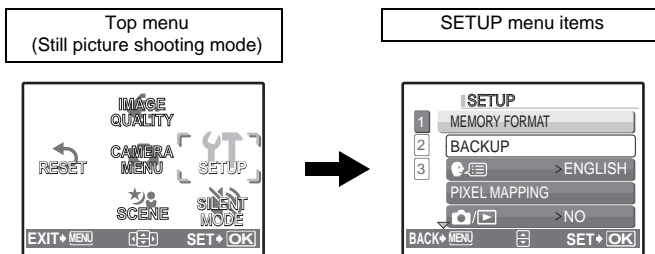

- Select [CAMERA MENU], [PLAYBACK MENU], [EDIT], [ERASE], or [SETUP], and press **OK**. The screen for selecting the menu item is then displayed.
- When the mode dial is set to **GUIDE** and the settings are made by following the shooting guide, press **MENU** to display the shooting guide screen.

## Operation guide

During menu operations, the buttons and their respective functions are displayed at the bottom of the screen. Follow these guides to navigate the menus.

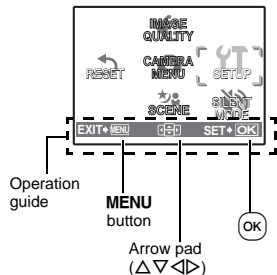

**BACK** **MENU** : Moves back one menu.

**EXIT** **MENU** : Exits the menu.


**Δ ∇ ◀ ▶** : Press the arrow pad (Δ ∇ ◀ ▶) to select an item.

**SET** **OK** : Sets the selected item.


## Using the menus

This explains how to use the menu with the [M]] (warning sound) setting as an example.

- 1 Set the mode dial to a setting other than GUIDE.
- 2 Press MENU to display the top menu. Press  $\triangleright$  to select [SETUP], and press  $\odot$ .
  - [M]] is on a menu in [SETUP].

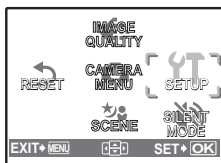


- 3 Press  $\Delta$ / $\nabla$  to select [M]], and press  $\odot$ .
  - Unavailable settings cannot be selected.
  - Press  $\triangleleft$  on this screen to move the cursor to the page display. Press  $\Delta$ / $\nabla$  to change the page. To return to the item selection screen, press  $\triangleright$  or  $\odot$ .

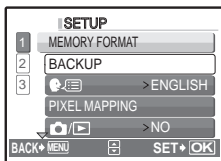


Page display: \_\_\_\_\_  
This mark is displayed when there are more menu items on the next page.


The selected item is displayed in a different color. \_\_\_\_\_

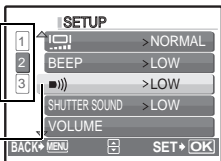

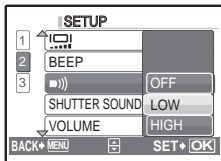


- 4 Press  $\Delta$ / $\nabla$  to select [OFF], [LOW] or [HIGH], and press  $\odot$ .
  - The menu item is set and the previous menu is displayed. Press MENU repeatedly to exit the menu.
  - To cancel any changes and continue operating the menus, press MENU without pressing  $\odot$ .

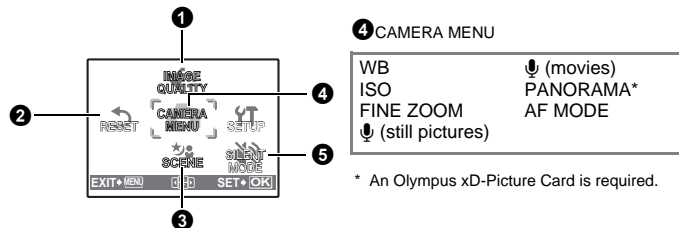

## Shooting mode menu



- Some functions are not available according to the selected mode.  
 "Functions available in shooting modes and scenes" (P. 49)  
 "SETUP menus" (P. 26)
- The factory default settings are displayed in gray (  ).

## 1 IMAGE QUALITY

### Changing the image quality

#### Still picture image quality and their applications

| Image quality/Image size | Compression          | Application  |
|--------------------------|----------------------|--|
| SHQ 3264 × 2448          | Low compression      | <ul style="list-style-type: none"> <li>• This is useful for printing large images on full-size paper.</li> </ul>   |
| HQ 3264 × 2448           | Standard compression | <ul style="list-style-type: none"> <li>• This is useful for performing computer image processing, such as contrast adjustment and red-eye correction.</li> </ul>   |
| SQ1 2048 × 1536          | Standard compression | <ul style="list-style-type: none"> <li>• This is useful for A4 (11.7×8.5 in./) postcard-size prints.</li> <li>• This is useful for computer editing such as rotating or adding text to a picture.</li> </ul>               |
| SQ2 640 × 480            | Standard compression | <ul style="list-style-type: none"> <li>• This is useful for sending as e-mail attachments.</li> </ul>  |
| 16:9 1920 × 1080         | Standard compression | <ul style="list-style-type: none"> <li>• This is useful for expressing the broadness of a subject such as landscapes and for viewing pictures on a wide-screen television.</li> <li>• [PANORAMA] cannot be set.</li> </ul> |

#### Movie image quality

| Image quality/Image size |
|--------------------------|
| SHQ 640 × 480            |
| HQ 320 × 240             |
| SQ 160 × 120             |






## 2 RESET

### Changing the shooting functions back to default settings

NO / YES

Restore shooting functions back to default settings.

#### Functions for returning the settings to the original when the reset function is executed

| Function  | Factory default setting  | Ref. Page |
|---|--|-----------|
| SCENE   |  NIGHT+PORTRAIT | P. 12     |
|  | 0.0  | P. 14     |
|  | OFF  | P. 14     |
|  | OFF  | P. 14     |
|  | AUTO   | P. 14     |
| IMAGE QUALITY   | HQ   | P. 19     |
| WB  | AUTO   | P. 20     |
| ISO   | AUTO   | P. 20     |
| FINE ZOOM   | OFF  | P. 20     |

| Function         | Factory default setting | Ref. Page |
|------------------|-------------------------|-----------|
| (still pictures) | OFF                     | P. 20     |
| (movies)         | ON                      | P. 21     |
| AF MODE          | iESP                    | P. 21     |

### 3 SCENE (Scene) Shooting pictures by selecting a scene according to the situation

The scene selection screen displays sample images and the shooting mode to best suit the situation. This can be set only when the mode dial is set to **SCENE**.

- By switching to another scene, most settings will be changed to the default settings of each scene.
- "SCENE Shooting pictures by selecting a scene mode according to the situation" (P. 12)

### 4 CAMERA MENU

#### WB ..... Adjusting the color of a picture

|      |                    |  |
|------|--------------------|--|
| AUTO |                    | The white balance is adjusted automatically for natural color, regardless of the light source.         |
|      | Sunny day          | For shooting under a clear sky.  |
|      | Cloudy day         | For shooting under a cloudy sky.   |
|      | Tungsten light     | For shooting under tungsten lighting.  |
|      | Fluorescent lamp 1 | For shooting under daylight fluorescent lighting. (This type of lamp is mainly used in homes.)         |
|      | Fluorescent lamp 2 | For shooting under a neutral white fluorescent lamp. (This type of lamp is mainly used in desk lamps.) |
|      | Fluorescent lamp 3 | For shooting under a white fluorescent lamp. (This type of lamp is mainly used in offices.)            |

#### ISO ..... Changing the ISO sensitivity

|                             |  |  |
|-----------------------------|--|--|
| AUTO                        |  | Sensitivity is automatically adjusted according to the conditions of the subject.  |
| 50/100/200/400/<br>800/1600 |  | A low value lowers the sensitivity for daylight shooting of clear, sharp pictures. The higher the value, the better the camera's light sensitivity and ability to shoot with a fast shutter speed and in low light conditions. However, high sensitivity introduces noise into the resulting picture, which may give it a grainy appearance. |

#### FINE ZOOM ..... Zooming in on your subject without reducing image quality

OFF /ON

This function allows you to zoom up to approximately 15x by combining the optical zoom and image cropping. There is no deterioration in the image quality since data conversion (by increasing pixel resolution) is not performed.

- The available magnification varies depending on the [IMAGE QUALITY] setting.
- The available [IMAGE QUALITY] setting is [SQ1] or lower.

#### (still pictures) ..... Recording sound with still pictures

OFF /ON

When activated [ON], the camera will record about 4 seconds of audio after the picture is taken.

When recording, aim the camera microphone at the source of the sound you want to record.



## (movies) ..... Recording movies with or without sound

OFF/ ON


When [ON] (sound is recorded) is selected, the optical zoom cannot be used during movie recording. Only the digital zoom can be used.



## PANORAMA ..... Creating a panoramic picture

Panorama shooting lets you create a panoramic picture, using the OLYMPUS Master software on the provided CD-ROM. An Olympus xD-Picture Card is required for panorama shooting.

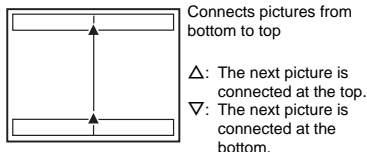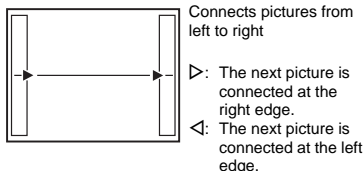

Use the arrow pad to specify at which edge you want to connect the pictures; and then compose your shots so that the edges of the pictures overlap. The part of the previous picture where it will be joined to the next picture does not remain in the frame. You have to remember what the part in the frame looked like and take the next picture so it overlaps.

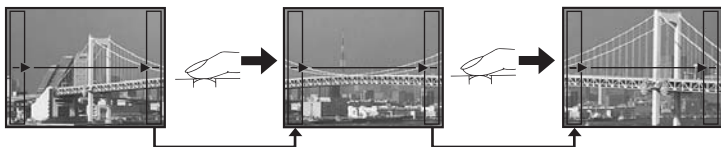

- Press  to exit.
- Panorama shooting is possible for up to 10 pictures. The warning mark () is displayed after 10 pictures have been taken.

## AF MODE ..... Changing the focusing area

|             |  |
|-------------|--|
| FACE DETECT | The camera searches a face within the frame and focus on it.   |
| iESP        | The camera determines which subject within the screen to focus on. Even when the subject is not in the center of the screen, focusing is possible. |
| SPOT        | Focus selection is based on the subject within the AF target mark.   |

- There may be cases in which the camera cannot detect a face even if [FACE DETECT] is selected.

## SILENT MODE

Muting operational sounds


OFF /ON

This function allows you to mute operational sounds during shooting and playback (e.g. warning beeps, shutter sounds, etc...).


## Playback mode menu



When a still picture is selected

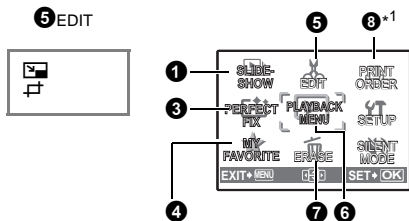


6 PLAYBACK MENU



- \*1 A card is required.
- \*2 This is not displayed when a movie is selected.

When a movie is selected

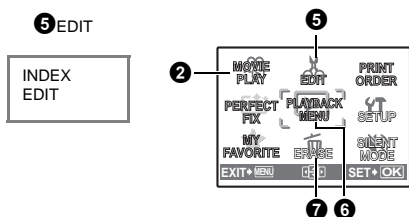

- "SETUP menus" (P. 26)
- "SILENT MODE Muting operational sounds" (P. 21)

- The factory default settings are displayed in gray ( ).

### 1 SLIDESHOW

Playing back pictures automatically

Press **OK** to start the slideshow.

- Only the first frame of each movie is displayed.
- To cancel the slideshow, press **OK**.

### 2 MOVIE PLAY

Playing back movies



Select [MOVIE PLAY] from the top menu, and press **OK** to play back the movie. Another option is to select a picture with the movie icon ( ) and press **OK** to play back the movie.

### Operations during movie playback



- : Fast forwards playback when pressed and held.
- : Rewinds playback when pressed and held.

Playing time/Total recording time

- : Increases the volume.
- : Reduces the volume.

## Operations during pause



- ▷ : Plays when pressed and held.
- ◁ : Plays the movie in reverse when pressed and held.
- △ : Displays the first frame.
- ▽ : Displays the last frame.


- To resume the movie, press **OK**.
- To cancel the playback of the movie in the middle of it or during pause, press **MENU**.

## 3 PERFECT FIX

### Editing pictures

The recorded image is corrected and saved as a new one.

- Use **△**/**▽** to select the effect you want to apply, and press **OK**.
- Use **◁**/**▷** to select the picture you want to edit, and press **OK**.

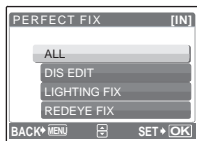

|              |   |
|--------------|---|
| ALL          | Digital image stabilization edit, lighting fix and redeye fix are activated together. |
| DIS EDIT     | Retouches unanticipated blurry images.  |
| LIGHTING FIX | The underexposed areas of an image are brightened.                                    |
| REDEYE FIX   | Corrects a subject with red-eye.  |

- Movies, pictures shot by another camera, and previously fixed or edited pictures cannot be corrected.
- When fixed pictures are displayed, the picture cannot be fixed.
- Some blur may be left on some pictures.
- Editing an image may cause it to suffer a minor loss in quality.

## 4 MY FAVORITE

### Viewing and registering pictures in My Favorite

Registers and plays back your favorite still pictures in the internal memory as new ones.

Up to 9 pictures can be registered.

- Registered pictures cannot be erased even by formatting the internal memory.


**ℹ** "Erasing pictures registered in MY FAVORITE" (P. 24)

### ! Note

- Registered pictures cannot be edited, printed, copied to a card, transferred to a computer, or viewed on a computer.

## VIEW FAVORITE ..... Viewing registered pictures

- Select [VIEW FAVORITE] to display pictures registered in MY FAVORITE. Use the arrow pad to browse pictures.
- Press **MENU** to select [ADD FAVORITE] or [SLIDESHOW].

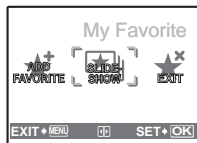

|              |   |
|--------------|---|
| ADD FAVORITE | Adds pictures to My Favorite. <ul style="list-style-type: none"> <li>• Select a picture with <b>◁</b>/<b>▷</b>, and press <b>OK</b>.</li> </ul> |
| SLIDESHOW    | Plays back registered pictures automatically. <ul style="list-style-type: none"> <li>• Press <b>OK</b> to exit the slideshow.</li> </ul>        |
| EXIT         | Reverts to normal playback mode.  |

## Erasing pictures registered in MY FAVORITE

YES/ NO

- Use the arrow pad to select the picture to be erased, and press . Select [YES], and press .
- Even if pictures registered in MY FAVORITE are erased, original pictures in the internal memory or the card may not be erased.

## SET ..... Registering favorite pictures



- Select a picture with and , and press .

## 5 EDIT



### Changing the size of pictures

640 × 480 / 320 × 240

This changes the image size of a picture and saves it as a new file.



### Cropping a picture



Crop a picture, and save the cropped picture as a new picture.

- Use and to select a picture to be cropped and press .
- Use the arrow pad and zoom lever to adjust the position and size of the area-selection box, and press .

## INDEX ..... Making an index picture from a movie



This function extracts 9 frames from a movie and saves them as a new picture (INDEX) containing thumbnails of each frame.

- Use and to select a movie and press .
- Use the arrow pad to select the first frame and press . Select the last frame in the same way and press .

## EDIT ..... Cutting a part of the movie



Select a part of the movie you wish to save, overwrite the original file with it, or save it as a new file.


- Select [NEW FILE] or [OVERWRITE] and press .
- Use the arrow pad to select the first frame and press . Select the last frame in the same way and press .




## 6 PLAYBACK MENU

### Protecting pictures

OFF / ON

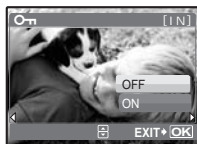


Protected pictures cannot be erased using [ERASE], [SEL. IMAGE] or [ALL ERASE], but they are all erased by formatting.

- Select the picture with  $\triangleleft$ / $\triangleright$ , and protect it by selecting [ON] with  $\triangle$ / $\nabla$ . You can protect several frames in succession.  is displayed when the picture is protected.

### Rotating pictures

+90° / 0° / -90°


Pictures taken with the camera held vertically are displayed horizontally. This function lets you turn such pictures so that they are displayed vertically. New picture orientations are saved even when the power is turned off.

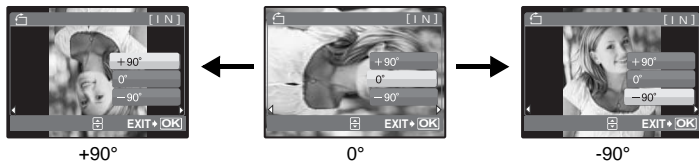

Select a picture with  $\triangleleft$ / $\triangleright$ , and select [+90°]/[0°]/[-90°] with  $\triangle$ / $\nabla$  to rotate pictures. You can rotate several frames in succession.

### Adding sound to still pictures

YES / NO

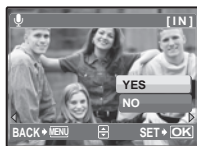

Sound is recorded for about 4 seconds.

- Use the arrow pad  $\triangleleft$ / $\triangleright$  to select a picture, and select [YES] to begin recording.
- The [BUSY] bar will be temporarily displayed.

## 7 ERASE

### Erasing selected pictures/Erasing all pictures

Protected pictures cannot be erased. Cancel protection before erasing protected pictures. Once erased, pictures cannot be restored. Check each picture before erasing to avoid accidentally erasing pictures you want to keep.

- When erasing pictures in the internal memory, do not insert the card into the camera.
- When erasing pictures from the card, insert a card into the camera in advance.

## SEL. IMAGE ..... Erasing by selecting the single-frame



- Use the arrow pad to select the picture, and press **OK** to mark ✓ on your selection.
- To cancel the selection, press **OK** again.
- When the selection is completed, press **GO**.
- Select [YES], and press **OK**.

## ALL ERASE ..... Erasing all the pictures in the internal memory or on the card

- Select [YES], and press **OK**.

## 8 PRINT ORDER


### Making print reservations (DPOF)

This function allows you to save printing data (the number of prints and the date and time information) with the pictures stored on the card.

"Print settings (DPOF)" (P. 32)

## SETUP menus

Menu operations

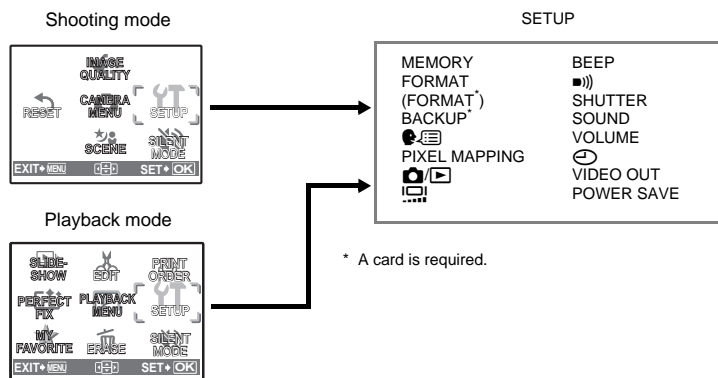

## MEMORY FORMAT (FORMAT) ..... Formatting the internal memory or card

All existing data, including protected pictures, are erased when the internal memory or card is formatted (images registered to "My Favorite" are not erased). Make sure that you save or transfer important data to a computer before formatting.

- Make sure there is no card inserted in the camera when formatting the internal memory.
- Be sure that the card is inserted in the camera when formatting the card.
- Before using non-Olympus cards or cards which have been formatted on a computer, you must format them with this camera.

## BACKUP ..... Copying pictures in the internal memory to the card

Insert the optional card into the camera. Copying data does not erase the picture in the internal memory.

- It takes some time to back up data. Check that the battery is charged before starting the copy.



## Selecting a display language

You can select a language for on-screen display. Available languages vary depending on where you purchased this camera.

You can add other languages to your camera with the provided OLYMPUS Master software.

## PIXEL MAPPING.....Adjusting the image processing function



The pixel mapping feature allows the camera to check and adjust the CCD and image processing functions. It is not necessary to operate this function frequently. Approximately once a year is recommended. Wait at least one minute after taking or viewing pictures to allow the pixel mapping function to perform properly. If you turn the camera off during pixel mapping, start again.

Select [PIXEL MAPPING]. When [START] is displayed, press **OK**.



## Turning on the camera with the or button

YES

- Pressing  turns on the camera and starts the camera in the shooting mode.
- Pressing  turns on the camera and starts the camera in the playback mode.

NO

The power is not turned on. To turn on the camera, press POWER button.



## Adjusting the monitor brightness

BRIGHT/ NORMAL

## BEEP ..... Adjusting the volume of operation sound when the buttons are pressed

OFF (No sound)/ LOW /HIGH


## ■))) ..... Adjusting the volume of camera warning sound

OFF (No sound)/ LOW / HIGH

## SHUTTER SOUND .....Adjusting the volume of the shutter button

OFF (No sound)/ LOW / HIGH

## VOLUME ..... Adjusting the volume during playback

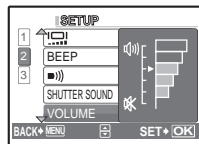


- Press  $\Delta$ / $\nabla$  to adjust the volume.
- You can adjust the volume to one of five levels or mute the volume.

## ⏪ ..... Setting the date and time

The date and time is saved with each image, and is used in the file name.

If the date and time are not set, the [⏪] screen is displayed each time the camera is turned on.

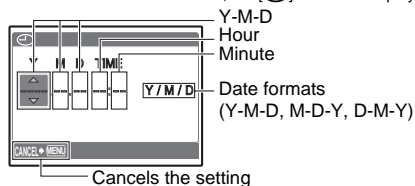

- The first two digits of [Y] are fixed.
- The time is displayed in the 24-hour format.
- To set the time precisely, with the cursor either on "minutes" or "Y/M/D", press [OK] as the time signal strikes 00 seconds.

## VIDEO OUT ..... Playing back pictures on a TV

NTSC /PAL

The factory default settings differ according to the region where the camera is sold.

To play back camera images on a TV, set the video output according to your TV's video signal type.


- TV video signal types differ by country/region. Check the video signal type before connecting the camera to the TV.

NTSC: North America, Taiwan, Korea, Japan

PAL: European countries, China

### Playing back pictures on a TV

Turn off the camera and the TV before connecting.

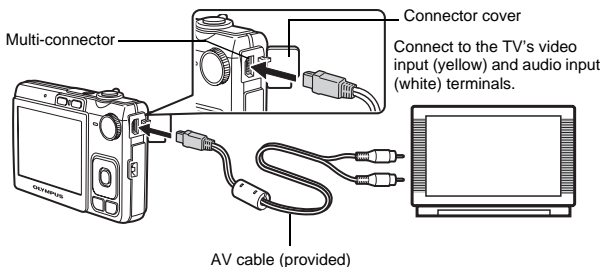

### Settings on the camera

Turn the camera on and press [▶] to select the playback mode.

- The last picture taken is displayed on the TV.  
Use the arrow pad to select the picture you want to display.

### Settings on the TV

Turn the TV on, and set it to video input mode.

- For details of switching to video input, refer to your TV's instruction manual.
- Images and the information displayed on the screen may be cropped depending on the TV's settings.

## POWER SAVE ..... Setting the camera to the power save mode

OFF /ON

When no operation has been performed for approximately 10 seconds while in shooting mode, the monitor automatically shuts off. Pressing the zoom lever or other buttons restores the camera from power save mode.

# Printing pictures

## Direct printing (PictBridge)

### Using the direct printing function

By connecting the camera to a PictBridge-compatible printer, you can print out pictures directly. Select the pictures you want to print and the number of prints on the camera's monitor.

To find out if your printer is compatible with PictBridge, refer to the printer's instruction manual.

#### What is PictBridge?

A standard for connecting digital cameras and printers of different makers and printing out pictures directly.

- Available printing modes, paper sizes etc., vary depending on the printer you use. Refer to the instruction manual for your printer.
- For details of printing paper types, ink cassettes, etc., refer to the printer's instruction manual.

### EASY PRINT


[EASY PRINT] can be used to print out the picture displayed on the monitor.

The selected picture is printed using the standard settings of your printer. The date and file name are not printed.

#### STANDARD

All printers that support PictBridge have standard print settings. If [STANDARD] is selected on the settings screens (P. 31), pictures are printed according to these settings. Refer to the printer's instruction manual for its standard settings or contact the printer manufacturer.

- 1 Display the picture you want to print out on the monitor in playback mode.**
- 2 Turn the printer on and plug the USB cable provided with the camera into the multi-connector of the camera and the printer's USB port.**

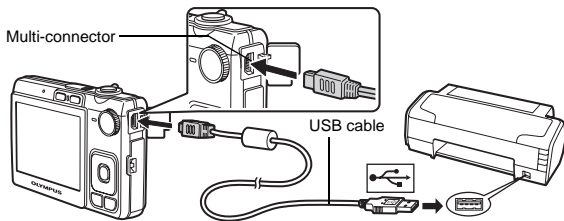

- The [EASY PRINT START] screen is displayed.
- For details of how to turn the printer on and the position of the USB port, refer to the printer's instruction manual.


- 3 Press  $\Delta$   $\square$   $\square$   $\square$ .**
  - Printing starts.




- When printing is finished, the picture selection screen is displayed. To print another picture, press  $\triangleleft \triangleright$  to select a picture, and press  $\triangle$   $\square$   $\square$ .
- When you are finished, disconnect the USB cable from the camera with the picture selection screen displayed.



#### 4 Disconnect the USB cable from the camera.

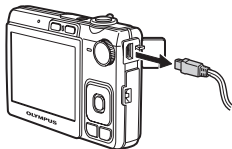

#### 5 Disconnect the USB cable from the printer.

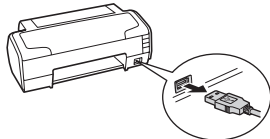


You can use [EASY PRINT] even when the camera is turned off or in shooting mode. With the camera turned off or in shooting mode, connect the USB cable. The selection screen for the USB connection is displayed. Select [EASY PRINT].

"EASY PRINT" Step 3 (P. 29), "Other print modes and print settings" Step 2 (P. 30)

### Other print modes and print settings (CUSTOM PRINT)


#### 1 Display the screen being indicated on the right according to Steps 1 and 2 on P. 29, and press $\text{OK}$ .

#### 2 Select [CUSTOM PRINT], and press $\text{OK}$ .

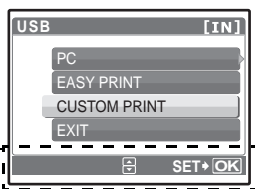


#### 3 Make the print settings according to the operation guide.

## Selecting a print mode

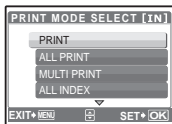

|                    |  |
|--------------------|--|
| <b>PRINT</b>       | Prints the selected picture.   |
| <b>ALL PRINT</b>   | Prints all the pictures stored in the internal memory or on the card.  |
| <b>MULTI PRINT</b> | Prints one picture in multiple layout format.  |
| <b>ALL INDEX</b>   | Prints an index of all the pictures stored in the internal memory or on the card.  |
| <b>PRINT ORDER</b> | Prints the pictures according to the print reservation data on the card. If no print reservations have been made, this option is not available.  "Print settings (DPOF)" (P. 32) |

## Setting the print paper

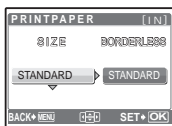

|                   |  |
|-------------------|--|
| <b>SIZE</b>       | Choose from the available paper sizes on your printer.   |
| <b>BORDERLESS</b> | Select framed or unframed. In [MULTI PRINT] mode, you cannot select the frame.<br><b>OFF</b> ( <input type="checkbox"/> ) The picture is printed inside a blank frame.<br><b>ON</b> ( <input type="checkbox"/> ) The picture is printed filling the entire page. |
| <b>PICS/SHEET</b> | Available in [MULTI PRINT] mode only. The number of prints that can be printed varies depending on the printer.  |

### Note

- If the [PRINTPAPER] screen is not displayed, [SIZE], [BORDERLESS] and [PICS/SHEET] are set to the standard.


## Selecting the picture to print



|                     |  |
|---------------------|--|
| <b>PRINT</b>        | Prints one copy of the displayed picture. When [SINGLE PRINT] or [MORE] has been selected, a single copy or multiple copies are printed. |
| <b>SINGLE PRINT</b> | Makes a print reservation for the displayed picture.   |
| <b>MORE</b>         | Sets the number of prints and data to be printed for the displayed picture.  |

Press to select the picture you want to print. You can also turn the zoom lever and select a picture from the index display.


## Setting the number of prints and data to be printed

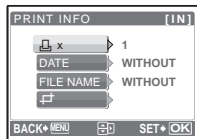


|  |                  |  |
|--|------------------|--|
|  | <b>x</b>         | Sets the number of prints. You can select up to 10 prints.   |
|  | <b>DATE</b>      | If you select [WITH], pictures are printed with the date.  |
|  | <b>FILE NAME</b> | If you select [WITH], pictures are printed with the file name.   |
|  |                  | Use the arrow pad and zoom lever, adjust the location and size of the trimming frame, then press <b>OK</b> to print the cropped picture. |

### 4 Select [PRINT], and press **OK**.


- Printing starts.
- When printing is finished, the [PRINT MODE SELECT] screen is displayed.

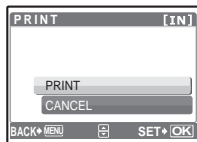

#### To cancel printing

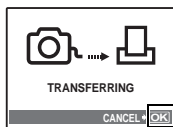


Screen during data transfer

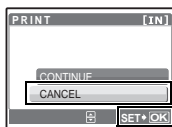

Select [CANCEL], and press **OK**.

### 5 In the [PRINT MODE SELECT] screen, press **MENU**.

- A message is displayed.

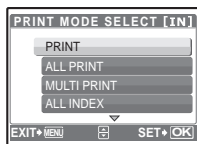

### 6 Disconnect the USB cable from the camera.

### 7 Disconnect the USB cable from the printer.

## Print settings (DPOF)

### How to make print reservations

Print reservations allow you to save printing data (the number of prints and the date and time information) with the pictures stored on the card.

With print reservation, you can print out pictures easily either at home using a personal DPOF-compatible printer or at a photo store that supports DPOF. DPOF is a standard format used to record automatic print information from digital cameras.

Only the images stored on the card can be reserved to print. Insert a card with recorded pictures into the camera before making print reservations.

Pictures with print reservations can be printed using the following procedures:

#### Printing using a DPOF-compatible photo store.

You can print pictures using the print reservation data.




## Printing using a DPOF-compatible printer.

Printing is possible directly from a card containing print reservation data, without using a computer. For more details, refer to the printer's instruction manual. A PC card adapter may also be necessary.

### Note

- DPOF reservations set by another device cannot be changed by this camera. Make changes using the original device. If a card contains DPOF reservations set by another device, entering reservations using this camera may overwrite the previous reservations.
- You can make DPOF print reservations for up to 999 images per card.
- Not all functions may be available on all printers or at all photo stores.

## To use print services without using DPOF


- Pictures stored in the internal memory cannot be printed at a photo store. The pictures need to be copied to a card beforehand.  
 "BACKUP Copying pictures in the internal memory to the card" (P. 26)




## Single-frame reservation


Follow the operation guide to make a print reservation for a selected picture.

**1 Press MENU in the playback mode and display the top menu.**

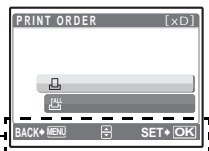
**2 Select [PRINT ORDER] > , and press .**




**3 Press  to select the frames for print reservations, and then press   to set the number of prints.**

- You cannot make print reservations for pictures with .
- Repeat Step 3 to make print reservations for other pictures.

### Cropping a picture

- Use zoom lever to display the trimming frame.
- Use the arrow pad and zoom lever to adjust the position and the size of area-selection box then press .




**4 When you finish making print reservations, press .**


**5 Select the date and time setting, and press .**


**NO** The pictures are printed without the date and time.

**DATE** The selected pictures are printed with the shooting date.

**TIME** The selected pictures are printed with the shooting time.

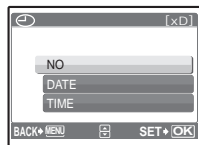

**6 Select [SET], and press .**

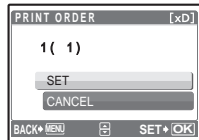

## All-frame reservation

Reserves all the pictures stored on the card. The number of prints is set at one print per picture.

- 1 Press **MENU** in the playback mode and display the top menu.
- 2 Select **[PRINT ORDER]** ▶ **[ALL]**, and press **OK**.
- 3 Select the date and time setting, and press **OK**.  
**NO** The pictures are printed without the date and time.  
**DATE** All pictures are printed with the shooting date.  
**TIME** All pictures are printed with the shooting time.
- 4 Select **[SET]**, and press **OK**.


## Resetting print reservation data

You can reset all the print reservation data or just for selected pictures.

- 1 Select top menu ▶ **[PRINT ORDER]**, and press **OK**.

To reset the print reservation data for all the pictures:

- 2 Select **[ALL]** or **[ALL]**, and press **OK**.
- 3 Select **[RESET]**, and press **OK**.

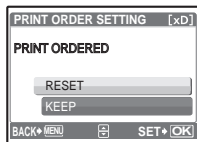

To reset the print reservation data for a selected picture

- 2 Select **[ALL]**, and press **OK**.
- 3 Select **[KEEP]**, and press **OK**.
- 4 Press **◀▶** to select the picture with the print reservations you want to cancel, and press **▽** to decrease the number of prints to 0.
  - Repeat Step 4 to cancel print reservations for other pictures.
- 5 When you are finished canceling print reservations, press **OK**.
- 6 Select the date and time setting, and press **OK**.
  - The setting is applied to the remaining pictures with print reservations.
- 7 Select **[SET]**, and press **OK**.

# Using OLYMPUS Master

## Overview

Using the USB cable provided with your camera, you can connect the camera and computer and download (transfer) the images to your computer using the OLYMPUS Master software, also provided with the camera.

Prepare the following items before starting.



OLYMPUS Master 2  
CD-ROM



USB cable



Computer that meets the operating environment (P. 36).

Install the OLYMPUS Master software

P. 36

Connect the camera to the computer using the USB cable

P. 38

Start up the OLYMPUS Master software

P. 38

Download image files to the computer

P. 39

Disconnect the camera from the computer


P. 39

## Using OLYMPUS Master

### What is OLYMPUS Master?

OLYMPUS Master is a software application for managing your digital images on your computer. Installing it on your computer lets you do the following:

- **Download images from the camera or other media**
- **View images and movies**
  - You can run a slideshow and play back sound.
- **Manage images**
  - Manage images in an album or folder.
  - Downloaded images are automatically sorted by date, allowing you to search for images quickly.
- **Edit images**
  - You can rotate images, trim them and change the size.
- **Edit images with the filter and correction functions**



- **Print images**
  - You can easily print images.
- **Make panoramic images**
  - You can make panoramic images using pictures taken in panorama mode.
- **Update the version of your camera's firmware.**

For details on other functions and operations, refer to the "Help" guide in the OLYMPUS Master reference manual.

## Install the OLYMPUS Master software

Before installing the OLYMPUS Master software, please confirm that your computer is compatible with the following system requirements.

For newer operating systems, please refer to the Olympus web site as shown on the back cover of this manual.

### Operating environment

#### Windows

---

|                    |  |
|--------------------|--|
| OS                 | Windows 2000 Professional/XP Home Edition/XP Professional/Vista  |
| CPU                | Pentium III 500 MHz or later   |
| RAM                | 256 MB or more   |
| Hard disk capacity | 500 MB or more   |
| Monitor            | 1,024 × 768 pixels or more<br>65,536 colors or more (16.77 million colors or more recommended)                                   |
| Other              | USB port or IEEE 1394 port<br>Internet Explorer 6 or later<br>QuickTime 7 or later recommended<br>DirectX 9 or later recommended |



#### Note

- **Windows 98/98SE/Me are not supported.**
- Use a computer with a pre-installed operating system. Operations are not guaranteed on home-built computers or computers with an updated operating system.
- Operations are not guaranteed when using an added USB port or IEEE 1394 port.
- To install the software, you must log on as a user with administrators' privileges.

#### Macintosh

---

|                    |   |
|--------------------|---|
| OS                 | Mac OS X v10.3 or later   |
| CPU                | Power PC G3 500 MHz or later<br>Intel Core Solo/Duo 1.5 GHz or later  |
| RAM                | 256 MB or more  |
| Hard disk capacity | 500 MB or more  |
| Monitor            | 1,024 × 768 pixels or more<br>32,000 colors or more (16.77 million colors or more recommended)                  |
| Other              | USB port or IEEE 1394 port (FireWire)<br>Safari 1.0 or later (1.3 or later recommended)<br>QuickTime 6 or later |




#### Note

- **Mac versions earlier than OS X 10.3 are not supported.**
- Operations are not guaranteed when using an added USB or IEEE 1394 (FireWire) port.
- To install the software, you must log on as a user with administrators' privileges.
- Be sure to remove the media (drag & drop onto the trash icon) before performing the following operations. Failure to do so could result in unstable computer operation and the need to reboot.
  - Disconnect the cable connecting the camera to the computer
  - Turn off the camera
  - Open the camera's battery/card compartment cover

## Windows

### 1 Insert the CD-ROM into the CD-ROM drive.

- The OLYMPUS Master setup screen is displayed.
- If the screen is not displayed, double-click the “My Computer” icon and click the CD-ROM icon.

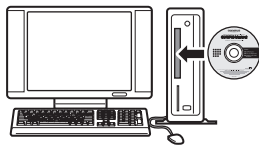

### 2 Select the display language and click the “OLYMPUS Master 2” button.

- When the component installation screen is displayed, click “OK”.



### 3 Click “Next” and follow the on-screen instructions.

- When the OLYMPUS Master licensing agreement is displayed, read the agreement and click “Yes” to proceed with the installation.

### 4 When the user information screen is displayed, enter your “Name”, select your “Region” and click “Next”.




### 5 When the setup type selection screen is displayed, click “Install”.

- To select the components to install, select “Custom”.
- The installation begins. The screen confirming that setup is completed is displayed. Click “Close”.
- Next, the screen confirming whether to install OLYMPUS muvee theaterPack Trial Version is displayed. To install this software, click “Install”.

## Macintosh

### 1 Insert the CD-ROM into the CD-ROM drive.

- The CD-ROM window is displayed.
- If the CD-ROM window is not displayed, double-click the CD-ROM icon on the desktop.



### 2 Double-click the “Setup” icon on the desktop.

- The OLYMPUS Master installation screen is displayed.
- Follow the on-screen instructions.
- When the OLYMPUS Master licensing agreement is displayed, read the agreement and click “Continue” and then “Continue” to proceed with the installation.
- The screen confirming that installation is completed is displayed.
- You must restart your computer before using OLYMPUS Master.




## Connecting the camera to a computer

### 1 Make sure the camera is turned off.


- The monitor is off.
- The lens is retracted.

### 2 Connect the multi-connector on the camera to the USB port on the computer using the provided USB cable.

- Refer to your computer's instruction manual to locate the position of the USB port.
- The camera turns on automatically.
- The monitor turns on and the selection screen for the USB connection is displayed.

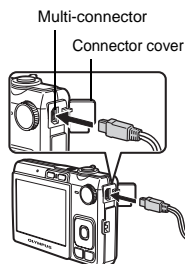

### 3 Select [PC], and press **OK**.

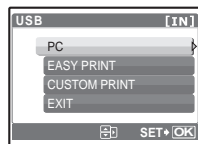

### 4 The camera is recognized by the computer.

#### • Windows

When you connect the camera to your computer for the first time, the computer attempts to recognize the camera. Click "OK" to exit the message that is displayed. The camera is recognized as a "Removable Disk".

#### • Macintosh

The iPhoto program is the default application for managing digital images. When you connect your digital camera for the first time, the iPhoto application starts automatically, so close this application and start OLYMPUS Master.

### **Note**

- The camera functions are disabled while the camera is connected to a computer.
- Connecting the camera to a computer via a USB hub may cause unstable operation. In this case, do not use a hub, but connect the camera directly to the computer.
- Images cannot be transferred to your computer with OLYMPUS Master if [PC] is selected in Step 3, **▷** is pressed and [MTP] is selected.

## Start up the OLYMPUS Master software

### Windows

#### 1 Double-click the "OLYMPUS Master 2" icon on the desktop.

### Macintosh

#### 1 Double-click the "OLYMPUS Master 2" icon in the "OLYMPUS Master 2" folder.



- The browse window is displayed.
- When OLYMPUS Master is started up for the first time after installation, the OLYMPUS Master initial setting screen and user registration screen are displayed before the browse window. Follow the on-screen instructions.

To exit OLYMPUS Master

- 1 Click "Exit"  on any window.
  - OLYMPUS Master is exited.

## Displaying camera images on a computer

### Downloading and saving images


- 1 Click "Transfer Images"  on the browse window, and then click "From Camera" .
  - The window for selecting the pictures you want to transfer from the camera is displayed. All the images in the camera are displayed.
- 2 Select "New Album" and enter an album name.
- 3 Select the image files and click "Transfer Images".
  - A window indicating that the download is complete is displayed.
- 4 Click "Browse images now".
  - The downloaded images are displayed in the browse window.



To disconnect the camera

- 1 Make sure that the card access lamp has stopped blinking.
- 2 Make the following preparations for disconnecting the USB cable.

#### Windows


- ① Click the "Unplug or Eject Hardware" icon  in the system tray.
- ② Click the message that is displayed.
- ③ When a message is displayed saying that the hardware can be ejected safely, click "OK".

#### Macintosh

- ① The trash icon changes to the eject icon when the "Untitled" or "NO\_NAME" icon on the desktop is dragged. Drag and drop it on the eject icon.

- 3 Disconnect the USB cable from the camera.

Card access lamp

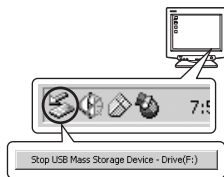


**Note**

- Windows: When you click "Unplug or Eject Hardware", a warning message may be displayed. Make sure that image data is not being downloaded from the camera and that all applications are closed. Click the "Unplug or Eject Hardware" icon again and disconnect the cable.

**Viewing still pictures and movies****1 Click the "Album" tab on the browse window and select the album that you want to view.**


- The selected album image is displayed in the thumbnail area.

**2 Double-click the still picture thumbnail that you want to view.**

- OLYMPUS Master switches to the image edit window and the picture is enlarged.
- Click "Back"  to return to the browse window.

**To view a movie****1 Double-click the movie thumbnail that you want to see in the browse window.**

- OLYMPUS Master switches to the edit window and the first frame of the movie is displayed.


**2 To play back the movie, click "Play"  at the bottom of the screen.****To download and save images to a computer without using OLYMPUS Master**

This camera is compatible with USB mass storage. You can connect the camera to your computer using the USB cable provided with the camera to download and save images without using OLYMPUS Master. The following environment is required to use the USB cable to connect the camera to your computer.

**Windows:** Windows 2000 Professional/XP Home Edition/XP Professional/Vista

**Macintosh:** Mac OS X v10.3 or later


**Note**

- If your computer is running Windows Vista, you can select [PC] in Step 3 on P. 38, press , and select [MTP] to use Windows Photo Gallery.
- Data transfer is not guaranteed in the following environments, even if your computer is equipped with a USB port.
  - Computers with a USB port added by means of an extension card, etc.
  - Computers without a factory-installed OS and home-built computers




## To increase the number of languages

Please take care that your battery is fully charged!

- 1 Make sure that your computer is connected to the Internet.**
- 2 Plug the USB cable into the USB port on the computer.**
- 3 Plug the other end of the USB cable into the camera's USB connector.**
  - The camera turns on automatically.
  - The monitor turns on and the selection screen for the USB connection is displayed.
- 4 Select [PC], and press .**
- 5 In the browse window, select "Camera", then "Update Camera/Add Display Language".**
  - The confirmation window for updating is displayed.
- 6 Click "OK".**
  - The updating the camera window is displayed.
- 7 Click "Add Language" in the updating camera display.**
  - The "Add Display Language of Camera" window is displayed.



- 8 Click  and select a language.**
- 9 Click "Add".**
  - The new language is downloaded to your camera. Please do not remove any cable or the battery while the camera is processing.
- 10 After the download procedure the camera display will show "OK". You can remove the cables and turn power off. After restarting the camera you will be able to choose the new language from [SET UP].**



# Getting to know your camera better

## Shooting tips and information

### Tips before you start taking pictures

#### The camera does not turn on even when a battery is loaded

##### The battery is not charged

- Charge the battery with the charger.

##### The battery is temporarily unable to function because of the cold

- Battery performance declines in low temperatures, and the charge may not be sufficient to turn on the camera. Remove the battery and warm it by putting it in your pocket for a while.

#### The card cannot be used

If the contact area of the card is dirty/dust, data in the card cannot be read and the [CARD SETUP] screen appears. In this case, select [xD CARD CLEAN], press **(OK)**, remove the card, and then wipe the contact area with a soft dry cloth.

#### No picture is taken when the shutter button is pressed


##### The camera is in sleep mode

- To save battery power, the camera automatically goes into sleep mode and the monitor turns off if there is no operation for 3 minutes when the camera is turned on. No picture is taken even if the shutter button is fully pressed in this mode. Operate the zoom lever or other buttons to restore the camera from sleep mode before taking a picture. If the camera is left on for 12 minutes, it automatically turns off. Press **POWER** to turn the camera on.

##### The mode dial is in the position of GUIDE

- No pictures can be taken when the shooting guide is being displayed. Take pictures after selecting the settings by following the shooting guide, or turn the mode dial and set it to a shooting mode other than **GUIDE**.

##### The flash is charging


- Wait until the  (flash charge) mark stops blinking before taking the picture.

##### The camera's internal temperature increases.

- With prolonged camera use, the internal temperature may increase, resulting in automatic shutdown. If this occurs, remove the battery from the camera and wait until the camera has sufficiently cooled. The camera's external temperature may also increase during use, however this is normal and does not indicate malfunction.

##### The memory gauge is full

- No pictures can be taken when the memory gauge is full. Wait until there is space in the memory gauge.

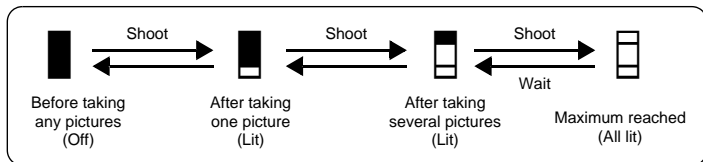

## The date and time have not been set

### The camera has been used in the same condition from the time of purchase

- No date and time have been set in the camera at the time of purchase. Set the date and time before using the camera.

☞ "Set the date and time" (P. 7), "⌚ Setting the date and time" (P. 28)

### The battery has been removed from the camera

- The date and time settings will be returned to the factory default settings if the camera is left without the battery for approximately 3 days. If the battery is in the camera for a short period of time, the date and time setting will be reset earlier than this. Before taking important pictures, check that the date and time settings are correct.

## Shooting tips

### Focusing on the subject

There are several ways to focus, depending on the subject.

#### When the subject is not in the center of the frame

- Place the subject in the center of the frame, lock the focus on the subject, and then recompose your picture.
- ☞ "Shutter button Shooting pictures/movies" (P. 11)
- Set [AF MODE] to [iESP].
- ☞ "AF MODE Changing the focusing area" (P. 21)

#### The subject is moving quickly

- Focus the camera on a point roughly the same distance away as the subject you want to shoot (by pressing the shutter button halfway); and then recompose your picture and wait for the subject to enter the frame.

### Subjects that are difficult to focus on

- Under certain types of conditions, it is difficult to focus using auto focus. The green lamp on the monitor lights, allowing you to check if the focus is locked.


The green lamp blinks.  
The subject cannot be brought into focus.



Subject with low contrast



Subject with an extremely bright area in the center of the frame




Subject without vertical lines

The green lamp lights,  
but the subject cannot be brought into focus.



Subjects at different distances




Fast-moving subject



The subject is not in the center of the frame

In these cases, focus (focus lock) on an object with high contrast at the same distance as the intended subject, recompose your shot and then take the picture. If the subject has no vertical lines, hold the camera vertically and focus the camera using the focus lock function by pressing the shutter button halfway, and then return the camera to the horizontal position while keeping the button pressed halfway and take the picture.


## Taking pictures without blurring

Hold the camera correctly and press the shutter button gently to shoot the picture. In addition, blurring is reduced when taking pictures in the  mode.


The factors that can cause the picture to blur are as follows:

- When you zoom at a high magnification to shoot the picture
- When the shutter speed is set low to shoot a dark subject
- When the flash cannot be used or a low shutter speed set shooting mode is selected.

Most blurry images can be stabilized later.

 "PERFECT FIX Editing pictures" (P. 23)

## Taking pictures without the flash

The flash fires automatically when insufficient light is available and may cause your image to be blurry. When taking pictures in low light without the flash, set the flash mode to  (flash off).

## The picture is too grainy


There are several factors that can cause the picture to appear grainy.

### Using the digital zoom to take close-up pictures

- With the digital zoom, part of the image is cropped and enlarged. The greater the magnification, the grainier the picture appears.

### Increasing the ISO sensitivity

- When you increase the [ISO] setting, "noise", which appears as spots of unwanted color or unevenness in the color, can be introduced and give the picture a grainy appearance. This camera is equipped with a function to allow shooting at high sensitivity while suppressing noise; however, increasing the ISO sensitivity can result in some noise, depending on the shooting conditions.

 "ISO Changing the ISO sensitivity" (P. 20)


### Taking pictures with the SCENE mode set to , , or

- When taking pictures of dark subjects using the above scene modes, the picture may appear grainy.


## Taking pictures with the correct color




- The reason why there are sometimes differences between the actual colors and the colors recorded in a picture is related to the light source illuminating the subject. [WB] is the function that helps the camera determine the true colors. Normally, the [AUTO] setting provides the optimal white balance, but depending on the subject, results may be better if you manually adjust the [WB] setting.

- When the subject is in the shade on a sunny day
- When the subject is illuminated by both natural light and indoor lighting, such as when near a window
- When there is no white in the center of the frame



 "WB Adjusting the color of a picture" (P. 20)



## Taking pictures of a white beach or snow scene


- Often, bright subjects (such as snow) turn out darker than their natural colors. Adjusting  toward [+] makes the subject closer to their real shades. Conversely, when you are shooting dark subjects, it can be effective to adjust toward [-]. Sometimes, using the flash may not produce the brightness (exposure) that was intended.




 "/  button Changing picture brightness (Exposure compensation)/Printing pictures" (P. 14)

## Taking pictures of a subject against backlight


- Set the flash to  (fill-in) to activate fill-in-flash. You can shoot a subject against backlight without the face of the subject appearing dark.  is effective not only for shooting against backlight, but also for shooting under fluorescent and other artificial lightening.

 " button Flash shooting" (P. 14)

- Selecting a [+] exposure value with  is useful in shooting a subject against backlight.

 "/  button Changing picture brightness (Exposure compensation)/Printing pictures" (P. 14)

- When [AF MODE] is set to [FACE DETECT], the camera determines the exposure by metering a face and the face in the picture taken will appear brighter even in backlight conditions.

 "AF MODE Changing the focusing area" (P. 21)

## Additional shooting tips and information

### Increasing the number of pictures that can be taken


There are two ways to record the pictures you take with this camera.

#### Recording pictures to the internal memory

- Pictures are recorded to the internal memory, and when the number of storable still pictures reaches 0, you connect the camera to a computer to download the pictures; and then erase the pictures from the internal memory.

#### Using a card (xD-Picture Card) (optional)

- Pictures are recorded to the card when inserted in the camera. When the card is full, you can download the pictures to a computer and then either erase the pictures from the card or use a new card.
- Pictures are not recorded to the internal memory when a card is inserted in the camera. Pictures in the internal memory can be copied to the card using the [BACKUP] function.

 "BACKUP Copying pictures in the internal memory to the card" (P. 26)  
"The card" (P. 53)

### Number of storable still pictures and recording length of movies

Still pictures


| Image quality | Image size  | Number of storable still pictures |               |                   |               |
|---------------|-------------|-----------------------------------|---------------|-------------------|---------------|
|               |             | Internal memory                   |               | Using a 1 GB card |               |
|               |             | With sound                        | Without sound | With sound        | Without sound |
| SHQ           | 3264 × 2448 | 12                                | 12            | 253               | 255           |
| HQ            | 3264 × 2448 | 23                                | 24            | 492               | 499           |
| SQ1           | 2048 × 1536 | 60                                | 62            | 1254              | 1305          |
| SQ2           | 640 × 480   | 237                               | 280           | 4920              | 5814          |
| 16:9          | 1920 × 1080 | 67                                | 70            | 1390              | 1453          |

Movies

| Image quality | Image size                    | Continuous recording time |                    |                   |               |
|---------------|-------------------------------|---------------------------|--------------------|-------------------|---------------|
|               |                               | Internal memory           |                    | Using a 1 GB card |               |
|               |                               | With sound                | Without sound      | With sound        | Without sound |
| SHQ           | 640 × 480<br>(30 frames/sec.) | 10 sec.                   | 10 sec.            | 10 sec.           | 10 sec.       |
| HQ            | 320 × 240<br>(15 frames/sec.) | 2 min.<br>24 sec.         | 2 min.<br>29 sec.  | 29 min.           | 29 min.       |
| SQ            | 160 × 120<br>(15 frames/sec.) | 9 min.<br>37 sec.         | 10 min.<br>54 sec. | 29 min.           | 29 min.       |

### Using a new card

- When using a non-Olympus card or a card used for other purposes with a computer, etc., use the [FORMAT] function to format the card.


 "MEMORY FORMAT (FORMAT) Formatting the internal memory or card" (P. 26)

## Lamp indicators

This camera uses several lamps to indicate the camera status.

| Lamp                      | Status   |
|---------------------------|--|
| Self-timer lamp           | The lamp lights for approximately 10 seconds, blinks for approximately 2 seconds, and then the picture is taken.   |
| Card access lamp          | Lit (red): Shooting mode<br>Lit (green): Playback mode<br>Unlit: Power is off.<br>Blinking (red): A picture is being recorded, the camera is reading a movie, or images are being downloaded (when connected to a computer). <ul style="list-style-type: none"><li>Do not do any of the following while the card access lamp is blinking. Doing so may prevent the image data from being saved and render the internal memory or card unusable.<ul style="list-style-type: none"><li>Open the battery/card compartment cover</li><li>Remove the battery and the card</li></ul></li></ul> |
| Green lamp of the monitor | Lit: The focus and exposure are locked.<br>Blinking: The focus is not locked. <ul style="list-style-type: none"><li>Release your finger from the shutter button, re-position the AF target mark on the subject and press the shutter button halfway again.</li></ul>   |

## Extending the useful life of the battery

- Performing any of the following operations when not actually taking pictures can deplete the battery power.
    - Repeatedly pressing the shutter button halfway
    - Repeatedly using the zoom
  - To minimize the battery consumption, set [POWER SAVE] to [ON] and turn off the camera whenever it is not in use.
-  "POWER SAVE Setting the camera to the power save mode" (P. 28)

## Functions that cannot be selected from menus

- Some items are not selectable from the menus when using the arrow pad.
- Items that cannot be set with the current shooting mode
- Items that cannot be set because of an item that has already been set: [s] and [f], etc.
- Items that cannot be set because you are attempting to edit pictures taken with another camera.
- Some functions cannot be used when there is no card in the camera.  
[PANORAMA], [PRINT ORDER], [FORMAT], [BACKUP]

## Selecting the optimal image quality

A record mode expresses a combination of desired image sizes and compression levels. Use the following examples to help determine the optimal image quality when shooting.

### To print large images on full-size paper/To edit and process images on a computer

- [SHQ] or [HQ]

### To print A4 (11.7×8.5 in./)postcard-size images


- [SQ1]

### To send as an e-mail attachment or post on a web site


- [SQ2]

### To express the broadness of a subject such as landscapes/to view pictures on a wide-screen television.

- [16:9]

 "IMAGE QUALITY Changing the image quality" (P. 19)

## To return the settings of functions to default settings

- To return the changed shooting settings to default settings while shooting, set [RESET] to [YES].  
 "RESET Changing the shooting functions back to default settings" (P. 19)
- All shooting settings except **P** mode return to default settings when the camera is turned off.

## Playback help and troubleshooting tips

### Blurry images cannot be stabilized

- Even if [DIS EDIT] is selected, not all blurry pictures can be fixed.
  - If the shutter speed is low and/or if the digital image is severely shaken: The recorded picture may not be stabilized or cannot acquire the proper stabilization effect.
  - Moving object: The image cannot acquire the proper stabilization effect.
- In addition, the digital image stabilization mode cannot be activated when:
  - the internal memory capacity or the card capacity is insufficient.
  - the image was extracted from a movie, the image was shot with another camera, or the image was already fixed with Digital Image Stabilization Edit.

### The red-eye cannot be fixed


- Depending on the picture, the red-eye may not be fixed. Also, parts except the eye may be fixed.

## Playback tips


### Playing back pictures in the internal memory

- When a card has been inserted in the camera, the pictures in the internal memory cannot be played back. Pull out the card before operating the camera.

### Quickly displaying a desired picture

- Press the zoom lever to the W-side to display the pictures as thumbnails (index display).  
 "Zoom lever Zooming while shooting/Close-up playback" (P. 15)

### Erasing sound recorded to still pictures

- Once sound is added to a picture, it is not possible to erase the sound. In this case, make a re-recording with silence.  
 "Adding sound to still pictures" (P. 25)

## Viewing pictures on a computer

### Viewing the entire picture on a computer screen

The size of the picture displayed on a computer screen changes depending on the computer settings. When the monitor setting is 1,024 × 768 and you are using Internet Explorer to view a picture with an image size of 2,048 × 1,536 at 100%; the entire picture cannot be viewed without scrolling. There are several ways you can view the entire picture on the computer screen.















#### View the picture using image browsing software

- Install the OLYMPUS Master 2 software from the provided CD-ROM.




#### Change the monitor setting

- The icons on the computer desktop may be rearranged. For details on changing the settings on your computer, refer to the computer's instruction manual.

## When you get an error message on the camera...

| Monitor indication  | Possible cause  | Corrective action   |
|---|---|---|
| <br>CARD ERROR                 | There is a problem with the card.   | This card cannot be used. Insert a new card.  |
| <br>WRITE PROTECT              | Writing to the card is prohibited.  | The recorded image has been protected (read-only) on a computer. Download the image to a computer and cancel the read-only setting.   |
| <br>MEMORY FULL                | The internal memory has no available memory and cannot store any new data.                            | Insert a card or erase unwanted data. Before erasing, backup the data of important pictures using the card, or download such pictures to a computer.  |
| <br>CARD FULL                  | The card has no available memory and cannot store any new data.                                       | Replace the card or erase unwanted data. Before erasing, download important pictures to a computer.   |
| <br>NO PICTURE                 | There are no pictures in the internal memory or on the card.  | The internal memory or the card contains no pictures.<br>Record pictures.   |
| <br>PICTURE ERROR              | There is a problem with the selected picture and it cannot be played back on this camera.             | Use image processing software to view the picture on a computer. If that cannot be done, the image file is damaged.   |
| <br>THE IMAGE CANNOT BE EDITED | Pictures taken by other cameras or previously edited or corrected pictures cannot be edited or fixed. | Use image processing software to edit the pictures.   |
| <br>CARD-COVER OPEN            | The battery/card compartment cover is open.   | Close the battery/card compartment cover.   |
| <br>BATTERY EMPTY              | The battery is empty.   | Charge the battery.   |
|                                | The data in the card cannot be read. Or, the card is not formatted.                                   | <ul style="list-style-type: none"> <li>Select [xD CARD CLEAN], and press <b>OK</b>. Remove the card and wipe the contact area with a soft dry cloth.</li> <li>Select [FORMAT] ► [YES] and press <b>OK</b>. All data on the card is erased.</li> </ul> |
|                              | There is an error in the internal memory.   | Select [MEMORY FORMAT] ► [YES] and press <b>OK</b> . All data in the internal memory is erased.   |
| <br>NO CONNECTION            | The camera is not connected to the computer or the printer correctly.                                 | Disconnect the camera and connect it again correctly.   |
| <br>NO PAPER                 | There is no paper in the printer.   | Load some paper into the printer.   |
| <br>NO INK                   | The printer has run out of ink.   | Replace the ink cartridge in the printer.   |

























| Monitor indication  | Possible cause  | Corrective action   |
|---|---|---|
| <br>JAMMED       | The paper is jammed.  | Remove the jammed paper.  |
| SETTINGS<br>CHANGED   | The printer's paper tray has been removed or the printer has been operated while changing settings on the camera. | Do not operate the printer while changing settings on the camera.   |
| <br>PRINT ERROR  | There is a problem with the printer and/or camera.  | Turn off the camera and printer. Check the printer and remedy any problems before turning the power on again. |
| <br>CANNOT PRINT | Pictures recorded on other cameras may not be printed on this camera.   | Use a computer to print.  |


## Functions available in shooting modes and scenes

Some functions cannot be set in certain shooting modes. For more details, refer to the table below.

### Functions available in shooting modes

| Function   | Shooting mode | AUTO | P |  |  |  | SCENE   |   |   |   |   |   |   |   |   |   |   |   |  | Ref. Page |
|--|---------------|------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|--|-----------|
|  |               |      |   |   |   |   |  |  |  |  |  |  |  |  |  |  |  |  |  |           |
|                     | ✓             | ✓    | ✓ | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | P. 14   |  |           |
|                     | ✓             | ✓    | ✓ | ✓   | –   | –   | ✓   | ✓   | –   | –   | –   | ✓   | – <sup>2</sup>  | ✓   | ✓   | –   | P. 14   |   |  |           |
|                     | ✓             | ✓    | ✓ | ✓   | –   | –   | ✓   | ✓   | –   | –   | –   | ✓   | –   | ✓   | ✓   | –   | P. 14   |   |  |           |
|                     | ✓             | ✓    | ✓ | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | –   | – <sup>7</sup>  | –   | P. 14   |   |  |           |
|                     | ✓             | ✓    | ✓ | –   | ✓   | ✓   | –   | ✓   | –   | –   | –   | –   | –   | ✓ <sup>4</sup>  | ✓   | ✓   | P. 14   |   |  |           |
| Zoom   | ✓             | ✓    | ✓ | ✓   | ✓   | ✓   | ✓   | ✓   | –   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | –   | P. 15   |   |  |           |
| IMAGE QUALITY  | ✓             | ✓    | ✓ | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | – <sup>3</sup>  | ✓ <sup>1</sup>  | ✓   | ✓   | P. 19   |   |  |           |
| WB   | –             | ✓    | ✓ | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | P. 20   |   |  |           |
| ISO  | –             | ✓    | – | –   | –   | –   | –   | –   | –   | –   | –   | –   | –   | –   | ✓   | ✓   | P. 20   |   |  |           |
| FINE ZOOM  | –             | ✓    | ✓ | –   | ✓   | ✓   | –   | –   | ✓   | ✓   | ✓   | ✓   | ✓   | –   | ✓   | –   | P. 20   |   |  |           |
|  (still pictures) | –             | ✓    | ✓ | –   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | –   | –   | –   | –   | –   | P. 20   |   |  |           |
|  (movies)         | –             | –    | – | ✓   | –   | –   | –   | –   | –   | –   | –   | –   | –   | –   | –   | –   | P. 21   |   |  |           |
| PANORAMA   | –             | ✓    | ✓ | –   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | –   | –   | ✓   | ✓   | P. 21   |   |  |           |
| AF MODE  | –             | ✓    | ✓ | –   | ✓   | ✓   | ✓   | ✓   | ✓   | ✓   | –   | ✓   | ✓   | – <sup>5</sup>  | ✓ <sup>6</sup>  | –   | P. 21   |   |  |           |

<sup>1</sup> The image quality is limited to [2048 × 1536] or lower.

<sup>2</sup> The macro mode is fixed at .

<sup>3</sup> The image quality is fixed at [640 × 480].

<sup>4</sup> [AUTO] and  are not available.

<sup>5</sup> [AF MODE] is fixed at [FACE DETECT].

<sup>6</sup> [FACE DETECT] is not available.

<sup>7</sup> AF lock is on.

## Camera care

### Cleaning the camera

#### Exterior:

- Wipe gently with a soft cloth. If the camera is very dirty, soak the cloth in mild soapy water and wring well. Wipe the camera with the damp cloth and then dry it with a dry cloth. If you have used the camera at the beach, use a cloth soaked in clean water and wrung well.

#### Monitor:

- Wipe gently with a soft cloth.

#### Lens:

- Blow dust off the lens with a commercial blower, then wipe gently with a lens cleaner.

#### Battery/Charger:

- Wipe gently with a soft, dry cloth.



#### Note

- Do not use strong solvents such as benzene or alcohol, or chemically treated cloth.
- Mold may form on the lens surface if the lens is left dirty.

### Storage

- When storing the camera for extended periods, remove the battery and card, and keep in a cool, dry place that is well ventilated.
- Periodically, insert the battery and test the camera functions.



#### Note

- Avoid leaving the camera in places where chemical products are handled since this may result in corrosion.

## Battery and charger

- This camera uses one Olympus lithium ion battery (LI-42B/LI-40B). No other type of batteries can be used.
- Power consumption by the camera varies depending on which functions are used.
- During the conditions described below, power is consumed continuously and the battery becomes exhausted quickly.
  - The zoom is used repeatedly.
  - The shutter button is pressed halfway repeatedly in shooting mode, activating the auto focus.
  - A picture is displayed on the monitor for an extended period of time.
  - The camera is connected to a computer or printer.
- Using an exhausted battery may cause the camera to turn off without displaying the battery level warning.
- The rechargeable battery is not fully charged at the time of purchase. Charge the battery fully with the LI-40C charger before use.
- The provided rechargeable battery usually takes approximately 5 hours to charge.
- This camera uses a charger specified by Olympus. Do not use any other type of charger.

## Representative plug of power supply cord of countries/regions around the world



A Type  
(American Type)



B Type  
(British Type)



BF Type  
(British Type)



B3 Type  
(British Type)



C Type  
(CEE Type)



SE Type  
(CEE Type)



O Type  
(Oceania Type)

The representative supply voltage and plug type are described in this chart.  
Depending on the area, different types of plugs and supply voltages are used.

Attention: Power cord meeting demands from each country shall be used.

- For only the United States

Use a UL Listed, 1.8 - 3 m (6 - 10 ft), Type SPT-2 or NISPT-2, AWG no. 18 power supply cord, rated for 125 V 7 A, with a non-polarized NEMA 1-15P plug rated for 125 V 15 A\*.

| Europe            |         |                |           |
|-------------------|---------|----------------|-----------|
| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
| Austria           | 230     | 50             | C         |
| Belgium           | 230     | 50             | C         |
| Czech             | 220     | 50             | C         |
| Denmark           | 230     | 50             | C         |
| Finland           | 230     | 50             | C         |
| France            | 230     | 50             | C         |
| Germany           | 230     | 50             | C         |
| Greece            | 220     | 50             | C         |
| Hungary           | 220     | 50             | C         |
| Iceland           | 230     | 50             | C         |
| Ireland           | 230     | 50             | C/BF      |
| Italy             | 220     | 50             | C         |
| Luxemburg         | 230     | 50             | C         |
| Netherlands       | 230     | 50             | C         |
| Norway            | 230     | 50             | C         |
| Poland            | 220     | 50             | C         |
| Portugal          | 230     | 50             | C         |
| Romania           | 220     | 50             | C         |
| Russia            | 220     | 50             | C         |
| Slovak            | 220     | 50             | C         |
| Spain             | 127/230 | 50             | C         |
| Sweden            | 230     | 50             | C         |
| Switzerland       | 230     | 50             | C         |
| UK                | 240     | 50             | BF        |

### Asia

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| China             | 220     | 50             | A         |
| Hong Kong         | 200/220 | 50             | BF        |
| India             | 230/240 | 50             | C         |
| Indonesia         | 127/230 | 50             | C         |
| Japan             | 100     | 50/60          | A         |
| Korea (rep)       | 220     | 60             | C         |
| Malaysia          | 240     | 50             | BF        |
| Philippines       | 220/230 | 60             | A/C       |
| Singapore         | 230     | 50             | BF        |
| Taiwan            | 110     | 60             | A         |
| Thailand          | 220     | 50             | C/BF      |
| Vietnam           | 220     | 50             | A/C       |

### Oceania

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| Australia         | 240     | 50             | O         |
| New Zealand       | 230/240 | 50             | O         |

### North America

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| Canada            | 120     | 60             | A         |
| USA               | 120     | 60             | A         |

### Central America

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| Bahamas           | 120/240 | 60             | A         |
| Costa Rica        | 110     | 60             | A         |
| Cuba              | 110/220 | 60             | A/C       |
| Dominican (rep)   | 110     | 60             | A         |
| El Salvador       | 110     | 60             | A         |
| Guatemala         | 120     | 60             | A         |
| Honduras          | 110     | 60             | A         |
| Jamaica           | 110     | 50             | A         |
| Mexico            | 120/127 | 60             | A         |
| Nicaragua         | 120/240 | 60             | A         |
| Panama            | 110/220 | 60             | A         |

### South America

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| Argentina         | 220     | 50             | C/BF/O    |
| Brazil            | 127/220 | 60             | A/C       |
| Chile             | 220     | 50             | C         |
| Colombia          | 120     | 60             | A         |
| Peru              | 220     | 60             | A/C       |
| Venezuela         | 120     | 60             | A         |

### Middle East

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| Iran              | 220     | 50             | C/BF      |
| Iraq              | 220     | 50             | C/BF      |
| Israel            | 230     | 50             | C         |
| Saudi Arabia      | 127/220 | 50             | A/C/BF    |
| Turkey            | 220     | 50             | C         |
| UAE               | 240     | 50             | C/BF      |

### Africa

| Countries/Regions | Voltage | Frequency (Hz) | Plug type |
|-------------------|---------|----------------|-----------|
| Algeria           | 127/220 | 50             | C         |
| Congo (dem)       | 220     | 50             | C         |
| Egypt             | 220     | 50             | C         |
| Ethiopia          | 220     | 50             | C         |
| Kenya             | 240     | 50             | C/BF      |
| Nigeria           | 230     | 50             | C/BF      |
| South Africa      | 220/230 | 50             | C/BF      |
| Tanzania          | 230     | 50             | C/BF      |
| Tunisia           | 220     | 50             | C         |

## Using your charger abroad

- The charger can be used in most home electrical sources within the range of 100 V to 240 V AC (50/60Hz) around the world. However, depending on the country or area you are in, the AC wall outlet may be shaped differently and the charger may require a plug adapter to match the wall outlet. For details, ask at your local electrical shop or travel agent.
- Do not use travel voltage converters as they could damage your charger.

## Use of the accessories

### The card


Pictures can be recorded on the optional card.

The internal memory and card are the camera's media for recording pictures, similar to film in a film camera. Pictures recorded to the internal memory or card can be easily erased on the camera or processed using a computer.

Unlike portable storage media, the internal memory cannot be removed or exchanged.

The number of recordable pictures can be increased by using a card with a larger capacity.

- ① Index area  
You can use this space to write the contents of the card.
- ② Contact area  
The part where the data transferred from the camera enters the card.

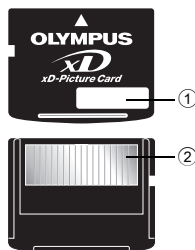

### Compatible cards

xD-Picture Card (16MB – 2GB) (Type H/M, Standard)

### Using the internal memory or card

You can confirm on the monitor whether the internal memory or card is being used during shooting and playback operations.

#### Shooting mode




#### Playback mode





Memory indicator

### Note

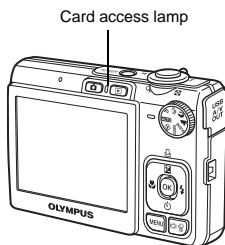



- Do not open the battery/card compartment cover while the card access lamp is blinking, as the lamp is indicating that it is reading or writing data. Doing so may damage the data in the internal memory or the card and render the internal memory or card unusable.



## Safety Precautions

|  |   |   |
|--|---|---|
|   | <b>CAUTION</b><br>RISK OF ELECTRIC SHOCK<br>DO NOT OPEN |  |
| <b>CAUTION:</b> TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED OLYMPUS SERVICE PERSONNEL. |   |   |

|  |  |
|--|--|
|                 | An exclamation mark enclosed in a triangle alerts you to important operating and maintenance instructions in the documentation provided with the product.              |
|  <b>DANGER</b>  | If the product is used without observing the information given under this symbol, serious injury or death may result.  |
|  <b>WARNING</b> | If the product is used without observing the information given under this symbol, injury or death may result.  |
|  <b>CAUTION</b> | If the product is used without observing the information given under this symbol, minor personal injury, damage to the equipment, or loss of valuable data may result. |

**WARNING!**  
TO AVOID THE RISK OF FIRE OR ELECTRICAL SHOCK, NEVER DISASSEMBLE, EXPOSE THIS PRODUCT TO WATER OR OPERATE IN A HIGH HUMIDITY ENVIRONMENT.

## General Precautions

- Read All Instructions** — Before you use the product, read all operating instructions. Save all manuals and documentation for future reference.
- Cleaning** — Always unplug this product from the wall outlet before cleaning. Use only a damp cloth for cleaning. Never use any type of liquid or aerosol cleaner, or any type of organic solvent to clean this product.
- Attachments** — For your safety, and to avoid damaging the product, use only accessories recommended by Olympus.
- Water and Moisture** — For precautions on products with weatherproof designs, read the weatherproofing sections.
- Location** — To avoid damage to the product, mount the product securely on a stable tripod, stand, or bracket.
- Power Source** — Connect this product only to the power source described on the product label.
- Foreign Objects** — To avoid personal injury, never insert a metal object into the product.
- Heat** — Never use or store this product near any heat source such as a radiator, heat register, stove, or any type of equipment or appliance that generates heat, including stereo amplifiers.

## Handling the Camera



### WARNING

- **Do not use the camera near flammable or explosive gases.**
- **Do not use the flash and LED on people (infants, small children, etc.) at close range.**
  - You must be at least 1 m (3 ft.) away from the faces of your subjects. Firing the flash too close to the subject's eyes could cause a momentary loss of vision.
- **Keep young children and infants away from the camera.**
  - Always use and store the camera out of the reach of young children and infants to prevent the following dangerous situations which could cause serious injury:
    - Becoming entangled in the camera strap, causing strangulation.
    - Accidentally swallowing the battery, cards or other small parts.
    - Accidentally firing the flash into their own eyes or those of another child.
    - Accidentally being injured by the moving parts of the camera.
- **Do not look at the sun or strong lights with the camera.**
- **Do not use or store the camera in dusty or humid places.**
- **Do not cover the flash with a hand while firing.**



### CAUTION

- **Stop using the camera immediately if you notice any unusual odors, noise, or smoke around it.**
  - Never remove the batteries with bare hands, which may cause a fire or burn your hands.
- **Never hold or operate the camera with wet hands.**
- **Do not leave the camera in places where it may be subject to extremely high temperatures.**
  - Doing so may cause parts to deteriorate and, in some circumstances, cause the camera to catch fire. Do not use the charger if it is covered (such as a blanket). This could cause overheating, resulting in fire.
- **Handle the camera with care to avoid getting a low-temperature burn.**
  - When the camera contains metal parts, overheating can result in a low-temperature burn. Pay attention to the following:
    - When used for a long period, the camera will get hot. If you hold on to the camera in this state, a low-temperature burn may be caused.
    - In places subject to extremely cold temperatures, the temperature of the camera's body may be lower than the environmental temperature. If possible, wear gloves when handling the camera in cold temperatures.
- **Be careful with the strap.**
  - Be careful with the strap when you carry the camera. It could easily catch on stray objects - and cause serious damage.

## Battery Handling Precautions

**Follow these important guidelines to prevent batteries from leaking, overheating, burning, exploding, or causing electrical shocks or burns.**



### DANGER

- The camera uses a lithium ion battery specified by Olympus. Charge the battery with the specified charger. Do not use any other chargers.
- Never heat or incinerate batteries.
- Take precautions when carrying or storing batteries to prevent them from coming into contact with any metal objects such as jewelry, pins, fasteners, etc.
- Never store batteries where they will be exposed to direct sunlight, or subjected to high temperatures in a hot vehicle, near a heat source, etc.

- To prevent causing battery leaks or damaging their terminals, carefully follow all instructions regarding the use of batteries. Never attempt to disassemble a battery or modify it in any way, by soldering, etc.
- If battery fluid gets into your eyes, flush your eyes immediately with clear, cold running water and seek medical attention immediately.
- Always store batteries out of the reach of small children. If a child accidentally swallows a battery, seek medical attention immediately.



## WARNING

- Keep batteries dry at all times.
- To prevent batteries from leaking, overheating, or causing a fire or explosion, use only batteries recommended for use with this product.
- Insert the battery carefully as described in the operating instructions.
- If rechargeable batteries have not been recharged within the specified time, stop charging them and do not use them.
- Do not use a battery if it is cracked or broken.
- If a battery leaks, becomes discolored or deformed, or becomes abnormal in any other way during operation, stop using the camera.
- If a battery leaks fluid onto your clothing or skin, remove the clothing and flush the affected area with clean, running cold water immediately. If the fluid burns your skin, seek medical attention immediately.
- Never subject batteries to strong shocks or continuous vibration.



## CAUTION

- Before loading, always inspect the battery carefully for leaks, discoloration, warping, or any other abnormality.
- The battery may become hot during prolonged use. To avoid minor burns, do not remove it immediately after using the camera.
- Always unload the battery from the camera before storing the camera for a long period.

### Caution for Usage Environment

- To protect the high-precision technology contained in this product, never leave the camera in the places listed below, no matter if in use or storage:
  - Places where temperatures and/or humidity are high or go through extreme changes. Direct sunlight, beaches, locked cars, or near other heat sources (stove, radiator, etc.) or humidifiers.
  - In sandy or dusty environments.
  - Near flammable items or explosives.
  - In wet places, such as bathrooms or in the rain. When using products with weatherproof designs, read their manuals as well.
  - In places prone to strong vibrations.
- Never drop the camera or subject it to severe shocks or vibrations.
- When mounted on a tripod, adjust the position of the camera with the tripod head. Do not twist the camera.
- Do not touch electric contacts on cameras.
- Do not leave the camera pointed directly at the sun. This may cause lens or shutter curtain damage, color failure, ghosting on the CCD, or may possibly cause fires.
- Do not push or pull severely on the lens.
- Before storing the camera for a long period, remove the battery. Select a cool, dry location for storage to prevent condensation or mold from forming inside the camera. After storage, test the camera by turning it on and pressing the shutter release button to make sure that it is operating normally.
- Always observe the operating environment restrictions described in the camera's manual.



## Battery Handling Precautions

- This camera uses a lithium ion battery specified by Olympus. Do not use any other type of battery. For safe and proper use, read the battery's instruction manual carefully before using it.
- If the battery's terminals get wet or greasy, camera contact failure may result. Wipe the battery well with a dry cloth before use.
- Always charge a battery when using it for the first time, or if it has not been used for a long period.
- When operating the camera with battery power at low temperatures, try to keep the camera and spare battery as warm as possible. A battery that has run down at low temperatures may be restored after it is warmed at room temperature.
- The number of pictures you can take may vary depending on the shooting conditions or battery.
- Before going on a long trip, and especially before traveling abroad, purchase extra batteries. A recommended battery may be difficult to obtain while traveling.
- Please recycle batteries to help save our planet's resources. When you throw away dead batteries, be sure to cover their terminals and always observe local laws and regulations.

## LCD Monitor

- Do not push the monitor forcibly; otherwise the image may become vague, resulting in a playback mode failure or damage to the monitor.
- A strip of light may appear on the top/bottom of the monitor, but this is not a malfunction.
- When a subject is viewed diagonally in the camera, the edges may appear zigzagged on the monitor. This is not a malfunction; it will be less noticeable in playback mode.
- In places subject to low temperatures, the LCD monitor may take a long time to turn on or its color may change temporarily. When using the camera in extremely cold places, it is a good idea to occasionally place it in a warm place. An LCD monitor exhibiting poor performance due to low temperatures will recover in normal temperatures.
- The LCD used for the monitor is made with high-precision technology. However, black spots or bright spots of light may appear constantly on the LCD Monitor. Due to its characteristics or the angle at which you are viewing the monitor, the spot may not be uniform in color and brightness. This is not a malfunction.

## Legal and Other Notices

- Olympus makes no representations or warranties regarding any damages, or benefit expected by using this unit lawfully, or any request from a third person, which are caused by the inappropriate use of this product.
- Olympus makes no representations or warranties regarding any damages or any benefit expected by using this unit lawfully which are caused by erasing picture data.

## Disclaimer of Warranty

- Olympus makes no representations or warranties, either expressed or implied, by or concerning any content of these written materials or software, and in no event shall be liable for any implied warranty of merchantability or fitness for any particular purpose or for any consequential, incidental or indirect damages (including but not limited to damages for loss of business profits, business interruption and loss of business information) arising from the use or inability to use these written materials or software or equipment. Some countries do not allow the exclusion or limitation of liability for consequential or incidental damages, so the above limitations may not apply to you.
- Olympus reserves all rights to this manual.

## Warning

Unauthorized photographing or use of copyrighted material may violate applicable copyright laws. Olympus assumes no responsibility for unauthorized photographing, use or other acts that infringe upon the rights of copyright owners.

## Copyright Notice

All rights reserved. No part of these written materials or this software may be reproduced or used in any form or by any means, electronic or mechanical, including photocopying and recording or the use of any type of information storage and retrieval system, without the prior written permission of Olympus. No liability is assumed with respect to the use of the information contained in these written materials or software, or for damages resulting from the use of the information contained therein. Olympus reserves the right to alter the features and contents of this publication or software without obligation or advance notice.

## FCC Notice

### • Radio and Television Interference

Changes or modifications not expressly approved by the manufacturer may void the user's authority to operate this equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Adjust or relocate the receiving antenna.
- Increase the distance between the camera and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help. Only the OLYMPUS-supplied USB cable should be used to connect the camera to USB enabled personal computers (PC).

Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

## For customers in North and South America

### For customers in USA

Declaration of Conformity

Model Number : FE-280/X-820/C-520

Trade Name : OLYMPUS

Responsible Party : OLYMPUS IMAGING AMERICA INC.

Address : 3500 Corporate Parkway, P.O. Box 610, Center Valley,  
PA 18034-0610, U.S.A.

Telephone Number: 484-896-5000

Tested To Comply With FCC Standards

FOR HOME OR OFFICE USE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

### For customers in Canada

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

## Trademarks

- IBM is a registered trademark of International Business Machines Corporation.
- Microsoft and Windows are registered trademarks of Microsoft Corporation.
- Macintosh is a trademark of Apple Inc.
- xD-Picture Card™ is a trademark.
- All other company and product names are registered trademarks and/or trademarks of their respective owners.
- The standards for camera file systems referred to in this manual are the "Design Rule for Camera File System/DCF" standards stipulated by the Japan Electronics and Information Technology Industries Association (JEITA).

# SPECIFICATIONS

## ● Camera

|                            |  |
|----------------------------|--|
| Product type               | : Digital camera (for shooting and displaying)   |
| Recording system           |  |
| Still pictures             | : Digital recording, JPEG (in accordance with Design rule for Camera File system (DCF))  |
| Applicable standards       | : Exif 2.2, Digital Print Order Format (DPOF), PRINT Image Matching III, PictBridge  |
| Sound with still pictures  | : Wave format  |
| Movie                      | : AVI Motion JPEG  |
| Memory                     | : Internal memory<br>xD-Picture Card (16 MB – 2 GB) (Type H/M, Standard)   |
| Number of effective pixels | : 8,000,000 pixels   |
| Image pickup device        | : 1/2.35" CCD (primary color filter),<br>8,500,000 pixels (gross)  |
| Lens                       | : Olympus lens 6.3 to 18.9 mm, f3.1 to 5.9<br>(equivalent to 36 to 108 mm on a 35 mm camera)   |
| Photometric system         | : Digital ESP metering   |
| Shutter speed              | : 4 to 1/2000 sec.   |
| Shooting range             | : 0.6 m (2.0 ft.) to ∞ (W), 1.0 m (3.2 ft) to ∞ (T) (normal)<br>0.1 m (0.3 ft.) to ∞ (W), 0.6 m (2.0 ft.) to ∞ (T) (macro mode)<br>0.05 m (0.2 ft.) (super macro mode) |
| Monitor                    | : 2.5" TFT color LCD display, 230,000 pixels   |
| Outer connector            | : USB connector, A/V OUT jack (multi-connector)  |
| Automatic calendar system  | : 2000 up to 2099  |
| Operating environment      |  |
| Temperature                | : 0°C to 40°C (32°F to 104°F) (operation)/<br>-20°C to 60°C (-4°F to 140°F) (storage)  |
| Humidity                   | : 30% to 90% (operation)/10% to 90% (storage)  |
| Power supply               | : One Olympus lithium ion battery (LI-42B/LI-40B)  |
| Dimensions                 | : 91.8 mm (W) × 55.7 mm (H) × 19.1 mm (D)<br>(3.6 × 2.2 × 0.8 in.)<br>(excluding protrusions)  |
| Weight                     | : 108 g (3.8 oz) without battery and card  |

## ● Lithium ion battery (LI-42B)

|                       |   |
|-----------------------|---|
| Product type          | : Lithium ion rechargeable battery  |
| Standard voltage      | : DC 3.7 V  |
| Standard capacity     | : 740 mAh   |
| Battery life          | : Approx. 300 full charges (varies on usage)  |
| Operating environment |   |
| Temperature           | : 0°C to 40°C (32°F to 104°F) (charging)/<br>-10°C to 60°C (14°F to 140°F) (operation)/<br>-20°C to 35°C (-4°F to 95°F) (storage) |
| Dimensions            | : 31.5 × 39.5 × 6 mm (1.2 × 1.5 × 0.2 in.)  |
| Weight                | : Approx. 15 g (0.5 oz)   |


## ● Battery charger (LI-40C)

|                       |   |
|-----------------------|---|
| Power requirements    | : AC 100 to 240 V (50 to 60 Hz)<br>3.2 VA (100 V) to 5.0 VA (240 V)                   |
| Output                | : DC 4.2 V, 200 mA  |
| Charging time         | : Approx. 5 hours   |
| Operating environment |   |
| Temperature           | : 0°C to 40°C (32°F to 104°F) (operation)/<br>-20°C to 60°C (-4°F to 140°F) (storage) |
| Dimensions            | : 62 × 23 × 90 mm (2.4 × 0.9 × 3.5 in.)   |
| Weight                | : Approx. 65 g (2.3 oz)   |

Design and specifications subject to change without notice.


# Names of Parts

## Camera

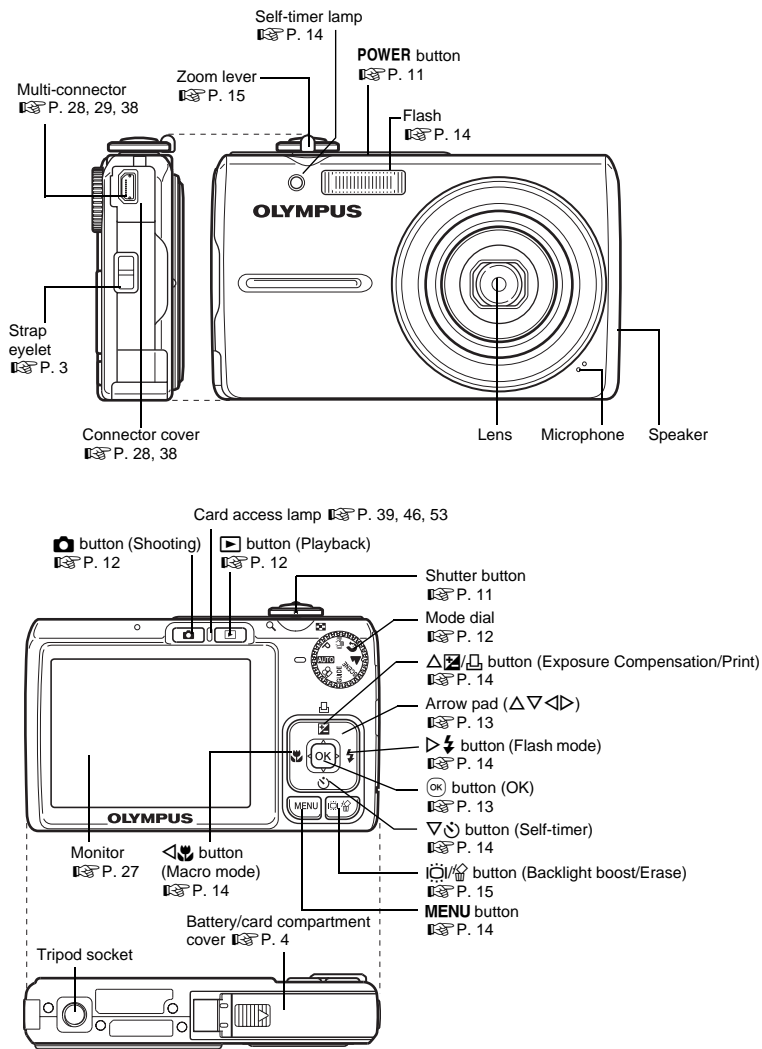


## Monitor Symbols & Icons

### ● Shooting Mode

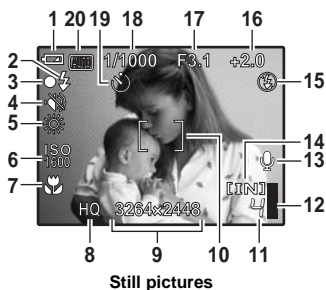


Still pictures

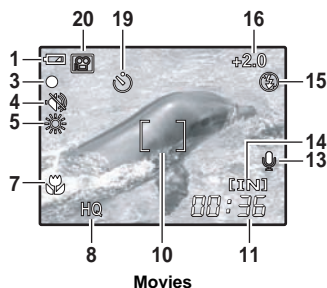

Movies

|    | Item   | Indications  | Ref. Page     |
|----|--|--|---------------|
| 1  | Battery check  | = full power,  = low power   | -             |
| 2  | Flash standby<br>Camera movement<br>warning/flash charge         | (Lit)<br>(Blinks)  | P. 42         |
| 3  | Green lamp   | = Auto Focus Lock  | P. 9, 11      |
| 4  | Silent mode  |  | P. 21         |
| 5  | White balance  |  | P. 20         |
| 6  | ISO  | ISO 50, ISO 400, ISO 1600, etc.  | P. 20         |
| 7  | Macro mode<br>Super macro mode                                   | <br>   | P. 14         |
| 8  | Image quality  | SHQ, HQ, SQ1, SQ2, SQ, 16:9  | P. 19         |
| 9  | Image size   | 3264 × 2448, 2048 × 1536, 640 × 480 etc.   | P. 19         |
| 10 | AF target mark   | [ ]  | P. 9          |
| 11 | Number of storable still<br>pictures<br>Remaining recording time | 4<br>00:36   | P. 9<br>P. 13 |
| 12 | Memory gauge   | (maximum reached)  | P. 42         |
| 13 | Sound record   |  | P. 20         |
| 14 | Current memory   | [IN] (Recording pictures to the internal memory),<br>[xD] (Recording pictures to the card) | P. 53         |
| 15 | Flash mode   |  | P. 14         |
| 16 | Exposure compensation  | -2.0 – +2.0  | P. 14         |
| 17 | Aperture value   | F3.1, etc.   | P. 9          |
| 18 | Shutter speed  | 4 to 1/2000  | P. 9          |
| 19 | Self-timer   |  | P. 14         |
| 20 | Shooting mode  | etc.   | P. 12         |

## ● Playback Mode

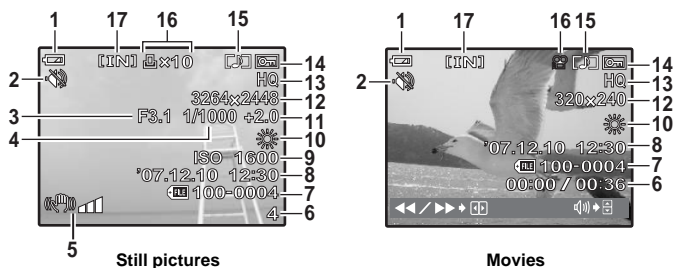

|    | Item  | Indications  | Ref. Page      |
|----|---|--|----------------|
| 1  | Battery check   | = full power,  = low power   | -              |
| 2  | Silent mode   |  | P. 21          |
| 3  | Aperture value  | F3.1, etc.   | P. 9           |
| 4  | Shutter speed   | 4 to 1/2000  | P. 9           |
| 5  | Blur caused by moving or shaking hands                | (stabilized pictures/corrected pictures)<br>(pictures that can be corrected)                           | P. 23          |
| 6  | Number of frames<br>Elapsed time/Total recording time | 4<br>00:00/00:36   | -<br>P. 22     |
| 7  | File number   | 100-0004   | -              |
| 8  | Date and time   | '07.12.10 12:30  | P. 28          |
| 9  | ISO   | ISO 50, ISO 400, ISO 1600, etc.  | P. 20          |
| 10 | White balance   |  | P. 20          |
| 11 | Exposure compensation                                 | -2.0 - +2.0  | P. 14          |
| 12 | Image size  | 3264 x 2448, 2048 x 1536, 640 x 480 etc.   | P. 19          |
| 13 | Image quality   | SHQ, HQ, SQ1, SQ2, SQ, 16:9  | P. 19          |
| 14 | Protect   |  | P. 25          |
| 15 | Sound record  |  | P. 20          |
| 16 | Print reservation/Number of prints<br>Movie           | x10<br>  | P. 32<br>P. 22 |
| 17 | Current memory  | [iN] (Playing back the picture in the internal memory),<br>[xD] (Playing back the picture in the card) | P. 53          |

# Index

|  |        |
|--|--------|
|  | 27     |
| <b>AUTO</b> (AUTO) .....                   | 6, 12  |
| button (backlight boost/erase) ...         | 10, 15 |
| button (flash mode) .....                  | 14     |
| button (macro) .....                       | 14     |
| button (OK) .....                          | 13, 17 |
| button (Playback mode) .....               | 10, 12 |
| button (exposure compensation/print) ..... | 14, 29 |
| button (self-timer) .....                  | 14     |
| button (Shooting mode) .....               | 12     |
| (D IMAGE STABILIZATION) .....              | 6, 12  |
| (LANDSCAPE) .....                          | 6, 12  |
| (MOVIE) .....                              | 11, 13 |
| (PORTRAIT) .....                           | 6, 12  |
| <b>P</b> (Program auto) .....              | 6      |
| 16:9 .....                                 | 19     |

## A

|                              |           |
|------------------------------|-----------|
| AF MODE .....                | 21        |
| ALL ERASE .....              | 26        |
| ALL INDEX .....              | 31        |
| ALL PRINT .....              | 31        |
| All-frame reservation        | 34        |
| Arrow pad () .....           | 6, 13, 17 |
| AUCTION                      | 12        |
| AUTO (ISO) .....             | 20        |
| AUTO (WB) WB AUTO .....      | 20        |
| Auto flash <b>AUTO</b> ..... | 14        |
| Auto focus .....             | 43        |
| AV cable .....               | 3, 28     |

## B

|                       |          |
|-----------------------|----------|
| BACKUP .....          | 26       |
| Battery .....         | 4, 50    |
| Battery charger ..... | 3, 4, 50 |
| Battery check .....   | 62       |
| BEEP .....            | 27       |
| BEHIND GLASS          | 12       |

## C

|                                 |            |
|---------------------------------|------------|
| CAMERA MENU .....               | 20         |
| CANDLE                          | 12         |
| Card .....                      | 45, 53     |
| Card access lamp .....          | 39, 46, 53 |
| Close-up playback               | 16         |
| Cloudy day                      | 20         |
| Compression .....               | 19         |
| Connector cover .....           | 28, 38     |
| Continuous recording time ..... | 45         |
| CUISINE                         | 12         |
| CUSTOM PRINT .....              | 30         |

## D

|                       |           |
|-----------------------|-----------|
| Date and time         | 7, 28, 43 |
| Digital zoom .....    | 13, 15    |
| Direct printing ..... | 29        |

|                |    |
|----------------|----|
| DIS EDIT ..... | 23 |
| DOCUMENTS      | 12 |
| DPOF .....     | 32 |

## E

|                       |        |
|-----------------------|--------|
| EASY PRINT .....      | 29     |
| EDIT .....            | 24     |
| ERASE .....           | 10, 25 |
| Error messages .....  | 48     |
| Exposure compensation | 44     |

## F

|                             |               |
|-----------------------------|---------------|
| FACE DETECT (AF MODE) ..... | 21            |
| File name .....             | 28, 32        |
| Fill-in flash               | 14            |
| FINE ZOOM .....             | 20            |
| FIREWORKS                   | 12            |
| Flash .....                 | 14            |
| Flash charge .....          | 42            |
| Flash mode                  | 14            |
| Flash off                   | 14            |
| Fluorescent lamp            | 20            |
| Focus .....                 | 9, 11, 43, 46 |
| Focus lock .....            | 11            |
| Format .....                | 26            |
| FORMAT .....                | 26            |

## G

|                                     |               |
|-------------------------------------|---------------|
| Green lamp .....                    | 9, 11, 43, 46 |
| <b>GUIDE</b> (Shooting guide) ..... | 6, 13         |

## H

|          |    |
|----------|----|
| HQ ..... | 19 |
|----------|----|

## I

|                       |                |
|-----------------------|----------------|
| iESP (AF MODE) .....  | 21             |
| IMAGE QUALITY .....   | 19, 46         |
| Image size .....      | 19             |
| INDEX .....           | 24             |
| Index display         | 16             |
| INDOOR                | 12             |
| Internal memory ..... | 26, 45, 47, 53 |
| ISO .....             | 20             |






## L

|                           |            |
|---------------------------|------------|
| Lens .....                | 11, 50, 61 |
| LIGHTING FIX              | 23         |
| Lithium ion battery ..... | 3, 4       |
| Low compression .....     | 19         |




## M

|                          |            |
|--------------------------|------------|
| Macro mode               | 14         |
| MEMORY FORMAT .....      | 26         |
| Memory gauge .....       | 42         |
| <b>MENU</b> button ..... | 14, 17     |
| Menu .....               | 17, 18     |
| Microphone .....         | 20, 61     |
| Mode dial .....          | 6, 12      |
| Monitor .....            | 11, 27, 62 |






|   |            |
|---|------------|
| Monitor brightness adjustment  | 27         |
| MOVIE PLAY                     | 22         |
| MULTI PRINT                    | 31         |
| Multi-connector                | 28, 29, 38 |
| MY FAVORITE                    | 23         |






















## N

|   |    |
|---|----|
| NIGHT+PORTRAIT                     | 12 |
| NTSC                               | 28 |
| Number of storable still pictures  | 45 |








## O

|   |        |
|---|--------|
| OLYMPUS Master   | 35, 38 |
| Operation guide  | 17, 30 |
| Optical zoom     | 13, 15 |









## P
























|   |                |
|---|----------------|
| PAL                                | 28             |
| PANORAMA                           | 21             |
| PC                                 | 35, 38         |
| PERFECT FIX                        | 23             |
| PictBridge                         | 29             |
| Picture rotation                   | 25             |
| PIXEL MAPPING                      | 27             |
| Playback mode                      | 10, 12, 16, 63 |
| Playback mode menu                 | 22             |
| Playback on a TV                   | 28             |
| Playing time/Total recording time  | 22             |
| POWER SAVE                         | 28             |
| <b>POWER</b>                       | 6              |
| <b>POWER</b> button                | 6, 11          |
| Press completely                   | 9              |
| Press halfway                      | 9              |
| PRINT ORDER                        | 31             |
| PRINT ORDER                      | 26             |
| Print settings                   | 32             |
| Printing pictures                | 29             |
| Protect                          | 25             |

## R




|   |        |
|---|--------|
| Recording movies with or without sound  | 21     |
| Recording                              | 25     |
| Recording sound with still pictures    | 20     |
| REDEYE FIX                             | 23     |
| Red-eye reduction flash                | 14     |
| RESET                                  | 19, 47 |
| RESIZE                                 | 24     |

## S

|  |                   |
|--|-------------------|
| SCENE (Scene)         | 6, 12, 20         |
| SEL. IMAGE            | 26                |
| Selecting a language  | 27                |
| SELF PORTRAIT         | 12                |
| Self-timer lamp       | 14, 46            |
| Self-timer            | 14                |
| SETUP menu            | 26                |
| Shooting mode         | 6, 12, 15, 49, 62 |

|  |        |
|--|--------|
| Shooting movies           | 11, 13 |
| Shooting still pictures   | 11     |
| SHQ                       | 19     |
| Shutter button            | 9, 11  |
| SHUTTER SOUND             | 27     |
| SILENT MODE               | 21     |
| Single-frame playback     | 16     |
| Single-frame reservation  | 33     |
| Sleep mode                | 42     |
| SLIDESHOW                 | 22, 23 |
| SMILE SHOT                | 12     |
| Speaker                   | 61     |
| SPORT                     | 12     |
| SPOT (AF MODE)            | 21     |
| SQ                        | 19     |
| SQ1                       | 19     |
| SQ2                       | 19     |
| STANDARD                  | 29     |
| Standard compression      | 19     |
| Strap                     | 3      |
| Sunny day                 | 20     |
| SUNSET                    | 12     |
| Super macro mode          | 14     |



## T

|  |            |
|--|------------|
| Top menu        | 17         |
| Trimming        | 24, 32, 33 |
| Tripod socket   | 61         |
| Tungsten light  | 20         |



## U

|   |                   |
|---|-------------------|
| UNDER WATER MACRO  | 12                |
| UNDER WATER WIDE1  | 12                |
| UNDER WATER WIDE2  | 12                |
| USB cable          | 3, 29, 35, 38, 39 |

## V

|   |        |
|---|--------|
| VIDEO OUT  | 28     |
| VOLUME     | 22, 27 |



## W

|  |    |
|--|----|
| Warning sound      | 27 |
| White balance WB  | 20 |

## X

|   |        |
|---|--------|
| xD-Picture Card  | 21, 53 |
|---|--------|

## Z

|  |    |
|--|----|
| Zoom        | 15 |
| Zoom lever  | 15 |





# OLYMPUS®

<http://www.olympusamerica.com/>

## OLYMPUS IMAGING AMERICA INC.

3500 Corporate Parkway, P.O. Box 610, Center Valley, PA 18034-0610, U.S.A. Tel. 484-896-5000

### Technical Support (USA)

24/7 online automated help: <http://www.olympusamerica.com/support>  
Phone customer support: Tel. 1-888-553-4448 (Toll-free)

Our phone customer support is available from 8 am to 10 pm (Monday to Friday) ET  
<http://olympusamerica.com/contactus>

Olympus software updates can be obtained at: <http://www.olympusamerica.com/digital>  
To find the nearest Service Centers, please visit: <http://www.olympusamerica.com/digital>,  
and click on the Worldwide Warranty icon at the bottom of the page.

### Service Centers

#### U.S.A.:

- California** **Olympus Imaging America Inc.**  
10805 Holder Street Suite 170  
Cypress, CA 90630-5145  
Tel: (888) 553-4448
- New York** **Olympus Imaging America Inc.**  
400 Rabro Drive  
Hauppauge, NY 11788-4258  
Tel: (888) 553-4448

#### Canada:

**Olympus Canada Inc.**  
**Consumer Products Group**  
151 Telson Road  
Markham, Ontario Canada L3R 1E7  
Tel. (888)553-4448

#### Mexico:

**Olympus Imaging de Mexico S.A. de C.V.**  
WTC Mexico,  
Montecito No.38 - Lobby - Office 3  
Col. Napoles, Mexico D.F. 03810  
Tel. (01800)800-2128  
E-mail: [oimx@olympus.com](mailto:oimx@olympus.com)

#### Argentina:

**Jesus Labrador**  
Paraguay 755 PB, C1057AAI - Buenos Aires  
Tel: (011) 4313-3174 Fax: (011) 4312-5239  
E-Mail: [olympus@jesuslabrador.com.ar](mailto:olympus@jesuslabrador.com.ar)

**Jesus Labrador**  
Bartolome Mitre 860  
C1036AAP - Buenos Aires  
Tel: (011) 4331-1227 Fax: (011) 4331-1247  
E-mail: [service@basr.com.ar](mailto:service@basr.com.ar)

#### Brazil:

**Rio de Janeiro Assistec**  
Rua Uruguiana, 94-Sobreloja  
Centro-Rio de Janeiro CEP 20050-091  
Tel: (021) 2242-3236 Fax: (021) 2242-3236  
E-Mail: [rio@assistecs.com.br](mailto:rio@assistecs.com.br)

#### Sao Paulo

**Assistec**  
Rua Avanhandava 126, 3 Andar  
Consolação, São Paulo  
Tel: (011) 3123-3100 Fax: (011) 3214-0706  
E-mail: [ASSISTECSS@UOL.COM.BR](mailto:ASSISTECSS@UOL.COM.BR)

**Assistec**  
Filial Shopping Eldorado  
Av. Rebouças 3970, 1 Subsolo, Loja 1035  
Pinheiros, Sao Paulo  
Tel: (011) 3815-3054 Fax: (011) 3814-4398  
E-mail: [ASSISTECSS@UOL.COM.BR](mailto:ASSISTECSS@UOL.COM.BR)

#### Chile:

**REIFSCHEIDER S.A.**  
Camino El Conquistador del Monte 5024  
Huechuraba, Santiago  
Tel: 56-2-6781200 Fax: 56-2-6781202  
E-mail: [olympus@reifschneider.cl](mailto:olympus@reifschneider.cl),  
[serviciotecnico@reifschneider.cl](mailto:serviciotecnico@reifschneider.cl)

#### Colombia:

**CV Tronica LTDA**  
Calle 68 No 12-57, Bogota  
Tel: (0571)235-7260/348-1573  
Fax: (0571) 348-1574  
E-mail: [servicio@cvtronica.com](mailto:servicio@cvtronica.com)

**CV Tronica LTDA**  
Cra 9 No 23-49 Local 215 C.C Intercentro, Bogota  
Tel: (0571)284-4365

**CV Tronica LTDA**  
Av. Cra 15 No 105A-22 Piso 2 Local 5, Bogota  
Tel: (0571)637-3540

#### Panama:

**FOTOSER**  
Edif. El Paical, Oficina No3, P.A.  
Urb. Herbruger, Transistmica  
(Detras del S/M Riba Smith),  
Tel/Fax: (507) 261-0436  
E-mail: [rearanda@rocketmail.com](mailto:rearanda@rocketmail.com)

#### Uruguay:

**Fotocamera S.R.L.**  
Rondeau 1470 Montevideo  
Tel: (02) 900-2004 Fax: (02) 900-8430  
E-mail: [FOTOCAM@ADINET.COM.UY](mailto:FOTOCAM@ADINET.COM.UY)

#### Venezuela:

**Micron C.A.**  
4ta. transversal Urb. Horizonte,  
Edificio América, Mezanine, Caracas 1070-A  
Tel: (0212) 238-3526 Fax: (0212) 239-8598  
E-mail: [serviciotecnico@micron.com.ve](mailto:serviciotecnico@micron.com.ve)