

Getting started with  
Logitech®  
Stereo Speakers + Subwoofer Z623



Model:  
S-00105 (110V~)  
S-00104 (220-240V~)

Thank you! 感謝您! 감사합니다!

**English**

Thank you for purchasing the Logitech Stereo Speakers + Subwoofer Z623—a THX®-certified 2.1 system for big, bold sound from your music, movies, and games.

**繁體中文**


感謝您購買羅技立體聲音箱 + 重低音音箱 Z623—通過 THX® 認證的 2.1 聲道系統，讓您在聆聽音樂、觀賞影片、玩遊戲時都能體驗豐富渾厚的音效。

**한국어**

음악, 영화, 게임의 크고 웅장한 사운드를 제공하는 THX® 인증 2.1 시스템인 로지텍 스테레오 스피커 + 서브우퍼 Z623 을 구입해 주셔서 감사합니다.



1

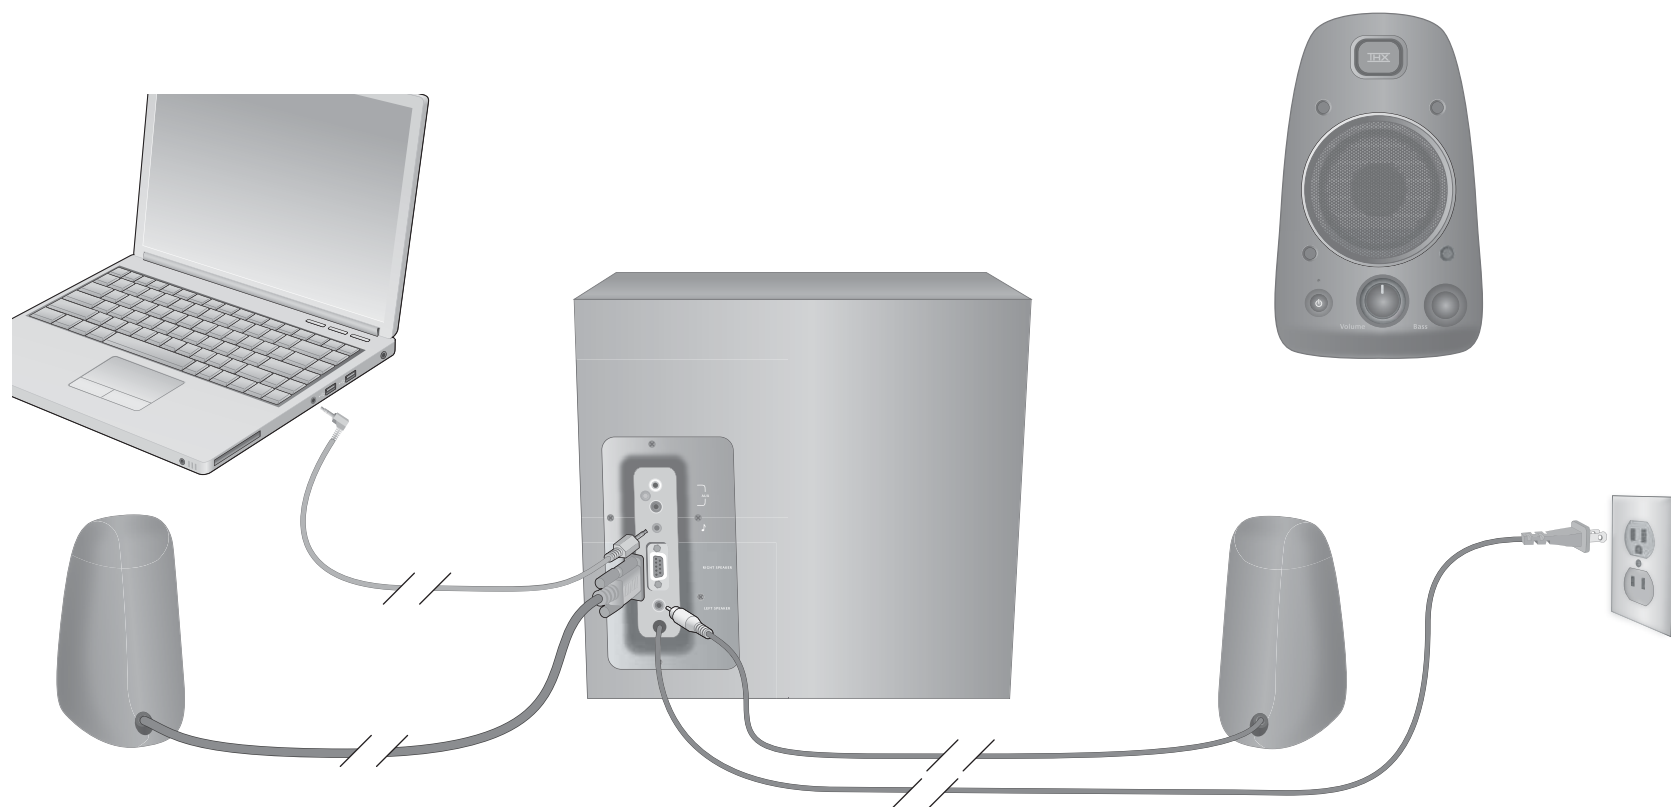

2



**English**

Plug your headphones into the jack on the right speaker. To adjust the volume for your headphones, use the controls on the front of the right speaker.

**한국어**

오른쪽 스피커의 잭에 헤드폰을 연결합니다. 헤드폰 볼륨을 조절하려면 오른쪽 스피커 전면에 있는 컨트롤을 사용합니다.

**繁體中文**

將耳機插入右側音箱的插孔。若要調整耳機的音量，請使用右側音箱前面的控制鈕。

3



**English**

To use the auxiliary input on the right speaker, plug your MP3 player or other device into the auxiliary jack using the included 3.5 mm cable. If you are using the headphone output on your device, make sure the volume level on your device is set to 80% or higher. To adjust the volume on the speakers, use the controls on the front of the right speaker.


**繁體中文**

若要使用右側音箱的輔助輸入端子，請使用隨附的 3.5 mm 連接線將 MP3 播放器或其他裝置插入輔助輸入插孔。如果您是使用裝置上的耳機輸出，請確認裝置的音量已設定至 80% 或更高。若要調整音箱的音量，請使用右側音箱前面的控制鈕。

**한국어**

오른쪽 스피커의 보조 입력을 사용하려면 제공된 3.5 mm 케이블을 사용하여 MP3 플레이어나 다른 장치를 보조 잭에 연결합니다. 장치의 헤드폰 출력을 사용하는 경우 장치의 볼륨 레벨이 80% 이상으로 설정되어 있는지 확인합니다. 스피커에서 볼륨을 조절하려면 오른쪽 스피커 전면에 있는 컨트롤을 사용합니다.

# 4

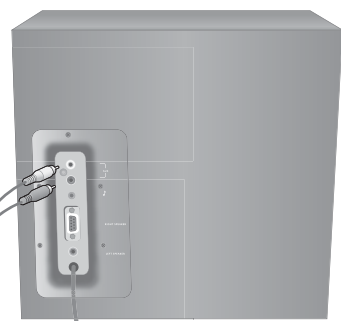

## English

To use the RCA auxiliary input jacks on the rear of the subwoofer, plug your Logitech Squeezebox, DVD player, or game console into the RCA jacks using a 2-channel RCA cable (not included).

## 繁體中文

若要使用重低音音響後方的 RCA 輔助輸入端子插孔，請使用雙聲道 RCA 連接線 (需另購) 將羅技 Squeezebox、DVD 播放器或遊戲主機插上 RCA 插孔。

## 한국어

서브우퍼 후면의 RCA 보조 입력 잭을 사용하려면 2 채널 RCA 케이블 (포함되어 있지 않음) 을 사용하여 Logitech Squeezebox, DVD 플레이어 또는 게임 콘솔을 RCA 잭에 연결합니다.

## Help with Setup

### English

#### Something not sound right? No sound at all?

- If one speaker doesn't produce sound, unplug your speakers and plug them in fully.
- Make sure the left speaker is plugged into the black RCA jack on the subwoofer.
- Make sure the speakers are plugged into an AC outlet and the power button is on.
- Try connecting the speakers to an alternate audio source—for example, an MP3 or CD player.
- Sound from the speaker is muted whenever headphones are plugged in. Try unplugging them to restore sound to the speakers.

Visit [www.logitech.com](http://www.logitech.com) for more troubleshooting tips.

#### Input:

110V~ 60Hz 900mA (Model: S-00105)

220-240V~ 50/60Hz 600mA (Model: S-00104, International except China version)

220-240V~ 50/60Hz 450mA (Model: S-00104, China version only)

## 安裝說明

### 繁體中文

#### 聲音聽起來不正常？沒有聲音？

- 如果其中一個音響沒有發出聲音，請拔出音響接頭然後徹底地插入。
- 確認左側音響已插入重低音音響上的黑色 RCA 插孔。
- 確認音響的插頭已經插上電源插座，且電源已開啟。
- 嘗試將音響與其他音訊來源連接，例如 MP3 或 CD 播放器。
- 當插上耳機時，音響會自動靜音。請嘗試將耳機接頭拔出，讓音響恢復發聲。

若要取得更多疑難排解秘訣，請瀏覽 [www.logitech.com](http://www.logitech.com)。

#### 輸入:

110V~ 60Hz 900mA (Model: S-00105)

## 설치 도움말

### 한국어

#### 소리에 문제가 있습니까? 전혀 소리가 나지 않습니까?

- 한쪽 스피커에서만 소리가 나지 않을 경우 스피커를 완전히 뽑은 후 다시 제대로 꽂습니다.
- 왼쪽 스피커가 서브우퍼의 검은색 RCA 잭에 꽂혀 있는지 확인합니다.
- 스피커가 AC 콘센트에 꽂혀 있고 전원 버튼이 켜져 있는지 확인합니다.
- 스피커를 MP3 나 CD 플레이어 등의 다른 오디오 소스에 연결해 봅니다.
- 헤드폰을 꽂으면 스피커는 자동으로 음소거됩니다. 스피커에서 소리가 나도록 헤드폰을 뽑아 봅니다.

자세한 문제 해결 정보를 보려면 [www.logitech.com](http://www.logitech.com) 을 방문하십시오.

#### 입력:

220-240V~ 50/60Hz 600mA (Model: S-00104, KR)



[www.logitech.com/support](http://www.logitech.com/support)

© 2010 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

Apple, Mac, and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.

THX is a trademark of THX Ltd.