marantz®

# Consolette

Premium
Speaker Dock

Quick Setup
Guide

**because music matters**

www.marantz.com

Consolette

# You can't get any closer to music

EN Thank you for purchasing the *Marantz Consolette*.
Let's get started to play your music!

DE Vielen Dank für den Kauf der *Marantz Consolette*.
Lassen Sie uns Ihre Musik abspielen!

FR Merci d'avoir fait l'acquisition de la *Marantz Consolette*.
C'est parti pour écouter vos musiques!

ES Gracias por adquirir *Marantz Consolette*.
¡Empieza a reproducir tu Música!

NL Bedankt dat u hebt gekozen voor de *Marantz Consolette*.
Laten we snel aan de slag gaan zodat u uw musiek kunt afspelen!

IT Grazie per aver scelto *Marantz Consolette*.
Iniziate subito ad ascoltare und po' di musica!

SE Tack för att du valt *Marantz Consolette*.
Kom igång med att spela din musik!

JP マランツ コンソレットをお買い上げ頂き、
ありがとうございます。

CH 感谢您购买 *Marantz Consolette*
让我们开始播放您的音乐吧!

DE

## Musik abspielen

Schalten Sie Ihre Consolette ein und docken Sie Ihr iOS-Gerät.

01 Verbinden Sie das mitgelieferte Stromkabel der Consolette mit einer Steckdose.
02 Betätigen Sie den „AN / STANDBY"-Schalter auf Ihrer Consolette.
03 Drücken Sie, um den Dock auszufahren, Musik abzuspielen und Ihr iOS-Gerät aufzuladen.
✓ Für das Netzwerk-Setup gehen Sie zu ***Seite 7***.

FR

## Profitez de votre musique

Mise en marche de votre Consolette et insertion de votre appareil iOS.

01 Branchez le cordon d'alimentation fourni avec votre Consolette à une prise de courant.
02 Pressez le bouton «ON / STANDBY» de votre Consolette.
03 Pressez pour ouvrir la station d'accueil permettant d'écouter votre musique et de charger votre appareil iOS.
✓ Allez à la ***page 7*** pour configurer la connexion réseau.

ES

## Cómo disfruta de la música

Enciende la Consolette y acopla el dispositivo iOS.

01 Conecta la Consolette a una toma de alimentación eléctrica con el cable de alimentación provisto.
02 Pulsa el botón "ON / STANDBY" (ENCENDIDO / EN ESPERA) que se encuentra en la parte posterior de la Consolette.
03 Pulsa para dejar a la vista la base a fin de reproducir música y cargar el dispositivo iOS.
✓ Ve a la ***página 7*** para obtener datos sobre la configuración de red.

NL

## Naar muziek luisteren

De Consolette inschakelen en uw iOS-apparaat op het dock plaatsen.

01 Sluit het meegeleverde netsnoer van de Consolette aan op een stopcontact.
02 Druk op de knop "ON / STANDBY" (Aan/stand-by) op de achterkant van de Consolette.
03 Druk om het dock te onthullen, zodat u uw muziek kunt afspelen en uw iOS-apparaat kunt opladen.
✓ Ga naar de ***pagina 7*** voor de netwerkconfiguratie.

IT

## Ascolto della musica

Accendere la Consolette e inserire il dispositivo iOS nella docking station.

01 Collegare il cavo di alimentazione fornito in dotazione della Consolette a una presa di corrente.
02 Premere il pulsante "ON / STANDBY" sul retro della Consolette.
03 Premere per scoprire la docking station al fine di riprodurre la musica e caricare il dispositivo iOS.
✓ Passare alla ***pagina 7*** per la configurazione di rete.

SE

## Njut av din musik

Slå på Consolette och docka din iOS-enhet

01 Anslut den medföljande nätsladden från din Consolette till ett eluttag.
02 Tryck in "ON / STANDBY" -knappen på din Consolette.
03 Tryck för att öppna dockan för att kunna spela din musik och ladda din iOS-enhet.
✓ Gå till ***sid 7*** för nätverksinställningar.

JP

## 音楽をお楽しみください

コンソレットの電源を入れて、iOS デバイスをドックに接続します。

01 同梱のコンソレットの電源ケーブルをコンセントに接続してください。
02 コンソレットの裏側の「ON / STANDBY（オン/スタンバイ）」ボタンを押します。
03 トレイを押すと、ドックアダプターが出てきます。iOS デバイスを接続して、音楽を再生したり、充電をすることができます。
✓ ***7***ページのネットワークセットアップをご覧下さい 。

CH

## 欣赏您的音乐

打开您的 Consolette 并将您的苹果 iOS 设备放入底座。

01 将原装 Consolette 电源线接至电源插座。
02 按下您 Consolette 上的 "ON / STANDBY"（开启/待机）按钮。
03 要播放音乐并为您的 iOS 设备充电，请按下按钮，以使底座露出。
✓ 网络设置请转至第 ***7*** 页。

# Enjoying your Music

## Turn on your Consolette & dock your iOS device

Push in the "ON/STANDBY" Button on the backside of your Consolette.

02

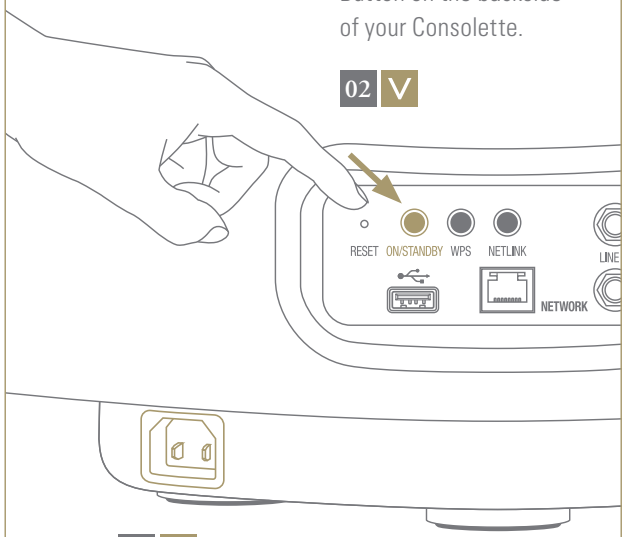


01

Connect the supplied power cord from the Consolette to a power outlet.

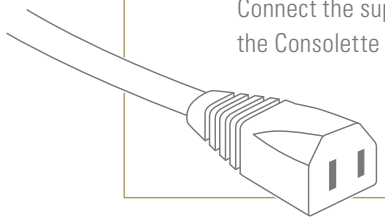

03

Press to reveal the dock in order to play your music and charge your iOS device.

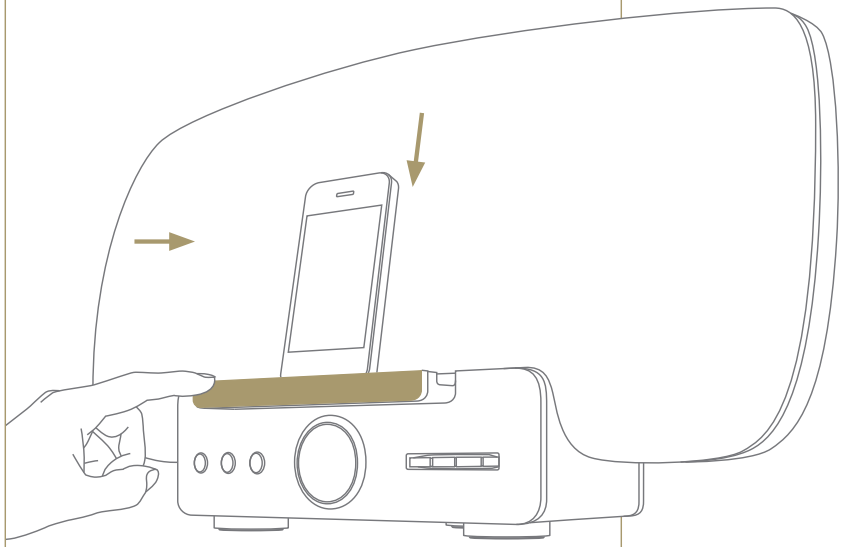

Go to *page 7* for network setup.

DE

## Eine Verbindung zu Ihrem Heim-Netzwerk herstellen

01 Wireless — Wählen Sie eine der folgenden Möglichkeiten:
A iOS-Gerät — Wenn Sie im Besitz eines iOS-Geräts sind, gehen Sie zu ***Seite 9***.
B WPS-Router — Wenn Sie nicht im Besitz eines iOS-Geräts sind, sondern einen WPS-Router besitzen, gehen Sie zu ***Seite 15***.
C Kein WPS-Router — Wenn Sie kein iOS-Gerät und keinen WPS-Router besitzen, gehen Sie zu ***Seite 17***.
02 Kabelgebunden — Vor den Anschließen schalten Sie das Gerät durch Drücken der „ON/STANDBY"-Taste aus. Einmal verbunden schalten Sie es wieder ein.
✓ Verbinden Sie das mitgelieferte LAN-Kabel von Ihrem Router zu Ihrer Consolette. Gehen Sie dann zu ***Seite 21***.

FR

## Connexion à votre réseau domestique

01 Réseau sans fil — Choisissez l'une des options suivantes:
A Appareil iOS — Si vous avez un appareil iOS, allez à la ***page 9***.
B Routeur WPS — Si vous n'avez pas d'appareil iOS, mais un routeur WPS, allez à la ***page 15***.
C Pas de routeur WPS — Si vous n'avez ni appareil iOS, ni routeur WPS, allez à la ***page 17***.
02 Réseau câblé — Avant de vous connecter, veuillez éteindre l'appareil en pressant le bouton «ON/STANDBY». Une fois connecté, appuyez sur ON.
✓ Avec le câble réseau fourni, raccordez votre routeur à votre Consolette. Puis allez à la ***page 21***.

ES

## Conexión a la red doméstica

01 Inalámbrica — Elige una de las opciones siguientes:
A Dispositivo iOS — Si tienes un dispositivo iOS, ve a la ***página 9***.
B Router WPS — Si no tienes un dispositivo iOS, pero sí un router WPS, ve a la ***página 15***.
C Sin router WPS — Si no tienes un dispositivo iOS ni tampoco un router WPS, ve a la ***página 17***.
02 Conexión con cable — Antes de conectar, apaga la unidad presionando el botón "ON/STANDBY" Una vez conectado enciende otra vez con ON.
✓ Conecta el cable LAN provisto entre el router y la Consolette. Luego consulta la ***página 21***.

NL

## Aansluiten op een thuisnetwerk

01 Draadloos — Kies een van de volgende opties:
A iOS-apparaat — Als u een iOS-apparaat hebt, gaat u naar ***pagina 9***.
B WPS-router — Als u geen iOS-apparaat hebt, maar wel een WPS-router, gaat u naar ***pagina 15***.
C Geen WPS-router — Als u geen iOS-apparaat en geen WPS-router hebt, gaat u naar ***pagina 17***.
02 Bedraad — Schakel het toestel uit voordat u de kabel aansluit door op de "ON/STANDBY"-toets te drukken. Schakel het toestel na het aansluiten weer in.
✓ Sluit de meegeleverde LAN-kabel aan tussen de router en de Consolette. Ga vervolgens naar ***pagina 21***.

IT

## Connessione alla rete domestica

01 Wireless — Scegliere una delle seguenti opzioni:
A Dispositivo iOS — Se si possiede un dispositivo iOS, andare a ***pagina 9***.
B Router WPS — Se non si possiede un dispositivo iOS ma un router WPS, andare a ***pagina 15***.
C Senza router WPS — Se non si possiede un dispositivo iOS né un router WPS, andare a ***pagina 17***.
02 Con cavo — Prima del collegamento spegnere l'apparecchio premendo il tasto "ON/STANDBY". Una volta collegati riaccendere l'apparecchio premendo il tasto 'ON'.
✓ Con il cavo LAN fornito in dotazione collegare il router all'impianto Consolette. Quindi passare a ***pagina 21***.

SE

## Anslut till ditt hemmanätverk

01 Trådlös | Välj ett av följande alternativ
A iOS-enhet | Om du har en iOS-enhet gå till ***sid 9***.
B WPS-router | Om du inte har en iOS-enhet och du har en WPS-router, gå till ***sid 15***.
C Ingen WPS-router | Om du inte har varken en iOS-enhet eller WPS-router, gå till ***sid 17***.
02 Trådbunden I Innan du ansluter, stäng av enheten genom att trycka på "ON/STANDBY"-knappen. När den är ansluten, starta enheten med ON –knappen".
✓ Anslut den medföljande nätverkskabeln mellan routern och din Consolette, och gå sedan till ***sid 21***.

JP

## ホームネットワークに接続する

01 無線接続の場合
次のオプションから選択してください。
A iOS デバイス
iOS デバイスをお持ちの際は *9* ページをご覧下さい。
B WPS-router（WPSルーター）
WPS ルーターをお持ちで、iOS デバイスをお持ちでない場合は *15* ページをご覧下さい。
C WPS-router（WPSルーター）無し
iOS デバイスも WPS-router（WPSルーター）もお持ちでない場合は *17* ページをご覧下さい。
02 有線接続の場合
ケーブルを接続する前に、「ON/STANDBY (オン/スタンバイ)」 ボタンでスイッチをオフにしてください。接続後、再度オンにしてください。
✓ 同梱のLANケーブルでルーターとコンソレットを接続してください。
*21*ページをご覧下さい。

CH

## 连接至您的家庭网络

01 无线
从以下选项中选择一项。
A iOS 设备
如果您有一部 iOS 设备，那么请转至第 *9* 页。
B WPS-router（WPS 路由器）
如果您没有 iOS 设备但有一部 WPS 路由器，请转至第 *15* 页。
C 没有 WPS 路由器
如果您既没有 iOS 设备也没有 WPS 路由器，请转至第 *17* 页。
02 有线
接连之前，请先按 "ON/STANDBY" 按钮关闭本机。连接成功后再打开电源。
✓ 请用原装 iOS（局域网）电缆将您的路由器和您的 Consolette 连接起来。
然后转至第 *21* 页。

# Connecting to your Home Network

## 01 Wireless

*Choose from one of the following options*

### A iOS device

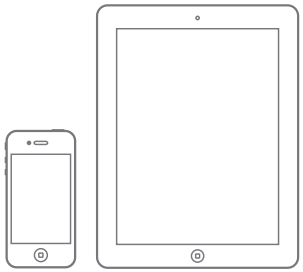

If you have an iOS device,
go to ***page 9.***

### B WPS router

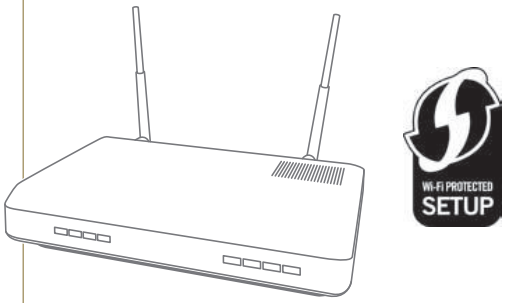


If you don't have an iOS device and you have a WPS router, go to ***page 15.***

### C No WPS router

If you don't have an iOS device or a WPS router, go to ***page 17.***

## 02 Wired

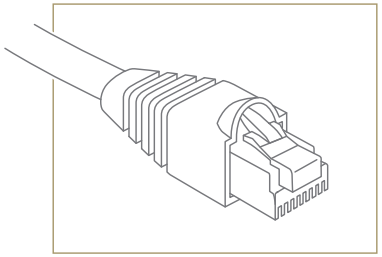

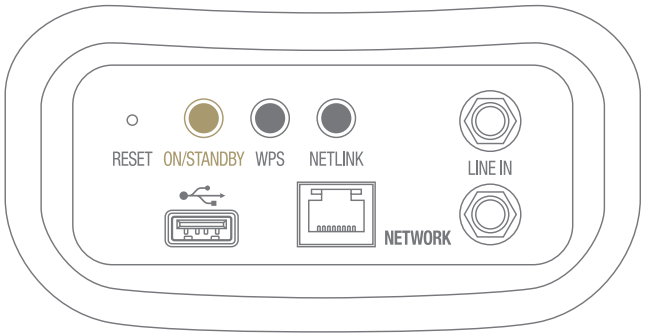


Before connecting, switch the unit OFF by pressing the "ON/STANDBY" button. Once connected switch ON again.

Connect the supplied LAN cable between your router and your Consolette, then go to ***page 21.***

DE

## Mit dem Heim-Netzwerk verbinden mit Hilfe der Marantz Consolette App

Mit Hilfe Ihres iOS-Geräts kann die Marantz Consolette App automatisch die Netzwerkeinstellungen Ihrer Consolette konfigurieren.

01 Gehen Sie auf den App Store® und suchen Sie nach „Marantz Consolette“.
> Downloaden und installieren Sie die kostenlose Marantz Consolette App. Gehen Sie zu ***Seite 11***.
02 Scannen Sie den QR-Code mit Hilfe Ihres iOS-Geräts und einer Scan-App, um die kostenlose Marantz Consolette App zu downloaden und zu installieren. Gehen Sie zu ***Seite 11***.

Wenn Sie im Besitz eines Android-Geräts sind, gehen Sie zu ***Seite 21***.

FR

## Connexion à votre réseau domestique en utilisant l'application Marantz Consolette

En utilisant votre appareil iOS, l'application Marantz Consolette peut configurer automatiquement les paramètres réseau sur votre Consolette.

01 Rendez vous sur l'App Store® et cherchez «Marantz Consolette».
> Téléchargez et installez l'application gratuite Marantz Consoöette. Allez à la ***page 11***.
02 Lisez le code QR pour télécharger et installer l'application gratuite Marantz Consolette en utilisant votre appareil iOS et une application de décodage. Allez à la ***page 11***.

Si vous avez un appareil Android, allez à la ***page 21***.

ES

## Conexión de la red doméstica con la aplicación Marantz Consolette

Mediante el dispositivo iOS, la aplicación Marantz Consolette puede configurar automáticamente los ajustes de red en la Consolette.

01 Ve a la App Store® y busca “Marantz Consolette”
> Descarga e instala la aplicación gratuita Marantz Consolette. Ve a la ***página 11***.
02 Escanea el código QR para descargar e instalar la aplicación gratuita Marantz Consolette mediante el dispositivo iOS y una aplicación de escaneo de códigos. Ve a la ***página 11***.

Si tienes un dispositivo Android, ve a la ***página 21***.

NL

## Aansluiten op een thuisnetwerk met de Marantz Consolette-app

Als u de Marantz Consolette-app gebruikt op uw iOS-apparaat, kunt u de netwerkinstellingen van de Consolette automatisch configureren.

01 Ga naar de Apple App Store® en zoek naar “Marantz Consolette”.
> Download en installeer de gratis Marantz Consolette-app. Ga naar ***pagina 11***.
02 Scan de QR-code met een scan-app op uw iOS-apparaat om de gratis Marantz Consolette-app te downloaden en installeren. Ga naar ***pagina 11***.

Als u een Android-apparaat hebt, gaat u naar ***pagina 21***.

IT

## Connessione alla rete domestica con l'app Marantz Consolette

Con il dispositivo iOS, l'app Marantz Consolette può configurare automaticamente le impostazioni di rete della Consolette.

01 Andare nell'App Store® e cercare “Marantz Consolette”.
> Scaricare e installare l'app gratuita Marantz Consolette. Andare a ***pagina 11***.
02 Acquisire il codice QR per scaricare e installare l'app gratuita Marantz Consolette tramite il proprio dispositivo iOS e un'app di scansione. Andare a ***pagina 11***.

Se si possiede un dispositivo Android, andare a ***pagina 21***.

SE

## Anslut till ditt hemnätverk med hjälp av appen Marantz Consolette

Med hjälp av din iOS-enhet kan appen Marantz Consolette konfigurera nätverksinställningarna automatiskt på din Consolette.

01 Gå till din App Store® och sök efter “Marantz Consolette”.
> Ladda ner och installera den kostnadsfria appen Marantz Consolette. Gå till ***sid 11***.
02 Skanna QR-koden för att hämta och installera den kostnadsfria appen Marantz Consolette med hjälp av din iOS-enhet och en scanningsapp. Gå till ***sid 11***.

Om du har en Android-enhet, gå till ***sid 21***.

JP

## マランツコンソレットアプリを使用してホームネットワークに接続する。

iOSデバイス上でマランツコンソレットアプリを使用すると、自動的にコンソレットのネットワークの設定をすることができます。

01 App Store® で「Marantz Consolette」と検索してください。
＞マランツコンソレットアプリをダウンロードしてインストールしてください。
> マランツコンソレットアプリをダウンロードしてインストールしてください。
***11*** ページに進む。
02 iOSデバイスと QR コードリーダーアプリで QR コードをスキャンし、無料のマランツコンソレットアプリをダウンロードしてください。
***11*** ページに進む。

Android デバイスをお持ちの際は ***21*** ページをご覧ください。

CH

## 使用 Marantz Consolette App* 连接至您的家庭网络

Marantz Consolette App 能够通过您的 iOS 设备自动配置您 Consolette 的网络设置。

01 转至 App 商店R并搜索 “Marantz Consolette”。
> 下载并安装免费的 Marantz Consolette App。
请转至第 ***11*** 页。
02 请使用您的 iOS 设备和一款扫描应用程序扫描 二维码以便下载并安装免费的 Marantz Consolette App。
请转至第 ***11*** 页。

如果您拥有的是一部 Android 设备，那么请转至第 ***21*** 页。

# A Connecting to your Home Network using the Marantz Consolette App

Using your iOS device, the Marantz Consolette App can automatically configure the network settings on your Consolette.

**01**

Go to the Apple App Store® and search for "Marantz Consolette".

>

Download and install the free Marantz Consolette App.

Go to *page 11.*

**02**

Scan the QR Code to download and install the free Marantz Consolette App using your iOS device and a scanning app.

If you have an Android device, go to *page 21.*

Go to *page 11.*

DE

## Mit dem Heim-Netzwerk verbinden mit Hilfe der Marantz Consolette App (Fortsetzung)

Docken Sie Ihr iOS-Gerät.

01 Berühren Sie die Ablage, um den Dock auszufahren.

02 Setzen Sie Ihr iOS-Gerät auf den Dock.

> Gehen Sie zu ***Seite 13***.

FR

## Connexion à votre réseau domestique en utilisant l'application Marantz Consolette (suite)

Insertion de votre appareil iOS dans la station d'accueil.

01 Appuyez sur le tiroir pour ouvrir la station d'accueil.

02 Placez votre appareil iOS sur la station d'accueil.

> Allez à la ***page 13***.

ES

## Conexión de la red doméstica con la aplicación Marantz Consolette (Continuación)

Acopla el dispositivo iOS.

01 Pulsa la bandeja para dejar a la vista la base.

02 Coloca el dispositivo iOS encima de la base que aparece.

> Ve a la ***página 13***.

NL

## Aansluiten op een thuisnetwerk met de Marantz Consolette-app (vervolg)

Het iOS-device in het dock plaatsen.

01 Druk op de lade om het dock te onthullen.

02 Plaats het Apple iOS-apparaat op het onthulde dock.

> Ga naar ***pagina 13***.

IT

## Connessione alla rete domestica con l'app Marantz Consolette (continua)

Inserire il dispositivo iOS nella docking station.

01 Premere il vassoio per scoprire la docking station.

02 Inserire il dispositivo iOS nella docking station.

> Andare a ***pagina 13***.

SE

## Anslut till ditt hemnätverk med hjälp av appen Marantz Consolette (fortsättning)

Docka din iOS-enhet

01 Tryck på displayen för att öppna dockan.

02 Placera din iOS-enhet i dockan.

> Gå till ***sid 13***.

JP

## マランツコンソレットアプリを使用してホームネットワークに接続する（続き）

iOS デバイスをドックに接続します。

01 トレイを押すとドックが出てきます。

02 出てきたドックに iOS デバイスを接続します。

> ***13*** ページに進む。

CH

## 使用 Marantz Consolette App 连接至您的家庭网络（接上页）

将您的苹果 iOS 设备放入底座。

01 按下托盘以露出底座。

02 将您的苹果 iOS 设备放在露出的底座顶部。

> 请转至第 ***13*** 页。

# Connecting to your Home Network using the Marantz Consolette App (Continued)

Dock your iOS device.

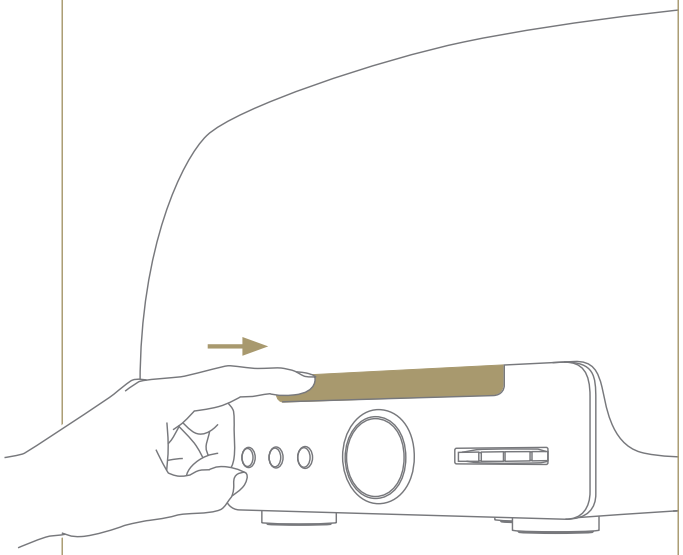

01

Press on tray
to reveal the dock.

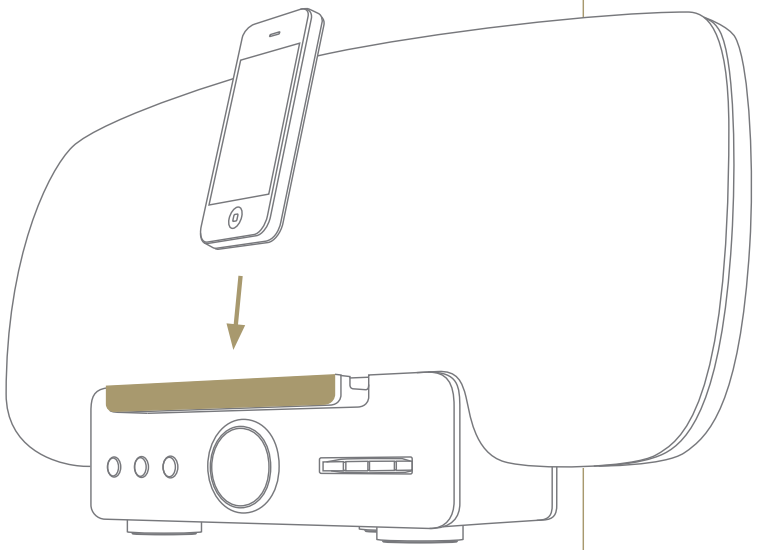

02

Place your iOS device
into the dock.

Go to *page 13.*

DE

## Mit dem Heim-Netzwerk verbinden mit Hilfe der Marantz Consolette App (Fortsetzung)

Öffnen Sie die Marantz Consolette App
… und befolgen Sie die Anweisungen.

! NetLink funktioniert nur, während Ihr iOS-Gerät sich im Dock befindet. Lesen Sie ***Seite 11***.

Sobald eine Netzwerkverbindung hergestellt ist, erscheint auf dem Display.

☑ Gehen Sie zu ***Seite 21***.

FR

## Connexion à votre réseau domestique en utilisant l'application Marantz Consolette (suite)

Lancement de l'application Marantz Consolette
… et suivez les instructions.

! NetLink fonctionne uniquement quand votre appareil iOS est placé dans la station d'accueil. Voir ***page 11***.

Une fois le réseau activé, s'affiche à l'écran.

☑ Allez à la ***page 21***.

ES

## Conexión de la red doméstica con la aplicación Marantz Consolette (Continuación)

Abre la aplicación Marantz Consolette
… y sigue las instrucciones.

! NetLink solo funciona cuando el dispositivo iOS está acoplado. Consulta la ***página 11***.

Una vez la red está conectada, aparece en la pantalla.

☑ Ve a la ***página 21***.

NL

## Aansluiten op een thuisnetwerk met de Marantz Consolette-app (vervolg)

Open de Marantz Consolette-app
… en volg de instructies.

! NetLink werkt alleen als uw iOS-apparaat op het dock is geplaatst. Zie ***pagina 11***.

Na verbinding met het netwerk verschijnt op het display.

☑ Ga naar ***pagina 21***.

IT

## Connessione alla rete domestica con l'app Marantz Consolette (continua)

Aprire l'app Marantz Consolette
… e seguire le istruzioni.

! NetLink funziona soltanto quando il dispositivo iOS è collegato alla docking station. Vedere ***pagina 11***.

Una volta che il collegamento della rete è attivo, sul display appare

☑ Andare a ***pagina 21***.

SE

## Anslut till ditt hemnätverk med hjälp av appen Marantz Consolette (fortsättning)

Öppna appen Marantz Consolette
… och följ instruktionerna

! NetLink fungerar bara när iOS-enheten är dockad. Se ***sid 11***.

När nätverket är anslutet visas på displayen.

☑ Gå till ***sid 21***.

JP

## マランツコンソレットアプリを使用してホームネットワークに接続する（続き）

マランツコンソレットアプリを開く

! NetLink (ネットリンク)アプリは iOS デバイスがドックに接続されているときのみ作動します。*11* ページをご確認ください。

ネットワークの接続後、 がディスプレイに表示されます。

☑ *21* ページに進む。

CH

## 使用 Marantz Consolette App 连接至您的家庭网络（接上页）

打开 Marantz Consolette App
… 并按指示操作。

! 只有将您的 iOS 设备放入底座之后，NetLink 才会发生作用。请查看第 *11* 页。

一旦连接上网络， 将会显示在屏幕上。

☑ 请转至第 *21* 页。

# Connecting to your Home Network using the Marantz Consolette App (Continued)

Open the
Marantz Consolette App

! NetLink only works when your iOS device is docked. See *page 11*.

… and follow the instructions

Once network is connected, appears on the display.

Go to *page 21*.

DE

## Mit dem Heim-Netzwerk verbinden mit Hilfe eines WPS-Routers

Wi-Fi gesichertes Setup

01 Drücken Sie den WPS-Schalter auf Ihrem Router.
02 Drücken Sie anschließend innerhalb von ***2 Minuten*** den WPS-Schalter auf Ihrer Consolette.
03 Bitte haben Sie ein wenig Geduld, da die Verbindungsherstellung einige Minuten in Anspruch nehmen kann. Die vordere Anzeige der Consolette zeigt den Verbindungsstatus.
✓ Gehen Sie zu ***Seite 21***.

FR

## Connexion à votre réseau domestique en utilisant un routeur WPS

Configuration d'un réseau Wi-Fi protégé

01 Appuyez sur le bouton WPS de votre routeur.
02 Puis, appuyez sur le bouton WPS de votre Consolette dans les ***deux minutes*** qui suivent.
03 Attendez patiemment l'établissement de la connexion qui peut prendre quelques minutes. L'écran en façade de la Consolette affichera le statut de la connexion.
✓ Allez à la ***page 21***.

ES

## Conexión a la red doméstica mediante un router WPS

Configuración para Wi-Fi protegida

01 Pulsa el botón WPS del router.
02 Luego pulsa el botón WPS de la Consolette en un periodo de ***2 minutos*** como máximo.
03 Espera un momento, puesto que la conexión puede tardar unos minutos en realizarse. El panel frontal de la Consolette mostrará el estado de la conexión.
✓ Ve a la ***página 21***.

NL

## Aansluiten op een thuisnetwerk met een WPS-router

Beschermde configuratie via Wi-Fi

01 Druk op de WPS-knop op de router.
02 Druk vervolgens binnen ***2 minuten*** op de WPS-knop op de Consolette.
03 Het tot stand brengen van de verbinding kan enkele minuten duren. Op het frontpaneel van de Consolette wordt de status van de verbinding weergegeven.
✓ Ga naar ***pagina 21***.

IT

## Connessione alla rete domestica con un router WPS

Configurazione Wi-Fi protetta

01 Premere il tasto WPS del router.
02 Entro ***2 minuti***, premere il tasto WPS della Consolette.
03 Attendere; la connessione potrebbe durare qualche minuto. Il pannello anteriore della Consolette indica lo stato della connessione.
✓ Andare a ***pagina 21***.

SE

## Anslut till ditt hemnätverk med en WPS-router

Wi-Fi skyddad installation

01 Tryck på WPS-knappen på din router.
02 Tryck sedan på WPS-knappen på din Consolette inom ***2 minuter.***
03 Vänta ett tag då slutförandet av anslutningen kan ta några minuter. Frampanelen på din Consolette kommer att visa status för anslutningen.
✓ Gå till ***sid 21***.

JP

## WPS ルーターを使用してホームネットワークに接続する

Wi-Fi Protected Setup

01 ルーターの WPS ボタンを押してください。
02 *2*分以内にコンソレットの WPS ボタンを押してください。
03 接続が完了するまで数分間待ちます。 コンソレットのディスプレイに接続状況が表示されます。
✓ *21* ページに進む。

CH

## 请使用一部 WPS 路由器连接至您的家庭网络

Wi-Fi 加密设置

01 请按下您路由器上的 WPS 按钮。
02 然后在 *2* 分钟内按下您 Consolette 上的 WPS 按钮。
03 请稍候，完成连接可能需要几分钟的时间。 Consolette 的前端面板将会显示连接状态。
✓ 请转至第 *21* 页。

# B Connecting to your Home Network using a WPS Router

## Wi-Fi protected setup

01

Press the WPS button
on your Router.

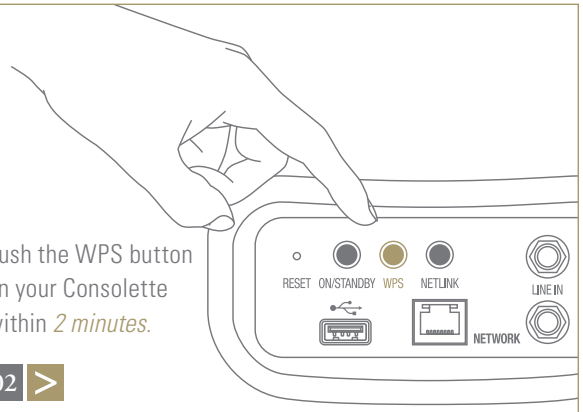


Push the WPS button
on your Consolette
within *2 minutes.*

02

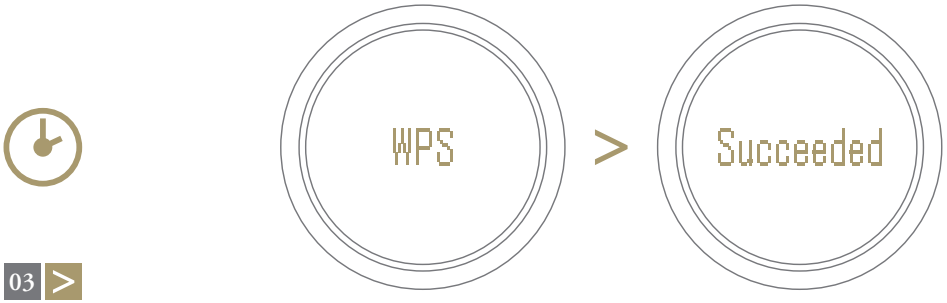


03

Please wait as completing the connection can take a few minutes.
The front panel of the Consolette will show the status of the connection.

Go to *page 21.*

DE

## Mit dem Heim-Netzwerk verbinden mit Hilfe eines PC oder Mac

Starten Sie neu und wählen Sie Ihr Netzwerk.

01 Drücken Sie den „NETLINK"-Schalter.
02 Bitte haben Sie ein wenig Geduld, da der Neustart ungefähr 30 Sekunden dauert.
03 Wählen Sie auf Ihrem Mac oder PC das Netzwerk namens „Consolette_Setup XXXXXX" aus Ihren Wi-Fi-Netzwerkeinstellungen (Mac) oder aus Ihrer Taskleiste (PC).
✓ Gehen Sie zu ***Seite 19***.

FR

## Connexion à votre réseau domestique en utilisant un PC ou un Mac

Redémarrage et sélection du réseau.

01 Appuyez sur le bouton NETLINK.
02 Veuillez patienter, le redémarrage pouvant prendre 30 secondes.
03 Sur votre Mac ou PC, sélectionnez le réseau «Consolette_Setup XXXXXX» apparaissant dans les paramètres réseau Wi-Fi (Mac) ou dans la barre des tâches (PC).
✓ Allez à la ***page 19***.

ES

## Conexión a la red doméstica mediante un PC o Mac

Reinicia el equipo y selecciona la red.

01 Pulsa el botón NETLINK.
02 Espera, puesto que el reinicio puede tardar aproximadamente 30 segundos.
03 En Mac o PC, selecciona la red llamada "Consolette_Setup XXXXXX" desde la configuración de redes inalámbricas (Mac) o desde la barra de tareas (PC).
✓ Ve a la ***página 19***.

NL

## Aansluiten op een thuisnetwerk met een pc of Mac

Opnieuw opstarten en het netwerk selecteren.

01 Druk op de NETLINK-knop.
02 Het opnieuw opstarten kan ongeveer 30 seconden duren.
03 Selecteer op uw Mac of pc het netwerk met de naam "Consolette_Setup XXXXXX" in de Wi-Fi-netwerkinstellingen (Mac) of op de taakbalk (pc).
✓ Ga naar ***pagina 19***.

IT

## Connessione alla rete domestica con un PC o Mac

Riavviare e selezionare la rete.

01 Premere il tasto NETLINK.
02 Attendere; il riavvio durerà all'incirca 30 secondi.
03 Dal Mac o dal PC, selezionare la rete "Consolette_Setup XXXXXX" dalle impostazioni della rete Wi-Fi (Mac) o dalla barra delle applicazioni (PC).
✓ Andare a ***pagina 19***.

SE

## Anslut till ditt hemnätverk med en PC eller Mac

Starta om och välj ditt nätverk

01 Tryck på NET LINK-knappen.
02 Vänta ett tag då omstart kan ta ca 30 sekunder.
03 På din Mac eller PC, markera nätverket "Consolette_Setup XXXXXX" under Wi-Fi-nätverksinställningar (Mac) eller aktivitetsfältet (PC).
✓ Gå till ***sid 19***.

JP

## PC かマックを使用してホームネットワークに接続する

再起動してネットワークを選択します。

01 NETLINK（ネットリンク）ボタンを押します。
02 再起動が完了する 30 秒ほどかかりますのでお待ち下さい。
03 マックの場合は Wi-Fi ネットワーク設定、PC の場合はタスクバーから、「Consolette_Setup XXXXXX」というネットワークを選択します。
✓ ***19*** ページに進 。

CH

## 请使用一台 PC 或 Mac 电脑连接至您的家庭网络

重启并选择您的网络。

01 按下 NETLINK 按钮。
02 请稍候，重启可能需要大约 30 秒的时间。
03 在您的 Mac 或 PC 电脑上，请在 Wi-Fi 网络设置 (Mac) 或任务栏 (PC) 中选择名为 "Consolette_Setup XXXXXX" 的网络。
✓ 请转至第 ***19*** 页。

XXXXXX: MAC address

# C Connecting to your Home Network using a PC or Mac

## Reboot and select your network

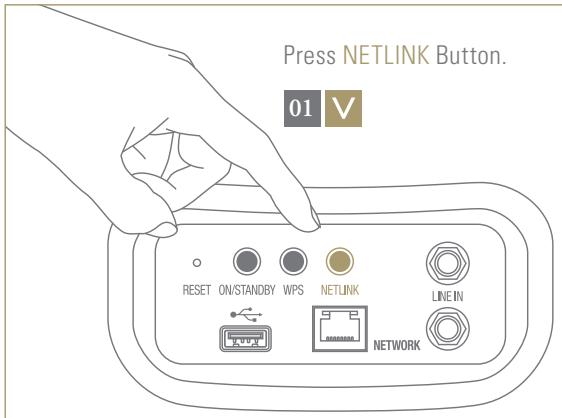


Press NETLINK Button.

01 V

02 >

Please wait as rebooting may take approximately 30 seconds.

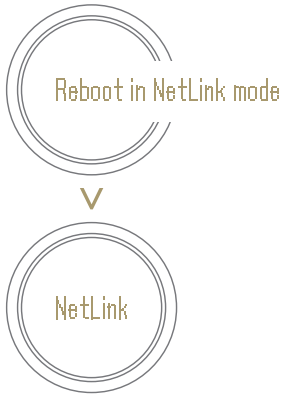


03 >

On your Mac or PC, select network called "Consolette_Setup XXXXXX" from the Wi-Fi network settings (Mac) or task bar (PC).

Mac

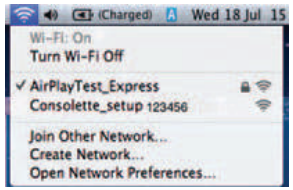


45 s

PC

45–120 s

XXXXXX: MAC address

Go to *page 19.*

DE

## Mit dem Heim-Netzwerk verbinden mit Hilfe eines PC oder Mac (Fortsetzung)

Verwenden Sie Ihren Webbrowser für die Konfiguration.

01 Starten Sie Ihren Webbrowser und geben Sie in die Adresszeile folgende Adresse ein: *http://169.254.1.1*

02 Klicken Sie auf *Profile Configuration*.

03 Wählen Sie den Namen Ihres Heimnetzwerks (*SSID*) aus dem Auswahlmenü und geben Sie das Passwort ein (sofern zutreffend). Klicken Sie auf *APPLY* (Anwenden), um die Einstellungen auf Ihrer Consolette zu speichern..

04 Bitte haben Sie ein wenig Geduld, da der Neustart ungefähr *30 – 120 Sekunden* dauert.

✓ Gehen Sie zu *Seite 21*.

! Weitere Unterstützung erhalten Sie im Benutzerhandbuch auf der mitgelieferten CD-ROM.

FR

## Connexion à votre réseau domestique en utilisant un PC ou un Mac (suite)

Utilisation de votre navigateur Internet pour la configuration.

01 Lancez votre navigateur Internet et saisissez *http://169.254.1.1* dans la barre d'adresse.

02 Cliquez sur *Profile Configuration*.

03 Sélectionnez le nom de votre réseau domestique (*SSID*) dans la liste déroulante et saisissez le mot de passe (le cas échéant). Cliquez sur *APPLY* (Appliquer) pour enregistrer ces paramètres dans votre Consolette.

04 Veuillez patienter, le redémarrage pouvant prendre *30 – 120 secondes*.

✓ Allez à la *page 21*.

! Pour une aide supplémentaire, merci de vous référer au manuel sur le CD-ROM fourni.

ES

## Conexión a la red doméstica mediante un PC o Mac (Continuación)

Utiliza el navegador web para realizar la configuración.

01 Inicia el navegador web y conéctate a *http://169.254.1.1* en la barra de direcciones.

02 Haz clic en *Profile Configuration*.

03 Selecciona el nombre de tu red doméstica (*SSID*) de la lista desplegable y escribe la contraseña (si es necesario). Haz clic en *APPLY* (Aplicar) para guardar estos ajustes en el Consolette.

04 Espera, puesto que el reinicio puede tardar aproximadamente entre *30 y 120 segundos*.

✓ Ve a la *página 21*.

! Para mas ayuda, por favor vaya al manual de usuario suministrado en el CD-ROM.

NL

## Aansluiten op een thuisnetwerk met een pc of Mac (vervolg)

Webbrowser gebruiken voor configuratie.

01 Start een webbrowser en maak verbinding met *http://169.254.1.1* in de adresbalk.

02 Klik op *Profile Configuration*.

03 Selecteer de naam van je thuisnetwerk (*SSID*) in de vervolgkeuzelijst en voer het wacht woord in (indien van toepassing). Klik op *APPLY* (Toepassen) om deze instellingen op je Consolette op te slaan.

04 Het opnieuw opstarten kan ongeveer *30 – 120 seconden* duren.

✓ Ga naar *pagina 21*.

! Voor verdere ondersteuning verwijzen wij u naar de gebruikershandleiding op de meegeleverde CD-ROM.

IT

## Connessione alla rete domestica con un PC o Mac (continua)

Utilizzare il browser Web per la configurazione.

01 Avviare il browser Web e collegarsi all'indirizzo *http://169.254.1.1* nella barra degli indirizzi.

02 Fare clic su *Profile Configuration*.

03 Scegliere il nome della rete domestica (*SSID*) dall'elenco a discesa e immettere la password (se applicabile). Fare clic su *APPLY* (Applica) per salvare le impostazioni nell'impianto Consolette.

04 Attendere; il riavvio durerà all'incirca *30 – 120 secondi*.

✓ Andare a *pagina 21*.

! Per ulteriori informazioni si prega di consultare il Manuale Utente sul CD-ROM in dotazione.

SE

## Anslut till ditt hemnätverk med en PC eller Mac (fortsättning)

Använd en webbläsare för konfiguration

01 Starta din webbläsare och anslut till *http://169.254.1.1* i adressfältet.

02 Klicka på *Profile Configuration* (Profilkonfiguration).

03 Välj ditt hemnätverk (*SSID*) i rullgardinslistan och ange lösenordet (i förekommande fall). Klicka på *APPLY* (Använd) när du vill spara inställningarna på din Consolette.

04 Vänta ett tag då omstart kan ta cirka *30 – 120 sekunder*.

✓ Gå till *sid 21*.

! För mer support information, vänligen referera till Bruksanvisningen på den medföljande CD-ROM skivan.

JP

## PC かマックを使用してホームネットワークに接続する（続き）

ウェブブラウザを使用して設定しま 。

01 ウエブブラウザを起動して、アドレスバーに *http://169.254.1.1* と入力して接続します。

02 *Profile Configuration* をクリックします。

03 ドロップダウンリストからホームネットワークの名前（*SSID*）を選択して、パスワードを入力します（適宜）。*APPLY*（適用）をクリックして、設定をコンソレットに書き込みます。

04 再起動が完了するまで *30*～*120* 秒ほどかかりますのでお待ち下さい。

✓ *21*ページに進む。

! 詳細につきましては、付属の CD-ROM に入っている取扱説明書をご覧ください。

CH

## 请使用一台 PC 或 Mac 电脑连接至您的家庭网络（接上页）

通过网页浏览器进行配置。

01 启动您的网页浏览器并在地址栏中输入地址 *http://169.254.1.1*。

02 单击 *Profile Configuration*。

03 从下拉列表中选择您的家庭网络名称（*SSID*）并输入密码（如适用）。点击 *APPLY*（应用），将这些设置保存至您的 Consolette。

04 请稍候，重启可能需要大约 *30 – 120* 秒的时间。

✓ 请转至第 *21* 页。

! 更多支持请参阅 CD 光盘中的用户手册。

# Connecting to your Home Network using a PC or Mac (Continued)

## Use web browser for configuration

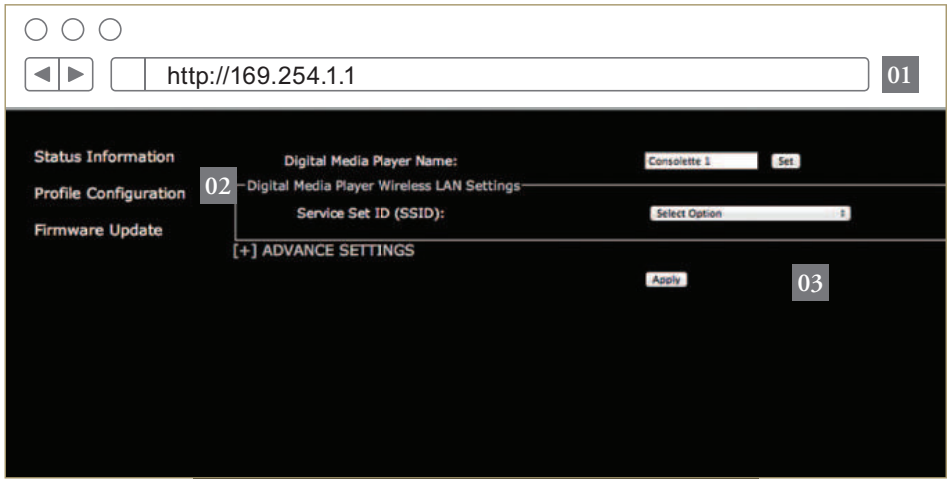


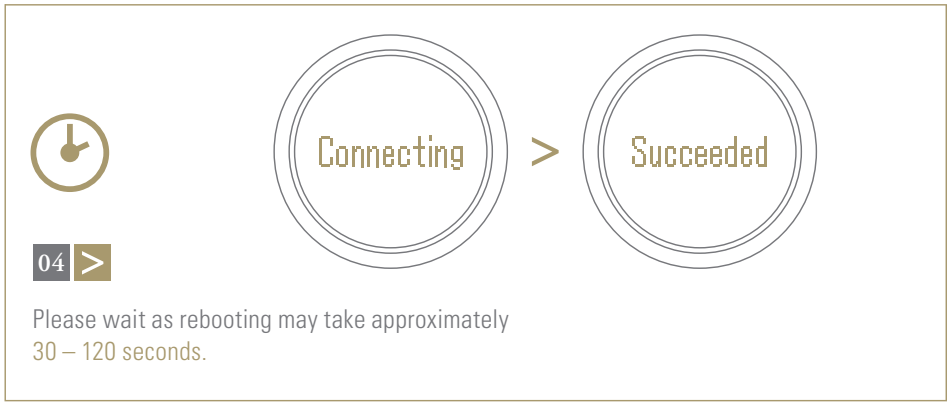


Please wait as rebooting may take approximately 30 – 120 seconds.

**01** Launch a web browser and connect to http://169.254.1.1 in the address bar.

**02** Click Profile Configuration.

**03** Select your home network name (SSID) from the drop down list and enter the password (if applicable). Then click Apply to save these settings to your Consolette.

**!** For further support please refer to the Owner's Manual on the supplied CD-ROM.

Go to *page 21.*

DE

## Musik abspielen mit Hilfe der Marantz Consolette App

01 Downloaden Sie die Marantz Consolette App:
Gehen Sie auf den App Store® oder Google Play und suchen Sie nach „*Marantz Consolette*“ oder scannen Sie den QR-Code, um die Marantz Consolette App mit Ihrem Smartphone und einer Scan-App zu downloaden und zu installieren.

02 Wählen Sie einen Musik-Player …
… und genießen Sie Ihre Lieblingsmusik.

FR

## Écouter ses musiques avec l'application Marantz Consolette

01 Téléchargement de l'application Marantz Consolette:
Allez sur l'App Store ou sur Google Play et cherchez «*Marantz Consolette*» ou lisez le code QR pour télécharger et installer l'application Marantz Consolette au moyen de votre smartphone et d'une application de décodage.

02 Sélectionnez le lecteur de musique …
… et écoutez vos morceaux préférés.

ES

## Reproducción de música con la aplicación Marantz Consolette

01 Descarga la aplicación Marantz Consolette:
Ve a Apple App StoreR o a Google Play y busca “*Marantz Consolette*” o escanea el código QR para descargar e instalar la aplicación Marantz Consolette con el teléfono inteligente y una aplicación de escaneo de códigos.

02 Selecciona el reproductor de música …
… y empieza a disfrutar de tu música favorita.

NL

## Luisteren naar muziek met de Marantz Consolette -app

01 De Marantz Consolette-app downloaden:
Ga naar de App Store® of naar Google Play en zoek naar “*Marantz Consolette*” of scan de QR-code met een scan-app op uw smartphone om de Marantz Consolette-app te downloaden en installeren.

02 Selecteer de muziekspeler …
… en geniet van uw favoriete muziek.

IT

## Ascolto di musica con l'app Marantz Consolette

01 Scaricare l'app Marantz Consolette:
Andare nell'App Store® di Apple o su Google Play e cercare “*Marantz Consolette*” oppure acquisire il codice QR per scaricare e installare l'app Marantz Consolette con uno smartphone e un'app di scansione.

02 Scegliere il lettore …
… e godersi la propria musica preferita.

SE

## Njut av musik med hjälp av appen Marantz Consolette

01 Ladda ner appen Marantz Consolette
Gå till Apple App Store® eller Google Play och sök efter “*Marantz Consolette*” eller skanna QR-koden för att ladda ner och installera den kostnadsfria appen Marantz Consolette med hjälp av din smartphone och en scanningsapp.

02 Välj Musikspelare …
… och njut av din favoritmusik.

JP

## マランツコンソレットアプリを使用して音楽を楽しむ。

01 マランツコンソレットアプリをダウンロードする。
App Store®もしくは Google Play で「*Marantz Consolette*」を検索するか、スマートフォンのQRコードリーダーアプリで QR コードをスキャンして、マランツコンソレットアプリをダウンロードしてインストールしてください。

02 ミュージックプレーヤーを選択します ...
... そしてお好きな音楽をお楽しみください。

CH

## 通过 Marantz Consolette App 欣赏音乐

01 下载 Marantz Consolette App
使用您的智能电话和一款扫描应用程序，转至 App Store®或者 Google Play 并搜索 “*Marantz Consolette*” 或者扫描二维码，进而下载并安装 Marantz Consolette App。

02 选择音乐播放器...
... 并欣赏您最喜爱的音乐。

# Enjoying Music
# using the Marantz Consolette App

**01** Download the Marantz Consolette App.

Go to the App Store® or to Google Play and search for "Marantz Consolette" or scan the QR Code to dowload and install the free Marantz Consolette App using your smartphone and a scanning app.

**02** Select Music Player …

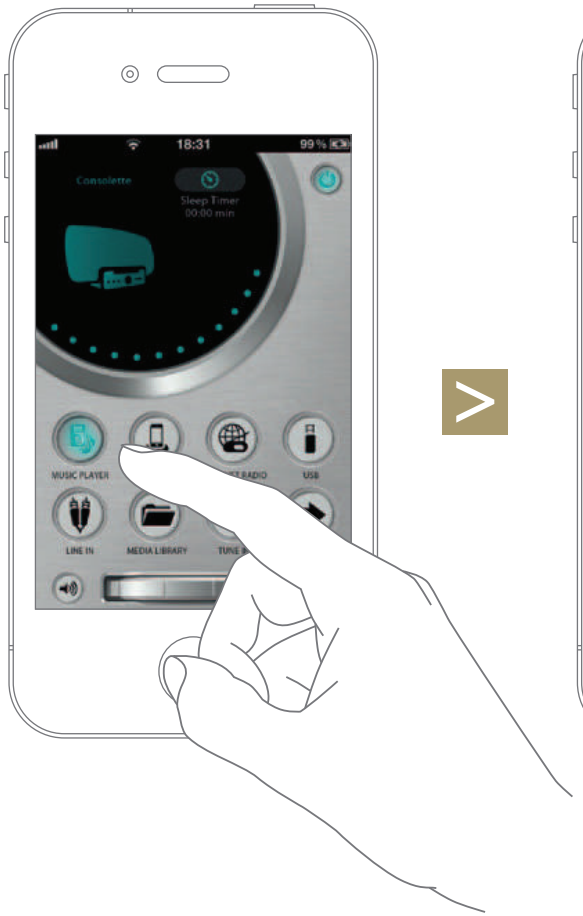


… and enjoy your favourite music.

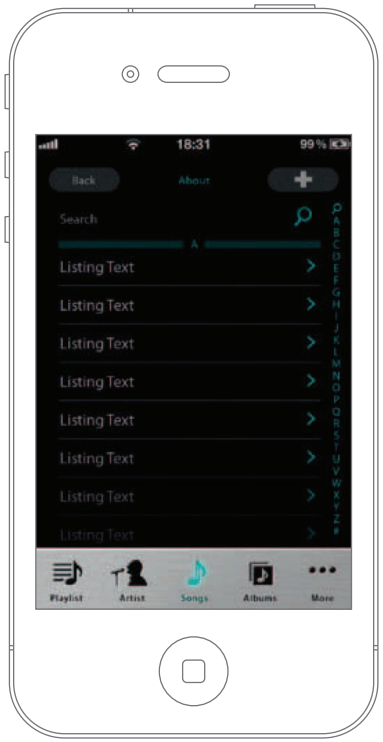

DE

## Musik abspielen mit Hilfe von Apple AirPlay®

01 Berühren Sie das AirPlay-Symbol der Musik-App die AirPlay unterstützt.
02 Wählen Sie Marantz Consolette aus der Liste der AirPlay-Geräte.
✓ Genießen Sie Ihre Musik!

FR

## Écouter ses musiques avec Apple AirPlay®

01 Activez l'icône AirPlay depuis l'une des applications musicales prenant en charge cette fonction.
02 Sélectionnez Marantz Consolette dans la liste des appareils AirPlay.
✓ Profitez de votre musique!

ES

## Reproducción de música con Apple AirPlay®

01 Pulsa el icono AirPlay desde cualquier aplicación compatible con AirPlay.
02 Selecciona Marantz Consolette desde la lista de dispositivos AirPlay.
✓ ¡Disfruta de la música!

NL

## Luisteren naar muziek met Apple AirPlay®

01 Tik op het AirPlay-symbool in een willekeurige muziek-app die AirPlay ondersteunt.
02 Selecteer de Marantz Consolette in de AirPlay-lijst met apparaten.
✓ Geniet van uw muziek!

IT

## Ascolto di musica con Apple AirPlay®

01 Sfiorare l'icona di AirPlay da una qualsiasi app musicale che supporti AirPlay.
02 Selezionare Marantz Consolette dall'elenco dei dispositivi AirPlay.
✓ Godetevi la musica!

SE

## Njut av musik med hjälp av Apple AirPlay®

01 Tryck på AirPlay-ikonen inifrån någon musikapp som stödjer AirPlay
02 Välj Marantz Consolette från AirPlays enhetslista
✓ Njut av din musik!

JP

## Apple AirPlayを利用して音楽を楽しむ

01 AirPlay をサポートするミュージックアプリの AirPlay アイコンをクリックしてください。
02 AirPlay デバイスリストからマランツコンソレットを選択します。
✓ 音楽をお楽しみください！

CH

## 通过苹果 AirPlay 欣赏音乐

01 在任一款支持 AirPlay 的音乐播放应用程序中，按下 AirPlay 图标。
02 从 AirPlay 设备列表中选择 Marantz Consolette。
✓ 欣赏您的音乐吧！

# Enjoying Music using Apple AirPlay®

**01** Tap the AirPlay Icon from within any music app that supports AirPlay.

**02** Select the Marantz Consolette from the AirPlay Device list.

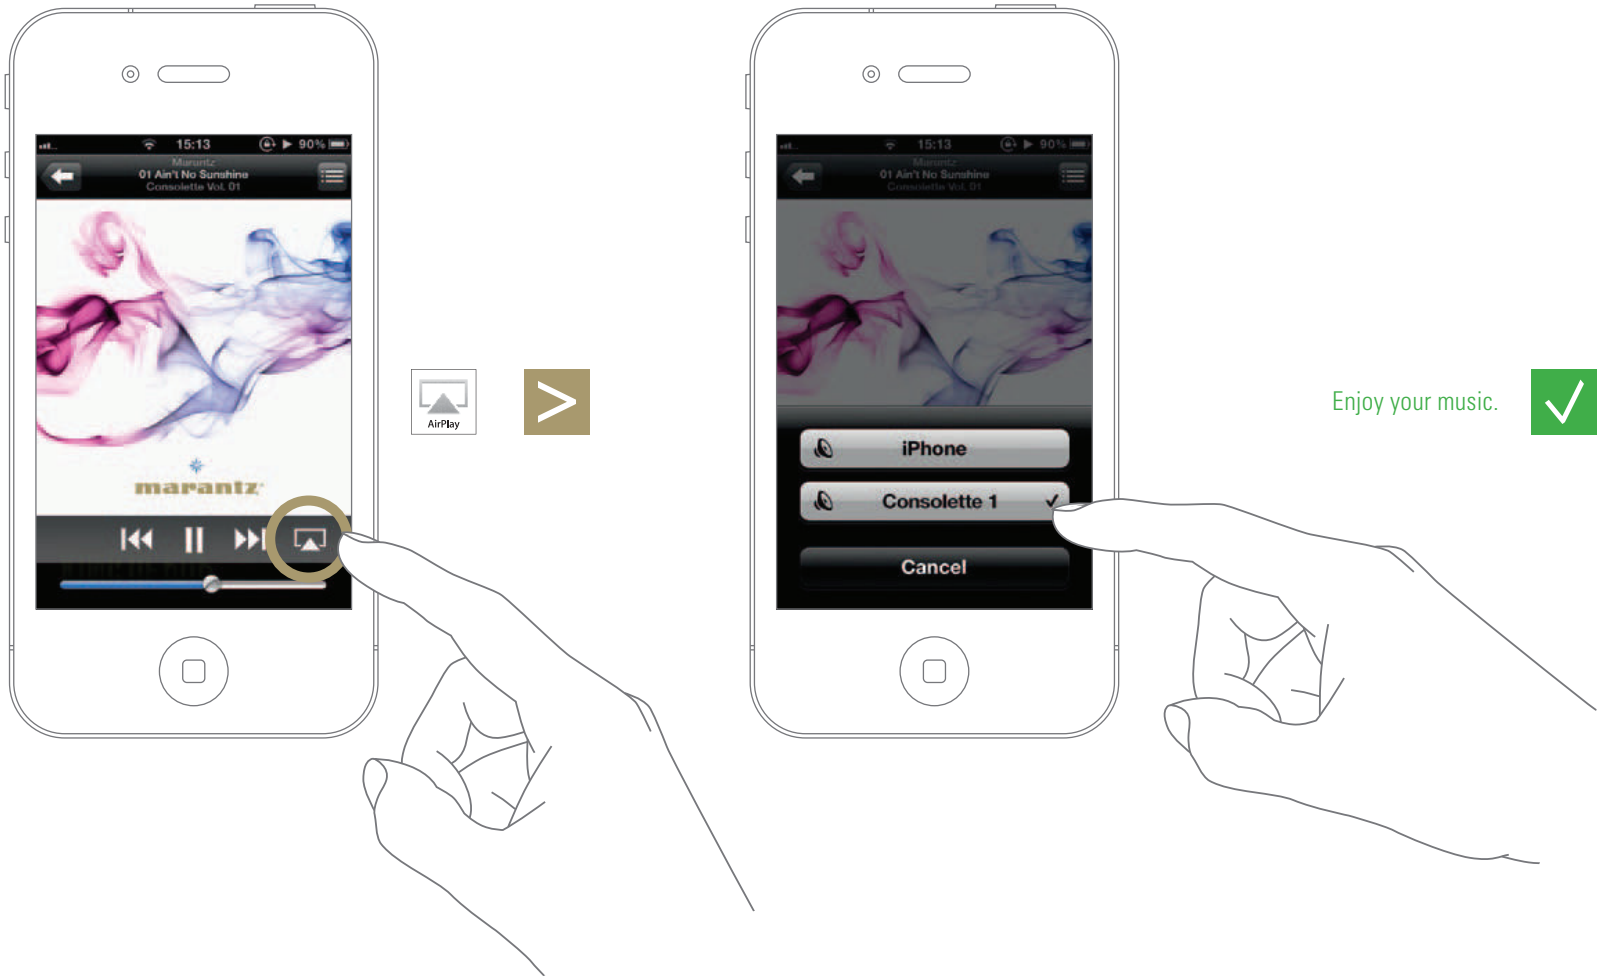

marantz®

# Consolette

Premium
Speaker Dock

Quick Setup
Guide

www.marantz.com

marantz®

Speaker Dock

# MS7000

Owner's Manual

## ❑ SAFETY PRECAUTIONS

**CAUTION**
**RISK OF ELECTRIC SHOCK**
**DO NOT OPEN**

### CAUTION:
**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### WARNING:
**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
   Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.
    Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

### CAUTION:
To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

## FCC Information (For US customers)

**1. COMPLIANCE INFORMATION**
**Product Name: Speaker Dock**
**Model Number: MS7000**
**FCC ID: PPQ-MS7000**
This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

Marantz America, LLC.
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ, 07430, U.S.A.
Tel. 201-762-6500

**2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT**
This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by marantz may void your authority, granted by the FCC, to use the product.

**3. CAUTION**
- To comply with FCC RF exposure compliance requirement, separation distance of at least 20 cm must be maintained between this product and all persons.
- This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

**4. NOTE**
This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

## IC Information (For Canadian customers)

**1. PRODUCT**
**IC 4491A-MS7000**
This product complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.
This Class B digital apparatus complies with Canadian ICES-003.

**2. CAUTION**
To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

**For Canadian customers:**
This Class B digital apparatus complies with Canadian ICES-003.

## ❑ NOTES ON USE

### WARNINGS

- Avoid high temperatures.
  Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully.
  Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not handle the mains cord with wet hands.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.

## ❑ CAUTIONS ON INSTALLATION

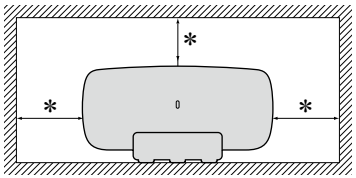


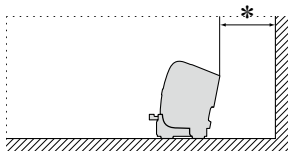


*** For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.**
- More than 12 in. (0.3 m) is recommended.
- Do not place any other equipment on this unit.

# Getting started

Thank you for purchasing this marantz product. To ensure proper operation, please read this owner's manual carefully before using the product.
After reading them, be sure to keep them for future reference.

## Contents


**Getting started** ..... 1
- Accessories ..... 2
- Features ..... 2
- Cautions on handling ..... 2
- Remote operation ..... 3

**Preparations** ..... 4

**Connections** ..... 5
- Connecting the power cord ..... 5
- Connecting a USB memory device ..... 5
- Connecting a portable player ..... 5
- Connecting an iOS device ..... 6

**Connecting to a home network (LAN)** ..... 7
- Required system ..... 7
- Network connections and settings ..... 8

**Operations** ..... 12

**Playback** ..... 13
- Preparations ..... 13
- Operations possible during playback ..... 13
- Playing an iOS device ..... 14
- Various memory functions ..... 15
- AirPlay function ..... 15
- Listening to internet radio ..... 17
- Playing a USB memory device ..... 18
- Playing a portable player ..... 19
- Playing back files stored on PC or NAS with Consolette App (Music Server) ..... 20

**How to make detailed settings** ..... 22
- Menu map ..... 22
- Setting the language (Language) ..... 23
- Setting the clock (Clock) ..... 23
- Setting the volume limit (Max Volume Level) ..... 25
- Setting the sound tone (Room Setting) ..... 25
- Setting the network (Network Info.) ..... 26
- WPS Settings (PIN code method) ..... 26
- Auto Standby ..... 26
- Firmware Update ..... 27

**Informations** ..... 28

**Part names and functions** ..... 29
- Front panel ..... 29
- Rear panel ..... 29
- Remote control unit ..... 30

**Other information** ..... 31
- Trademark information ..... 31
- Explanation of terms ..... 32

**Troubleshooting** ..... 34
- Resetting the microprocessor ..... 36

**Specifications** ..... 37

## Accessories

Check that the following parts are supplied with the product.

| | |
|---|---|
| ① Quick Setup Guide | 1 |
| ② CD-ROM (Owner's manual) | 1 |
| ③ Safety Instructions | 1 |
| ④ Notes on radio | 1 |
| ⑤ Warranty (for North America model only) | 1 |
| ⑥ Power cord | 1 |
| ⑦ Remote control unit | 1 |
| ⑧ R03/AAA batteries | 2 |
| ⑨ Ethernet cable (CAT-5) | 1 |

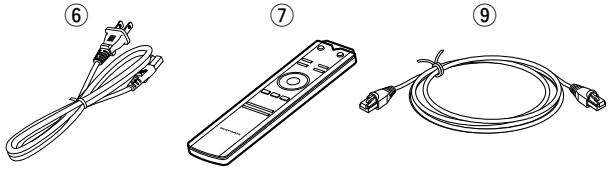


## Features

**Equipped with a Dock that supports iPhone®, iPod touch® and iPad® (☞page 6)**

This unit employs a slide type Dock that comes out when you push its front. By storing the Dock within this unit when you do not use it, this unit becomes compact.
You can charge iPhone, iPod touch, or iPad at the same time while playing back music.

**Compatible with the AirPlay® function (☞page 15)**

You can enjoy comfortable streaming playback of music from iPhone, iPod touch and iPad.
Received song and artist names appear on the display.

**Compatible with "Consolette App" for performing basic operations of the unit with an iPhone, iPod touch and iPad (☞page 3)**

**Equipped with Wi-Fi capabilities including Wi-Fi Protected Setup (WPS) (☞page 9)**

**Compatible with the Internet radio (☞page 17) Also equipped with the Music Server function that plays back audio content on the network (☞page 20)**

In addition to music files stored on PC and music servers on the network, you can enjoy various audio sources on the Internet such as the Internet radio.

**Equipped with an organic EL display with great visibility**

High contrast with low power can be achieved. Song and artist names are clearly displayed.

## Cautions on handling

- **Before turning the power on**
  Check once again that all connections are correct and that there are no problems with the connection cables.
- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When going on vacation or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.
- **About condensation**
  If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.
  If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.
- **Cautions on using mobile phones**
  Using a mobile phone near this unit may result in noise. If that occurs, move the mobile phone away from this unit when it is in use.
- **Moving the unit**
  Turn off the power and unplug the power cord from the power outlet. Next, disconnect the connection cables to other system units before moving the unit.
- **About care**
  - Wipe the cabinet and control panel clean with a soft cloth.
  - Follow the instructions when using a chemical cleaner.
  - Benzene, paint thinner or other organic solvents as well as insecticide may cause material changes and discoloration if brought into contact with the unit, and should therefore not be used.

## About the remote control unit

### ❑ Inserting the batteries

① Remove the rear lid in the direction of the arrow and remove it.

② Load the two batteries properly as indicated by the marks in the battery compartment.

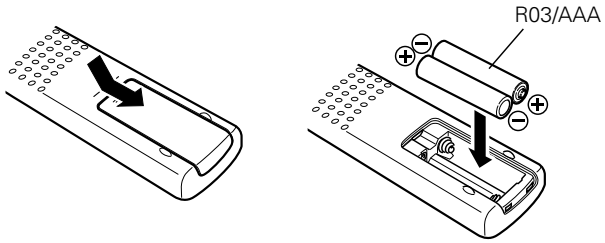


③ Put the rear cover back on.

**NOTE**

- Insert the specified batteries in the remote control unit.
- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation. Replace them with new batteries at an early date.)
- When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not attempt to charge dry batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
  - Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
- The remote control unit may function improperly if rechargeable batteries are used.

### ❑ Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

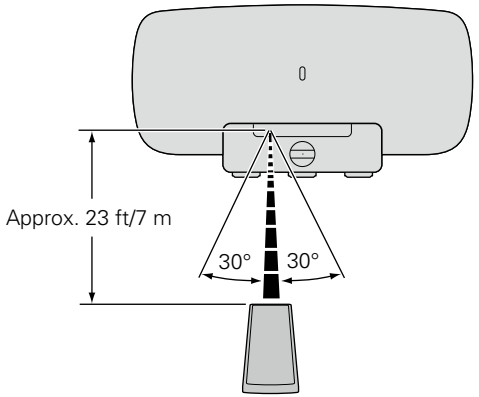


**NOTE**

- The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.
- When using 3D video devices that transmit radio communication signals (such as infrared signals etc) between the various units (such as the monitor, 3D glasses, 3D transmitter unit etc), the remote control unit may not operate due to interference from those radio communication signals. If this occurs, adjust the direction and distance of the 3D communication for each unit, and check that the remote control unit operation is not affected by these signals.

## Consolette App

Consolette App is marantz's proprietary application developed for iPhone, iPod touch and iPad.

With Consolette App, you can use iPhone, iPod touch and iPad to:

- Operate this unit
- Manually make the wireless LAN settings on this unit (☞page 8)
- Change preset Internet radio stations (☞page 17)

- Bidirectional communication is performed.
- The Consolette App can be downloaded for free from the App Store.

# Preparations

**Here, we explain the connections methods for this unit.**

## ● Connections ☞page 5

☞page 5

☞page 5

☞page 5

☞page 6

## ● Connecting to a home network (LAN) ☞page 7

☞page 8

☞page 10

For the part names of the main unit and remote control unit, see ☞page 29, 30.

# Connections

**NOTE**

- Do not plug in the power cord until all connections have been completed.
- When making connections, also refer to the owner's manual of the other components.
- Do not bundle power supply cords together with connection cables. Doing so can result in humming or noise.

## Connecting the power cord

When all of the connections are completed, insert the power plug into the power outlet.

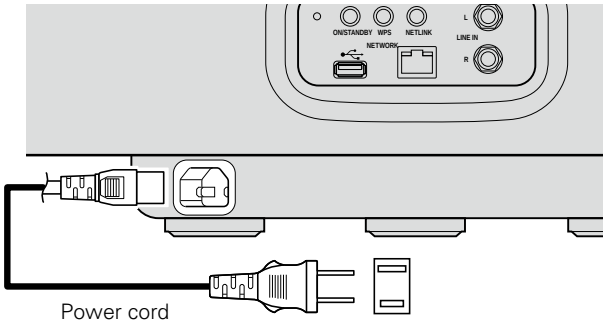


Power cord (Supplied)

To household power outlet (AC 120 V, 60 Hz)

**NOTE**

- Only use the supplied power cord.
- Be sure the power cord is unplugged from the power outlet before connecting or disconnecting it to the AC inlet.

## Connecting a USB memory device

- You can enjoy music stored on a USB memory device.
- For operating instructions see "Playing a USB memory device" (☞page 18).

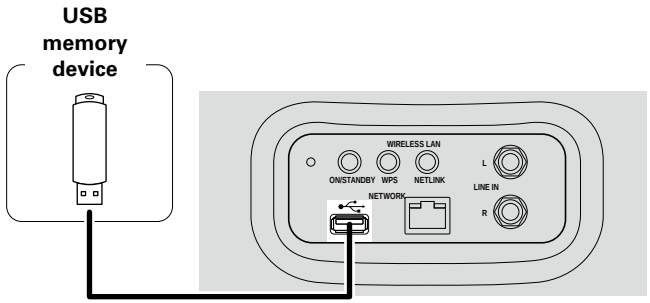


- If the USB memory device is divided into multiple partitions, only the top partition can be selected.
- This unit is compatible with MP3 files conforming to "MPEG-1 Audio Layer-3" standards.
- Marantz does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

**NOTE**

- Note that marantz will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.
- USB memory devices will not work via a USB hub.
- It is not possible to use this unit by connecting the unit's USB port to a PC via a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.

## Connecting a portable player

- If a portable player is connected via the LINE IN jack of the unit, music from the portable player can be played.
- For operating instructions see "Playing a portable player" (☞page 19).

### Cables used for connections

| Audio cable (sold separately) | |
|---|---|
| Stereo mini-RCA cable |  |

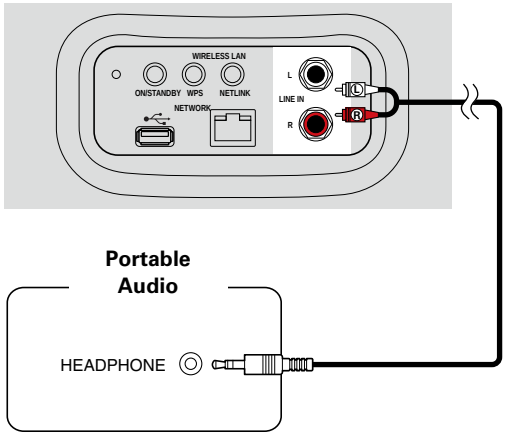

# Connecting an iOS device

- You can enjoy music stored on an iOS device.
- For operating instructions see "Playing an iOS device" (☞page 14)

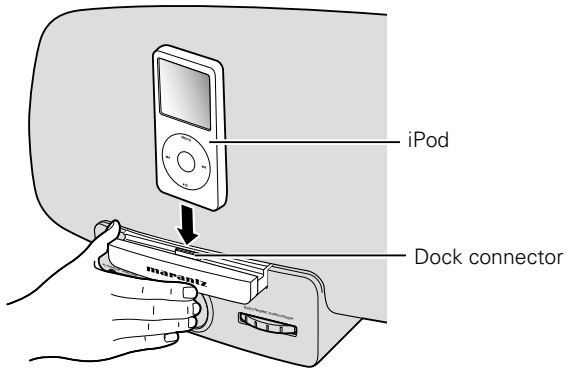


### Dismantling

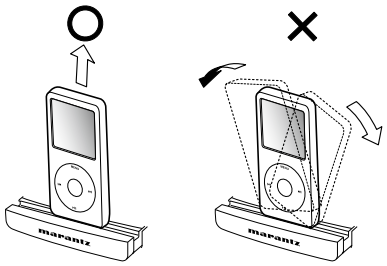

**NOTE**

- Depending on the type of iOS device and the software version, some functions may not operate.
- Note that marantz will accept no responsibility whatsoever for any problems arising with the data on an iOS device when using this unit in conjunction with the iOS device.

## How to eject/store the Dock

① Push the front of the Dock, and it comes out.

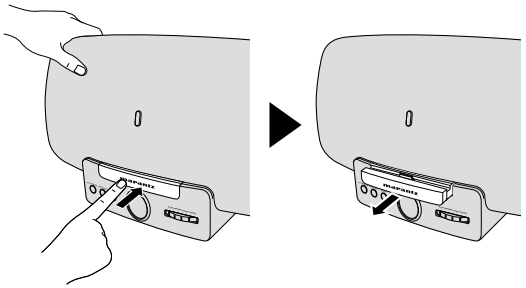

② Push it again to store within this unit.

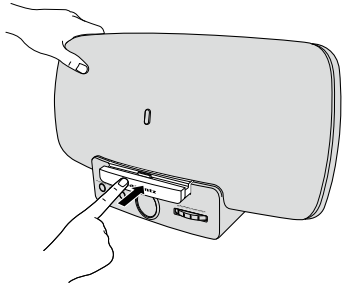

**NOTE**

- When ejecting/storing the Dock, hold the upper part of this unit with your hand to prevent this unit from moving or tipping over.
- When iPhone or iPod touch is not connected to this unit, store the Dock within this unit.

## Supported iPod models

**• iPod / iPod classic**

iPod classic 80GB
iPod classic 160GB (2007)
iPod classic 160GB (2009)

**• iPod nano**

iPod nano 2nd generation (aluminum) 2GB 4GB 8GB
iPod nano 3rd generation (video) 4GB 8GB
iPod nano 4th generation (video) 8GB 16GB
iPod nano 5th generation (video camera) 8GB 16GB
iPod nano 6th generation 8GB 16GB

**• iPod touch**

iPod touch 1st generation 8GB 16GB 32GB
iPod touch 2nd generation 8GB 16GB 32GB
iPod touch 3rd generation 32GB 64GB
iPod touch 4th generation 8GB 32GB 64GB

**• iPhone**

iPhone 4GB 8GB 16GB
iPhone 3G 8GB 16GB
iPhone 3GS 8GB 16GB 32GB
iPhone 4 16GB 32GB
iPhone 4S 16GB 32GB 64GB

**• iPad**

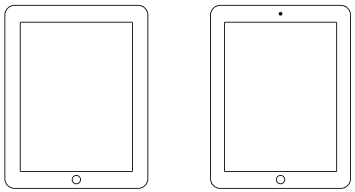

iPad 16GB 32GB 64GB
iPad 2 16GB 32GB 64GB

(as of Sep 2012)

# Connecting to a home network (LAN)

When this unit is connected to your home network (LAN), you can enjoy various audio sources via the network.

- Streaming playback from iPhone, iPod touch or iPad with AirPlay
- Internet radio
- Music files on music servers

Furthermore, you can operate this unit by using Consolette App on iPhone, iPod touch or iPad.

To check for any firmware update available for improving this unit, etc., see "Firmware Update" (☞page 27) in the menu.

## Required system

### ❑ Broadband internet connection

### ❑ Modem

Device that connects to the broadband circuit and conducts communications on the Internet.
A type that is integrated with a router is also available.

### ❑ Router

When using this unit, we recommend you use a router equipped with the following functions:

- Built-in DHCP server
  This function automatically assigns IP addresses on the LAN.
- Built-in 100BASE-TX switch
  When connecting multiple devices, we recommend a switching hub with a speed of 100 Mbps or greater.
- When using with a wireless LAN, prepare a broadband router with built-in access point.

### ❑ Ethernet cable (supplied) (CAT-5 or greater recommended)

- Use only a shielded STP or ScTP LAN cable which is available at retailer.
- The normal shielded-type Ethernet cable is recommended. If a flat-type cable or unshielded-type cable is used, other devices could be affected by noise.

- If you have an Internet provider contract for a line on which network settings are made manually, make the settings at "When "DHCP" is set to "Off" on your router" (☞page 11).
- With this unit, it is possible to use the DHCP and Auto IP functions to make the network settings automatically.
- When using this unit with the broadband router's DHCP function enabled, this unit automatically performs the IP address setting and other settings.
  When using this unit connected to a network with no DHCP function, make the settings for the IP address, etc., at "When "DHCP" is set to "Off" on your router" (☞page 11).
- When setting manually, check the setting contents with the network administrator.

**NOTE**

- A contract with an ISP is required to connect to the Internet.
  No additional contract is needed if you already have a broadband connection to the Internet.
- The types of routers that can be used depend on the ISP. Contact an ISP or a computer shop for details.
- Marantz assumes no responsibility whatsoever for any communication errors or troubles resulting from customer's network environment or connected devices.
- This unit is not compatible with PPPoE. A PPPoE-compatible router is required if you have a contract for a type of line set by PPPoE.
- Do not connect an NETWORK connector directly to the LAN port/ Ethernet connector on your computer.
- To listen to audio streaming, use a router that supports audio streaming.

# Network connections and settings

There are two types of network connections available – wired and wireless. Select either of them according to your router functions and operating environment.

## Using a router equipped with the wireless LAN function

Connect this unit to your router wirelessly. Connection procedures differ according to the type of your router.

- ❏ **When your router is equipped with a WPS button** (☞page 9)
- ❏ **When your router is not equipped with a WPS button and you are using iPhone, iPod touch or iPad** (☞page 9)

## Using a router that is not equipped with the wireless LAN function

Connect this unit to your router with an Ethernet cable. Connection procedures differ according to your router settings.

- ❏ **When "DHCP" is set to "On" on your router** (☞page 10)
- ❏ **When "DHCP" is set to "Off" on your router** (☞page 10)

## Using PC to make network settings of this unit

You can also use your PC to make network settings of this unit without iPhone, iPod touch or iPad.

- ❏ **When "DHCP" is set to "On" on your router** (☞page 11)
- ❏ **When "DHCP" is set to "Off" on your router** (☞page 11)

"WPS" stands for Wi-Fi Protected Setup, a standard for making it easy to make security settings required when connecting wireless LAN devices.

## Wireless LAN

Before making the wireless LAN setting on this unit, complete Wi-Fi settings on the following devices you use.
- Router
- iOS device (iPhone, iPod touch, iPad)

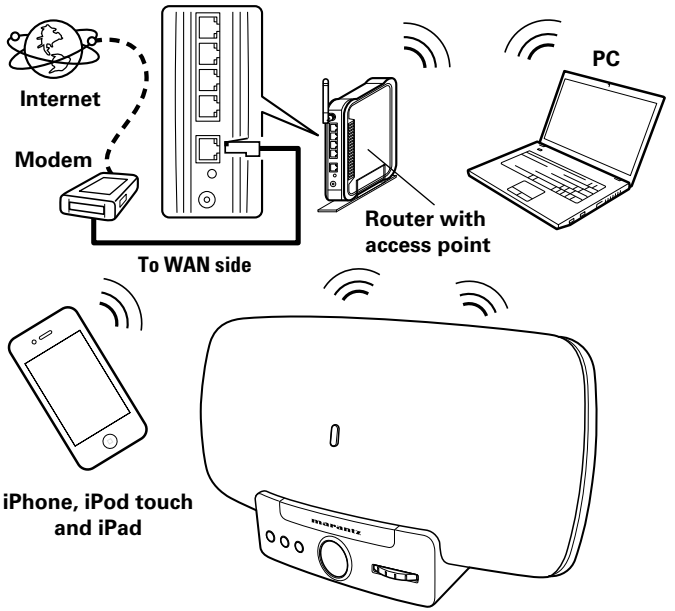

## ❑ When your router is equipped with a WPS button

By just pressing the WPS button on your router and this unit, the wireless LAN connection settings are made.

- Before turning this unit on, make sure that an Ethernet cable is not connected to this unit. If a cable is connected, have this unit enter the power standby mode and disconnect the cable.
- After the unit is turned on, it takes approximately 30 seconds for the WPS button on this unit to be available.

**1 Press the WPS button of the router.**

**2 Press WPS on the rear panel.**

"WPS" is displayed, and the unit starts connecting to the LAN.

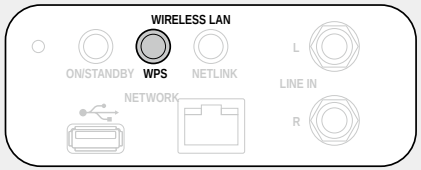


- When the connection is made successfully, "Succeeded" appears.
- If the connection cannot be established, "Failed" is displayed. Perform steps 1 – 2 again.

If this unit is still not connected to the network after this procedure, manually enter the PIN code of WPS (☞page 26).

**NOTE**

If the router uses WEP, WPA-TKIP or WPA2-TKIP encryption, connection is not possible using the WPS button. In this case, connect using "When your router is not equipped with a WPS button and you are using iPhone, iPod touch or iPad" (☞page 9) or "Using PC to make network settings of this unit" (☞page 11).

## ❑ When your router is not equipped with a WPS button and you are using iPhone, iPod touch or iPad

Use the marantz application "Consolette App" to make the wireless LAN connection settings.

- "Consolette App" is free.
- Before turning this unit on, make sure that an Ethernet cable is not connected to this unit. If a cable is connected, have this unit enter the power standby mode and disconnect the cable.
- To make the connection settings by using PC without iPhone, iPod touch or iPad, see "Using PC to make network settings of this unit" (☞page 11).

**1 Download "Consolette App" to your iPhone, iPod touch or iPad from App Store.**

**2 Start the application.**

**3 When the "SETUP" screen is displayed, tap "NetLink".**

- "Scanning network for devices" is displayed.

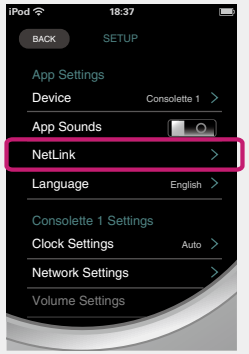


**4 Place your iPod, iPhone or iPad in the dock of this unit (☞page 6).**

**5 Enter the encryption key.**

Enter the encryption key of your router that is connected to your iPod, iPhone or iPad.

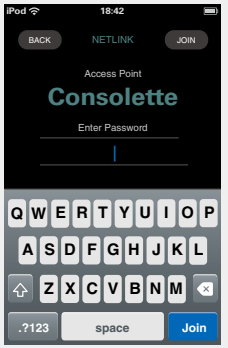


**6 Tap "JOIN".**

The network settings are copied to this unit from your iPod, iPhone or iPad and this unit is connected to the network.

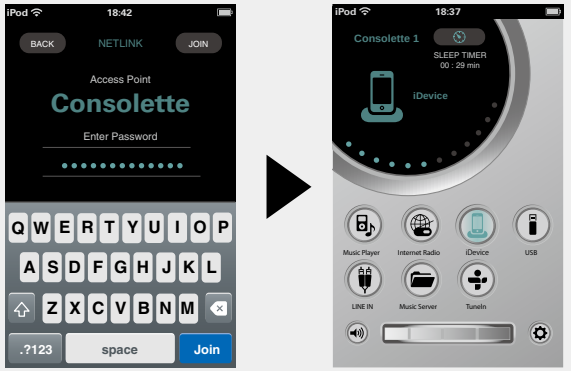


**NOTE**

- When this unit could not connect to the network, the application displays an error message. Perform steps 1 – 6 again.
- The wireless network name (SSID) and encryption method used for this unit are the same as those set for the connected iPod, iPhone or iPad.

## ❑ Disconnecting the iOS device

**1** Press ⏻ POWER to set the standby mode.




**2** Remove the iOS device from the Dock of this unit.

**NOTE**

Note that marantz will accept no responsibility whatsoever for any problems arising with the data on an iOS device when using this unit in conjunction with the iOS device.

# Wired LAN

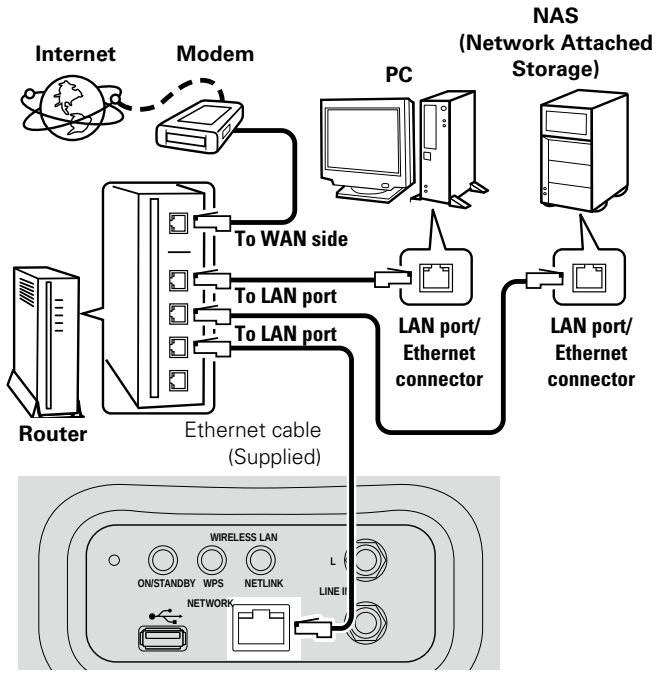


**For connections to the Internet, contact an ISP (Internet Service Provider) or a computer shop.**

## ❑ When "DHCP" is set to "On" on your router

When using this unit with the broadband router's DHCP function enabled, this unit automatically performs the IP address setting and other settings.

**1** Connect the supplied Ethernet cable by referring to the above figure.

**2** Press ⏻ POWER to turn on power to the main unit.

- When this unit could not connect to the network, perform steps 1 and 2 again.

You may need to set the network connection manually, depending on the provider you use. To set the connection manually, use the setting procedure of "When "DHCP" is set to "Off" on your router".

## ❑ When "DHCP" is set to "Off" on your router

Make settings by referring to "Using PC to make network settings of this unit" (☞page 11) in "When "DHCP" is set to "Off" on your router" (☞page 11) and change to the wired connection.

# Using PC to make network settings of this unit

## ❑ When “DHCP” is set to “On” on your router

When using this unit with the broadband router’s DHCP function enabled, this unit automatically performs the IP address setting and other settings.

Before turning this unit on, make sure that an Ethernet cable is not connected to this unit. If a cable is connected, have this unit enter the power standby mode and disconnect the cable.

**1 Press ⏻ POWER to turn on power to the main unit.**
It takes approximately 30 seconds for this unit to start.

**2 Press NETLINK on the rear panel.**
This unit restarts and “NetLink” appears on the display.

**3 Connect to “Consolette_Setup” in the wireless network settings on your PC.**

- If “Consolette_Setup” is not displayed, refresh the network.
- It may take up to two minutes to establish the connection.

**4 Launch the browser on the PC connected to this unit, and enter the address “http://169.254.1.1”.**

**5 On the page that appears, set the information necessary for the network connection.**

① Click “Profile Configuration” on the upper left part of the page.
② From the “Digital Media Player Wireless LAN Settings” dropdown list, select the SSID (Service Set ID) of your router.
③ Enter the password.
④ When settings are completed, click “Apply”.

- “Connecting” is displayed, and the unit starts connecting to the LAN.
- When the connection is made successfully, “Succeeded” appears.
- If the connection cannot be established, “Failed” is displayed. Perform steps 1 – 5 again.
- It may take 120 seconds to establish the network connection.

- Enter the name in the “Digital Media Player Name” box and click “Set” to change the friendly name. A friendly name is the name of this unit that is presented to the network.
- In “ADVANCE SETTING”, you can manually make settings such as the IP address.

**NOTE**

When using PC to make settings, disable the proxy setting in your browser.

## ❑ When “DHCP” is set to “Off” on your router

This section explains the settings when connecting this unit to a network that does not have a DHCP function.

To configure the settings manually, check the setting details with your network administrator.

**1 Complete steps 1 – 4 in “Using PC to make network settings of this unit” (☞page 11).**

**2 On the page that appears, set the information necessary for the network connection.**

① Click “Profile Configuration” on the upper left part of the page.
② Click “ADVANCE SETTING”.
③ Enter required items.
④ When settings are completed, click “Apply”.

- “Connecting” is displayed, and the unit starts connecting to the LAN.
- When the connection is made successfully, “Succeeded” appears.
- If the connection cannot be established, “Failed” is displayed. Turn this unit off and on.
  If this unit is still not connected to the network after this procedure, complete steps 1 – 2 again.

# Operations

**Here, we explain functions and operations that let you make better use of this unit.**

● **Playback** ☞page 13

| | | |
|---|---|---|
| iPod ☞page 14 | AirPlay ☞page 15 | Internet Radio ☞page 17 |
| USB ☞page 18 | PORTABLE PLAYER ☞page 19 | PC/NAS/DMS ☞page 20 |

● **How to make detailed settings** ☞page 22

# Playback

This section provides how to play back music with this unit.
This unit can play back music from the following devices (media).

- iPhone, iPod and iPad
  - When connected to this unit (☞page 14)
  - When using AirPlay (☞page 15)
- Internet radio (☞page 17)
- Music files on USB flash memories (☞page 18)
- Portable player (☞page 19)
- Music server (PC on the network) (☞page 20)

## Preparations

### Turning the power on

**Press ⏻ POWER to turn on power to the unit.**
This unit is turned on, and the power indicator lights.




You can also switch the power to standby by pressing **ON/STANDBY** on the main unit.

#### ❑ When power is switched to standby

Press ⏻ **POWER**.

- The power indicator lights off and this unit enters the standby mode.

#### ❑ Completely turning off the power

Power continues to be supplied to some of the circuitry even when the power is in the standby mode. When leaving home for long periods of time, unplug the power cord from the power outlet.

**NOTE**

The settings made for the various functions may be cleared if the power cord is left unplugged from a power outlet for an extended period of time.



### Setting the current time (Auto Adjust) (12-Hour Display)

When this unit is connected to the network, the current time is automatically set.

- The default time zone of this unit is set to Eastern Standard Time. To change the Time Zone and Summer Time, see "Adjusting the clock automatically (Auto Adjust)" (☞page 23).
- When this unit is not connected to the network, set the time manually. See "Setting the current time (Manual Adjust) (12-Hour Display)" (☞page 24).

## Operations possible during playback

### Selecting the input source

You can select the device for which this unit outputs the audio that is connected to this unit.

**Press the input source button (INTERNET RADIO, USB, iDEVICE or LINE IN) to be played back.**

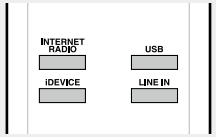


- The display shows the name of the selected input source.
- The source names can be customized using the RENAME function of Consolette App. Download "Consolette App" to your iPhone, iPod touch or iPad from App Store.

#### ❑ Selecting the input source on the main unit

You can select the input source also on the main unit.

**1** **Press FUNCTION repeatedly until "Source" is displayed.**

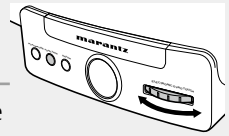


**2** **Turn GYRO to select the source you want to play.**

USB ↔ LINE IN ↔ iDEVICE ↔ INTERNET RADIO ↔ Preset 1 ↔ Preset 2 ↔ Preset 3 ↔ Preset 4 ↔ Preset 5 ↔ Preset 6 ↔

## Adjusting the master volume

**Press ▲ or ▼.**
The volume level is displayed.

**[Adjustable range]** 0 – 99
• The default setting volume level is “40”.

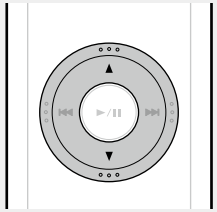

### ❑ Adjusting the master volume on the main unit

Using the following operation, you can adjust the master volume also on the main unit.

**Turn GYRO during playback.**

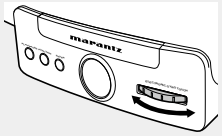

## Turning off the sound temporarily

**Press MUTE 🔇.**
The “Mute” is displayed.

To cancel, press **MUTE** 🔇 again.
The mute mode is also canceled when ▲ or ▼ is pressed.

## Switching the display

During playback, you can switch the display between playing source information (song title, artist name, internet radio station name, etc.) and clock display.

**Press DISPLAY.**




**NOTE**

LINE IN source playback does not display the source information.

# Playing an iOS device

With this unit, you can listen to music on an iOS device. It is also possible to operate the iOS device from the main unit or remote control.
For information on the iOS device models that can be played back with this unit, see “Connecting an iOS device” (☞page 6).

**Load the iOS device onto the Dock of this unit (☞page 6 “Connecting an iOS device”).**
When the iOS device is loaded to the dock tray on this unit, the input source automatically switches to “iDevice”.

• During AirPlay, the input source does not switch automatically. Press **iDEVICE** to switch the input source to “iDevice”.

**NOTE**

This function is activated around 30 seconds after the power is turned on.

### ❑ Streaming music stored in iPhone, iPod touch or iPad directly to the unit (☞page 15)

### ❑ Playing iTunes music with this unit (☞page 15)

### ❑ Disconnecting the iOS device

**1** **Press ⏻ POWER to set the standby mode.**

**2** **Remove the iOS device from the Dock of this unit.**

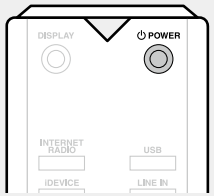


**NOTE**

• Depending on the type of iOS device and the software version, some functions may not operate.
• Note that marantz will accept no responsibility whatsoever for any problems arising with the data on an iOS device when using this unit in conjunction with the iOS device.

### ❑ Remote control and iOS device button relations

| Remote control buttons | iOS device buttons | Operation on this unit |
|---|---|---|
| ►/II | ►II | Play the track / Pause the track. |
| I◄◄, ►►I (Press and release) | I◄◄, ►►I (Press and release) | Play the track from the beginning/ Play the next track. |
| I◄◄, ►►I (Press and hold) | I◄◄, ►►I (Press and hold) | Fast-reverse the track/ Fast-forward the track. |
| ↻ | ↻ | Repeat playback |
| ⤮ | ⤮ | Random playback |

# Various memory functions

## Last function memory

This function stores the settings which were made before going into the standby mode.
When the power is turned back on, the settings are restored.

# AirPlay function

Enjoy music from your iTunes library with high quality sound anywhere in your home.
Use the Apple Remote app* for iPhone, iPod touch and iPad to control iTunes from any room in your home.

* Available as a free download from the App Store.

**NOTE**

- Before using the AirPlay function, this unit must be connected to the network. For how to connect this unit to the network, see "Network connections and settings" (☞page 8).
- To use the AirPlay function, you must update iPhone, iPod touch or iPad to iOS 4.2.1 or higher.

### ❑ Streaming music stored in iPhone, iPod touch or iPad directly to the unit

**1 Make the Wi-Fi settings for iPhone, iPod touch or iPad.**

- For details, see your device's manual.

**2 Startup iPhone, iPod touch, or iPad music or iPod app.**

is displayed on the iPhone, iPod touch or iPad screen.

**3 Tap the AirPlay icon .**

**4 Select the speaker you want to use.**

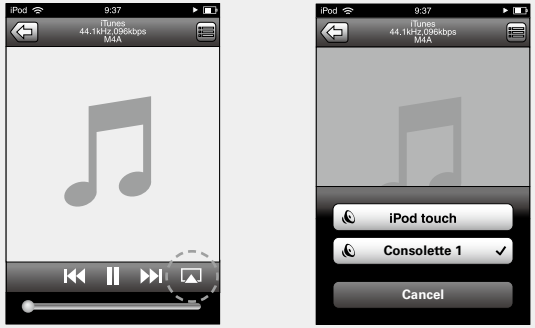


**NOTE**

When the AirPlay function is used, this unit plays back at the volume level set on iPhone, iPod touch, iPad, or iTunes.
First minimize the volume level on iPhone, iPod touch, iPad, or iTunes before playback. Then, start playback and adjust the volume to the desired level.

### ❑ Playing iTunes music with this unit

**1 Install iTunes 10, or later, on a Mac or Windows PC that is connected to the same network as this unit.**

**2 Turn this unit ON.**

**3 Launch iTunes and click the AirPlay icon displayed in the lower right of the window and select this unit from the list.**

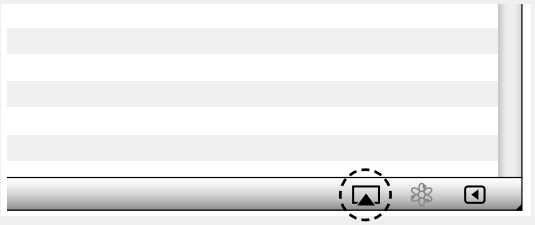

**4 Choose a song and click play in iTunes.**
The music will stream to this unit.

☞ See overleaf

## Selecting multiple speakers (devices)

It is possible to play iTunes songs on your home's AirPlay compatible speakers (devices) other than those of this unit.

**1** **Click the AirPlay icon and select "Multiple Speakers" from the list.**

**2** **Check the speakers you want to use.**

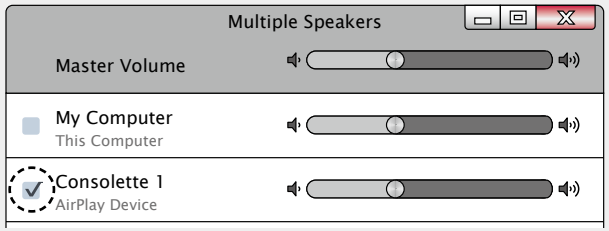


## ❑ Perform iTunes playback operations with the remote control unit of this unit

With this unit's remote control unit, you can perform iTunes song play, pause, and auto search (cue) operations.

**1** **Select "Edit" – "Preferences..." on the menu.**

**2** **Select "Devices" in the iTunes setting window.**

**3** **Check "Allow iTunes control from remote speakers", and then click "OK".**

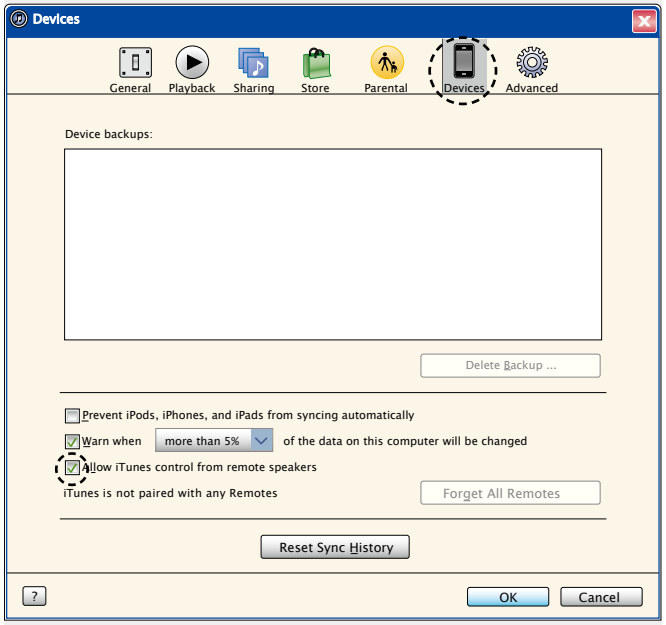


- Source input will be switched to "AirPlay" when AirPlay playback is started.
- You can stop AirPlay playback by choosing other input source.
- For information about how to use iTunes, also see the Help for iTunes.
- The screen may differ depending on the OS and software versions.

# Listening to internet radio

Internet radio refers to radio broadcasts distributed over the Internet. Internet radio stations from around the world can be received.

**NOTE**

Before playing back the Internet radio, this unit must be connected to the network. For how to connect this unit to the network, see "Network connections and settings" (☞page 8).

## Important information

The broad cast station types and specifications supported by this unit for playback are as follows.

**【Playable broadcast station types】**

| Supported file types | Internet radio |
|---|---|
| **WMA** (Windows Media Audio) | ✓ |
| **MP3** (MPEG-1 Audio Layer-3) | ✓ |

**【Playable broadcast station specifications】**

| | Sampling frequency | Bit rate | Extension |
|---|---|---|---|
| **WMA** (Windows Media Audio) | 32/44.1/48 kHz | 48 – 192 kbps | .wma |
| **MP3** (MPEG-1 Audio Layer-3) | 32/44.1/48 kHz | 32 – 320 kbps | .mp3 |

## Listening to preset Internet radio stations

Typical Internet radio stations are pre-registered to **INTERNET RADIO PRESET 1 – 6**.

**1 Prepare for playback.**

① Check the network environment, then turn on this unit's power (☞page 8 "Network connections and settings").

② If settings are required, make the "Network connections and settings" (☞page 8).

③ If settings are required, make the "Setting the current time (Auto Adjust) (24-Hour Display)" (☞page 13).

**2 Press INTERNET RADIO or INTERNET RADIO PRESET 1 – 6.**

Playback starts.

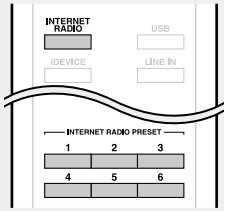


### ❑ Selecting internet radio station on the main unit

You can select internet radio station also on the main unit.

**1 Press FUNCTION repeatedly until "Source" is displayed.**

**2 Turn GYRO to select "Internet Radio" or the desired preset channel.**

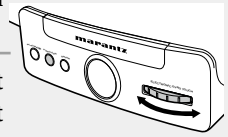


### ❑ Customising the internet radio station preset channels

This unit has been set internet radio stations to "Preset 1 – 6". To customize these channels, use Consolette App.

**1 Tap "Internet Radio" on Consolette App.**

**2 Select an internet radio station.**

**3 Register the selected station to the desired preset number.**

- There are many Internet radio stations on the Internet, and the quality of the programs they broadcast as well as the bit rate of the tracks varies widely.
  Generally, the higher the bit rate, the higher the sound quality, but depending on the communication lines and server traffic, the music or audio signals being streamed may be interrupted. Inversely, lower bit rates mean a lower sound quality but less tendency for the sound to be interrupted.
- "Server Full" or "Connection Down"is displayed if the station is busy or not broadcasting.
- The Internet radio station name appears on the display of this unit.

**NOTE**

The radio station database service may be suspended without notice.

### ❑ Internet radio operation buttons

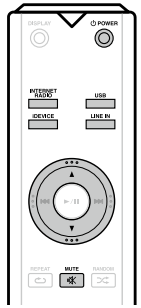

| Operation buttons | Function |
|---|---|
| ▲, ▼ | Volume up / down |
| MUTE | Mute On/Off |
| INTERNET RADIO PRESET 1-6 | Switching the internet preset station |
| USB, iDEVICE, LINE IN | Switching the input source |
| ⏻ POWER | Power on/standby |

# Playing a USB memory device

A USB memory device can be connected to the USB port of this unit to play music files stored on the USB memory device.

## Important information

- Only USB memory devices conforming to mass storage class and MTP (Media Transfer Protocol) standards can be played on this unit.
- This unit is compatible with USB memory devices in "FAT16" or "FAT32" format.
- This unit is compatible with MP3 files conforming to "MPEG-1 Audio Layer-3" standards.
- File types that this unit can play back and specifications are shown below.

**【Supported file types】**

| Supported file types | USB memory devices *1 |
|---|---|
| **WMA** (Windows Media Audio) | ✓*2 |
| **MP3** (MPEG-1 Audio Layer-3) | ✓ |
| **WAV** | ✓ |
| **MPEG-4 AAC** | ✓*3 |
| **FLAC** (Free Lossless Audio Codec) | ✓ |

*1 USB memory device
- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit is compatible with WMA META tags.
- If the image size (pixels) of an album artwork exceeds 500 × 500 (WMA/MP3/WAV/FLAC) or 349 × 349 (MPEG-4 AAC), then music may not be played back properly.

*2 Copyright-protected files can be played on certain portable players compatible with MTP.

*3 Only files that are not protected by copyright can be played on this unit.
Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

If the number of files stored in a USB memory device exceeds 1,000, the access speed may become slower.

**NOTE**

File types that this unit does not support are not displayed.

**【Compatible formats】**

| | Sampling frequency | Bit rate | Extension |
|---|---|---|---|
| **WMA** (Windows Media Audio) | 32/44.1/48 kHz | 48 – 192 kbps | .wma |
| **MP3** (MPEG-1 Audio Layer-3) | 32/44.1/48 kHz | 32 – 320 kbps | .mp3 |
| **WAV** | 32/44.1/48 kHz | – | .wav |
| **MPEG-4 AAC** | 32/44.1/48 kHz | 16 – 320 kbps | .aac/ .m4a/ .mp4 |
| **FLAC** (Free Lossless Audio Codec) | 32/44.1/48 kHz | – | .flac |

### ❑ Folder playback sequence

You can only play back files stored in the top level folder (root).

### ❑ Maximum Number of Playable Files

The limits on the number of folders and files that can be displayed by this unit are as follows.

| Item \ Media | USB memory devices |
|---|---|
| Memory capacity | FAT16 : 2 GB, FAT32 : 2 TB |
| Number of files * | 5000 |

* The allowable number of files may differ according to the USB memory device capacity and the file size.

## Playing files stored on USB memory devices

**1** Connect the USB memory device to the USB port (☞page 5 “Connecting a USB memory device”).

**2** Press ⏻ POWER to turn on power to the main unit.

**3** Press USB.
Playback starts.

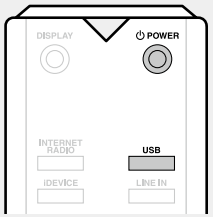


### ❑ Selecting USB source on the main unit

You can select USB source also on the main unit.

**1** Press FUNCTION repeatedly until “Source” is displayed.

**2** Turn GYRO to select “USB”.

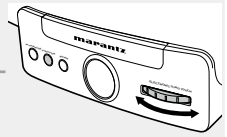

- If the USB memory device is divided into multiple partitions, only the top partition can be selected.
- This unit is compatible with MP3 files conforming to “MPEG-1 Audio Layer-3” standards.
- Marantz does not guarantee that all USB memory devices will operate or receive power. When using a portable USB connection type HDD of the kind to which an AC adapter can be connected to supply power, use the AC adapter.

**NOTE**

- Note that marantz will accept no responsibility whatsoever for any problems arising with the data on a USB memory device when using this unit in conjunction with the USB memory device.
- USB memory devices will not work via a USB hub.
- It is not possible to connect and use a computer via the USB port of this unit using a USB cable.
- Do not use an extension cable when connecting a USB memory device. This may cause radio interference with other devices.

## Removing the USB memory device

**1** Press ⏻ POWER to set the standby mode.

**2** Check that the communication indicator on the USB memory device is not flashing, then pull out the USB memory device.

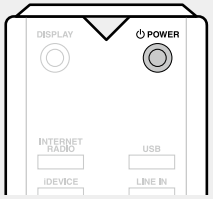


**NOTE**

Do not remove the USB memory device from the unit when the USB memory communication indicator is flashing. Doing so may damage the USB memory device, or may corrupt the files recorded on the USB memory device.

### ❑ USB memory device operation buttons

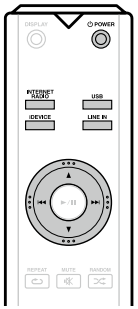

| Operation buttons | Function |
|---|---|
| ▲, ▼ | Volume up / down |
| ⏮ ⏭ | Previous / Next |
| ⏯ | Playback / Pause |
| INTERNET RADIO, iDEVICE, LINE IN, INTERNET RADIO PRESET 1-6 | Switching the input source |
| ⏻ POWER | Power on/standby |
| 🔁 | Repeat playback |
| 🔀 | Random playback |

## Playing a portable player

The following describes the procedure for playing portable player.

**1** Connect the portable player to this unit (☞page 5 “Connecting a portable player”).

**2** Press ⏻ POWER to turn on power to the main unit.

**3** Press LINE IN.

**4** Play the component connected to this unit.

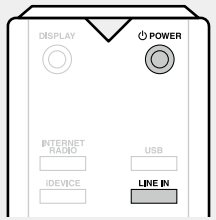


### ❑ Selecting LINE IN source on the main unit

You can select LINE IN source also on the main unit.

**1** Press FUNCTION repeatedly until “Source” is displayed.

**2** Turn GYRO to select “LINE IN” .

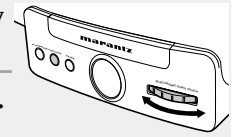

# Playing back files stored on PC or NAS with Consolette App (Music Server)

This unit can play back music files and playlists (m3u, wpl) stored on a PC, Digital Media Server (DMS) and on Network Attached Storage (NAS) that supports DLNA.

**NOTE**

- Before playing back music files on music servers, this unit must be connected to the network. For how to connect this unit to the network, see "Connecting to a home network (LAN)" (☞page 7).

For playable file formats and restrictions, see"Important information" (☞page 21).

## Applying media sharing settings

Here, we apply the settings to share music files stored on a PC and NAS on the network.

### ❑ Sharing media stored in PC

If you are using a media server, be sure to apply this setting first.

- While this unit is operated by a media control device, "Music Server" appears on the display of this unit.
- When selecting this unit from the media control device, the name of this unit is displayed as its friendly name.
- To check the friendly name, see "Checking the network information" (☞page 26).

#### Settings for playing back with Windows Media Player 12 (Windows 7)

**NOTE**

Perform this procedure after changing the control panel display to "Category".

1. **In the PC's "Control Panel", select "Network and Internet" - "Choose homegroup and sharing options".**
2. **Select the "Stream my pictures, music, and videos to all devices on my home network" check box and select "Choose media streaming options".**
3. **Select "Allowed" in the drop-down list for "Consolette 1".**
4. **Select "Allowed" in the drop-down list for "Media programs on this PC and remote connections...".**
5. **Click "OK" to finish.**

#### Settings for playing back with Windows Media Player 11

1. **Start up Windows Media Player 11 on the PC.**
2. **Select "Media Sharing" in the "Library".**
3. **Click the "Share my media" check box, select "Consolette 1", and then click "Allow".**
4. **As you did in step 3, select the icon of the device (other PCs and mobile devices) you want to use as a media controller, and then click "Allow".**
5. **Click "OK" to finish.**

#### Sharing media stored in NAS

Change settings on the NAS to allow this unit and other devices (PCs and mobile devices) used as media controllers to access the NAS. For details, see the owner's manual that came with the NAS.

## About playback

When you start playback on PC, NAS, or DMS, the input source for this unit automatically switches to "Music Server", and audio is output from this unit. If the input source does not switch to "Music Server" automatically, switch the input source to "INTERNET RADIO", "USB" or "LINE IN" before playback.
The name of the currently played back track and its artist name appear on the display of this unit.
When this unit is operating, you can perform operations such as playing back and stopping files through DMC operations. You can also adjust or mute the volume.

- When using a server that supports transcoding such as Windows Media Player (version 11 or higher), you can play back WMA Lossless files.
- Depending on the played back file, the track name or artist name may not be displayed.

**NOTE**

The music display order depends on the specifications of your PC, NAS, or DMS.

### ❑ Music Server operation buttons

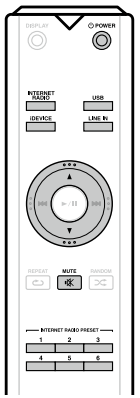

| Operation buttons | Function |
|---|---|
| ▲, ▼ | Volume up / down |
| MUTE | Mute On/Off |
| INTERNET RADIO, USB, iDEVICE, LINE IN, INTERNET RADIO PRESET 1-6 | Switching the input source |
| ⏻ POWER | Power on/standby |

## Important information

- The network audio playback function of this unit connects to the server using technologies shown below.
  - Windows Media Player Network Sharing Service
- File types that this unit can play back and specifications are shown below.

**【Supported file types】**

| Supported file types | Music Server *1 |
|---|---|
| **WMA** (Windows Media Audio) | ✓*2 |
| **MP3** (MPEG-1 Audio Layer-3) | ✓ |
| **WAV** | ✓ |
| **MPEG-4 AAC** | ✓*2 |
| **FLAC** (Free Lossless Audio Codec) | ✓ |

A server or server software compatible with distribution in the corresponding formats is required to play music files via a network.

*1 Music Server
- This unit is compatible with MP3 ID3-Tag (Ver. 2) standard.
- This unit is compatible with WMA META tags.

*2 Only files that are not protected by copyright can be played on this unit.
Content downloaded from pay sites on the Internet are copyright protected. Also, files encoded in WMA format when ripped from a CD, etc. on a computer may be copyright protected, depending on the computer's settings.

**NOTE**

File types that this unit does not support are not displayed.

**【Specifications of supported files】**

| | Sampling frequency | Bit rate | Extension |
|---|---|---|---|
| **WMA** (Windows Media Audio) | 32/44.1/48 kHz | 48 – 192 kbps | .wma |
| **MP3** (MPEG-1 Audio Layer-3) | 32/44.1/48 kHz | 32 – 320 kbps | .mp3 |
| **WAV** | 32/44.1/48 kHz | – | .wav |
| **MPEG-4 AAC** | 32/44.1/48 kHz | 16 – 320 kbps | .aac/ .m4a/ .mp4 |
| **FLAC** (Free Lossless Audio Codec) | 32/44.1/48 kHz | – | .flac |

# How to make detailed settings

## Menu map

| Setting items | Detailed items | Description | Default | Page |
|---|---|---|---|---|
| **Language**<br>**Language** | Sets the language for display the menu. | | English | 23 |
| **Clock**<br>**Clock** | **Auto Adjust(On)** | Automatically performs the clock setting from the time information on the Internet. | On | 23 |
| | **Time Zone(–5H)** | Sets your local time zone (for Auto Adjust). | –5H | 23 |
| | **Summer Time(Off)** | Sets the Summer Time information (for Auto Adjust). | Off | 24 |
| | **Auto Adjust Now** | Obtains the current time. | – | 24 |
| | **Manual Adjust** | Adjusts the clock manually. | – | 24 |
| | **Exit** | Exits the "Clock" menu. | – | – |
| **Max Volume Level**<br>**Max Volume Level** | Make a setting for maximum volume. | | 99 | 25 |
| **Room setting**<br>**Room Setting** | Depending on the conditions of a listening room, playback sound may be too resonant or either bass or treble may sound enhanced. Sets the sound quality at your preference for your listening room conditions.<br>PureDirect: Playback sound with no quality adjustment.<br>Low Bass: For weaker treble in a room with less resonance.<br>High Bass: For stronger treble in a resonant room.<br>Exit: Exits the "Room Setting" menu. | | PureDirect | 25 |
| **Network Info.**<br>**Network Info.** | Display network information.<br>Friendly Name / DHCP=On or Off / IP Address / Primary DNS / Secondary DNS / MAC Address | | – | 26 |
| **WPS**<br>**WPS(PIN)** | Sets the wireless connection using WPS (PIN code method). | | – | 26 |
| **Auto-Standby**<br>**Auto-Standby** | With the Auto Standby ON, this unit will automatically enter the standby mode after about 30 continuous minutes of stop mode with no operation. | | Off | 26 |
| **Firmware Update**<br>**Firmware Update** | Starts the firmware update. | | – | 27 |
| **Factory Reset**<br>**Factory Reset** | Reset to the defaults. | | – | 36 |
| **Exit**<br>**Exit** | To exit the menu, select "Exit". | | – | – |

## Menu operation

This section explains the basic menu operations. Steps for item selecting and menu exiting are common to all menus. For detailed operations on each menu, see the respective paragraphs.

**NOTE**

Use buttons on this unit for menu operations. Buttons on the remote control do not work.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**

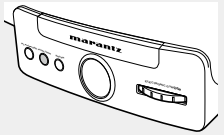

**Menu**

- "Menu" is displayed, then "Language" menu appears.

**2** **Turn GYRO to select the menu you want to set.**

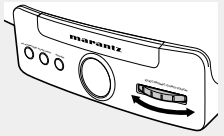

Language ↔ Clock ↔ Max Volume Level ↔ Room Setting ↔ Network Info.
Exit ↔ Factory Reset ↔ Firmware Update ↔ Auto-Standby ↔ WPS (PIN)

**3** **Press ENTER.**

- The unit enters the setting mode of the selected menu.
- Turn **GYRO** to select and press **ENTER** to enter your selection.

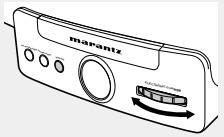

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**

- If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

To return to the top of menu, turn **GYRO** to select "Exit", then press **ENTER**.

## Setting the language (Language)

Sets the language for display the menu.
• The factory default setting is “English”.

**1 Press FUNCTION repeatedly until “Menu” is displayed.**
“Menu” is displayed, then “Language” menu appears.

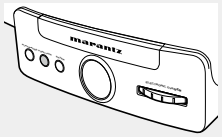

Menu
⇩
Language

**2 Press ENTER.**
The unit enters the setting mode of the language menu, and shows the language currently selected.

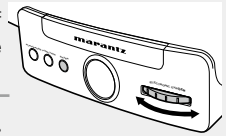

**3 Turn GYRO to select the language.**

English ⟷ francais ⟷ espanol
Exit

**4 Press ENTER.**
The setting is entered, and the “Language” menu is displayed again.

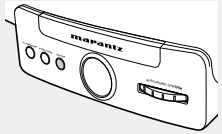

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
• If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

To return to the top of menu, turn **GYRO** to select “Exit”, then press **ENTER**.

## Setting the clock (Clock)

You can automatically adjust the clock of this unit using the Internet.

To use this function, the unit must be connected to the Internet.

### Adjusting the clock automatically (Auto Adjust)

Use the following procedure to automatically adjust the clock.

**1 Press FUNCTION repeatedly until “Menu” is displayed.**
“Menu” is displayed, then “Language” menu appears.

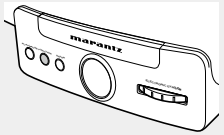

Menu
⇩
Language

**2 Turn GYRO to select “Clock”, then press ENTER.**

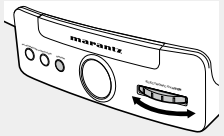

Clock

**3 Turn GYRO to select “Auto Adjust(On)”, then press ENTER.**

Auto Adjust(On)

**4 Turn GYRO to select “On” or “Off”, then press ENTER.**

| | |
|---|---|
| On | Automatically adjust the clock.<br>The operation to receive the current time starts. |
| Off | Does not automatically adjust the clock. |

• If you press **ENTER**, the setting is entered and “Auto Adjust” menu is displayed again.

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
• If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

### Setting the Time Zone (Time Zone)

Use the following procedure to select your local standard time (time zone).

**1 Press FUNCTION repeatedly until “Menu” is displayed.**
“Menu” is displayed, then “Language” menu appears.

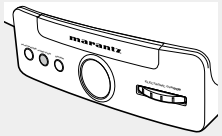

**2 Turn GYRO to select “Clock”, then press ENTER.**

Clock

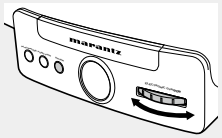

**3 Turn GYRO to select “Time Zone(-5H)”, then press ENTER.**

Time Zone(–5H)

**4 Turn GYRO to select your local standard time (time zone) in your lives, then press ENTER.**
The “Time Zone” menu is displayed again.

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
• If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

## Setting the Summer Time (Summer Time)

Use the following procedure to set Summer time if the Summer time system is used in your country.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
"Menu" is displayed, then "Language" menu appears.

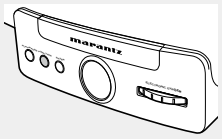

**2** **Turn GYRO to select "Clock", then press ENTER.**

**Clock**

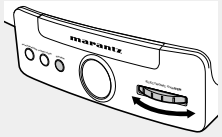

**3** **Turn GYRO to select "Summer Time(Off)", then press ENTER.**

**Summer Time(Off)**

**4** **Turn GYRO to select "Off(0H)" or "On(+1H)", then press ENTER.**
The "Summer Time" menu is displayed again.

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

## Setting the current time (Auto Adjust Now)

When the unit is connected to the Internet, the current time is set automatically.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
"Menu" is displayed, then "Language" menu appears.

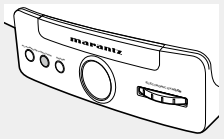

**2** **Turn GYRO to select "Clock", then press ENTER.**

**Clock**

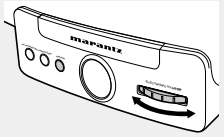

**3** **Turn GYRO to select "Auto Adjust Now", then press ENTER.**
The operation to receive the current time starts.

**Auto Adjust Now**

- The current time is displayed for several seconds when it is received successfully.
- If the current time is not received successfully, "Failed" appears.

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

## Setting the current time (Manual Adjust) (12-Hour Display)

When the unit is not connected to the Internet, set the current time manually.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
"Menu" is displayed, then "Language" menu appears.

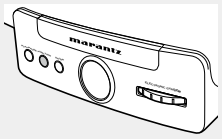

**2** **Turn GYRO to select "Clock", then press ENTER.**

**Clock**

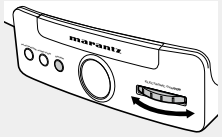

**3** **Turn GYRO to select "Manual Adjust", then press ENTER.**

**Manual Adjust**

**4** **Turn GYRO to set the "hours", then press ENTER.**

**5** **Turn GYRO to set the "minutes", then press ENTER.**
The current time is set.

If you use "Manual Adjust" to set the time, "Auto Adjust" is set to "Off".

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

## Setting the volume limit (Max Volume Level)

Make a setting for maximum volume.
• The factory default setting is “99”.

**1** **Press FUNCTION repeatedly until “Menu” is displayed.**
“Menu” is displayed, then “Language” menu appears.

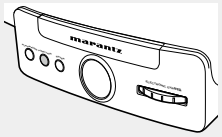

**2** **Turn GYRO to select “Max Volume Level”, then press ENTER.**

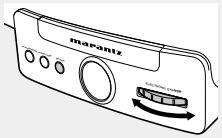

**Max Volume Level**

• The unit enters the setting mode of the volume, and shows the volume level currently selected.

**3** **Turn GYRO to select the volume “0 – 99”, then press ENTER.**
The “Max Volume Level” menu is displayed again.

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
• If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

## Setting the sound tone (Room Setting)

Depending on the conditions of a listening room, playback sound may be too resonant or either bass or treble may sound enhanced. Three sound quality modes are available on this unit. Try the actual effects and select the mode at your preference for your listening room conditions.

**1** **Press FUNCTION repeatedly until “Menu” is displayed.**
“Menu” is displayed, then “Language” menu appears.

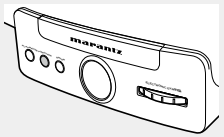

**2** **Turn GYRO to select “Room Setting”, then press ENTER.**

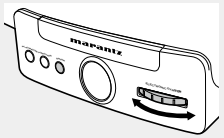

**Room Settiing**

**3** **Turn GYRO to select the mode, then press ENTER.**
The “Room Setting” menu is displayed again.

| | |
|---|---|
| **PureDirect** | Playback sound with no quality adjustment. |
| **Low Bass** | For weaker treble in a room with less resonance. |
| **High Bass** | For stronger treble in a resonant room. |

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
• If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

To return to the top of menu, turn **GYRO** to select “Exit”, then press **ENTER**.

# Setting the network (Network Info.)

## Checking the network information

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
"Menu" is displayed, then "Language" menu appears.

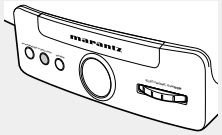

**2** **Turn GYRO to select "Network Info.", then press ENTER.**

**Network Info.**

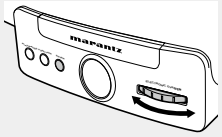

**3** **Turn GYRO to select the item you want to check, then press ENTER.**

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- The unit exits the setting mode and the normal display returns.

To return to the top of menu, turn **GYRO** to select "Exit", then press **ENTER**.

# WPS Settings (PIN code method)

Use this procedure to configure the wireless LAN settings.

Before turning this unit on, make sure that an Ethernet cable is not connected to this unit. If a cable is connected, have this unit enter the power standby mode and disconnect the cable.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
"Menu" is displayed, then "Language" menu appears.

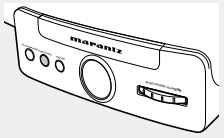

**2** **Turn GYRO to select "WPS(PIN)", then press ENTER.**

**WPS(PIN)**

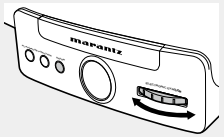

- "Searching" is displayed, and the access point you have set is displayed.

**3** **Turn GYRO to select the access point whose PIN code you want to display, and press ENTER.**
PIN code number is displayed.

**4** **Set this PIN code to the register.**

- For how to register the PIN code, see the owner's manual of your router with access point.
- When connection is established with access point, "Succeeded" is displayed.

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- The unit exits the setting mode and the normal display returns.

To return to the top of menu, turn **GYRO** to select "Exit", then press **ENTER**.

# Auto Standby

With the Auto Standby ON, this unit will automatically enter the standby mode after about 30 continuous minutes of stop mode with no operation.
- The default setting for the Auto Standby mode is "Off".

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
"Menu" is displayed, then "Language" menu appears.

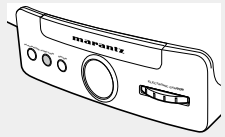

**2** **Turn GYRO to select "Auto-Standby", then press ENTER.**

**Auto-Standby**

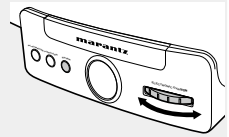

**3** **Turn GYRO to select the item you want to check, then press ENTER.**

| | |
|---|---|
| **On (Auto Satandby On)** | The unit goes into standby after 30 minutes. |
| **Off (Auto Satandby Off)** | The unit does not go into standby automatically. |

You can also switch the power to standby by pressing **ON/STANDBY** on the main unit.

**NOTE**

In the following situations, the Auto standby function does not operate.
- When iPod, iPhone or iPad is connected to the Dock connector on this unit.
- When the input source is "LINE IN".
- When the input source being played is "Internet Radio"or "Music Server".

### ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

# Firmware Update

- In order to update the firmware, the environment and settings required for connecting to broadband internet are needed (☞page 8)
- Perform the firmware update operation after at least 2 minutes has elapsed since turning this unit's power ON.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**

"Menu" is displayed, then "Language" menu appears.

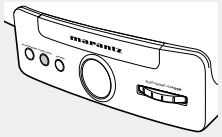

**2** **Turn GYRO to select "Firmware Update", then press ENTER.**

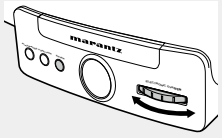

**Firmware Update**

**3** **Turn GYRO to select "Check for Update" or "Start", then press ENTER.**

**Check for Update** Check for firmware updates.

Use **GYRO** to select the item, and press **ENTER**.
- Up to Date: It is already the latest firmware.
- Available Yes: Updates to the latest firmware.
- Available No: Does not update to the latest firmware.

**Start** Determines whether to update or not.

Use **GYRO** to select the item, and press **ENTER**.
- Yes: Performs update.
- No: Does not perform update.

- If updating fails, the set automatically retries, but if updating is still not possible, one of the messages shown below is displayed. If the display reads as shown below, check the settings and network environment, then update again.

| Display | Description |
|---|---|
| **Updating fail** | Updating failed. |
| **Login failed** | Failure to log into server. |
| **Server is busy** | Server is busy. Wait a while then try again. |
| **Connection fail** | Failure in connecting to server. |
| **Download fail** | Downloading of the firmware has failed. |

## ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
- The unit exits the setting mode and the normal display returns.

To return to the top of menu, turn **GYRO** to select "Exit", then press **ENTER**.

## ❑ Notes concerning use of "Firmware Update"

- Do not turn off the power until updating or upgrading is completed.
- Even with a broadband connection to the Internet, approximately 20 minutes is required for the updating procedure to be completed.
- Once updating starts, normal operations on this unit cannot be performed until updating is completed. Furthermore, updating the firmware may reset the backup data for the parameters, etc. set for this unit.
- If the update fails, remove and re-insert the power cord. "Update Retry" appears on the display and update restarts from the point at which update failed. If the error continues despite this, check the network environment.

See the marantz website for details about updates.

# Informations

**Here, we list various information related to this unit.**
**Please refer to this information as needed.**


- Part names and functions ☞page 29
- Other information ☞page 31
- Troubleshooting ☞page 34
- Specifications ☞page 37
- Index ☞page 38

# Part names and functions

## Front panel

For buttons not explained here, see the page indicated in parentheses ( ).

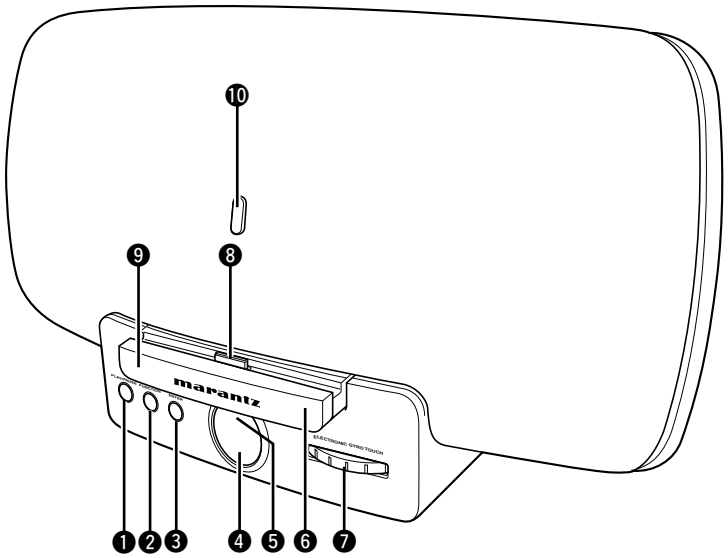


❶ **PLAY/PAUSE button**
❷ **FUNCTION button** ..... (13, 22, 36)
❸ **ENTER button** ..... (22, 36)
❹ **Display**
【Wireless LAN signal strength】
: Strong
: Medium
: Weak
: Not connected
❺ **Power indicator** ..... (13)
❻ **Dock** ..... (6)
❼ **GYRO** ..... (13, 22, 36)
❽ **Dock connector** ..... (6)
❾ **Remote control sensor** ..... (3)
❿ **CLOTH PROTECTOR**
A rest for the back of an iOS device.

## Rear panel

See the page indicated in parentheses ( ).

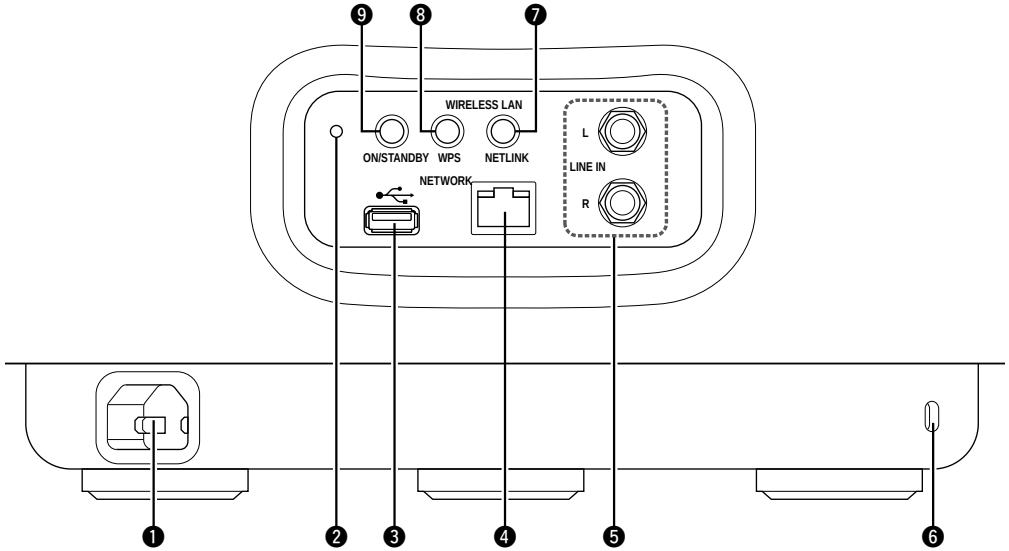


❶ **AC inlet** ..... (5)
❷ **Reset hole** ..... (36)
❸ **USB port** ..... (5)
❹ **Network connector (NETWORK)** ..... (10)
❺ **LINE IN connectors** ..... (5)
❻ **Security slot**
You can attach a security cable to deter theft. Use a security cable that is compatible with this unit. For details, contact your dealer.

**NOTE**

Security cables have deterrent effects, but do not completely prevent theft or misuse of this unit.

❼ **NETLINK button** ..... (11)
❽ **WPS button** ..... (9)
❾ **Power operation button (ON/STANDBY)** ..... (13)
Turns power to this unit on and off (standby).

# Remote control unit

For buttons not explained here, see the page indicated in parentheses ( ).

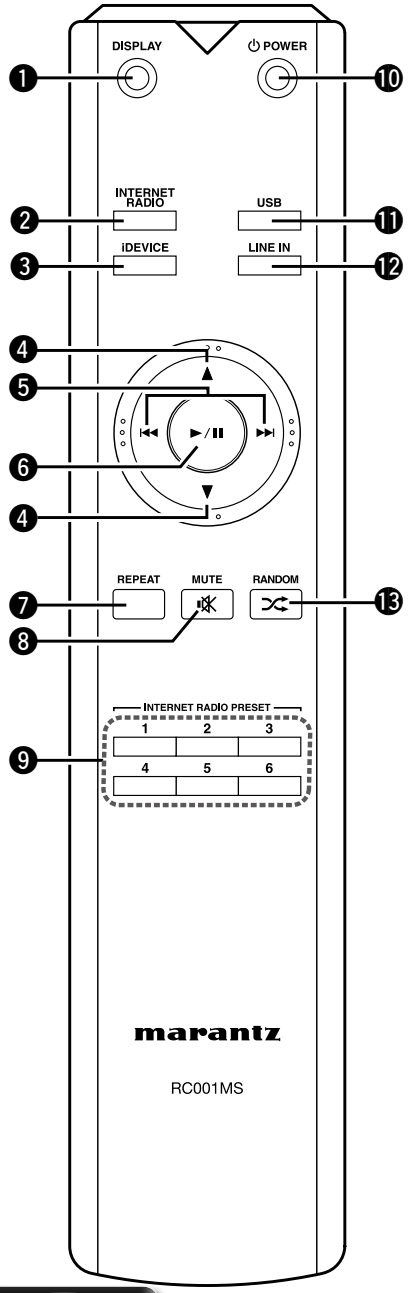


❶ **DISPLAY button** ..... (14)
❷ **INTERNET RADIO button** ..... (13, 17)
❸ **iDEVICE button** ..... (13, 14)
❹ **Volume control button (▲, ▼)** ..... (14)
❺ **Skip buttons (I◄◄, ►►I)** ..... (14)
❻ **Play/Pause button (►/II)** ..... (14, 19)
❼ **REPEAT button** ..... (14, 19)
❽ **MUTE button** ..... (14)
❾ **INTERNET RADIO PRESET buttons (1 – 6)** ..... (17)
❿ **Power operation button (⏻ POWER)** ..... (13)
⓫ **USB button** ..... (13, 19)
⓬ **LINE IN button** ..... (13, 19)
⓭ **RANDOM button** ..... (14, 19)

# Other information


❑ **Trademark information** (☞page 31)
❑ **Explanation of terms** (☞page 32)


## Trademark information

This product uses the following technologies:

Made for iPod iPhone iPad

AirPlay

"Made for iPod", "Made for iPhone" and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone or iPad, respectively, and has been certified by the developer to meet Apple performance standards.
Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone or iPad, may affect wireless performance.
AirPlay, the AirPlay logo, iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

- Individual users are permitted to use iPad, iPhone, iPod, iPod classic, iPod nano, iPod shuffle, and iPod touch for private copy and playback of non-copyrighted contents and contents whose copy and playback is permitted by law. Copyright infringement is prohibited by law.

# Explanation of terms

## A

**AES (Advanced Encryption Standard)**
This is a next generation standard encryption method replacing the current DES and 3DES, and because of its high security it is expected to be applied widely to wireless LANs in the future. It uses the "Rijndael" algorithm developed by two Belgian cryptographers to divide the data into blocks of fixed lengths and encrypt each block. It supports data lengths of 128, 192 and 256 bits and key lengths of 128, 192 and 256 bits as well, offering extremely high encryption security.

**AirPlay**
AirPlay sends (plays) contents recorded in iTunes or on an iPhone/iPod touch/iPad to a compatible device via the network.

**App Store**
App Store is a site that sells application software for such devices as the iPhone or iPod Touch, and is operated by Apple Inc.

## B

**Bit rate**
This expresses the read amount per 1 second of video/audio data recorded in a disc. A larger number means higher sound quality, but also means a larger file size.

## D

**DLNA**
DLNA and DLNA CERTIFIED are trademarks and/or service marks of Digital Living Network Alliance. Some contents may not be compatible with other DLNA CERTIFIED™ products.

## F

**FLAC**
FLAC stands for Free lossless Audio Codec, and is a lossless free audio file format. Lossless means that the audio is compressed without any loss in quality. The FLAC license is as shown below.

Copyright (C) 2000,2001,2002,2003,2004,2005,2006,2007,2008,2009 Josh Coalson

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Xiph.org Foundation nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE FOUNDATION OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

## I

**IEEE 802.11b**
This is one wireless LAN standard set by the 802 working group that establishes LAN technology standards at the IEEE (Institute of Electrical and Electronics Engineers) of the United States. It uses the 2.4 GHz band usable freely without a radio frequency license (ISM band), enabling communications at a maximum speed of 11 Mbps.

- The value indicated above is the maximum theoretical value for the wireless LAN standard, and does not indicate the actual data transfer rate.

**IEEE 802.11g**
This is another wireless LAN standard set by the 802 working group that establishes LAN technology standards at the IEEE (Institute of Electrical and Electronics Engineers) of the United States, and is compatible with IEEE 802.11b. It also uses the 2.4 GHz band, but enables communications at a maximum speed of 54 Mbps.

- The value indicated above is the maximum theoretical value for the wireless LAN standard, and does not indicate the actual data transfer rate.

**iTunes**
iTunes is the name of the multimedia player provided by Apple Inc. It enables management and playback of multimedia contents including music and movies. iTunes supports many main file formats including AAC, WAV, and MP3.

## M

**MP3 (MPEG Audio Layer-3)**
This is an internationally standardized audio data compression scheme, using the "MPEG-1" video compression standard. It compresses the data volume to about one eleventh its original size while maintaining sound quality equivalent to a music CD.

**MPEG (Moving Picture Experts Group), MPEG-2, MPEG-4**
These are the names for digital compression format standards used for the encoding of video and audio. Video standards include "MPEG-1 Video", "MPEG-2 Video", "MPEG-4 Visual", "MPEG-4 AVC". Audio standards include "MPEG-1 Audio", "MPEG-2 Audio", "MPEG-4 AAC".

## N

**Network Names (SSID: Security Set Identifier)**
When forming wireless LAN networks, groups are formed to prevent interference, data theft, etc. This grouping is done by "SSID" or "Security Set Identifiers". For further security, a WEP key is set and signal transfer is not possible unless the SSID and WEP key match.

## P

**Protection Circuit**
This is a function to prevent damage to devices within the power supply when an abnormality such as an overload, excess voltage occurs or temperature for any reason.
In this unit, the power indicator blinks and the unit enters standby mode when an abnormality occurs.

## S

**Sampling frequency**
Sampling involves taking a reading of a sound wave (analog signal) at regular intervals and expressing the height of the wave at each reading in digitized format (producing a digital signal).
The number of readings taken in one second is called the "sampling frequency". The larger the value, the closer the reproduced sound is to the original.

## T

**TKIP (Temporal Key Integrity Protocol)**
This is a network key used for WPA. The encryption algorithm is RC4, the same as for WEP, but the security level is increased by changing the network key used for encryption for each packet.

## V

**vTuner**
This is a free online content server for Internet radio. Note that usage fees are included in upgrade costs.
For inquiries about this service, visit the vTuner site below.
vTuner website: http://www.radiomarantz.com
This product is protected by certain intellectual property rights of Nothing Else Matters Software and BridgeCo. Use or distribution of such technology outside of this product is prohibited without a license from Nothing Else Matters Software and BridgeCo or an authorized subsidiary.

## W

**WEP Key (Network Key)**
This is key information used for encrypting data when conducting data transfer. On this unit, the same WEP key is used for data encryption and decryption, so the same WEP key must be set on both devices in order for communications to be established between them.
**Wi-Fi®**
Wi-Fi Certification assures tested and proven interoperability by the Wi-Fi Alliance, a group certifying interoperability among wireless LAN devices.
**Windows Media DRM**
This is a copyright protection technology developed by Microsoft.
Content providers are using the digital rights management technology for Windows Media contained in this device (WM-DRM) to protect the integrity of their content (Secure Content) so that their intellectual property, including copyright, in such content is not misappropriated. This device uses WM-DRM software to play Secure Content (WM-DRM Software). If the security of the WM-DRM Software in this device has been compromised, owners of Secure Content (Secure Content Owners) may request that Microsoft revoke the WM-DRM Software's right to acquire new licenses to copy, display and/or play Secure Content. Revocation does not alter the WM-DRM Software's ability to play unprotected content. A list of revoked WM-DRM Software is sent to your device whenever you download a license for Secure Content from the Internet or from a PC. Microsoft may, in conjunction with such license, also download revocation list onto your device on behalf of Secure Content Owners.
**Windows Media Player Ver.11 or later**
This is a media player distributed free of charge by Microsoft Corporation.
It can play playlists created with Ver.11 or later of Windows Media Player, as well as WMA, DRM WMA, WAV, and other files.
**WMA (Windows Media Audio)**
This is audio compression technology developed by Microsoft Corporation.
WMA data can be encoded using Windows Media® Player Ver.7, 7.1, Windows Media® Player for Windows® XP and Windows Media® Player 9 Series.
To encode WMA files, only use applications authorized by Microsoft Corporation. If you use an unauthorized application, the file may not work properly.
**WPA (Wi-Fi Protected Access)**
This is a security standard established by the Wi-Fi Alliance. In addition to the conventional SSID (network name) and WEP key (network key), it also uses a user identification function and encrypting protocol for stronger security.
**WPA2 (Wi-Fi Protected Access 2)**
This is a new version of the WPA established by the Wi-Fi Alliance, compatible with more secure AES encryption.
**WPA-PSK/WPA2-PSK (Pre-shared Key)**
This is a simple authentication system for mutual authentication when a preset character string matches on the wireless LAN access point and client.
**WPS (Wi-Fi Protected Setup)**
This is a standard drawn up by the Wi-Fi Alliance to ease the task of setting up wireless LAN connections and configuring security.
There are two methods: push-button and PIN (Personal Identification Number) code.

# Troubleshooting

**If a problem should arise, first check the following:**
**1. Are the connections correct?**
**2. Is the set being operated as described in the owner's manual?**
**3. Are the other devices operating properly?**
If this unit does not operate properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.
In this case, disconnect the power immediately and contact your store of purchase.

**【General】**

| Symptom | Cause/Solution | Page |
|---|---|---|
| Power does not turn on. | • Check whether the power plug is correctly inserted into the power outlet. | 5 |
| The power indicator flash approximately every 2 seconds. | • The protection circuit has been activated by a rise in the humidity inside the unit. Please turn off power once, and re-apply the power after the temperature has fallen sufficiently.<br>• Please re-install this unit in a place having good ventilation. | 32<br>– |
| The power indicator flash approximately every 0.5 seconds. | • This unit amplifier circuit has failed. Turn off the power and please contact the marantz service adviser. | – |
| Set does not operate properly. | • Reset the microprocessor. | 36 |

**【Audio】**

| Symptom | Cause/Solution | Page |
|---|---|---|
| Audio is not output. | • Check the connections for all devices.<br>• Check whether the audio device power is turned on.<br>• Adjust the master volume.<br>• Check the connection with the playback device and select the proper input source. | 5, 6, 8, 10<br>–<br>14<br>13 |

**【iPod / USB memory device / Internet radio / Music Server 】**

| Symptom | Cause/Solution | Page |
|---|---|---|
| iOS device cannot be played. | • Some iOS devices do not support being used connected directly to the Dock connector. | 6 |
| The file names are not displayed properly ("...", etc.). | • Characters that cannot be displayed are used. This is not a malfunction. On this unit, characters that cannot be displayed are replaced with a "." (period).<br>• The USB cable connecting the USB memory device and the unit uses incompatible tags. Use USB memory devices with tags supported by the unit. | –<br>18 |
| When a USB memory device is connected, "USB" is not displayed on the menu. | • The set cannot recognize a USB memory device. Check the connection.<br>• This unit supports mass storage class and MTP-compatible USB memory devices. It will not recognize other USB memory devices.<br>• A USB memory device that the set cannot recognize is connected. This is not a malfunction. marantz does not guarantee that all USB memory devices will operate or receive power.<br>• USB memory device is connected via USB hub. Connect the USB memory device directly to the USB port. | 5<br>–<br>–<br>– |
| Files on a USB memory device cannot be played. | • The USB memory device format should be set to FAT16 or FAT32. For details, refer to the USB memory device's operating instructions.<br>• If the USB memory device is divided into multiple partitions, only files in partition one can be played.<br>• Files are stored in a non-compatible format. Record the files in a compatible format.<br>• You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit.<br>• You can only play back files stored in the top level folder (root). | –<br>–<br>18<br>18<br>18 |

See overleaf

| Symptom | Cause/Solution | Page |
|---|---|---|
| Internet radio cannot be played. | • Ethernet cable is not properly connected or network is disconnected. Check the connection status.<br>• Program is being broadcast in non-compatible format. Only Internet radio programs in MP3 and WMA can be played on this unit.<br>• The firewall of the PC or router has been activated. Check the firewall settings of the connected PC or router.<br>• Radio station is not currently broadcasting. Choose a radio station that is currently broadcasting.<br>• IP address is wrong. Check the set's IP address.<br>• Some radio stations may go silent at certain times of the day. In this case, no audio is output even when a station is received. Try again later, or switch to another radio station. | 8, 10<br>17<br>–<br>–<br>26<br>– |
| Files stored on a computer cannot be played. | • Files are stored in a non-compatible format. Record in a compatible format.<br>• You are attempting to play a file that is copyright protected. Files that are copyright protected cannot be played on this unit.<br>• Set and computer are connected by USB cable. The set's USB port cannot be used for connection to a computer.<br>• Media sharing settings are not correct. Change media sharing settings so that the unit can access the folders on your computer. | 21<br>21<br>–<br>20 |
| Music stored on a NAS cannot be played. | • If you use a NAS in conformity with the DLNA standard, enable the DLNA server function in the NAS setting.<br>• If you use a NAS that does not conform with the DLNA standard, play the music via a PC. Set Windows Media Player's media sharing function and add NAS to the selected play folder.<br>• If connection is restricted, set audio equipment as the connection target. | –<br>20<br>– |
| Server is not found, or it is not possible to connect to the server. | • The computer's or router's firewall is activated. Check the computer's or router's firewall settings.<br>• Computer's power is not turned on. Turn on the power.<br>• Server is not running. Launch the server.<br>• Set's IP address is wrong. Check the set's IP address. | –<br>–<br>–<br>26 |
| Cannot connect to preset radio stations. | • Radio station is not currently broadcasting. Wait a while before trying again.<br>• Radio station is not currently in service. It is not possible to connect to radio stations that are no longer in service. | –<br>– |
| For some radio stations, "Radio station server full" or "Connection down" is displayed and station cannot be connected to. | • Station is congested or not currently broadcasting. Wait a while before trying again. | – |
| Sound is broken during playback. | • Network or USB memory device's signal transfer speed is slow or communications lines or radio station is congested. This is not a malfunction. When playing broadcast data with a high bit rate, the sound may be broken, depending on the communications conditions. | – |
| Sound quality is poor or noise is heard during play. | • File being played has a low bit rate. This is not a malfunction. | – |

**【AirPlay】**

| Symptom | Cause/Solution | Page |
|---|---|---|
| The AirPlay icon is not displayed in iTunes or on the iPhone/iPod touch/iPad. | • This unit and the computer or iPhone/iPod touch/iPad are not connected to the same network (LAN). Connect the computer or iPhone/iPod touch/iPad to the same network as this unit.<br>• iTunes or the iPhone/iPod touch/iPad do not have firmware that supports AirPlay installed. Update to the latest firmware. | 8, 10<br>27 |
| No sound. | • The volume in iTunes or on the iPhone/iPod touch/iPad is set to the minimum setting. Adjust the volume to the optimum level.<br>• This unit is not selected in the screen that is displayed when iTunes or the iPhone/iPod touch/iPad is started. Start iTunes or switch on the iPhone/iPod touch/iPad, click the AirPlay icon in the displayed screen, and select this unit.<br>• AirPlay playback has not started. Click the ▶ button in iTunes or press the ▶ button on the iPhone/iPod touch/iPod. | –<br>15<br>– |
| When using AirPlay with the iPhone/iPod touch, the sound suffers from intermittent breaks or AirPlay does not function. | • Quit the application running in the background of the iPhone/iPod touch, and then play using AirPlay.<br>• When playing via a wireless connection, outside conditions may affect the unit. To remedy this, change the network environment, e.g. shorten the distance to the wireless LAN access point.<br>• Update the iPhone/iPod touch application or iTunes to the latest version. | –<br>–<br>– |

**[Wireless LAN]**

| Symptom | Cause | Page |
|---|---|---|
| Cannot connect to network. | • The settings of the SSID and network key (WEP) are incorrect. Match the network settings with this unit settings.<br>• The reception is poor and the signals cannot be received. Shorten the distance from the wireless LAN's access point, remove any obstacles and otherwise improve visibility, then try reconnecting. Also install away from microwave ovens and the access points of other networks.<br>• There are multiple networks and the usable channels overlap. Set the access point's channel settings away from the channels used for other networks. Alternatively, connect using a network cable.<br>• The router power is off. Turn on the router power. | –<br>–<br>–<br>– |
| Cannot achieve network connection using the **WPS** button. | • The encryption type on the router is set to "WEP" or "TKIP". Set the encryption type to "None", "WPA-PSK(AES)" or "WPA2-PSK(AES)" before establishing connection. | – |
| Played sound is interrupted or sound cannot be played. | • There are multiple networks and the usable channels overlap. Set the access point's channel settings away from the channels used for other networks. Alternatively, connect using a network cable. | – |

**[Remote control unit]**

| Symptom | Cause/Solution | Page |
|---|---|---|
| The set cannot be operated with the remote control unit. | • Batteries are worn out. Replace with new batteries.<br>• Operate the remote control unit within a distance of about 23 ft/7 m from this unit and at an angle of within 30°.<br>• Remove any obstacle between this unit and the remote control unit.<br>• Insert the batteries in the proper direction, checking the ⊕ and ⊖ marks.<br>• The set's remote control sensor is exposed to strong light (direct sunlight, inverter type fluorescent bulb light, etc.). Move the set to a place in which the remote control sensor will not be exposed to strong light. | 3<br>3<br>3<br>3<br>3 |

# Resetting the microprocessor

When the microprocessor is reset, all the settings are reset to their default values.

**1** **Press FUNCTION repeatedly until "Menu" is displayed.**
• "Menu" is displayed, then "Language" menu appears.

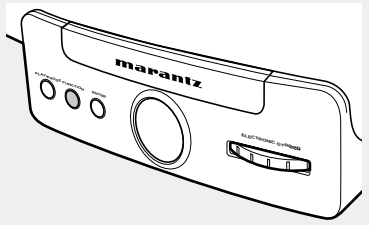


**2** **Turn GYRO to select "Factory Reset", then press ENTER.**

Factory Reset

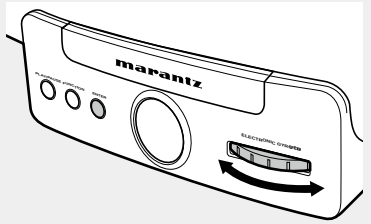


**3** **Turn GYRO to select "Yes", then press ENTER.**
"Initialized" is displayed and the default settings are restored.

If "Initialized" does not display in step 3, start over from step 1.

## ❑ Exiting the menu to return to the normal mode

**Press FUNCTION.**
• If you press **FUNCTION** before pressing **ENTER**, the setting is cancelled.

## How to reset

"Reset" is an operation that restarts this unit.
Perform this procedure if the display is abnormal or if operations cannot be performed.

**When the power of this unit is on, insert a thin stick (*2) into the reset hole (*1), and press the reset button within this unit.**
This unit automatically restarts.

• Prepare a thin stick (such as a toothpick and straightened paper clip) for pressing the reset button within this unit.
  * 1 Thickness (dia.): 0.5 mm – 1.5 mm
  * 2 Length: 30 mm or longer

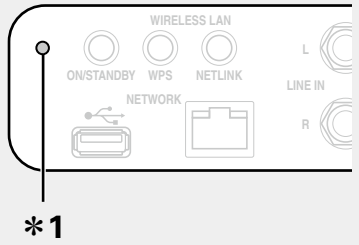

# Specifications

## ❑ Audio section

- **Amplifiers:** 4 x 25 W ClassD
- **Drivers:** 65 mm x 65 mm Tweeter x 2
  114 mm Woofer x 2

## ❑ Clock

- **Clock method** Within 1 – 2 minutes per month

## ❑ Wireless LAN

**Network type (wireless LAN standards):** Conforming to IEEE 802.11b
Conforming to IEEE 802.11g (Conforming to Wi-Fi®)*

**Transfer rate:** DS-SS: 11 / 5.5 / 1 Mbps (Automatic switching)
OFDM: 54 / 48 / 36 / 24 / 18 / 12 / 9 / 6 Mbps (Automatic switching)

**Security:** SSID (Network name)
WEP key (network key) (64/128 bits)
WPA-PSK (TKIP/AES)
WPA2-PSK (TKIP/AES)

**Used frequency range:** 2.412 MHz – 2.462 MHz

**No. of channels:** Conforming to IEEE 802.11b : 11 ch (DS-SS) (Of which 1 channel used)
Conforming to IEEE 802.11g : 11 ch (OFDM) (Of which 1 channel used)

## ❑ General

**Power supply:** AC 120 V, 60 Hz

**Power consumption:** 50 W
0.5 W (Standby)

* Wi-Fi® conformity indicates tested and proven interoperability by the "Wi-Fi Alliance", a group certifying interoperability among wireless LAN devices.

For purposes of improvement, specifications and design are subject to change without notice.

# Index


## ☞ A

Accessories ..... 2
Adjusting the master volume ..... 14
AES ..... 32
AirPlay ..... 15, 32
App Store ..... 3, 15, 32
Auto Adjust ..... 23
Auto Adjust Now ..... 24
Auto Standby ..... 26

## ☞ B

Bit rate ..... 32

## ☞ C

Cable
  Ethernet cable ..... 10
  Power cord ..... 5
  Stereo mini-RCA cable ..... 5
Clock
  Auto Adjust ..... 23
  Auto Adjust Now ..... 24
  Manual Adjust ..... 24
  Summer Time ..... 24
  Time Zone ..... 23
Condensation ..... 2
Connection
  Home network (LAN) ..... 7
  iOS device ..... 6
  Portable player ..... 5
  Power cord ..... 5
  USB memory device ..... 5
  Wired LAN ..... 10
  Wireless LAN ..... 8
Consolette App ..... 3, 17, 20

## ☞ D

DHCP ..... 10, 11
Disconnecting the iOS device ..... 10, 14
Display ..... 29
DLNA ..... 20, 32

## ☞ F

Factory Reset ..... 36
Firmware Update ..... 27
FLAC ..... 18, 21, 32
Front Panel ..... 29
FUNCTION ..... 13, 22

## ☞ G

GYRO ..... 13, 22

## ☞ H

How to eject/store the Dock ..... 6
How to reset ..... 36

## ☞ I

IEEE 802.11b ..... 32
IEEE 802.11g ..... 32
iTunes ..... 15, 32

## ☞ L

Language ..... 23

## ☞ M

Manual Adjust ..... 24
Max Volume Level ..... 25
Menu map ..... 22
Menu operation ..... 22
MP3 ..... 17, 18, 21, 32
MPEG ..... 18, 21, 32
Mute ..... 14

## ☞ N

NETLINK ..... 11
Network Info. ..... 26
  Firmware Update ..... 27
  PIN code method ..... 26
Network Names ..... 32

## ☞ O

Operation buttons ..... 14, 17, 19, 21

## ☞ P

Playback
  AirPlay function ..... 15
  FLAC ..... 18, 21
  Internet radio ..... 17
  iOS device ..... 14
  MP3 ..... 17, 18, 21
  MPEG-4 AAC ..... 18, 21
  Music server ..... 20
  NAS ..... 20
  PC ..... 20
  Portable player ..... 19
  Random ..... 14, 19
  Repeat ..... 14, 19
  USB memory device ..... 18
  WAV ..... 18, 21
  WMA ..... 17, 18, 21
Protection circuit ..... 32

## ☞ R

Rear panel ..... 29
Remote control unit ..... 30
  Inserting the batteries ..... 3
RENAME ..... 13
Resetting the microprocessor ..... 36
Room Setting ..... 25

## ☞ S

Sampling frequency ..... 17, 18, 21, 32
Security slot ..... 29
Selecting the input source ..... 13
Setting the current time ..... 13
Summer Time ..... 24
Supported iPod models ..... 6

## ☞ T

Time Zone ..... 23
TKIP ..... 32
Trademark ..... 31
Troubleshooting ..... 34
Turning the power on ..... 13

## ☞ V

vTuner ..... 33

## ☞ W

WAV ..... 18, 21
WEP Key ..... 33
Wi-Fi ..... 33
Windows Media DRM ..... 33
Windows Media Player ..... 20, 33
WMA ..... 17, 18, 21, 33
WPA ..... 33
WPA2 ..... 33
WPA-PSK/WPA2-PSK ..... 33
WPS ..... 9, 26, 33

# Dimensions

**Unit : in. (mm)**

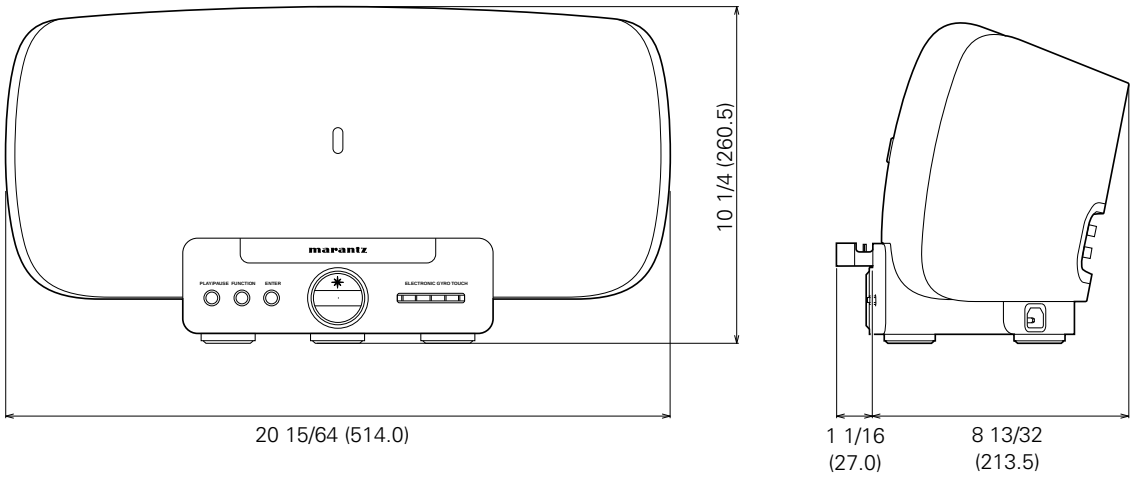


**Weight : 17 lbs 14 oz (8.1 kg)**

**www.marantz.com**

You can find your nearest authorized distributor or dealer on our website.

marantz® is a registered trademark.

V00

D&M Holdings Inc.
3520 10127 00AM

marantz®

# SPEAKER DOCK
# MS 7000

Owner's Manual

Manuel de l'Utilisateur

Manual del usuario

COMPACT disc

CD-ROM

**For PC/MAC use only!**

Adobe Reader® is included.
Adobe Reader® is registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Copyright ©2012 D&M Holdings Inc.

# Notes on radio

## USA CANADA

### ❑ FCC Information (For US customers)

#### 1. IMPORTANT NOTICE : DO NOT MODIFY THIS PRODUCT

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

#### 2. CAUTION

This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provide with antenna installation instructions and transmitter operating conditions for satisfying RF exposure compliance.

#### 3. COMPLIANCE INFORMATION

**Product Name : Speaker Dock**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Marantz America, LLC.
(a D & M Holdings Company)
100 Corporate Drive,
Mahwah, NJ, 07430, U.S.A.
Tel. 201-762-6500

#### 4. NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

### ❑ IC Information (For Canadian customers)

#### CAUTION

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

#### ATTENTION

Afin de reduire le risque d'interference aux autres utilisateurs, il faut choisir le type d'antenne et son gain de facon a ce que la puissance isotrope rayonnee equivalente (p.i.r.e.) ne soit pas superieure au niveau requis pour l'obtention d'une communication satisfaisante.
This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65 and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specific absorption ratio (SAR).

#### For Canadian customers:

This Class B digital apparatus complies with Canadian ICES-003 and RSS-210.
Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The radiated output power of the Wireless Device is below the Industry Canada (IC) radio frequency exposure limits. The Wireless Device should be used in such a manner such that the potential for human contact during normal operation is minimized.

This device has also been evaluated and shown compliant with the IC RF Exposure limits under mobile exposure conditions. (antennas are greater than 20 cm from a person's body).

#### APPAREIL

Cet appareil numérique de classe B est conforme aux normes canadiennes ICES-003 et RSS-210.
Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence et (2) cet appareil doit accepter toute interférence, notamment les interférences qui peuvent affecter son fonctionnement.

La puissance de sortie émise par l'appareil de sans fil est inférieure à la limite d'exposition aux fréquences radio d'Industry Canada (IC). Utilisez l'appareil de sans fil de façon à minimiser les contacts humains lors du fonctionnement normal.

Ce périphérique a également été évalué et démontré conforme aux limites d'exposition aux RF d'IC dans des conditions d'exposition à des appareils mobiles (les antennes se situent à moins de 20 cm du corps d'une personne).

## EU

**[ENGLISH]**

1. **IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT**
   This product, when installed as indicated in the instructions contained in this manual, meets R&TTE directive requirements. Modification of the product could result in hazardous Radio and EMC radiation.
2. **CAUTION**
   Separation distance of at least 20 cm must be maintained between this product and all persons.
   This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

**[DEUTSCH]**

1. **WICHTIGER HINWEIS: NEHMEN SIE KEINE VERÄNDERUNGEN AN DIESEM PRODUKT VOR**
   Wenn dieses Produkt entsprechend dieser Bedienungsanleitung aufgebaut wird, entspricht es den Anforderungen der R&TTE-Richtlinie. Veränderungen am Produkt können zu gefährlicher Funk- und EMV-Strahlung führen.
2. **VORSICHT**
   Zwischen dieses Produkts und Personen muss ein Schutzabstand von 20 cm eingehalten werden.
   Dieses Produkt und seine Antenne dürfen nicht neben anderen Antennen oder Sendern aufgestellt oder zusammen mit ihnen verwendet werden.

**[FRANÇAIS]**

1. **MISE EN GARDE IMPORTANTE : NE JAMAIS MODIFIER CE PRODUIT**
   Si toutes les consignes indiquées dans ce mode ont été respectées pendant son installation, ce produit est conforme aux directives R&TTE. Toute modification du produit risquerait alors de générer des radiations radio et EMC dangereuses.
2. **ATTENTION**
   L'appareil devra être située à une distance de 20 cm au moins des personnes.
   Ce produit ainsi que son antenne ne devront en aucun cas être utilisés à proximité d'une autre antenne ou transmetteur.

**[ITALIANO]**

1. **AVVERTENZA IMPORTANTE: NON MODIFICARE QUESTO PRODOTTO**
   Se installato come indicato nelle istruzioni del presente manuale, questo prodotto soddisfa i requisiti della direttiva R&TTE. Eventuali modifiche apportate al prodotto potrebbero causare pericolose radiazioni radio ed EMC.
2. **ATTENZIONE**
   È necessario mantenere una distanza minima di 20 cm tra questo prodotto e le persone.
   Questo prodotto e la relativa antenna non devono essere posizionati in prossimità di altre antenne o trasmettitori e non devono essere utilizzati congiuntamente a questi ultimi.

**[ESPAÑOL]**

1. **NOTA IMPORTANTE: NO MODIFIQUE ESTE PRODUCTO**
   Este producto, si es instalado de acuerdo con las instrucciones contenidas en este manual, cumple los requisitos de la directiva R&TTE. La modificación del producto puede producir radiación de Radio y EMC peligrosa.
2. **PRECAUCIÓN**
   Se debe mantener una separación de al menos 20 cm del producto y las personas.
   Este producto y su antena no debe instalarse ni utilizarse conjuntamente con otra antena o transmisor.

**[NEDERLANDS]**

1. **BELANGRIJKE MEDEDELING: BRENG AAN DIT PRODUCT GEEN AANPASSINGEN AAN**
   Dit product, indien geïnstalleerd volgens de aanwijzingen in deze gebruiksaanwijzing, voldoet aan de vereisten van de R&TTE-richtlijn. Aanpassing van dit product kan gevaarlijke radio- en EMC-straling tot gevolg hebben.
2. **LET OP**
   Houd tussen en personen altijd een afstand van tenminste 20 cm aan.
   Dit product en zijn antenne mogen niet in de buurt van een andere antenne of zender worden geplaatst of in combinatie daarmee worden gebruikt.

**[SVENSKA]**

1. **VIKTIGT: APPARATEN FÅR INTE MODIFIERAS**
   Under förutsättning att apparaten installeras enligt anvisningarna i denna bruksanvisning, uppfyller denna kraven i R&TTE-direktivet. Ev. modifiering av apparaten kan resultera i farlig radio- och elektromagnetisk strålning.
2. **FÖRSIKTIGT**
   Se till att det finns ett avstånd på minst 20 cm mellan apparatens och personer i omgivningen.
   Apparaten och dess antenn får inte placeras eller användas i närheten av andra antenner eller sändare.

**[РУССКИЙ]**

1. **ВАЖНО! НЕ ИЗМЕНЯЙТЕ ДАННЫЙ ПРОДУКТ**
   Продукт, установленный согласно инструкциям в настоящем руководстве, отвечает требованиям директивы R&TTE. Изменение продукта может привести к появлению опасного электромагнитного излучения.
2. **ПРЕДУПРЕЖДЕНИЕ**
   Не приближайтесь к данного изделия ближе, чем на 20 см.
   Запрещается использовать данный продукт и антенну с другой антенной или передатчиком.

**[POLSKI]**

1. **UWAGA: MODYFIKACJA TEGO URZĄDZENIA JEST ZABRONIONA**
   Po zainstalowaniu zgodnie z instrukcjami zawartymi w niniejszej instrukcji obsługi urządzenie to będzie spełniać wymogi dyrektywy R&TTE. Wprowadzanie modyfikacji do tego urządzenia może skutkować powstaniem niebezpiecznego promieniowania elektromagnetycznego oraz radiowego.
2. **OSTRZEŻENIE**
   Między tego produktu i wszelkimi osobami musi być zachowana odległość przynajmniej 20 cm.
   Urządzenia wraz z anteną nie można instalować w połączeniu z inną anteną lub nadajnikiem.

CE ⓘ **R&TTE Directive 1999/5/EC**

This product may be operated in the following countries;

| | | | | |
|---|---|---|---|---|
| AT | BE | CZ | DK | FI |
| FR | DE | GR | HU | IE |
| IT | NL | PL | PT | SK |
| ES | SE | GB | NO | CH |

Indoor use only.

# SAFETY INSTRUCTION MANUAL

marantz

## ❑ SAFETY PRECAUTIONS

**CAUTION**
**RISK OF ELECTRIC SHOCK**
**DO NOT OPEN**

**CAUTION:**
**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:**
**TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

# IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings.
   Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

## FCC Information (For US customers)

**1. COMPLIANCE INFORMATION**
**Product Name: Speaker Dock**
**Model Number: MS7000**
**FCC ID: PPQ-MS7000**

This product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.

Marantz America, LLC.
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ, 07430, U.S.A.
Tel. 201-762-6500

**2. IMPORTANT NOTICE: DO NOT MODIFY THIS PRODUCT**

This product, when installed as indicated in the instructions contained in this manual, meets FCC requirements. Modification not expressly approved by marantz may void your authority, granted by the FCC, to use the product.

**3. CAUTION**

- To comply with FCC RF exposure compliance requirement, separation distance of at least 20 cm must be maintained between this product and all persons.
- This product and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

**4. NOTE**

This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This product generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the local retailer authorized to distribute this type of product or an experienced radio/TV technician for help.

## INFORMATION FCC (Pour la clientèle étasunienne)

**1. INFORMATIONS DE CONFORMITE**
**Nom du produit: Enceinte Dock**
**Numéro de modèle: MS7000**
**FCC ID: PPQ-MS7000**

Ce produit est conforme à la section 15 du règlement FCC. L'utilisation est sujette aux deux conditions suivantes: (1) ce produit ne provoque pas d'interférences nocives et (2) ce produit doit accepter toute interférence, y compris les interférences pouvant entraîner un fonctionnement non souhaitable.

Marantz America, LLC.
(a D&M Holdings Company)
100 Corporate Drive
Mahwah, NJ, 07430, U.S.A.
Tel. 201-762-6500

**2. REMARQUE IMPORTANTE: NE PAS MODIFIER CE PRODUIT**

Ce produit, lorsqu'il est installé comme indiqué dans les instructions de ce manuel, est conforme aux normes FCC. Les modifications qui ne sont pas expressément approuvées par marantz peuvent annuler l'autorisation FCC à utiliser le produit.

**3. PRECAUTION**

- Pour assurer la conformité avec les normes d'exposition FCC RF, veillez à maintenir une distance de séparation d'au moins 20 cm entre ce produit et les personnes.
- Ce produit et son antenne ne doivent pas être installés ou utilisés en même temps qu'une autre antenne ou un autre transmetteur.

**4. REMARQUE**

Ce produit a été testé et il est conforme aux limitations des dispositifs numériques de Class B, en vertu de la section 15 du règlement FCC. Ces limitations sont conçues pour fournir une protection raisonnable contre les interférences nocives sur une installation résidentielle.
Ce produit génère, utilise et émet de l'énergie de radiofréquence et s'il n'est pas installé et utilisé conformément aux instructions, il peut entraîner des interférences néfastes avec les communications radio. Toutefois, nous ne pouvons pas garantir l'absence d'interférence avec certaines installations. En cas d'interférences néfastes sur la réception de la radio ou de la télévision provoquées par cet appareil, survenant au moment de l'activation ON ou de la désactivation OFF, nous conseillons à l'utilisateur d'essayer de corriger l'interférence comme suit:

- Réorienter ou déplacer l'antenne.
- Augmenter la distance entre l'équipement et le récepteur.
- Connecter l'appareil à la prise murale d'un circuit différent de celui du récepteur.
- Consulter un revendeur local agréé pour la distribution de ce type de produit ou un technicien radio/TV expérimenté.

## IC Information (For Canadian customers)

**1. PRODUCT**
**IC 4491A-MS7000**
This product complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this product may not cause harmful interference, and (2) this product must accept any interference received, including interference that may cause undesired operation.
This Class B digital apparatus complies with Canadian ICES-003.

**2. CAUTION**
To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that permitted for successful communication.

**For Canadian customers:**
This Class B digital apparatus complies with Canadian ICES-003.

## Informations sur IC (pour les clients canadiens)

**1. APPAREIL**
**IC 4491A-MS7000**
Cet appareil est conforme à la norme CNR-210 du Canada. L'utilisation de ce dispositif est autorisée seulement aux deux conditions suivantes : (1) il ne doit pas produire de brouillage, et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

**2. ATTENTION**
Afin de réduire le risque d'interférence aux autres utilisateurs, il faut choisir le type d'antenne et son gain de façon à ce que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne soit pas supérieure au niveau requis pour l'obtention d'une communication satisfaisante.

**Pour les clients canadiens:**
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

## CAUTION:

To completely disconnect this product from the mains, disconnect the plug from the wall socket outlet.
The mains plug is used to completely interrupt the power supply to the unit and must be within easy access by the user.

## PRECAUTION:

Pour déconnecter complètement ce produit du courant secteur, débranchez la prise de la prise murale.
La prise secteur est utilisée pour couper complètement l'alimentation de l'appareil et l'utilisateur doit pouvoir y accéder facilement.

## PRECAUCIÓN:

Para desconectar completamente este producto de la alimentación eléctrica, desconecte el enchufe del enchufe de la pared.
El enchufe de la alimentación eléctrica se utiliza para interrumpir por completo el suministro de alimentación eléctrica a la unidad y debe de encontrarse en un lugar al que el usuario tenga fácil acceso.

## ❑ NOTES ON USE / OBSERVATIONS RELATIVES A L'UTILISATION / NOTAS SOBRE EL USO

### WARNINGS

- Avoid high temperatures. Allow for sufficient heat dispersion when installed in a rack.
- Handle the power cord carefully. Hold the plug when unplugging the cord.
- Keep the unit free from moisture, water, and dust.
- Unplug the power cord when not using the unit for long periods of time.
- Do not obstruct the ventilation holes.
- Do not let foreign objects into the unit.
- Do not let insecticides, benzene, and thinner come in contact with the unit.
- Never disassemble or modify the unit in any way.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, tablecloths or curtains.
- Naked flame sources such as lighted candles should not be placed on the unit.
- Observe and follow local regulations regarding battery disposal.
- Do not expose the unit to dripping or splashing fluids.
- Do not place objects filled with liquids, such as vases, on the unit.
- Do not handle the mains cord with wet hands.
- When the switch is in the OFF (STANDBY) position, the equipment is not completely switched off from MAINS.
- The equipment shall be installed near the power supply so that the power supply is easily accessible.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.

### AVERTISSEMENTS

- Eviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.
- Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.
- Ne pas obstruer les trous d'aération.
- Ne pas laisser des objets étrangers dans l'appareil.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.
- Ne pas recouvrir les orifices de ventilation avec des objets tels que des journaux, nappes ou rideaux. Cela entraverait la ventilation.
- Ne jamais placer de flamme nue sur l'appareil, notamment des bougies allumées.
- Veillez à respecter les lois en vigueur lorsque vous jetez les piles usagées.
- L'appareil ne doit pas être exposé à l'eau ou à l'humidité.
- Ne pas poser d'objet contenant du liquide, par exemple un vase, sur l'appareil.
- Ne pas manipuler le cordon d'alimentation avec les mains mouillées.
- Lorsque l'interrupteur est sur la position OFF (STANDBY), l'appareil n'est pas complètement déconnecté du SECTEUR (MAINS).
- L'appareil sera installé près de la source d'alimentation, de sorte que cette dernière soit facilement accessible.
- Ne placez pas la pile dans un endroit exposé à la lumière directe du soleil ou dans des endroits présentant des températures extrêmement élevées, par exemple près d'un radiateur.

### ADVERTENCIAS

- Evite altas temperaturas. Permite la suficiente dispersión del calor cuando está instalado en la consola.
- Maneje el cordón de energía con cuidado. Sostenga el enchufe cuando desconecte el cordón de energía.
- Mantenga el equipo libre de humedad, agua y polvo.
- Desconecte el cordón de energía cuando no utilice el equipo por mucho tiempo.
- No obstruya los orificios de ventilación.
- No deje objetos extraños dentro del equipo.
- No permita el contacto de insecticidas, gasolina y diluyentes con el equipo.
- Nunca desarme o modifique el equipo de ninguna manera.
- La ventilación no debe quedar obstruida por haberse cubierto las aperturas con objetos como periódicos, manteles o cortinas.
- No deberán colocarse sobre el aparato fuentes inflamables sin protección, como velas encendidas.
- A la hora de deshacerse de las pilas, respete la normativa para el cuidado del medio ambiente.
- No exponer el aparato al goteo o salpicaduras cuando se utilice.
- No colocar sobre el aparato objetos llenos de líquido, como jarros.
- No maneje el cable de alimentación con las manos mojadas.
- Cuando el interruptor está en la posición OFF (STANDBY), el equipo no está completamente desconectado de la alimentación MAINS.
- El equipo se instalará cerca de la fuente de alimentación de manera que resulte fácil acceder a ella.
- No coloque las pilas en un lugar expuesto a la luz directa del sol o donde la temperatura sea extremadamente alta, como cerca de una calefacción.

## ❑ CAUTIONS ON INSTALLATION PRÉCAUTIONS D'INSTALLATION EMPLAZAMIENTO DE LA INSTALACIÓN

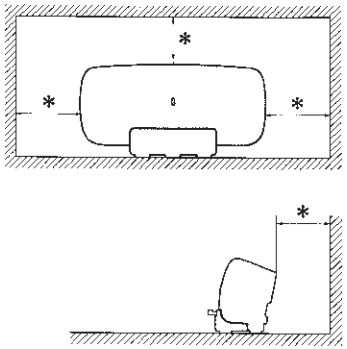


*** For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.**
- More than 12 in. (0.3 m) is recommended.
- Do not place any other equipment on this unit.

*** Pour permettre la dissipation de chaleur requise, n'installez pas cette unité dans un espace confiné tel qu'une bibliothèque ou un endroit similaire.**
- Une distance de plus de 12 po (0,3 m) est recommandée.
- Ne placez aucun matériel sur cet appareil.

*** Para la dispersión del calor adecuadamente, no instale este equipo en un lugar confinado tal como una librería o unidad similar.**
- Se recomienda dejar más de 12 pulg. (0,3 m) alrededor.
- No coloque ningún otro equipo sobre la unidad.

marantz

www.marantz.com

D&M Holdings Inc.
Printed in China 5431 10232 00AM

**For CANADA**

# marantz®

## MARANTZ CANADA LIMITED WARRANTY

Marantz Canada ("Marantz") warrants the following Marantz products for the periods indicated:

### 3-year warranty for both Parts & Labour, from the original purchase date :

Amplifiers; Pre Amplifiers; Pre Amplifier-Processor-Tuners; Integrated Amplifiers; Tuners; Receivers; Blu-ray DVD Super Audio CD/CD Players/Changers; Learning Remote Control Devices; iPod Docks & DLP front Projectors.

### 90 day warranty for parts and labour from the original purchase date :

DLP lamps

### What is Covered and What is Not Covered

Except as specified below, this warranty covers parts and labor to correct all defects in materials and workmanship. The following are not covered by the warranty:

1. Damage, deterioration, malfunction or failure to meet performance specifications resulting from:
   a) Accident; acts of nature; misuse; abuse; neglect; unauthorized product modification.
   b) Improper installation, removal or maintenance, or failure to follow instructions supplied with the product.
   c) Repair or attempted repair by anyone not authorized by Marantz to repair the product.
   d) Any shipment of the product (claims must be presented to the carrier)
   e) Any cause other than a product defect
2. Cleaning, initial set-up, check-ups with no defects found, or charges incurred for installation, removal or reinstallation of the product.
3. Any product on which the serial number has been defaced, modified or removed.
4. Accessories, including but not limited to, batteries, cables, mounting hardware and brackets, cleaning accessories, antenna and detachable power cords.
5. Warranty is void if purchase was made from anyone other than an authorized Marantz dealer.

### Who May Enforce the Warranty

Only the original purchaser may enforce this warranty.

### What We Will Pay For

We will pay for all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section of this warranty.

### How You Can Get Service

1. If your unit needs service, please first contact your dealer to see what support services they do offer. You can also contact one of our Authorized Marantz Service Centers as per our website http://ca.marantz.com/162.asp or contact us directly as below. Please do not return your unit to the factory without prior authorization.
2. You must pay any shipping charges if it is necessary to ship the product for service. However, if the necessary repairs are covered under warranty, we will pay the return shipping charges to any destination within Canada.
3. Whenever warranty service is required, you must present the original dated sales receipt or other proof of date of purchase.

### Limitation of Implied warranties

All implied warranties, including warranties of merchantability and fitness for a particular purchase, are limited in duration to the length of this warranty.

### Exclusion of damages

Marantz liability for any defective product is limited to repair or replacement of the product at Marantz's option. Marantz shall not be liable for damage to other products caused by any defects in Marantz products, damages based upon inconvenience or loss of use of the product, or any other damages, whether incidental, consequential, or otherwise.

Some provinces do not allow limitations on how long an implied warranty lasts and/or does not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, but you may also have other rights, which vary from province to province.


**MARANTZ Canada**
Division of D&M Canada Inc.
5-505 Apple Creek Blvd.,
Markham, Ontario
L3R 5B1
1-888-258-9361
www.marantz.com



PRINTED IN CHINA 11/09 00M183J854018

**Pour CANADA**

marantz®

# GARANTIE LIMITÉE DE MARANTZ CANADA

Marantz Canada ("Marantz") garantie les produits suivants pour les périodes indiquées :

### 3 ans de garantie pour les pièces et la main d'œuvre prenant effet à partir de la date d'achat du produit :

Amplificateurs, Préamplificateurs, Pré-ampli-processeurs-syntoniseurs; amplificateurs intégrés, syntoniseurs, récepteurs, Blu-ray DVD Super Audio CD/Lecteur CD/Changeur, télécommandes programmables, Docks iPod et projecteurs avant DLP.

### 90 jours de garantie pour les pièces et la main d'œuvre prenant effet à partir de la date d'achat du produit :

Lampes DLP

### Ce qui est couvert et pas couvert par la garantie :

A l'exception de ce qui est mentionné ci-dessous, cette garantie couvre les pièces et la main d'œuvre afin de réparer tous les défauts de matériel ou de fabrication du produit. Ce qui suit n'est pas couvert par la garantie :

1. Les dommages, détérioration, défauts de fonctionnement, ou le fait de ne pas respecter les spécifications d'exécutions résultant d'un (e) :
   a) accident, acte de la nature, abus, négligence, utilisation impropre ou d'une modification de produit non autorisée ;
   b) installation incorrecte, déplacement, maintenance ou d'un emploi contraire aux instructions fournies avec le produit ;
   c) réparations ou tentatives de réparations par une personne non reconnue par Marantz ;
   d) envoi de produit (les réclamations doivent être présentées au transporteur)
   e) cause autre qu'un défaut de produit.
2. L'entretien, l'installation initiale, toute vérification de produit ou aucun défaut n'a été trouvé, ou tous frais encourus pour l'installation, le déplacement ou la réinstallation du produit.
3. Tout produit dont le numéro de série a été effacé, modifié ou enlevé.
4. Les accessoires incluant mais non limités aux, piles, câbles, matériaux de support, accessoires de nettoyage, antennes et cordons de secteur détachables.
5. La garantie n'est pas valable si l'achat a été fait au Canada chez un revendeur non reconnu par Marantz.

### Qui peut faire appliquer la garantie

Seule la personne qui a acheté le produit à l'origine peut faire appliquer la garantie.

### Notre paiement

Nous paierons tous les frais de pièces et de main d'œuvre pour tous les produits couverts par la garantie. Le paiement des frais de livraison est abordé dans la section suivante de cette garantie.

### Comment obtenir du service

1. Si votre produit Marantz requiert du service, communiquez premièrement avec votre revendeur autorisé afin de connaître s'il peut procéder au service de votre appareil. Vous pouvez aussi consulter la liste des centres de service autorisés sur notre site web au http://ca.marantz.com/162.asp ou contactez nous directement aux coordonnées ci-dessous. Veuillez ne pas retourner votre appareil chez le manufacturier sans autorisation obtenue préalablement.
2. Vous devez payer les frais de livraison dans le cas où votre appareil a besoin d'être envoyé au service des réparations. Toutefois, si les réparations nécessaires sont couvertes par la garantie, nous payerons les frais de retour d'expédition et ce quelle que soit la destination au Canada.
3. Lorsque vous envoyez votre appareil pour un service sous garantie, vous devez joindre une copie de la facture d'achat (ticket ou autre preuve d'achat)

### Limites des garanties implicites

Toutes les garanties implicites, y compris les garanties de valeur marchande et spécifique pour un achat particulier, sont limitées dans la durée à la longueur de cette garantie.

### Exclusion des dommages

La responsabilité de Marantz est limitée pour n'importe quel produit défectueux en ce qui concerne la réparation ou le remplacement du produit en question. Si des dommages interviennent à des produits autres que ceux de Marantz, Marantz ne sera pas tenu responsable des dits dommages, basés sur le dérangement ou la perte d'utilisation du produit ou tout autre dommage qu'il soit fortuit, indirect ou autre.

Certaines provinces ne permettent pas de limites quant à la durée d'une garantie sous-entendue et/ou ne permettent pas l'exclusion de dommages fortuits ; ainsi les limitations et les exclusions mentionnées ci-dessus peuvent ne pas s'appliquer à votre cas.

Cette garantie vous donne des droits légaux spécifiques, mais vous pouvez aussi avoir d'autres droits qui peuvent varier d'une province à l'autre.

Cette garantie n'est seulement valable qu'au Canada.


## MARANTZ Canada

Division of D&M Canada Inc.
5-505 Apple Creek Blvd.,
Markham, Ontario
L3R 5B1
1-888-258-9361
www.marantz.com


PRINTED IN CHINA 11/09 00M183J854018

**For U.S.A.**

marantz®

# Limited Warranty

**Marantz America, Inc. ("Marantz") warrants the following Marantz Products for the periods indicated:**

1. The following Marantz Audio/Video components, have a 3 year warranty for both Parts & Labor, from the original purchase date:

   **Amplifiers, Pre Amplifiers, Pre Amplifier-Processor-Tuners, Integrated Amplifiers, Tuners, Receivers, Blu-ray DVD SA-CD/CD Players/Changers, Learning Remote Control Devices, iPod Docks & DLP front Projectors.**

2. **DLP lamps** have a 90 day warranty for parts and labor from the original purchase date.

### What is covered and what is not covered

Except as specified below, this warranty covers parts and labor to correct all defects in materials and workmanship. The following are not covered by the warranty:

1. Damage, deterioration, malfunction or failure to meet performance specifications resulting from:
   a) Accident, acts of nature, misuse, abuse, neglect or unauthorized product modification.
   b) Improper installation, removal or maintenance, or failure to follow instructions supplied with the product.
   c) Repair or attempted repair by anyone not authorized by Marantz to repair the product.
   d) Any shipment of the product (claims must be presented to the carrier).
   e) Any cause other than a product defect.
2. Cleaning, initial set-up, check-ups with no defects found, or charges incurred for installation, removal or reinstallation of the product.
3. Any product on which the serial number has been defaced, modified or removed.
4. Batteries.
5. Accessories, including but not limited to, batteries, cables, mounting hardware and brackets, cleaning accessories, antenna and detachable power cords.
6. Warranty is void if purchase was made from anyone other than an authorized Marantz dealer.

### Who may enforce the warranty

This warranty extends only to the original purchaser, not subsequent owners.

### What we will pay for

We will pay for all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section of this warranty.

### How you can get service

1. If your unit needs service, contact Marantz customer service by calling **201-762-6666**. We will advise you of the name and location of one or more authorized Marantz service stations from which service can be obtained. Please do not return your unit to the factory without prior authorization.
2. You must pay any shipping charges if it is necessary to ship the product for service. However, if the necessary repairs are covered under warranty, we will pay the return shipping charges to any destination within the United States, its possessions or territories.
3. Whenever warranty service is required, you must present the original dated sales receipt or other proof of date of purchase.

### Limitation of implied warranties

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty and are limited in scope to the terms contained in this warranty. All other warranties are hereby disclaimed.

### Exclusion of damages

Marantz liability for any defective product is limited to repair or replacement of the product at Marantz's option. Marantz shall not be liable for damage to other products caused by any defects in Marantz products, damages based upon inconvenience or loss of use of the product, or any other damages, whether incidental, consequential, or otherwise.

### How state law relates to the warranty

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**Marantz America, LLC.**

100 Corporate Drive,
Mahwah, NJ, 07430-2041
Phone. 201-762-6666

10/2011 54311010512AM