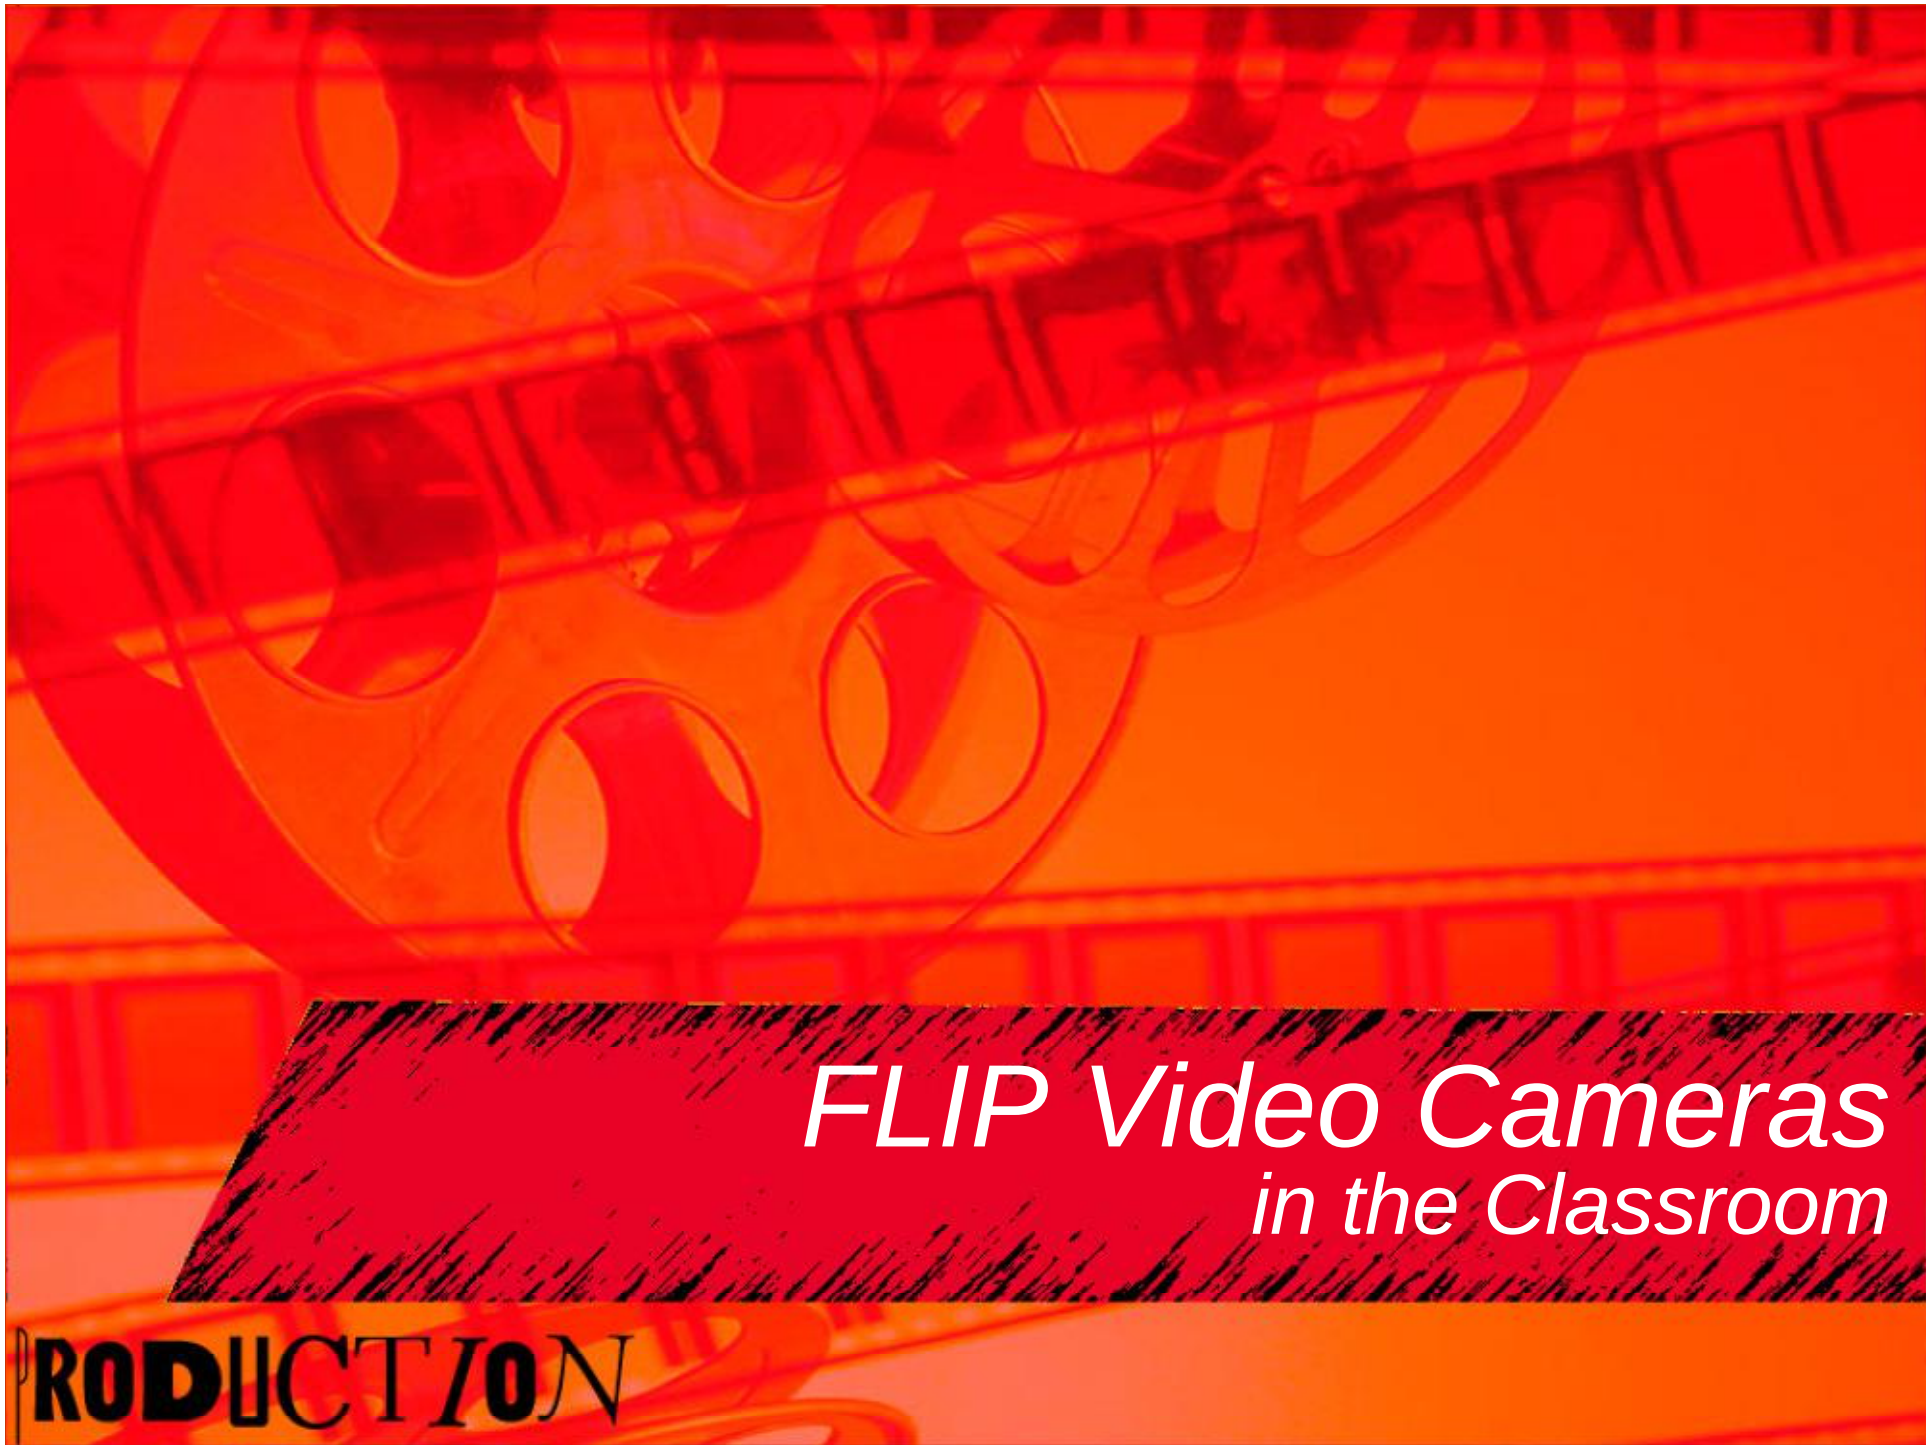
FLIP Video Cameras
in the Classroom
PRODUCTION

The FLIP
Digital Video Camcorder

It's FLIPPIN' Sweet!

The FLIP
Digital Video Camcorder

FLIP UltraHD

2nd Generation

Back Panel Controls

“Compass”

- ✓ 5 multi-function buttons

Record Button

- ✓ While Recording = press once to record / press again to stop recording
- ✓ Do not hold button while recording
- ✓ During Playback = returns to Record Mode

Recording Video

- ✓ “Ready” must be displayed at top of screen in order to record
- ✓ Capacity = 2 hours of recorded video
- ✓ “Time Left” will display at bottom of screen
- ✓ Maximum video length = 1 hour

Recording Video

- ✓ Hold the camera in “Portrait” mode while recording
- ✓ Do not hold camera in “Landscape” mode while recording

> Compass “East”

- ✓ During Playback = navigates forward through video clips
- ✓ During Playback = press and hold to fast forward

> Compass “East”

- ✓ During Playback = navigates forward through video clips
- ✓ During Playback = press and hold to fast forward
- ✓ Also used for navigation when deleting videos

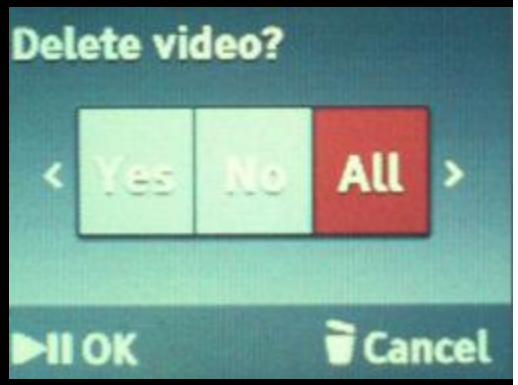

< Compass “West”

- ✓ During Playback = navigates backward through video clips
- ✓ During Playback = press and hold to rewind

< Compass “West”

- ✓ During Playback = navigates backward through video clips
- ✓ During Playback = press and hold to rewind
- ✓ Also used for navigation when deleting videos

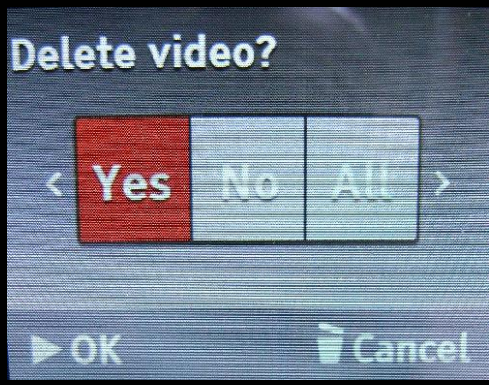

+ Compass “North”

- ✓ While Recording = zooms in
- ✓ During Playback = increases volume

- Compass “South”

- ✓ While Recording = zooms out
- ✓ During Playback = decreases volume

Delete Button

✓ During Playback = deletes current video

Delete Button

- ✓ By default, Delete is locked
- ✓ Press and hold delete button until “Delete Unlocked” is displayed
- ✓ to relock, press and hold until “Delete Locked” is displayed

Arrow Button

- ✓ During Playback = pause/ restart video
- ✓ During Playback = press and hold until “Playing All” displayed to play all video clips consecutively

Arrow Button

✓ When Deleting Videos = confirms Delete

Bottom Panel

Battery Release Latch

- ✓ One rechargeable battery pack included
- ✓ Can also use 2 AA batteries

The FLIP Battery

The FLIP Battery

- ✓ Place in camera as shown
- ✓ Do not use other battery packs

Battery Pull Tab

- ✓ Insert battery with pull tab accessible on right side

The FLIP Battery

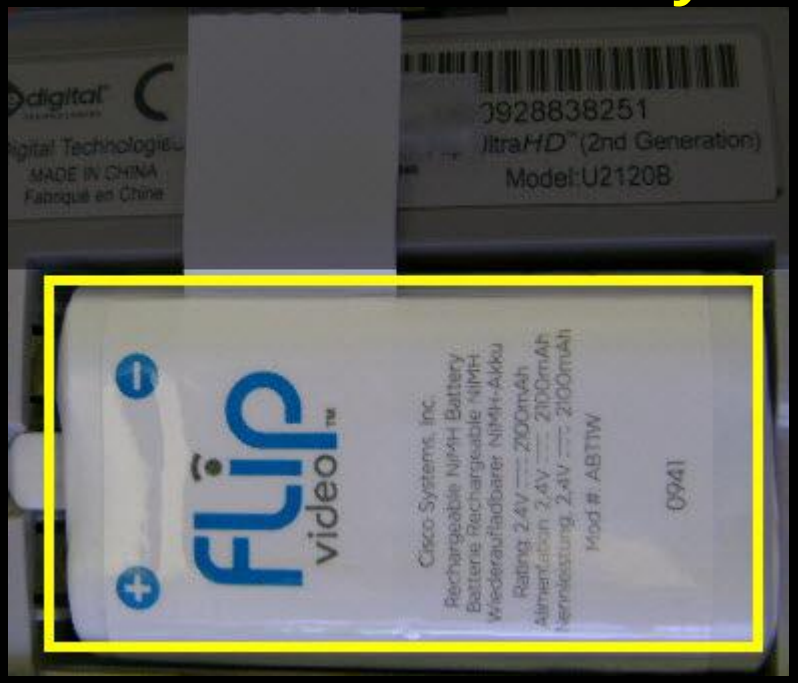

- ✓ 3-6 hours to fully charge / 1.5 hours of battery life
- ✓ Camera will automatically power off after 2 minutes of inactivity
- ✓ Battery symbol will flash on camera LCD screen when battery is low

Charging the Battery

charge in progress

- ✓ Connect camera to computer via USB arm to charge
- ✓ Computer must be powered on when charging camera

Charging the Battery

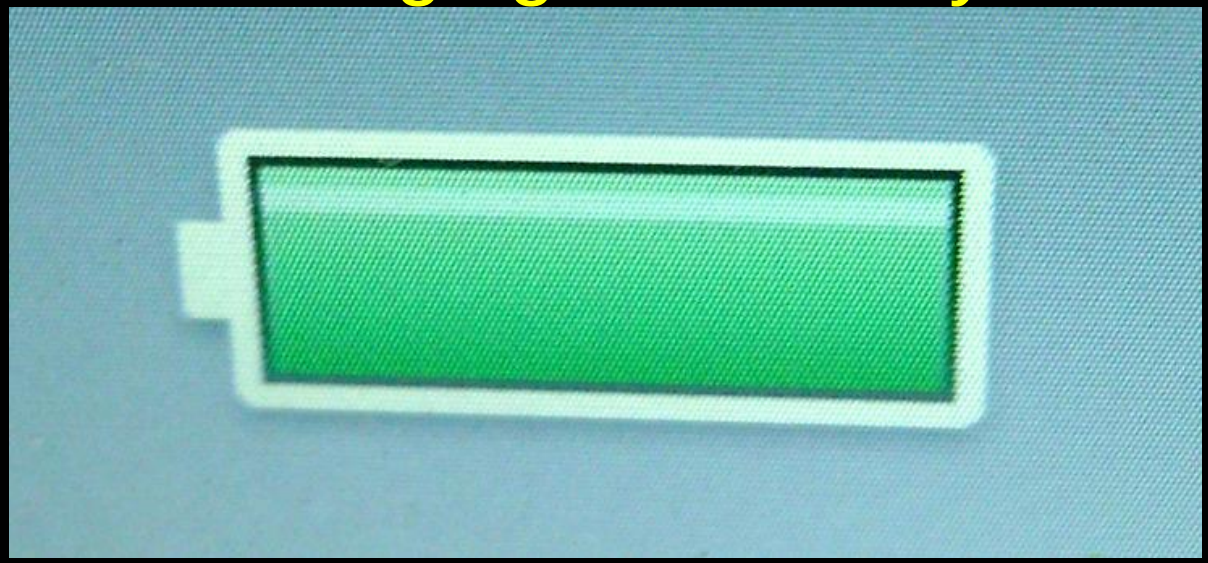

fully charged

- ✓ Do not over-charge - disconnect from computer when fully charged

Tripod Stand

- ✓ Fits any tripod model or size

Front Panel

Microphone

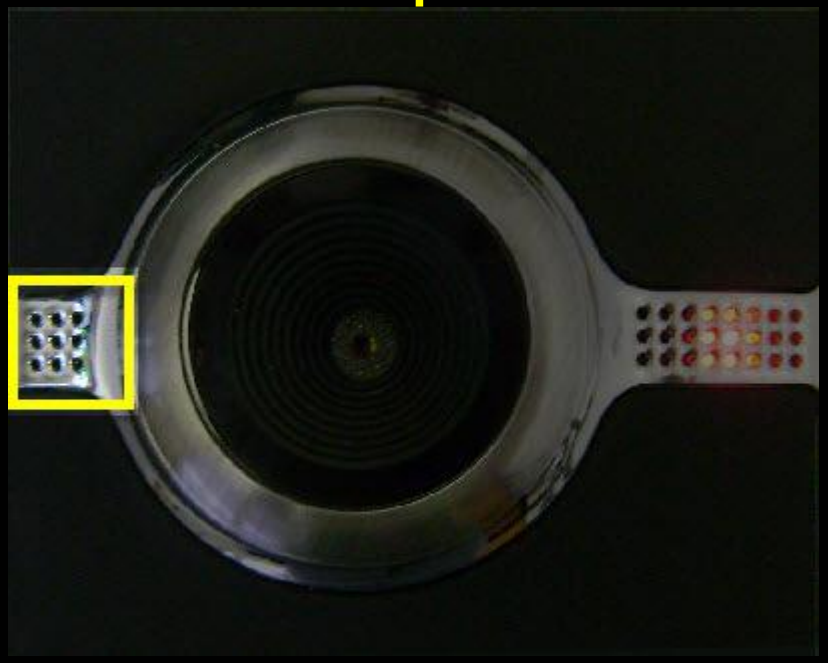

Recording Light

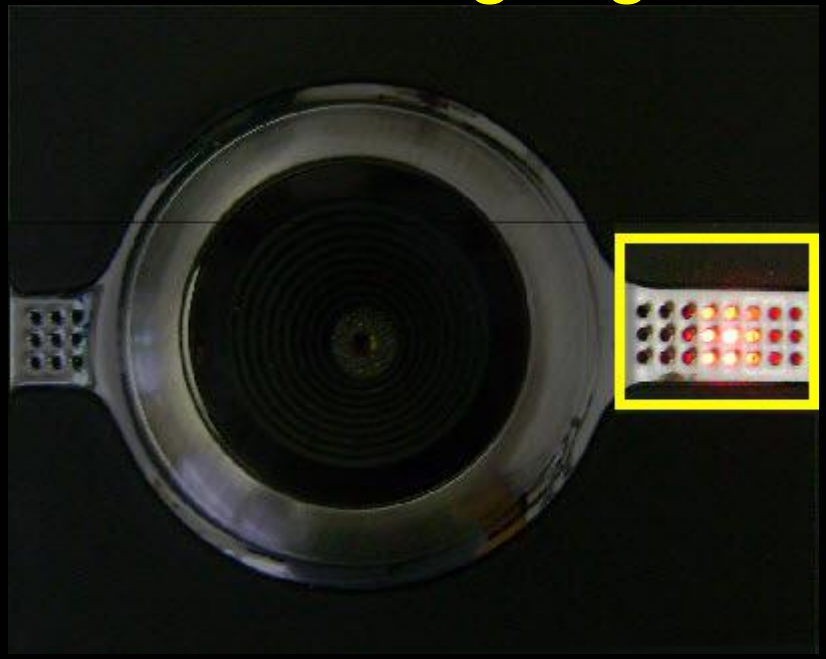

- ✓ Red light visible only during recording and charging

Left Side Panel

Power Button

- ✓ Press once quickly for “On”
- ✓ Press quickly again for “Off”

Right Side Panel

TV Connection

- ✓ Connects to HDTV set
- ✓ Cable not included

TV Connection

- ✓ Connects to HDTV set
- ✓ Cable not included

USB Release

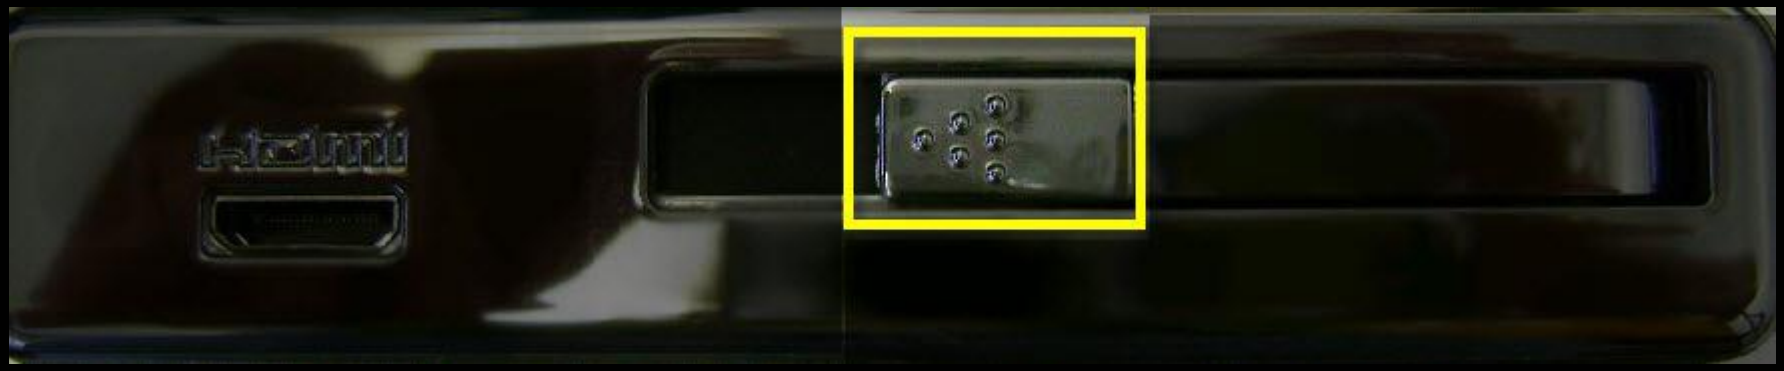

- ✓ Pull back to spring USB arm
- ✓ Pull back and hold when returning USB arm to closed position