



POLAR A360



USER MANUAL

CONTENTS

Contents	2
Introduction	8
Polar A360	8
USB cable	9
Polar Flow App	9
Polar FlowSync Software	9
Polar Flow Web Service	9
Get started	10
Set up your A360	10
Choose one option for setup: computer or a compatible mobile device	10
Option A: set up with your computer	10
Option B: set up with polar flow app using your mobile device or tablet	11
Languages	13
Wristband	13
Menu structure	14
Activity	15
My day	15
Training	15
My heart rate	15
Favorites	15
Watch faces	15

Pairing	17
Pair a Heart Rate Sensor with A360	17
Settings	18
Display setting	18
Time of day setting	18
Settings	18
Display setting	18
Time of day setting	19
Restart A360	19
Reset A360	19
Firmware Update	20
With computer	20
With mobile device or tablet	20
Flight mode	21
Turn flight mode ON	21
Turn flight mode OFF	21
Control menu	21
Time view icons	21
Training	23
Wear your A360	23
Start a Training Session	24
Start a training session with a target	24
During training	25

Training views	25
Training with heart rate	25
Training with a duration or calorie based training target	26
Training with a phased training target	27
Pause/Stop a training session	27
Training Summary	28
After Training	28
Training summary in A360	28
Polar Flow App	30
Polar Flow Web Service	30
Features	31
24/7 Activity Tracking	31
Activity Goal	31
Activity data	31
Inactivity alert	32
Sleep information in the Flow web service and Flow app	32
Activity data in Flow App and Flow web service	32
Smart notifications (iOS)	33
Smart Notification Settings	33
Polar Flow mobile app	33
Do not disturb setting in Polar Flow app	33
Do not disturb setting on your A360	34
Phone settings	34

Use	35
Dismissing Notifications	35
The Smart Notifications Feature Works via Bluetooth Connection	35
Smart notifications (Android)	35
Smart Notification Settings	36
Setting the Smart Notifications on/off	36
Do not disturb setting in Polar Flow app	36
Do not disturb setting on your A360	37
Block apps	37
Phone settings	37
Use	38
Dismiss Notifications	38
The Smart Notifications Feature Works via Bluetooth Connection	38
Polar Sport Profiles	38
Polar Smart Coaching features	39
Smart Calories	39
Heart Rate Zones	39
Training Benefit	39
Alarm	41
Polar Flow app and Web Service	42
Polar Flow App	42
Pair a Mobile Device with A360	42
Polar Flow Web Service	43

Feed	43
Explore	43
Diary	43
Progress	43
Plan Your Training	43
Create a Training Target	44
Quick Target	44
Phased target	44
Favorites	44
Sync the Targets to your A360	45
Favorites	45
Add a Training Target to Favorites:	45
Edit a Favorite	46
Remove a favorite	46
Polar Sport profiles in Flow Web Service	46
Add a Sport profile	46
Edit a Sport Profile	46
Syncing	47
Sync with Flow mobile App	47
Sync With Flow Web Service Via FlowSync	48
Important Information	49
Taking Care of Your A360	49
Storing	50

Service	50
Batteries	50
Charging A360 battery	50
Battery Operating Time	52
Low Battery Notifications	52
Precautions	53
Interference	53
Minimizing Risks When Training	53
Technical Specification	54
A360	54
Polar FlowSync Software	55
Polar Flow mobile application compatibility	55
Water resistance of Polar products	55
Limited International Polar Guarantee	57
Disclaimer	58

INTRODUCTION

Congratulations on your new A360! This waterproof fitness tracker has a wrist-based heart rate monitor, unique Polar smart coaching features and smartwatch features like smart notifications and a color touchscreen. With 24/7 activity measurement your new companion encourages you towards a more active and healthier lifestyle. Get an instant overview of your daily activity on your A360 or with Polar Flow app. Together with the Polar Flow web service and the Flow app your A360 helps you to understand how your choices and habits affect your well-being.

This user manual helps you get started with your new A360. To check the video tutorials and the latest version of this user manual, go to support.polar.com/en/A360.



1. Touchscreen
2. Button

- To activate the display: press the button or turn your wrist when you're wearing the fitness tracker.
- To change the watch face: tap and hold the display in time view, and swipe up or down. Then choose one by tapping it.

POLAR A360

Track your activities in your everyday life and enjoy training with wrist-based heart rate. See how they benefit your health and get tips on how to reach your daily activity goal. Follow your activity goal in your wrist and find more details about your activity in Flow app or Flow web service. Use smart notifications if you want to stay connected and get alerts from your phone directly to you wrist. Change the wristband and accessorize any out-fit. You can buy additional wristbands separately.

USB CABLE

The product set includes a standard USB cable. You can use it for charging the battery and syncing data between your A360 and Flow web service via FlowSync software.

POLAR FLOW APP

View your activity and training data at a glance. Flow app syncs your activity and training data wirelessly to the Polar Flow web service. Get it on the App StoreSM or Google playTM. You can start using your A360 also with the Flow app and update your A360 wirelessly too.

POLAR FLOWSYNC SOFTWARE

Polar FlowSync syncs your data between your A360 and the Polar Flow web service on your computer. Go to flow.polar.com/start to start using your A360 and to download and install the FlowSync software.

POLAR FLOW WEB SERVICE

Plan your training, follow your achievements, get guidance and see detailed analysis of your activity and training results. Let all your friends know about your achievements. Find all this at flow.polar.com.

GET STARTED

SET UP YOUR A360

When you get hold of your new A360, it's in storage mode. It wakes up when you plug it into a computer for setup or a USB charger for charging. We recommend that you charge the battery before you start using your A360. If the battery is completely empty, it takes a couple of minutes for the charging to start. See [Batteries](#) for detailed information on charging the battery, battery operating times and low battery notifications.



CHOOSE ONE OPTION FOR SETUP: COMPUTER OR A COMPATIBLE MOBILE DEVICE

You can choose how to set up your A360, with a computer and a USB cable or wirelessly with a compatible mobile device. Both methods require an Internet connection.


- Mobile setup is convenient if you don't have access to a computer with a USB port, but it might take longer.
- Wired setup is quicker and you can charge your A360 at the same time, but you need a USB cable and computer available.

OPTION A: SET UP WITH YOUR COMPUTER


1. Go to flow.polar.com/start and install the FlowSync software to set up your A360 and [update the firmware](#) if needed.
2. Push down the top part (A) of the USB cover inside the bracelet to access the micro USB port and plug

in the supplied USB cable (B).

i **Don't charge the device when its USB port is wet.** If the USB port of your A360 has gotten wet, let it dry up before plugging in.

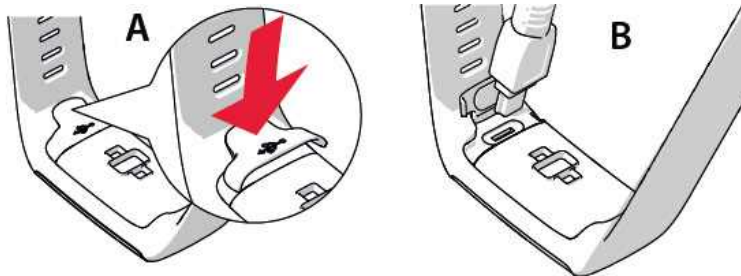

3. Plug the other end of the cable into the USB port of your computer for setup and charging the battery (C).

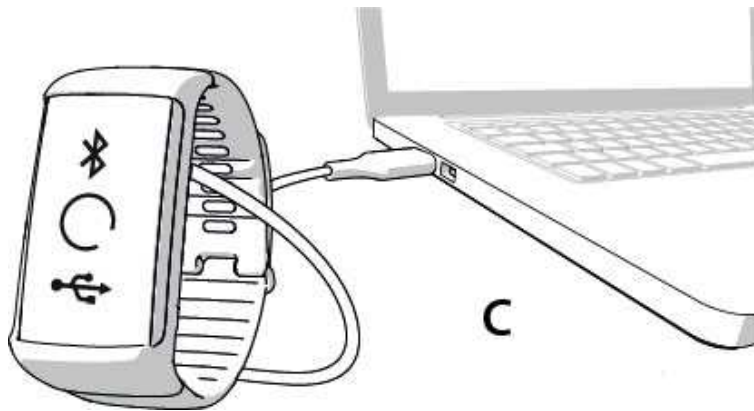

4. Then we'll walk you through signing up for the Polar Flow web service and personalizing your A360.

i To get the most accurate and personalized activity and training data, it's important that you're precise with the physical settings when signing up for the web service. When signing up, you can choose a [language](#) and get the latest firmware for your A360.

When closing the USB cover, make sure it fits flush on the device.


After the setup is done, you're ready to go. Have fun!

OPTION B: SET UP WITH POLAR FLOW APP USING YOUR MOBILE DEVICE OR TABLET

Polar A360 connects to the Polar Flow mobile app wirelessly via Bluetooth Smart, so remember to have it turned on in your mobile device.

1. To make sure there's enough charge in your A360 during the mobile setup, just plug the USB cable in a powered USB port or a USB power adapter. Make sure that the adapter is marked with "output 5Vdc" and that it provides a minimum of 500mA. The display begins to show an animated circle with Bluetooth and USB icons.

i **Don't charge the device when its USB port is wet.** If the USB port of your A360 has gotten wet, let it dry up before plugging in.

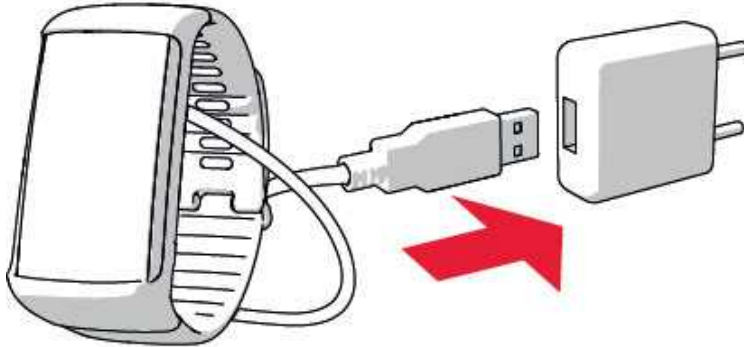

2. Go to the App StoreSM or Google PlayTM on your mobile device and search and download the Polar Flow app.
The mobile compatibility is available at polar.com/support.
3. When you open the Flow app it recognizes your new A360 nearby and prompts you to start pairing it. Accept the pairing request and enter the Bluetooth pairing code from your A360 to the Flow app.
i Make sure your A360 is powered up in order to make the connection possible.
4. Then create an account or sign in if you already have a Polar account. We'll walk you through the sign-up and setup within the app. Tap Save and sync when you've defined all the settings. Your personalized settings will now be transferred to the bracelet.
To get the most accurate and personal activity and training data, it's important that you're precise with the settings.
i Please notice your A360 may get the latest firmware update during the wireless setup, and depending on your connection it may take up to 20 minutes to complete. Your A360 will receive the [language](#) package according to your selection in the setup and it will also take some time.
5. A360 display will open to the time view once the synchronization is done.

You're ready to go, have fun!

LANGUAGES

When you [set up](#) your A360, you can select one from the following languages to use it with:


- English
- Spanish
- Portuguese
- French
- Danish
- Dutch
- Swedish
- Norwegian
- German
- Italian
- Finnish
- Polish
- Russian
- Chinese (simplified)
- Japanese

After the setup you can change the language in the Flow app or in the web service.

WRISTBAND

The wristband of your A360 is easy to change. Very handy if you want to color coordinate with your outfit, for example.

1. Bend the wristband from both sides, one side at a time, to detach it from the device.

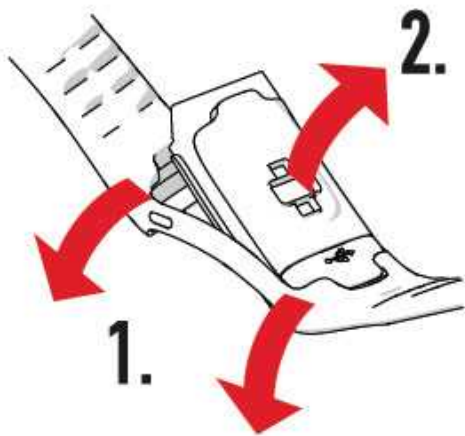


2. Pull the device from the wristband.

To attach the wristband, perform the steps in the reverse order. Make sure the band fits flush with the device on both sides.

MENU STRUCTURE

You can turn on the display by a simple wrist gesture or press the button on the side.

Enter and browse through the menu by swiping the touch screen up or down. Select items by tapping the icons, and return with pressing the button on the side.

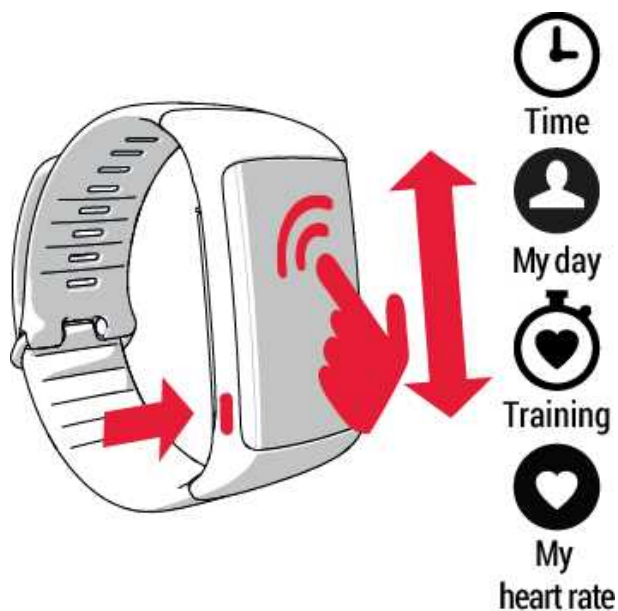

ACTIVITY

Your daily activity goal is visualized in some of the watch faces and in the activity bar in **My day** menu. For example, you can see your progress towards the goal how the clock numbers fill up with color in one.

For more information, see [24/7 Activity Tracking](#).

MY DAY

Here you'll see the progress of your daily activity goal in more detail, steps, distance and calories and any training sessions you've done so far during the current day or any planned training sessions you've created in the Flow web service.

Tap each event in your day to see the it in more detail. To see what you have left to go to reach your daily activity goal, tap the activity data.

TRAINING

This is where you start your training sessions. Tap the icon to access the sport selection menu. You can edit the selection in the Flow web service to keep your favorite sports more easily accessible on your A360. Go to Flow, click your name and [Sport profiles](#). Add or remove your favorite sports from there.

To start training, wait for your heart rate to appear next to a sport icon and tap the sport icon and the training session begins.

MY HEART RATE

Here you can quickly check your current heart rate without starting a training session. Just tighten your wristband, tap the icon and you'll see your current heart rate in a moment. Press the side button to exit.

FAVORITES

In [Favorites](#) you'll find training sessions you have saved as favorites in the Flow web service. If you've not saved any favorites in Flow, this item is not in the A360 menu.

For more information, see [Favorites](#).

WATCH FACES

To change the watch face of your fitness tracker:

1. Tap and hold the touch display with your finger until you see a thumbnail menu of the watch faces:



2. Swipe up or down to see them all and tap the one you choose.

Here are the options:



- Vertical clock and date
- Activity bar filling from left to right



- Round clock with date
- Round activity bowl filled with the daily activity goal progress with color and percentage number



- Horizontal clock and date, no activity bar
- The color changes with the time of day: yellow during the day and dark blue during the night

 *Good choice for checking the time during night time.*



- Default vertical clock
- Activity shown with color filling up the numbers with the daily activity goal progress

PAIRING

Bluetooth Smart® heart rate sensor has to be paired with your A360 for them to function together. Pairing takes only a few seconds, and ensures that your A360 receives signals from only your sensors and devices, and allows disturbance-free training in a group. Before entering an event or race, make sure that you do the pairing at home to prevent interference from other devices.

Polar A360 fitness tracker is compatible with Polar Bluetooth Smart® heart rate sensors H6 and H7.

PAIR A HEART RATE SENSOR WITH A360



When using a Polar Bluetooth Smart® heart rate sensor, A360 does not measure heart rate from the wrist.

There are two ways to pair a heart rate sensor with your A360:

1. Wear the heart rate sensor, and press and hold the button in time view until a message displays to touch the device with the A360.
2. Touch the heart rate sensor with your A360.
3. **Pairing completed** is shown when you're done.


OR

1. Wear the heart rate sensor, tap **Training** on your A360.
2. Touch the heart rate sensor with your A360.
3. **Pairing completed** is shown when you're done.

SETTINGS

DISPLAY SETTING

You can choose on which hand you want to wear your A360 either in the Polar Flow web service or the Polar Flow mobile app. The setting changes the orientation of the A360 display accordingly.

 *We recommend wearing the bracelet on your non-dominant hand to get the most accurate activity tracking results.*

You can edit your settings any time in the Polar Flow web service and mobile app.

To change the display setting on your computer

1. Plug in your A360 to your computer's USB port, go to flow.polar.com and sign in.
2. Go to **Settings** and **Products**.
3. Choose your A360, click and change the handedness.

The display orientation on your A360 will change on the next synchronization.

To change the display setting on the mobile app

1. Go to **Settings**.
2. Tap **Product information** and choose the desired wrist handedness for your A360.

The display orientation on your A360 will change on the next synchronization.

TIME OF DAY SETTING


The current time and its format are transferred to your A360 from your computer system clock when you sync with the Polar Flow web service. To change the time, you'll first need to change the time zone on your computer and then sync your A360.

If you change the time or time zone on your mobile device and sync the Polar Flow app with the Polar Flow web service and your A360, the time also changes on your A360. Your mobile device needs to have Internet connection available in order to change the time.

SETTINGS

DISPLAY SETTING

You can choose on which hand you want to wear your A360 either in the Polar Flow web service or the Polar Flow mobile app. The setting changes the orientation of the A360 display accordingly.

 We recommend wearing the bracelet on your non-dominant hand to get the most accurate activity tracking results.

You can edit your settings any time in the Polar Flow web service and mobile app.

To change the display setting on your computer

1. Plug in your A360 to your computer's USB port, go to flow.polar.com and sign in.
2. Go to **Settings** and **Products**.
3. Choose your A360, click and change the handedness.

The display orientation on your A360 will change on the next synchronization.

To change the display setting on the mobile app

1. Go to **Settings**.
2. Tap **Product information** and choose the desired wrist handedness for your A360.

The display orientation on your A360 will change on the next synchronization.

TIME OF DAY SETTING

The current time and its format are transferred to your A360 from your computer system clock when you sync with the Polar Flow web service. To change the time, you'll first need to change the time zone on your computer and then sync your A360.

If you change the time or time zone on your mobile device and sync the Polar Flow app with the Polar Flow web service and your A360, the time also changes on your A360. Your mobile device needs to have Internet connection available in order to change the time.

RESTART A360

You can restart your A360 by pressing and holding the button for a while until you see the power icon. Touch it to turn the device off. Press the button again to restart it.

RESET A360

If you experience problems with your A360, try resetting it. Resetting empties your A360 of all information and you need to set it up again for your personal use.

Reset your A360 in FlowSync with your computer:

1. Connect your A360 to the computer with the supplied USB cable
2. Open settings in FlowSync.

3. Press the Factory Reset button.

You can also reset your A360 from the bracelet itself:

1. Press and hold the button to enter the row of icons menu. Ignore the sync/pair message and keep pressing the button.
2. Tap the power icon to turn the device off,
3. While the Turning off text is shown, press the button again for five seconds.

Now you need to set up your A360 again, either via mobile or computer. Just remember to use the same Polar account in the setup you've used before resetting.


FIRMWARE UPDATE WITH COMPUTER

You can update the firmware of your A360 yourself to keep it up to date. Whenever a new firmware version is available, FlowSync will notify you when you connect A360 to your computer. The firmware updates are downloaded via FlowSync.

Firmware updates are performed to improve the functionality of your A360. They can include improvements to existing features, completely new features or bug fixes.


To update the firmware:

1. Plug your A360 to your computer with the USB cable.
2. FlowSync starts syncing your data.
3. After syncing, you are asked to update the firmware.
4. Choose **Yes**. New firmware is installed (this may take some time), and A360 restarts.

 *You won't lose any data due to the firmware update: Before the update begins, the data from your A360 is synced to the Flow web service.*

WITH MOBILE DEVICE OR TABLET

You can also update the firmware with your mobile device if you're using Polar Flow mobile app to sync your A360 training and activity data. The app will let you know if there's an update available and will guide you through it. We recommend you plug in the A360 to a power source before starting the update to ensure flawless update operation.

 *The wireless firmware update may take up to 20 minutes, depending on your connection.*

FLIGHT MODE

Flight mode cuts off all wireless communication from your A360. You can still use it, but you can't sync your data with the Polar Flow mobile app or use it with any wireless accessories.

TURN FLIGHT MODE ON

1. Press and hold the button until you see an airplane icon. First you'll see the pair/sync notification, just keep pressing the button until the airplane icon shows up..
2. Tap the icon and FLIGHT MODE ON is shown.

TURN FLIGHT MODE OFF

1. Press and hold the button until you see an airplane icon.
2. Tap the icon and FLIGHT MODE OFF is shown.

CONTROL MENU

In Control menu you can toggle Flight mode and Do not disturb mode on and off, power the device down, reset Bluetooth connections and see device-specific information.

To access the Control menu, press and hold the side button for a while until you see the following menu icons. Swipe up to see them all.



Flight mode. Cuts off all wireless connections from the fitness tracker.



Do not disturb mode. Disables the display turning on from your wrist movement and blocks Smart notifications from your phone.



Power off. Turn off the device.



Reset current Bluetooth connections. To use any Bluetooth accessories, you need to pair them again with the device.







Information. See your device ID, firmware version, etc.

Press the side button to return to time view.

TIME VIEW ICONS


In time view the following icons may be found beside the time and date.

-  Flight mode is on. All wireless connections to your mobile phone and accessories are disconnected.
-  Do not disturb mode is on. The display does not turn on from your wrist movement and you will not receive smart notifications.
-  Vibrating alarm is set. You can set the alarm from the Flow app.
-  Bluetooth connection to your paired phone is disconnected. Press and hold the side button to reconnect.

TRAINING

WEAR YOUR A360

Your Polar A360 fitness tracker has a built-in heart rate sensor that measures heart rate from the wrist. To measure wrist-based heart rate accurately you need to wear the bracelet snugly on top of your wrist, just behind the wrist bone. The sensor must be in constant touch with your skin, but the wristband should not be too tight either to prevent blood flow.

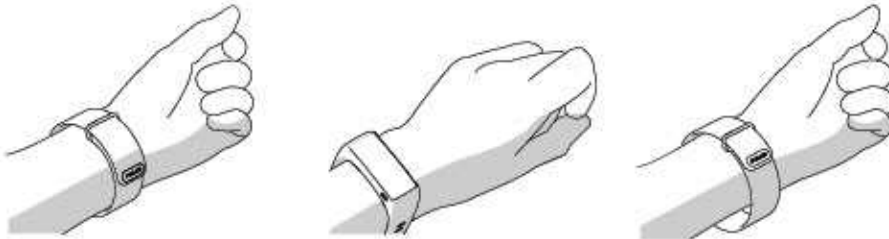

You can wear the bracelet a little looser, if you like, while not working out, but you should tighten it up for your training sessions to make sure you get accurate heart rate readings from the wrist. If you have tattoos on the skin of your wrist, avoid placing the sensor right on it as it may prevent accurate readings.




Also it's a good idea to warm up the skin if your hands and skin get cold easily. Get the blood going before starting your session!

In sports where it's more challenging to keep the sensor stationary on your wrist or where you have pressure or movement in muscles or tendons near the sensor, we recommend using a Polar H7 heart rate sensor with a chest strap to get better measurement of your heart rate.

Follow your heart rate zones directly from your device and get guidance for training sessions you've planned in the Flow web service

Although there are many subjective clues as to how your body is doing during exercise (perceived exertion, breathing rate, physical sensations), none of them are as reliable as measuring heart rate. It is objective and is affected by both internal and external factors - meaning you will have a dependable measure of your physical state.

START A TRAINING SESSION

	<p>In the time view, swipe the display up or down and tap Training to enter pre-training mode: a heart icon turns to display your heart rate when it's been found.</p>
	<p>Choose the sport profile you want to use by swiping up or down.</p>
	<p>Tap the chosen sport icon to start the session.</p>

See [Functions During Training](#) for more information on what you can do with your A360 during training.

To pause a training session, press the button. **Paused** is displayed and the A360 goes to pause mode. To continue your training session, tap the green arrows icon.

To stop a training session, press and hold the button during training recording or in pause mode until the session summary comes up. Or you can tap and hold the red stop icon for three seconds to end the recording.

START A TRAINING SESSION WITH A TARGET

You can plan your training and [create detailed training targets](#) in the Flow web service and sync them to your A360 with Flowsync software or Flow app. Your A360 will guide you towards completing your target during training.

To start a training session with a target:

1. Go to **My day**.
2. Choose the target from the list by tapping it.
3. Choose the sport you want to use by tapping its icon.
4. Training display comes up and you can start training.





DURING TRAINING

TRAINING VIEWS


You can activate the display by a wrist gesture and browse through training views by swiping the display up or down. The display turns off automatically to save battery. You can set the display not to turn off by tapping and holding the touchscreen during training mode until you see a light bulb icon. To turn off this feature, tap and hold the touchscreen again until you see a light bulb off icon.

You can see the available training views below.

TRAINING WITH HEART RATE





	<p>Your current heart rate in the color of the current heart rate zone.</p> <p>The duration of your training session so far.</p>
	<p>Time of day</p> <p>Calories burned so far during training.</p>
	<p>Current speed or pace of the session. Modify the sport profiles in Flow to define which one you want to see here.</p> <p>Distance covered in the session so far.</p> <p> Visible only with the running-related sport profiles*</p>

* Running, Jogging, Road running, Trail running, Treadmill running, Track and field running, Walking, Ultra running

 You can also disable the heart rate sensor for your next session by tapping and holding a sport icon while in the Training menu.




TRAINING WITH A DURATION OR CALORIE BASED TRAINING TARGET

If you have created a training target based on duration or calories in the Flow web service and synced it to your A360, you have the following views:


 <p>OR</p> 	<p>If you've created a target based on calories, you can see how many calories of your target you have left to burn and your current heart rate.</p> <p>If you've created a target based on time, you can see how much of your target you have still to go to reach it and your current heart rate.</p> <p>The color of the heart rate number shows in which heart rate zone you are.</p>
	<p>The duration of your training session so far.</p> <p>Time of day.</p>
	<p>Calories burned so far during training.</p> <p>Heart rate zones in vertical bars you've spent your session in. The current one is highlighted.</p>


TRAINING WITH A PHASED TRAINING TARGET

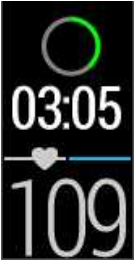
If you have created a phased target in the Flow web service, defined the heart rate intensity for each phase and synced the target to your A360, you have the following views:

	<p>You can see your heart rate, the lower and upper heart rate limit of the current phase and the duration of the training session so far. The heart symbol visualizes your current heart rate between the heart rate limits.</p> <p>The color of your heart rate shows the heart rate zone you are currently in.</p>
	<p>The duration of your training session so far.</p> <p>Time of day</p>
	<p>Calories burned so far during training</p>

PAUSE/STOP A TRAINING SESSION

	<p>1. To pause a training session, press the button. Paused is displayed. To continue your training session, tap the green arrows icon.</p>
---	--

<p>Paused</p> 	<p>2. To stop a training session, press and hold the button for three seconds during training recording or in pause mode until the counter hits zero. Or you can tap and hold the red stop icon on the display.</p>
---	---

 If you stop your session after pausing, the time elapsed after pausing is not included in the total training time.



TRAINING SUMMARY AFTER TRAINING

You'll get a summary of your training session on your A360 right after you've stopped training. Get a more detailed and illustrated analysis in the Flow app or in the Flow web service.

TRAINING SUMMARY IN A360

You can only view your training summary for the current day in A360. Go to [My day](#) and choose the training session you want to view.

<p>Start time</p> <p>8:18</p> <p>Duration</p> <p>0:31 <small>18</small></p>	<p>Start time</p> <p>The time when your session started.</p> <p>Duration</p> <p>The duration of the session</p>
<p>Average heart rate</p> <p>120</p> <p>Maximum heart rate</p> <p>172</p>	<p>Average heart rate</p> <p>Your average heart rate during the session</p> <p>Maximum heart rate</p> <p>Your maximum heart rate during the session</p>

<p>Training benefit</p> <p>Recovery training</p>	<p>Training Benefit</p> <p>The main effect / feedback of your session. To get Training Benefit, you'll need to have spent at least 10 minutes in Sport Zones with heart rate measurement on.</p>
<p>Heart rate zones</p> 	<p>Heart rate zones</p> <p>The percentage of training time spent in each heart rate zone</p>
<p>Calories</p> <p>223kcal</p> <p>Fat burn %</p> <p>38%</p>	<p>Calories</p> <p>Calories burned during the session</p> <p>Fat burn %</p> <p>The percentage of fat burning calories during the session</p>
<p>Speed</p> <p>Avg</p> <p>km/h</p> <p>9.8</p> <p>Max</p> <p>km/h</p> <p>13.2</p>	<p>Average and maximum speed or pace of the session</p> <p> Visible only with the running-related sport profiles*</p>
<p>Distance</p> <p>6.8km</p>	<p>Distance covered in the session</p> <p> Visible only with the running-related sport profiles*</p>

*Running, Jogging, Road running, Trail running, Treadmill running, Track and field running, Walking, Ultra running

POLAR FLOW APP

Sync your A360 with Flow app by pressing and holding the button in the time view. In Flow app you can analyze your data at a glance after each session. The app allows you to see a quick overview of your training data offline.

For more information, see [Polar Flow App](#).

POLAR FLOW WEB SERVICE

The Polar Flow web service allows you to analyze every detail of your training and learn more about your performance. Follow your progress and also share your best sessions with others.

For more information, see [Polar Flow Web Service](#).

FEATURES

24/7 ACTIVITY TRACKING

A360 tracks your activity with an internal 3D accelerometer that records your wrist movements. It analyzes the frequency, intensity and regularity of your movements together with your physical information, allowing you to see how active you really are in your everyday life, on top of your regular training. We recommend to wear you A360 on your non-dominant hand for more accurate activity tracking.

ACTIVITY GOAL

You'll get your personal activity goal when you register your Polar account in Flow. It guides you in reaching the goal each day. You can view the goal on your A360 and in Polar Flow app or web service. The activity goal is based on your personal data and activity level setting, which you can find in the Daily Activity Goal settings in the [Flow web service](#).

If you want to change your goal, sign in to the Flow web service, click your name/profile photo in the upper right corner and go to the Daily Activity goal tab in Settings. The Daily Activity goal setting lets you choose the one that best describes your typical day and activity from three activity levels. Below the selection area, you can see how active you need to be to reach your daily activity goal on the chosen level. For example, if you're an office worker and spend most of your day sitting, you would be expected to reach about four hours of low intensity activity during an ordinary day. For people who stand and walk a lot during their working hours, the expectations are higher.

ACTIVITY DATA

A360 gradually fills up an activity bar to indicate your progress towards your daily goal. When the bar is full, you've reached your goal and you'll get a vibrating alert. You can view the activity bar in [My day](#) menu and in some of the watch faces.

In the [My day](#) menu you can see how active your day has been so far along with any training sessions you've done or planned for the day.

- **Steps:** Steps you've taken so far. The amount and type of body movements are registered and turned into an estimation of steps.
- **Distance:** Distance you've covered so far. The distance calculation is based on your height and the steps you've taken.
- **Calories:** Shows how many calories you've burned through training, activity and BMR (Basal metabolic rate: the minimum metabolic activity required to maintain life).

INACTIVITY ALERT

It's widely known that physical activity is a major factor in maintaining health. In addition to being physically active, it's important to avoid prolonged sitting. Sitting for long periods of time is bad for your health, even on those days when you train and gain enough daily activity. Your A360 spots if you're being inactive for too long during your day and this way helps you to break up your sitting to avoid the negative effects it has on your health.

If you've been still for 55 minutes, you'll get an inactivity alert: **It's time to move** is shown along with a small vibration. Stand up and find your own way to be active. Take a short walk, stretch, or do some other light activity. The message goes away when you start moving or press any button. If you don't get active in five minutes, you'll get an inactivity stamp, which you can see on the Flow app and Flow web service after syncing.

Both Flow app and Flow web service will show you how many inactivity stamps you have received. This way you can check back on your daily routine and make changes towards a more active life.

SLEEP INFORMATION IN THE FLOW WEB SERVICE AND FLOW APP

A360 will track your sleep time and quality (restful / restless), if you wear it at night. You don't have to turn the sleep mode on. The device automatically detects from your wrist movements that you're sleeping. Sleep time, and its quality (restful / restless) is shown in the Flow web service and Flow app after A360 is synced.

Your sleep time is the longest continuous rest time that takes place within 24 hours starting from 18:00/6pm to next day's 18:00/6pm. Breaks shorter than one hour in your sleep don't stop sleep tracking, but they are not taken into account in the sleep time. Breaks longer than 1 hour stop sleep time tracking.

The periods when you sleep peacefully and don't move a lot are calculated as restful sleep. The periods when you move and change your position are calculated as restless sleep. Instead of simply summing up all the immobile periods, the calculation gives more weight to long than short immobile periods. The percentage of restful sleep compares the time you slept restfully with the total sleeping time. Restful sleep is highly individual and should be interpreted together with sleep time.

Knowing the amount of restful and restless sleep gives you a look into how you sleep at night and if it's affected by any changes in your daily life. This may help you in finding ways to improve your sleep and feel well rested during the day.

ACTIVITY DATA IN FLOW APP AND FLOW WEB SERVICE

With the Flow app you can follow and analyze your activity data on the go and have your data synced wirelessly from your A360 to the Flow web service. The Flow web service gives you the most detailed insight into your activity information.

SMART NOTIFICATIONS (IOS)

The smart notifications feature allows you to get alerts about incoming calls, messages and notifications from apps onto your Polar device. You'll get the same notifications on your Polar device that you get on your phone screen. When heart rate training with your A360, you can only receive notifications about calls if you have the Polar Flow app running on your phone.

- Make sure you have the latest firmware version on your A360 and latest version of the Polar Flow app.
- To use the Smart Notifications feature you need to have the Polar Flow mobile app for iOS, and your A360 needs to be paired with the app.
- Please note that when the Smart Notifications feature is on, the battery of your Polar device and phone will run out faster because Bluetooth is continuously on.


SMART NOTIFICATION SETTINGS

POLAR FLOW MOBILE APP


 On the Polar Flow mobile app, the Smart Notifications feature is set off by default.

Set the Smart Notifications feature on/off in the mobile app as follows.

1. Open the Polar Flow mobile app.
2. Go to **Devices** and your A360 page if you have more than one Polar device.
3. Under **Smart notifications** choose **On** or **On (no preview)** or **Off**.
4. Sync your A360 with the mobile app by pressing and holding the button of your A360.
5. **Smart notifications on** or **Smart notifications off** is shown on your A360 display.

 Whenever you change the notification settings on the Polar Flow mobile app, remember to sync your A360 with the mobile app.

DO NOT DISTURB SETTING IN POLAR FLOW APP

 Do not disturb setting disables the display from turning on from your wrist movement, and lets you rest better in dark conditions, like in the bedroom for example.

If you want to disable notification alerts for certain hours of the day, set **Do not disturb** on in the Polar Flow mobile app. When it's on, you won't receive any notification alerts during the time period you've set. **Do not disturb** is set on by default, and the time period is 10 pm – 7 am.

Change the **Do not disturb** setting as follows:

1. Open the Polar Flow mobile app.
2. Go to **Devices** and your A360 page if you have more than one Polar device.
3. Toggle **Do not disturb** on or off, and set the start and end time for it.
4. Sync your A360 with the mobile app by pressing and holding on the button of your A360.

DO NOT DISTURB SETTING ON YOUR A360

You can disable the notification alerts right on your A360 as follows:

1. Press and hold the side button until you get to the Control menu. (At first you'll see the Searching text,



but just keep pressing the button.)

2. Tap the Do not disturb icon:



Do not disturb is on is shown on the display and the display turns to time view. The crescent moon icon is



shown on the time view while the feature is on:

To enable the notifications alerts, repeat the steps.

PHONE SETTINGS

The notification settings on your phone determine what notifications you receive on your A360. To edit the notification settings on your iOS phone:

1. Go to **Settings > Notifications** and choose the app.
2. Make sure that Notifications are turned on and the alert style is **Banners** or **Alerts**.

Please note, that during training sessions you will only receive phone calls and location related messages.

USE

When getting an alert, your Polar device will discreetly notify you by vibrating. When receiving a call, you can choose to answer, silence or decline it (only with iOS 8). Silencing just silences your Polar device, it won't silence your phone. If a notification arrives during a call alert, it will not be shown.

During a training session you can receive calls, and get navigation directions (only with Google maps) if you have Flow app running on your phone. You will not receive any notifications (email, calendar, apps etc.) during training sessions.

DISMISSING NOTIFICATIONS

Notifications can be dismissed manually or by timeout. Manually dismissing the notification also dismisses it from your phone screen, but timeout just removes it from your Polar device, and it will still be visible on your phone.

To dismiss notifications from the display:

- Manually: Press the side button

Timeout: The notification will disappear after 30 seconds if you do not dismiss it manually

THE SMART NOTIFICATIONS FEATURE WORKS VIA BLUETOOTH CONNECTION

The Bluetooth connection and the Smart Notifications feature work between your A360 and your phone when they are in the line of sight and within the range of 5 m /16 ft from each other. If your A360 is out of range for less than two hours, your phone restores the connection automatically within 15 minutes when your A360 returns to the range area.


If your A360 is out of range for more than two hours, restore the connection by pressing and holding the button on your A360.

SMART NOTIFICATIONS (ANDROID)

The smart notifications feature allows you to get alerts about incoming calls, messages and notifications from apps onto your Polar device. You'll get the same notifications on your Polar device that you get on your phone screen. Please note that when heart rate training with your A360, you can't receive any notifications.

- Make sure you have Android version 5.0 or newer on your phone.
- Make sure you have the latest firmware version on your A360, v. 1.1.15 minimum.
- To use the Smart Notifications feature you need to have the Polar Flow mobile app for Android, and your A360 needs to be paired with the app.

- For the Smart Notifications feature to work, Polar Flow app must be running on your phone.
- Please note that when the Smart Notifications feature is on, the battery of your Polar device and phone will run out faster because Bluetooth is continuously on.


 We have verified the functionality with some of the most common phone models, like Samsung Galaxy S5, Samsung Galaxy S6, Nexus 5, LG G4, Sony Xperia Z3. There might be differences in the functionality with other phone models which support Android 5.0.


SMART NOTIFICATION SETTINGS

SETTING THE SMART NOTIFICATIONS ON/OFF


 On the Polar Flow mobile app, the Smart Notifications feature is set off by default.

Set the Smart Notifications feature on/off in the mobile app as follows.

1. Open the Polar Flow mobile app.
2. Sync your A360 with the mobile app by pressing and holding the side button of your A360.
3. Go to  > **Devices** and your A360 page if you have more than one Polar device.
4. Under **Smart notifications** choose **On** or **On (no preview)** or **Off**.
When you turn Smart notifications on, you will be guided to enable the notifications on your phone (i.e. give Polar Flow app an access to your phone notifications), if you haven't enabled them. Enable notifications? is shown. Tap Enable. Then choose Polar Flow and tap OK.
5. Sync your A360 with the mobile app by pressing and holding the button of your A360.
6. **Smart notifications on** or **Smart notifications off** is shown on your A360 display.


 Whenever you change the notification settings on the Polar Flow mobile app, remember to sync your A360 with the mobile app.

DO NOT DISTURB SETTING IN POLAR FLOW APP

 Do not disturb setting disables the display from turning on from your wrist movement, and lets you rest better in dark conditions, like in the bedroom for example.

If you want to disable notification alerts for certain hours of the day, set **Do not disturb** on in the Polar Flow mobile app. When it's on, you won't receive any notification alerts during the time period you've set. **Do not disturb** is set on by default, and the time period is 10 pm – 7 am.


Change the **Do not disturb** setting as follows:

1. Open the Polar Flow mobile app.
2. Go to  > **Devices** and your A360 page if you have more than one Polar device.
3. Toggle **Do not disturb** on or off, and set the start and end time for it. The Do not disturb setting is visible when the Smart notifications setting is on.
4. Sync your A360 with the mobile app by pressing and holding on the button of your A360.

DO NOT DISTURB SETTING ON YOUR A360

You can disable the notification alerts right on your A360 as follows:

1. Press and hold the side button until you get to the Control menu. (At first you'll see the Searching text,

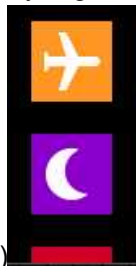

but just keep pressing the button.)

2. Tap the Do not disturb icon:




Do not disturb is on is shown on the display and the display turns to time view. The crescent moon icon is



shown on the time view while the feature is on:

To enable the notifications alerts, repeat the steps.

BLOCK APPS

In Polar Flow app you can block notifications from certain apps. As soon as you've received the first notification from an app to your A360, the app will be listed in  > **Devices** > **Block apps** and you can block it if you wish.

PHONE SETTINGS

To be able to receive notifications from your phone on your A360, you first need to enable notifications on the mobile apps from which you want to receive them. You can do this either via the mobile app's settings or via

your Android phone's App notifications settings. See the user manual of your phone for further information on App notifications settings.

Then Polar Flow app has to have permission to read the notifications from your phone. You have to give Polar Flow app access to your phone notifications (i.e. enable notifications in the Polar Flow app). Polar Flow app guides you to give access when needed.

USE

When getting an alert, your Polar device will discreetly notify you by vibrating. When receiving a call, you can choose to answer, silence or decline it. Silencing just silences your Polar device, it won't silence your phone. If a notification arrives during a call alert, it will not be shown.

You will not receive any notifications during training sessions.

DISMISS NOTIFICATIONS

Notifications can be dismissed manually or by timeout. Manually dismissing the notification also dismisses it from your phone screen, but timeout just removes it from your Polar device, and it will still be visible on your phone.

To dismiss notifications from the display:

- Manually: Press the side button

Timeout: The notification will disappear after 30 seconds if you do not dismiss it manually

THE SMART NOTIFICATIONS FEATURE WORKS VIA BLUETOOTH CONNECTION

The Bluetooth connection and the Smart Notifications feature work between your A360 and your phone when they are in the line of sight and within the range of 5 m /16 ft from each other. If your A360 is out of range for less than two hours, your phone restores the connection automatically within 15 minutes when your A360 returns to the range area.

If your A360 is out of range for more than two hours, restore the connection by pressing and holding the button on your A360.

POLAR SPORT PROFILES

We have created seven default sport profiles to your A360. In the Flow web service you can add new sport profiles and sync them to your A360, and this way create a list of all your favorite sports. You can also define some specific settings for each sport profile. For example, set vibration feedback off in the yoga sport profile. For more information, see [Sport Profiles in Flow Web Service](#).

Using sport profiles makes it possible for you to keep up with what you've done and see the progress you've made in different sports. You can do this in the [Flow web service](#).

POLAR SMART COACHING FEATURES

Whether it's assessing your day-to-day fitness levels, creating individual training plans, working out at the right intensity or receiving instant feedback, Polar Smart Coaching offers a choice of unique, easy-to-use features, personalized to your needs and designed for maximum enjoyment and motivation when training.

A360 includes the following Polar Smart Coaching features:

- [Smart calories](#)
- [Heart rate zones](#)
- [Training Benefit](#)

SMART CALORIES

The most accurate calorie counter on the market calculates the number of calories burned based on your individual data:

- Body weight, height, age, gender
- Individual maximum heart rate (HR_{max})
- The intensity of your training or activity
- Individual maximal oxygen uptake ($VO2_{max}$)

The calorie calculation is based on an intelligent combination of acceleration and heart rate data. The calorie calculation measures your training calories accurately.

You can see your cumulative energy expenditure (in kilocalories, kcal) during training sessions, and your total kilocalories of the session afterwards. You can also follow your total daily calories.

HEART RATE ZONES

The range between 50% and 100% of your maximum heart rate is divided into five heart rate zones. By keeping your heart rate within a certain heart rate zone you can easily control the intensity level of your workout. Each heart rate zone carries its own main benefits, and understanding these benefits will help you achieve the effect you want from your workout.

Learn more about the Heart Rate Zones: [What are Heart Rate Zones?](#).

TRAINING BENEFIT

Training Benefit gives you textual feedback on the effect of each training session helping you to better understand the effectiveness of your training. **You can see the feedback in Flow app and Flow web service.** To get the feedback, you need to have trained at least a total of 10 minutes in the [heart rate zones](#).

Training Benefit feedback is based on heart rate zones. It reads into how much time you spend and how many calories you burn in each zone.

The descriptions of different training benefit options are listed in the table below

Feedback	Benefit
Maximum training+	What a session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient. This session also increased your resistance to fatigue.
Maximum training	What a session! You improved your sprint speed and the nervous system of your muscles, which make you more efficient.
Maximum & Tempo training	What a session! You improved your speed and efficiency. This session also significantly developed your aerobic fitness and your ability to sustain high intensity effort for longer.
Tempo & Maximum training	What a session! You significantly improved your aerobic fitness and your ability to sustain high intensity effort for longer. This session also developed your speed and efficiency.
Tempo training+	Great pace in a long session! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer. This session also increased your resistance to fatigue.
Tempo training	Great pace! You improved your aerobic fitness, speed, and ability to sustain high intensity effort for longer.
Tempo & Steady state training	Good pace! You improved your ability to sustain high intensity effort for longer. This session also developed your aerobic fitness and the endurance of your muscles.
Steady state & Tempo training	Good pace! You improved your aerobic fitness and the endurance of your muscles. This session also developed your ability to sustain high intensity effort for longer.
Steady state training +	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also increased your resistance to fatigue.
Steady state training	Excellent! You improved the endurance of your muscles and your aerobic fitness.
Steady state & Basic training, long	Excellent! This long session improved the endurance of your muscles and your aerobic fitness. It also developed your basic endurance and your body's ability to burn fat during exercise.
Steady state & Basic training	Excellent! You improved the endurance of your muscles and your aerobic fitness. This session also developed your basic endurance and your body's ability to burn fat during exercise.
Basic & Steady state training, long	Great! This long session improved your basic endurance and your body's ability to burn fat during exercise. It also developed the endurance of your muscles and

Feedback	Benefit
	your aerobic fitness.
Basic & Steady state training	Great! You improved your basic endurance and your body's ability to burn fat during exercise. This session also developed the endurance of your muscles and your aerobic fitness.
Basic training, long	Great! This long, low intensity session improved your basic endurance and your body's ability to burn fat during exercise.
Basic training	Well done! This low intensity session improved your basic endurance and your body's ability to burn fat during exercise.
Recovery training	Very nice session for your recovery. Light exercise like this allows your body to adapt to your training.

ALARM

The alarm in A360 is silent and vibrating. You can set an alarm only in the Polar Flow mobile app.

 *When the alarm is set on, a clock icon is displayed in the time view.*

You can check the alarm time from **My day** by pulling the view upwards with your finger.

POLAR FLOW APP AND WEB SERVICE

POLAR FLOW APP

Polar Flow app allows you to see an instant visual interpretation of your activity and training data offline whenever you want.

Get details of your 24/7 activity. Find out what you're missing from your daily goal and how to reach it. See steps, covered distance, burned calories and sleep time.

Flow app lets you easily access your training targets and view fitness test results. Get a quick overview of your training and analyze every detail of your performance right away. See the weekly summaries of your training in the training diary. You can also share the highlights of your training with your friends in the Flow community.


You can also wirelessly setup your new A360 with it. See [Setup your A360](#) how.

To start using the Flow app, download it from App Store or Google Play onto your mobile. For support and more information about using Polar Flow app, go to support.polar.com/en/support/Flow_app. Before taking a new mobile device (smartphone, tablet) into use, it has to be paired with your A360.

PAIR A MOBILE DEVICE WITH A360

Before pairing a mobile device

- download Flow app from the App Store or Google Play.
- make sure your mobile device has *Bluetooth* turned on, and airplane mode/flight mode is not turned on.

 *Please note that you have to do the pairing in the Flow app and NOT in your mobile device's Bluetooth settings.*

To pair a mobile device:

1. On your mobile device, open Flow app and sign in with your Polar account, which you have created when [setting up your A360](#).
2. Wait for the **Connect product** view to appear on your mobile device (**Waiting for A360**) is displayed.
3. On A360, press and hold the button
4. **Pair: touch device with A360** is displayed. Touch the mobile device with your A360
5. **Pairing** is displayed.
6. **Confirm on other dev. xxxx** is displayed on your A360. Enter the pin code from the A360 on the mobile device. The pairing starts.
7. **Pairing completed** is displayed when you're done.

To see your training data in Flow app, you must sync your A360 with it after your session. When you sync your A360 with the Flow app, your activity and training data are also synced automatically via an internet connection to the Flow web service. Flow app is the easiest way to sync your training data from your A360 with the web service. For information on syncing, see [Syncing](#).

POLAR FLOW WEB SERVICE

The Polar Flow web service shows your activity goal and the details of your activity, and helps you understand how your daily habits and choices affect your well-being. Flow web service allows you to plan and analyze every detail of your training and learn more about your performance and progress in the long run. Set up and customize your A360 to perfectly fit your training needs by adding sport profiles and tailoring settings. You can also share the highlights of your training with your friends in the Flow community.

To start using the Flow web service [set up your A360](#) at flow.polar.com/start. There you are guided to download and install the FlowSync software for syncing data between your A360 and the web service, and to create a user account for the web service. Also get the Flow app for your mobile for instant analysis and for easy data sync to the web service.

FEED

In [Feed](#) you can see what you and your friends have been up to lately. Check out the latest training sessions and activity summaries, share your best achievements, comment and like your friends' activities.

EXPLORE

In [Explore](#) you can browse the map and see other users' shared training sessions with route information. You can also relive other people's routes and see where the highlights happened.

DIARY

In [Diary](#) you can see your daily activity, planned training sessions (training targets), as well as review past training results and fitness test results.

PROGRESS

In [Progress](#) you can follow your development with reports. Reports are a handy way to follow your progress in training over longer periods. In week, month and year reports you can choose the sport for the report. In custom period, you can choose both the period and the sport. Choose the time period and sport for report from the drop-down lists, and press the wheel icon to choose what data you want to view in the report graph.

For support and more information about using the Flow web service, go to, support.polar.com/en/support/flow.

PLAN YOUR TRAINING

Plan your training in the Flow web service by creating detailed training targets and syncing them to your A360 with Flowsync or via Flow app. Your A360 will guide you towards completing your target during training. Note


that A360 uses [heart rate zones](#) in training sessions planned in the Flow web service - EnergyPointer feature is not available.

- **Quick Target:** Choose a duration or calorie target for the training. You can, for example, choose to burn 500 kcal or run for 30 minutes.
- **Phased Target:** You can split your training session into phases and set a different duration and intensity for each of them. This one is for e.g. creating an interval training session, and adding proper warm-up and cool-down phases to it.
- **Favorites:** Create a target, and add it to **Favorites** to easily access it every time you want to perform it again.


CREATE A TRAINING TARGET

1. Go to **Diary**, and click **Add > Training target**.
2. In the **Add training target** view, choose **Quick** or **Phased**.

Quick Target

1. Choose **Quick**
2. Choose **Sport**, enter **Target name** (maximum 45 digits), **Date** and **Time** and any **Notes** (optional) you want to add.
3. Fill in either duration or calories . You can only fill in one of the values.
4. Click the favorite icon  if you want to add the target to your **Favorites**.
5. Click **Save** to add the target to your **Diary**.


Phased target

1. Choose **Phased**
2. Choose **Sport**, enter **Target name** (maximum 45 digits), **Date** and **Time** and any **Notes** (optional) you want to add.
3. Choose whether you want to create a new phased target (**CREATE NEW**) or use the template (**USE TEMPLATE**).
4. Add phases to your target. Click **DURATION** to add a phase based on duration. Choose name and duration for each phase, manual or automatic next phase start, and the intensity.
5. Click the favorite icon  if you want to add the target to your **Favorites**.
6. Click **Save** to add the target to your **Diary**.

Favorites

If you have created a target and added it to your favorites you can use it as a scheduled target.

1. Choose **FAVORITE TARGETS**. Your training target favorites are shown.
2. Click **USE** to select a favorite as a template for your target.
3. Enter **Date** and **Time**.
4. You can edit the target if you wish, or leave it as it is.

 Editing the target in this view doesn't affect the favorite target. If you want to edit the favorite target, go to **FAVORITES** by clicking the star-icon right next to your name and profile photo.

5. Click **ADD TO DIARY** to add the target to your **Diary**.

SYNC THE TARGETS TO YOUR A360

Remember to sync the training targets to your A360 from the Flow web service via FlowSync or Flow App. If you don't sync them, they are only visible in your Flow web service Diary or Favorites list.

After syncing your training targets to your A360, you can find the training targets listed as favorites in **Favorites**.


For information on starting a training target session, see [Start a training session](#).

FAVORITES


In **Favorites**, you can store and manage your favorite training targets in the Flow web service. Your A360 can have a maximum of 10 favorites at a time. If you have over 10 favorites in the Flow web service, the first 10 in the list are transferred to your A360 when syncing. You can find them under the **Favorites** menu in your A360.

You can change the order of your favorites by dragging and dropping them in the web service. Choose the favorite you want to move and drag it into the place you want to put it in the list.


Add a Training Target to Favorites:

1. [Create a training target](#).
2. Click the favorites icon  on the lower right corner of the page.
3. The target is added to your favorites


or

1. Open an existing target from your **Diary**.
2. Click the favorites icon  on the lower right corner of the page.
3. The target is added to your favorites.

Edit a Favorite

1. Click the favorites icon  on the upper right corner next to your name. All your favorite training targets are shown.
2. Choose the favorite you want to edit.
3. You can change the name of the target. Click **SAVE**.
4. To edit other details of the target click **VIEW**. After you've done all the needed changes, click **UPDATE CHANGES**.

Remove a favorite

1. Click the favorites icon  on the upper right corner next to your name. All your favorite training targets are shown.
2. Click the delete icon in upper right corner of the training target to remove it from the favorites list.

POLAR SPORT PROFILES IN FLOW WEB SERVICE

There are seven sport profiles on your A360 by default. In the Flow web service you can add new sport profiles to your sports list, as well as edit them and existing profiles. Your A360 can contain a maximum of 20 sport profiles. If you have over 20 sport profiles in the Flow web service, the first 20 in the list are transferred to your A360 when syncing.

You can change the order of your sport profiles by dragging and dropping them. Choose the sport you want to move and drag it into the place you want to put it in the list.

ADD A SPORT PROFILE

In the Flow web service:

1. Click your name/profile photo in the upper right corner.
2. Choose **Sport Profiles**.
3. Click **ADD SPORT PROFILE**, and choose the sport from the list.
4. The sport is added to your sport list.

EDIT A SPORT PROFILE

In the Flow web service:

1. Click your name/profile photo in the upper right corner.
2. Choose **Sport Profiles**.
3. Click **EDIT** under the sport you want to edit.

In each sport profile, you can edit the following information:

Heart Rate

- Heart rate view
- Heart rate visible to other devices (Other compatible devices using Bluetooth® Smart wireless technology (e.g. gym equipment) can detect your heart rate.)
- Heart rate zone type of the training sessions you have created in the Flow web service and transferred to your A360.

Gestures and Feedback

- Vibration feedback

When you're done with the sport profile settings, click **SAVE**. Remember to sync the settings to your A360.

SYNCING

You can transfer data from your A360 via the USB port with FlowSync software or wirelessly via Bluetooth Smart® with the Flow app. To be able to sync data between your A360 and the Flow web service and app, you need to have a Polar account and FlowSync software. You already have created the account and downloaded the software, if you have [set up your A360 at flow.polar.com/start](https://flow.polar.com/start). If you did the quick set up when starting to use your A360, go to flow.polar.com/start for the complete [setup](#). Download Flow app onto your mobile from the App Store or Google Play.

Remember to sync and keep your data up-to-date between your A360, the web service and the mobile app wherever you are.

SYNC WITH FLOW MOBILE APP


Before syncing make sure:

- You have a Polar account and Flow app
- Your mobile device has Bluetooth turned on, and airplane mode/flight mode is not turned on.
- You have paired your A360 with your mobile. For more information, see [Polar Flow app](#).

Sync your data manually:

1. Sign into Flow app and press and hold the button on your A360.
2. **Searching, Connecting** is displayed, followed by **Syncing**.
3. **Completed** is displayed when you're done.

Starting with Polar A360 firmware 1.1.15, your fitness tracker syncs hourly with Polar Flow app without you having to start it. Also after every training session, inactivity alert, activity goal reached or a Fitness Test performed, the data is synced with the app in the background.

 *When you sync your A360 with the Flow app, your activity and training data are also synced automatically via an internet connection to the Flow web service.*


For support and more information about using Polar Flow app, go to support.polar.com/en/support/Flow_app

SYNC WITH FLOW WEB SERVICE VIA FLOWSYNC

To sync data with the Flow web service you need FlowSync software. Go to flow.polar.com/start, and download and install it before trying to sync.

1. Plug your A360 to your computer with the USB cable. Make sure FlowSync software is running.
2. The FlowSync window opens on your computer, and the syncing starts.
3. Completed is displayed when you are done.

Every time you plug in your A360 to your computer, the Polar FlowSync software will transfer your data to the Polar Flow web service and sync any settings you may have changed. If the syncing does not automatically start, start FlowSync from the desktop icon (Windows) or from the applications folder (Mac OS X). Every time a firmware update is available, FlowSync will notify you, and request you to install it.

 *If you change settings in the Flow web service while your A360 is plugged into your computer, press the synchronize button on FlowSync to transfer to the settings to your A360.*

For support and more information about using the Flow web service, go to support.polar.com/en/support/flow.

For support and more information about using FlowSync software, go to support.polar.com/en/support/FlowSync.

IMPORTANT INFORMATION

TAKING CARE OF YOUR A360

Like any electronic device, Polar A360 should be treated with care. The suggestions below will help you fulfill guarantee obligations and enjoy this product for many years to come.

The USB cable must be connected carefully to avoid damaging the device's USB port.

Don't charge the device when its USB port is wet. Let the USB port dry up by leaving the port cover open for a while before charging. This way you'll ensure smooth charging and syncing.



Keep your training device clean.

- We recommend that you wash the device and the silicone wristband after each training session under running water with a mild soap and water solution. Please remove the device from the wristband and wash them separately. Wipe them dry with a soft towel.

i *It is essential that you wash the device and the wristband if you wear them in a swimming pool where chlorine is used for keeping the pool clean.*

- If you don't wear the device 24/7, wipe off any moisture before storing it. Don't store in non-breathable material or in a damp environment, e.g. plastic bag or damp gym bag.
- Wipe it dry with a soft towel when needed. Use a damp paper towel to wipe dirt from the training device. To maintain the water resistance, do not wash the training device with a pressure washer. Never use alcohol or any abrasive material such as steel wool or cleaning chemicals.

- When you connect your A360 to a computer or a charger, check that there is no moisture, hair, dust or dirt on the A360's USB connector. Gently wipe off any dirt or moisture. Don't use any sharp tools for cleaning to avoid scratching.

Operating temperatures are -10 °C to +50 °C / +14 °F to +122 °F.

STORING

Keep your training device in a cool and dry place. Do not keep them in a damp environment, in non-breathable material (a plastic bag or a sports bag) nor with conductive material (a wet towel). Do not expose the training device to direct sunlight for extended periods, such as by leaving it in a car or mounted on the bike mount.

It is recommended to store the training device partially or fully charged. The battery slowly loses its charge when it is stored. If you are going to store the training device for several months, it is recommended to recharge it after a few months. This will prolong the battery lifetime.

Dry and store the strap and the connector separately to maximize the heart rate sensor battery lifetime. Keep the heart rate sensor in a cool and dry place. To prevent snap oxidation, do not store the heart rate sensor wet in non-breathing material, such as a sports bag. Do not expose the heart rate sensor to direct sunlight for extended periods.

SERVICE

During the two-year guarantee/warranty period we recommend that you have service done by an authorized Polar Service Center only. The warranty does not cover damage or consequential damage caused by service not authorized by Polar Electro. For further information, see [Limited International Polar Guarantee](#).

For contact information and all Polar Service Center addresses, visit support.polar.com and country-specific websites.

BATTERIES

At the end of the working life of the product Polar encourages you to minimize possible effects of waste on the environment and human health by following local waste disposal regulations and, where possible, utilizing separate collection of electronic devices. Do not dispose of this product as unsorted municipal waste.

CHARGING A360 BATTERY

The A360 has an internal, rechargeable battery. Rechargeable batteries have a limited number of charge cycles. You can charge and discharge the battery over 300 times before a notable decrease in its capacity. The number of charge cycles also varies according to use and operating conditions.


 *Do not charge the battery in temperatures under 0°C or over +40°C or when the USB port is wet.*

You can charge the battery via a wall outlet. When charging via a wall outlet, use a USB power adapter (not included in the product set). If you use a USB power adapter, make sure that the adapter is marked with

"output 5Vdc" and that it provides a minimum of 500mA. Only use an adequately safety approved USB power adapter (marked with "LPS", "Limited Power Supply", "UL listed" or "CE").




Do not charge Polar products with a 9 volt charger. Using a 9 volt charger can damage your Polar product.

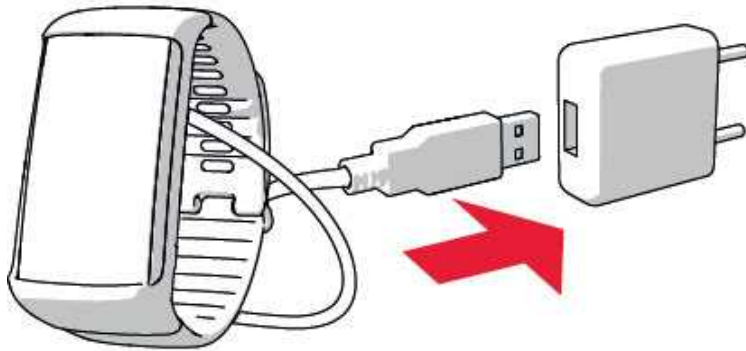


To charge with your computer just plug your A360 to your computer and at the same time you can have it synced it with FlowSync.

1. Push down the top part (A) of the USB cover inside the bracelet to access the micro USB port and plug in the supplied USB cable (B).

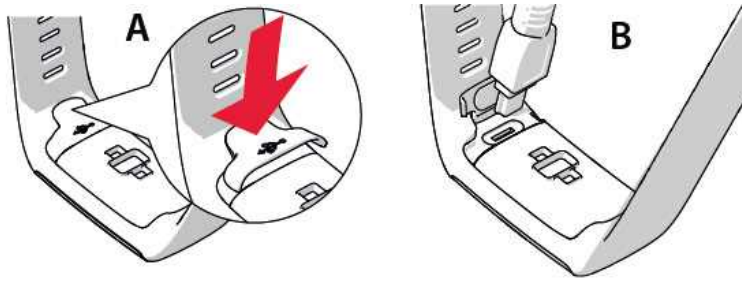

2. Plug the other end of the cable into your computer's USB port. Check that the USB port is dry before connecting it to the computer. If the battery is completely empty, it takes a couple of minutes for the charging to start.

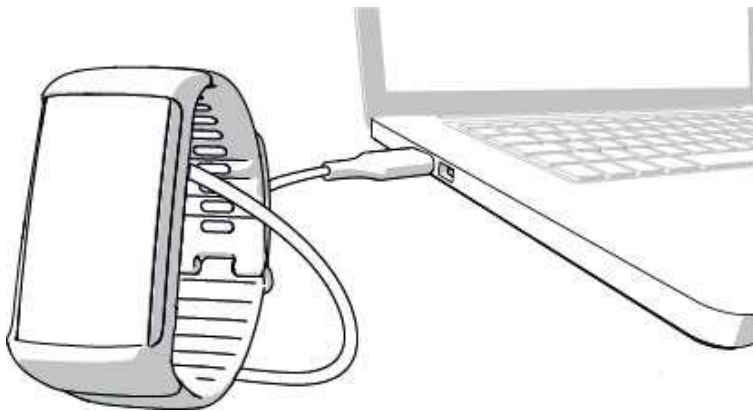

3. After syncing, green battery icon animation begins to fill up on the display.
4. When the green battery icon is full, the A360 is fully charged.

i *Don't leave the battery fully discharged for a long period of time or keep it fully charged all the time, because it may affect the battery life time.*

BATTERY OPERATING TIME

The battery operating time is up to 12 days with 24/7 activity tracking and 1h/day training without Smart Notifications on. The operating time depends on many factors, such as the temperature of the environment in which you use your A360, the features you use, how much the display is on and battery aging. The operating time is significantly reduced in temperatures well below freezing. Wearing the A360 under your overcoat helps to keep it warmer and to increase the operating time.

LOW BATTERY NOTIFICATIONS

Battery low. Charge

The battery charge is low. It is recommended to charge A360.

Charge before training.


The charge is too low for recording a training session. A new training session cannot be started before charging A360.

When the display doesn't wake up from a wrist gesture or a press of the button, the battery is empty and A360 has gone to sleep mode. Charge your A360. If the battery is totally drained, it may take a while for the charging animation to appear on the display.

PRECAUTIONS

The Polar A360 is designed to measure heart rate and tell your activity. No other use is intended or implied.

The training device should not be used for obtaining environmental measurements that require professional or industrial precision.

 The Polar A360 is not a medical device for measuring your heart rate.

We recommend that once in a while you wash the device and the wrist strap to avoid any skin problems from a dirty bracelet.

INTERFERENCE

Electromagnetic Interference and Training Equipment

Disturbance may occur near electrical devices. Also WLAN base stations may cause interference when training with the training device. To avoid erratic reading or misbehavior, move away from possible sources of disturbance.

Training equipment with electronic or electrical components such as LED displays, motors and electrical brakes may cause interfering stray signals.

If the training device still does not work with the training equipment, it may be electrically too noisy for wireless heart rate measurement. For further information, support.polar.com.

MINIMIZING RISKS WHEN TRAINING

Training may include some risk. Before beginning a regular training program, it is recommended that you answer the following questions concerning your health status. If you answer yes to any of these questions, we recommend that you consult a doctor before starting any training program.

- Have you been physically inactive for the past 5 years?
- Do you have high blood pressure or high blood cholesterol?
- Are you taking any blood pressure or heart medication?


- Do you have a history of breathing problems?
- Do you have symptoms of any disease?
- Are you recovering from a serious illness or medical treatment?
- Do you use a pacemaker or other implanted electronic device?
- Do you smoke?
- Are you pregnant?

Note that in addition to training intensity, medications for heart conditions, blood pressure, psychological conditions, asthma, breathing, etc., as well as some energy drinks, alcohol, and nicotine may also affect heart rate.

It is important to be sensitive to your body's responses during training. **If you feel unexpected pain or excessive fatigue when training, it is recommended that you stop the training or continue at a lighter intensity.**

Note! If you are using a pacemaker, defibrillator or other implanted electronic device, you can use Polar products. In theory interference to pacemaker caused by Polar products should not be possible. In practice no reports exist to suggest anyone ever having experienced interference. We cannot however issue an official guarantee on our products' suitability with all pacemakers or other implanted devices, such as defibrillators, due to the variety of devices available. If you have any doubts, or if you experience any unusual sensations while using Polar products, please consult your physician or contact the implanted electronic device manufacturer to determine safety in your case.

If you are allergic to any substance that comes into contact with your skin or if you suspect an allergic reaction due to using the product, check the listed materials in Technical Specifications. To avoid any skin reaction to the heart rate sensor, wear it over a shirt, but moisten the shirt well under the electrodes to ensure flawless operation.

 *The combined impact of moisture and intense abrasion may cause color to come off the heart rate sensor's surface, possibly staining clothes. If you use perfume, suntan/sunscreen lotion or insect repellent on your skin, you must ensure that it does not come into contact with the training device or the heart rate sensor. Please avoid clothing with colors that might transfer onto the training device (especially training devices with light/bright colors) when worn together.*

TECHNICAL SPECIFICATION

A360

Battery type:	100 mAh Li-pol rechargeable battery
Operating time:	Up to 12 days with 24/7 activity tracking and 1h/day training without Smart Notifications on.
Operating temperature:	-10 °C to +50 °C / 14 °F to 122 °F

Charging time:	Up to two hours.
Charging temperature:	0 °C to +40 °C / 32 °F to 104 °F
Fitness tracker materials:	Device: thermoplastic polyurethane, acrylonitrile butadiene styrene, glass fiber, polycarbonate, stainless steel, glass Wristband: silicone, stainless steel, polybutylene terephthalate, glass fiber
Watch accuracy:	Better than ± 0.5 seconds / day at 25 °C / 77 °F temperature
Heart rate measuring range:	30-240 bpm
Water resistance:	30 m
Memory capacity:	60 h training with heart rate depending on your language settings

Uses Bluetooth® Smart wireless technology.

Your A360 is compatible with the following Polar heart rate sensor as well: Polar H6 and H7.

POLAR FLOWSYNC SOFTWARE

To use FlowSync software you need a computer with Microsoft Windows or Mac operating system with an internet connection and a free USB port.

Check the latest compatibility information from support.polar.com.

POLAR FLOW MOBILE APPLICATION COMPATIBILITY

Check the latest compatibility information from support.polar.com.

WATER RESISTANCE OF POLAR PRODUCTS

Most Polar products can be worn when swimming. They are not, however, diving instruments. To maintain water resistance, do not press the buttons of the device under water. When measuring heart rate in water with a GymLink compatible Polar device and heart rate sensor, you may experience interference for the following reasons:

- Pool water with high chlorine content, and seawater are very conductive. The electrodes of the heart rate sensor may short-circuit, preventing ECG signals from being detected by the heart rate sensor.

- Jumping into water or strenuous muscle movement during competitive swimming may shift the heart rate sensor to a location on the body where ECG signals cannot be picked up.
- The ECG signal strength is individual and may vary depending on the individual's tissue composition. Problems occur more frequently when measuring heart rate in water.

Polar devices with wrist-based heart rate measurement are suitable for swimming and bathing. They will collect your activity data from your wrist movements also when swimming. In our tests, however, we found that the wrist-based heart rate measurement doesn't work optimally in water, so we cannot recommend wrist-based heart rate measurement for swimming.

In the watch industry, water resistance is generally indicated as meters, which means the static water pressure of that depth. Polar uses this same indication system. Water resistance of Polar products is tested according to International Standard **ISO 22810** or **IEC60529**. Every Polar device that has water resistance indication is tested before the delivery to stand water pressure.

Polar products are divided into four different categories according to their water resistance. Check the back of your Polar product for the water resistance category, and compare it to the chart below. Please note that these definitions do not necessarily apply to products of other manufacturers.

When performing any underwater activity, the dynamic pressure generated by moving in water is greater than the static pressure. This means that moving the product under water subjects it to a greater pressure than if the product were stationary.

Marking on the back of the product	Wash splashes, sweat, rain-drops etc.	Bathing and swimming	Skin diving with snorkel (no air tanks)	SCUBA diving (with air tanks)	Water resistant characteristics
Water resistant IPX7	OK	-	-	-	Do not wash with a pressure washer. Protected against splashes, raindrops etc. Reference standard: IEC60529.
Water resistant IPX8	OK	OK	-	-	Minimum for bathing and swimming. Reference standard: IEC60529.
Water resistant Water resistant 20/30/50 meters Suitable for swimming	OK	OK	-	-	Minimum for bathing and swimming. Reference standard: ISO22810.
Water resistant 100 meters	OK	OK	OK	-	For frequent use in water but not SCUBA diving.

LIMITED INTERNATIONAL POLAR GUARANTEE

- Polar Electro Oy issues a limited international guarantee for Polar products. For products which have been sold in the USA or Canada, guarantee is issued by Polar Electro, Inc.
- Polar Electro Oy/Polar Electro Inc. guarantees the original consumer/purchaser of the Polar product that the product will be free from defects in material or workmanship for two (2) years from the date of purchase, with the exception of wristbands made of silicone or plastic, which are subject to a guarantee period of one (1) year from the date of purchase.
- The guarantee does not cover normal wear and tear of the battery, or other normal wear and tear, damage due to misuse, abuse, accidents or non-compliance with the precautions; improper maintenance, commercial use, cracked, broken or scratched cases/displays, textile armband or textile or leather wristband, elastic strap (e.g. heart rate sensor chest strap) and Polar apparel.
- The guarantee does also not cover any damage/s, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.
- Guarantee does not cover products which have been purchased second hand.
- During the guarantee period, the product will be either repaired or replaced at any of the authorized Polar Central Services regardless of the country of purchase.
- Guarantee issued by Polar Electro Oy/Inc. does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract.
- You should keep the receipt as a proof of purchase!
- Guarantee with respect to any product will be limited to countries where the product has been initially marketed by Polar Electro Oy/Inc.

Manufactured by Polar Electro Oy, Professorintie 5, 90440 KEMPELE, Finland Tel +358 8 5202 100, Fax +358 8 5202 300, www.polar.com.

Polar Electro Oy is a ISO 9001:2015 certified company.

© 2019 Polar Electro Oy, 90440 KEMPELE, Finland. All rights reserved. No part of this manual may be used or reproduced in any form or by any means without prior written permission of Polar Electro Oy.

The names and logos in this user manual or in the package of this product are trademarks of Polar Electro Oy. The names and logos marked with a ® symbol in this user manual or in the package of this product are registered trademarks of Polar Electro Oy. Windows is a registered trademark of Microsoft Corporation and Mac OS is a registered trademark of Apple Inc. The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Polar Electro Oy is under license.

DISCLAIMER

- The material in this manual is for informational purposes only. The products it describes are subject to change without prior notice, due to the manufacturer's continuous development program.
- Polar Electro Inc./Polar Electro Oy makes no representations or warranties with respect to this manual or with respect to the products described herein.
- Polar Electro Inc./Polar Electro Oy shall not be liable for any damages, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the use of this material or the products described herein.

4.1 EN 04/2016