# Inspiron 17 5000 Series Service Manual



# Notes, cautions, and warnings



**NOTE:** A NOTE indicates important information that helps you make better use of your computer.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

**Copyright** © **2015 Dell Inc. All rights reserved.** This product is protected by U.S. and international copyright and intellectual property laws. Dell™ and the Dell logo are trademarks of Dell Inc. in the United States and/or other jurisdictions. All other marks and names mentioned herein may be trademarks of their respective companies.

2015-04

Rev. A00

# **Contents**

Before working inside your computer	10
Before you begin	10
Safety instructions	10
Recommended tools	11
After working inside your computer	13
Removing the battery	14
Procedure	
Replacing the battery	15
Procedure	
Removing the base cover	16
Prerequisites	16
Procedure	16
Replacing the base cover	18
Procedure	
Post-requisites	18
Removing the hard drive	19
Prerequisites	
Procedure	19
Replacing the hard drive	22
Procedure	
Post-requisites	22

Removing the memory modules	23
Prerequisites	
Procedure	23
Replacing the memory modules	25
Procedure	
Post-requisites	26
Removing the wireless card	27
Prerequisites	27
Procedure	27
Replacing the wireless card	29
Procedure	
Post-requisites	29
Removing the coin-cell battery	30
Prerequisites	30
Procedure	30
Replacing the coin-cell battery	32
Procedure	
Post-requisites	32
Removing the keyboard	33
Prerequisites	33
Procedure	33
Replacing the keyboard	36
Procedure	36
Post-requisites	36

Removing the optical drive	37
Prerequisites	
Procedure	37
Replacing the optical drive	40
Procedure	40
Post-requisites	40
Removing the computer base	41
Prerequisites	41
Procedure	41
Replacing the computer base	46
Procedure	
Post-requisites	46
Removing the speakers	47
Prerequisites	
Procedure	47
Replacing the speakers	49
Procedure	
Post-requisites	49
Removing the optical-drive interposer	50
Prerequisites	
Procedure	50
Replacing the optical-drive interposer	52
Procedure	
Post-requisites	52

Removing the I/O board	53
Prerequisites	
Procedure	
Replacing the I/O board	55
Procedure	
Post-requisites	55
Removing the heat-sink assembly	56
Prerequisites	
Procedure	56
Replacing the heat-sink assembly	58
Procedure	
Post-requisites	58
Removing the system board	60
Prerequisites	
Procedure	61
Replacing the system board	65
Procedure	
Post-requisites	66
Removing the battery-connector board	67
Prerequisites	
Procedure	67
Replacing the battery-connector board	69
Procedure	
Post-requisites	69

Removing the power-adapter port	70
Prerequisites	
Procedure	70
Replacing the power-adapter port	72
Procedure	72
Post-requisites	72
Removing the display assembly	73
Prerequisites	
Procedure	73
Replacing the display assembly	76
Procedure	
Post-requisites	76
Removing the power-button board	78
Prerequisites	78
Procedure	78
Replacing the power-button board	80
Procedure	
Post-requisites	80
Removing the palm-rest assembly	82
Prerequisites	
Procedure	82
Replacing the palm-rest assembly	84
Procedure	
Post-requisites	84

Removing the display bezel	85
Prerequisites	85
Procedure	85
Replacing the display bezel	87
Procedure	
Post-requisites	87
Removing the display panel	88
Prerequisites	88
Procedure	88
Replacing the display panel	92
Procedure	
Post-requisites	92
Removing the display hinges	94
Prerequisites	94
Procedure	94
Replacing the display hinges	96
Procedure	96
Post-requisites	96
Removing the camera	97
Prerequisites	97
Procedure	97
Replacing the camera	99
Procedure	99
Post-requisites	99

Removing the display cable	100
Prerequisites	100
Procedure	100
Replacing the display cable	102
Procedure	102
Post-requisites	102
Removing the display back-cover and antenna	
assembly	103
Prerequisites	103
Procedure	104
Replacing the display back-cover and antenna	
assembly	105
Procedure	
Post-requisites	
Flashing the BIOS	106
Getting help and contacting Dell	107
Self-help resources	107
Contacting Dell	107

# Before working inside your computer



CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



**NOTE:** The images in this document may differ from your computer depending on the configuration you ordered.

#### Before you begin

- Save and close all open files and exit all open applications.
- 2 Shut down your computer.
  - Windows 8.1: On the **Start** screen, click or tap the power icon  $\boldsymbol{\psi} \rightarrow$ Shut down.
  - Windows 7: Click or tap Start → Shut down.



NOTE: If you are using a different operating system, see the documentation of your operating system for shut-down instructions.

- 3 Disconnect your computer and all attached devices from their electrical outlets.
- 4 Disconnect all cables such as telephone cables, network cables and so on, from your computer.
- 5 Disconnect all attached devices and peripherals, such as keyboard, mouse, monitor, and so on, from your computer.
- 6 Remove any media card and optical disc from your computer, if applicable.

#### Safety instructions

Use the following safety guidelines to protect your computer from potential damage and ensure your personal safety.



WARNING: Before working inside your computer, read the safety information that shipped with your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



WARNING: Disconnect all power sources before opening the computer cover or panels. After you finish working inside the computer, replace all covers, panels, and screws before connecting to the power source.



CAUTION: To avoid damaging the computer, ensure that the work surface is flat and clean.



CAUTION: To avoid damaging the components and cards, handle them by their edges and avoid touching pins and contacts.



CAUTION: You should only perform troubleshooting and repairs as authorized or directed by the Dell technical assistance team. Damage due to servicing that is not authorized by Dell is not covered by your warranty. See the safety instructions that shipped with the product or at dell.com/regulatory\_compliance.



CAUTION: Before touching anything inside your computer, ground yourself by touching an unpainted metal surface, such as the metal at the back of the computer. While you work, periodically touch an unpainted metal surface to dissipate static electricity, which could harm internal components.



CAUTION: When you disconnect a cable, pull on its connector or on its pull tab, not on the cable itself. Some cables have connectors with locking tabs or thumb-screws that you must disengage before disconnecting the cable. When disconnecting cables, keep them evenly aligned to avoid bending any connector pins. When connecting cables, ensure that the ports and connectors are correctly oriented and aligned.



CAUTION: To disconnect a network cable, first unplug the cable from your computer and then unplug the cable from the network device.



CAUTION: Press and eject any installed card from the media-card reader.

#### Recommended tools

The procedures in this document may require the following tools:

- Philips screwdriver
- Plastic scribe

# After working inside your computer

#### Δ

CAUTION: Leaving stray or loose screws inside your computer may severely damage your computer.

- 1 Replace all screws and ensure that no stray screws remain inside your computer.
- 2 Connect any external devices, peripherals, and cables you removed before working on your computer.
- 3 Replace any media cards, discs, and any other parts that you removed before working on your computer.
- **4** Connect your computer and all attached devices to their electrical outlets.
- **5** Turn on your computer.


# Removing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Close the display and turn the computer over.
- 2 Slide the battery-release latch to the unlocked position. You hear a click sound when the battery is unlocked.
- **3** Lift the battery off the computer base.

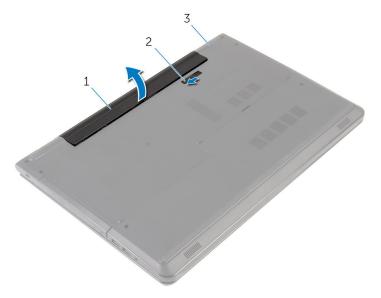

- 1 battery
- 3 computer base

- 2 battery-release latch
- **4** Turn the computer over, open the display, and press the power button for five seconds to ground the system board.

# Replacing the battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

Place the battery in the battery bay and snap the battery into place.

# Removing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


#### **Prerequisites**

Remove the battery.

#### **Procedure**

- 1 Close the display and turn the computer over.
- 2 Remove the screws that secure the base cover to the computer base.

**3** Using a plastic scribe, pry up the base cover starting from the inner edge, and lift it off the computer base.

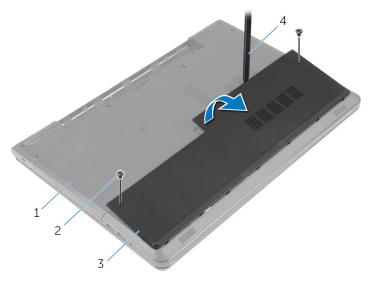

- 1 computer base
- 3 base cover

- 2 screws (2)
- 4 plastic scribe

### Replacing the base cover



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Slide the tabs on the base cover into the slots on the computer base and snap the base cover into place.
- 2 Replace the screws that secure the base cover to the computer base.

#### **Post-requisites**

Replace the battery.

# Removing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.



CAUTION: To avoid data loss, do not remove the hard drive while the computer is in sleep or on state.


#### **Prerequisites**

- **1** Remove the <u>battery</u>.
- 2 Remove the base cover.

#### **Procedure**

- 1 Lift the latch and disconnect the hard-drive cable from the system board.
- 2 Remove the screws that secure the hard-drive assembly to the computer base.

**3** Using the pull tab, lift the hard-drive assembly out of the computer base.

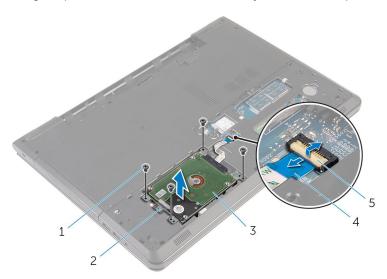


- 1 screws (4)
- 3 hard-drive assembly
- 5 latch

- 2 pull tab
- 4 hard-drive cable
- 4 Disconnect the interposer from the hard drive.



- 1 hard-drive assembly
- 2 interposer

- **5** Remove the screws that secure the hard-drive bracket to the hard drive.
- **6** Lift the hard-drive bracket off the hard drive.

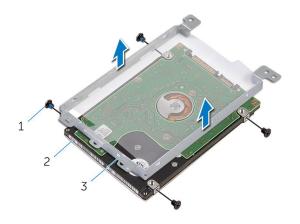

- 1 screws (4)
- 3 hard-drive bracket
- 2 hard drive

### Replacing the hard drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Hard drives are fragile. Exercise care when handling the hard drive.

#### **Procedure**

- Align the screw holes on the hard-drive bracket with the screw holes on the hard drive.
- 2 Replace the screws that secure the hard-drive bracket to the hard drive.
- **3** Connect the interposer to the hard drive.
- 4 Place the hard-drive assembly in the computer base and align the screw holes on the hard-drive assembly with the screw holes on the computer base.
- 5 Replace the screws that secure the hard-drive assembly to the computer base
- **6** Slide the hard-drive cable in the connector and press down the latch to secure the cable.

#### **Post-requisites**

- 1 Replace the <u>base cover</u>.
- 2 Replace the battery.

# Removing the memory modules




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.

#### **Procedure**

1 Use your fingertips to carefully spread apart the securing clips on each end of the memory-module slot until the memory module pops up. 2 Slide and remove the memory module from the memory-module slot.

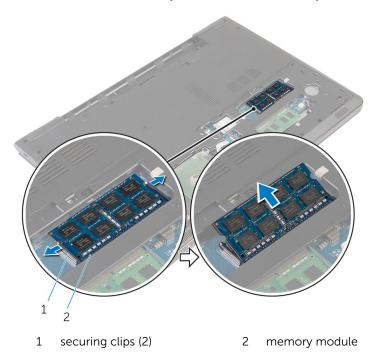

# Replacing the memory modules



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


#### **Procedure**

Align the notch on the memory module with the tab on the memory-module slot.

2 Slide the memory module firmly into the slot at an angle and press the memory module down until it clicks into place.



**NOTE:** If you do not hear the click, remove the memory module and reinstall it.

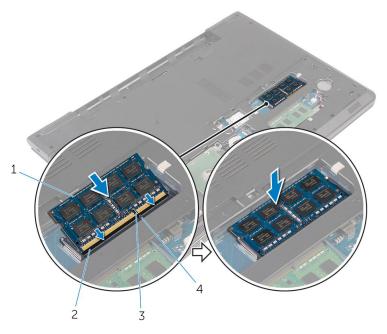

- 1 memory module
- 3 notch

- 2 memory-module slot
- 4 tab

#### **Post-requisites**

- 1 Replace the <u>base cover</u>.
- 2 Replace the battery.

# Removing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


#### **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.

#### **Procedure**

- 1 Remove the screw that secures the wireless-card bracket and the wireless card to the system board.
- 2 Lift the wireless-card bracket off the wireless card.
- 3 Disconnect the antenna cables from the wireless card

4 Slide and remove the wireless card from the system board.

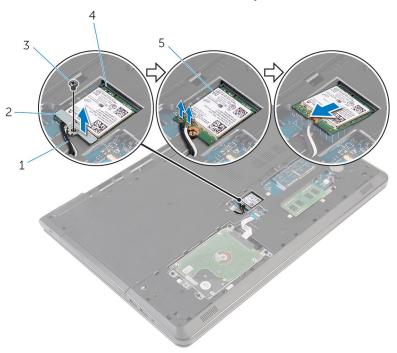

- 1 antenna cables (2)
- 3 screw
- 5 wireless card

- 2 wireless-card bracket
- 4 wireless-card slot

# Replacing the wireless card



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**



CAUTION: To avoid damage to the wireless card, do not place any cables under it.

- 1 Align the notch on the wireless card with the tab on the wireless-card slot and slide the card into the slot.
- 2 Align the screw hole on the wireless card with the screw hole on the system board.
- 3 Connect the antenna cables to the wireless card.
  The following table provides the antenna-cable color scheme for the wireless card supported by your computer.

Connectors on the wireless card	Antenna-cable color
Main (white triangle)	white
Auxiliary (black triangle)	black

- **4** Align the screw hole on the wireless-card bracket with the screw hole on the system board.
- 5 Replace the screw that secures the wireless-card bracket and the wireless card to the system board.

#### **Post-requisites**

- 1 Replace the <u>base cover</u>.
- 2 Replace the battery.

# Removing the coin-cell battery

Δ

WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Removing the coin-cell battery resets the BIOS setup program's settings to default. It is recommended that you note the BIOS setup program's settings before removing the coin-cell battery.

#### **Prerequisites**

- **1** Remove the <u>battery</u>.
- 2 Remove the base cover.

#### **Procedure**

Using a plastic scribe, gently pry the coin-cell battery out of the coin-cell battery socket.



- 1 plastic scribe
- 3 coin-cell battery socket
- 2 coin-cell battery

# Replacing the coin-cell battery



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

With the positive-side facing up, slide and snap the coin-cell battery into the coin-cell battery socket.

#### **Post-requisites**

- 1 Replace the base cover.
- 2 Replace the <u>battery</u>.

# Removing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Prerequisites**

Remove the battery.

#### **Procedure**

1 Turn the computer over and open the display as far as possible.

2 Using a plastic scribe, gently release the tabs that secure the keyboard to the palm-rest assembly.



1 plastic scribe

- 2 keyboard
- 3 palm-rest assembly
- **3** Carefully turn the keyboard over and place it on the palm-rest assembly.

**4** Lift the latches and disconnect the keyboard cable and keyboard-backlight cable (optional) from the system board.



**NOTE:** The keyboard-backlight cable is present only if the laptop shipped with a backlit keyboard.



- 1 keyboard-backlight cable
- 2 latch

3 keyboard cable

- 4 keyboard
- **5** Lift the keyboard, along with the cables, off the palm-rest assembly.

# Replacing the keyboard



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- Slide the keyboard cable and the keyboard-backlight cable (optional) into the respective connectors and press down the latches to secure the cables.
- 2 Turn the keyboard over.
- 3 Slide the tabs on the keyboard into the slots on the palm-rest assembly and snap the keyboard into place.

#### **Post-requisites**

Replace the battery.

# Removing the optical drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the keyboard.

#### **Procedure**

1 Remove the screw that secures the optical-drive assembly to the computer base.



- 1 optical-drive assembly
- 2 screw
- 2 Turn the computer over and open the display.

- **3** Using a plastic scribe, push the optical-drive assembly out of the optical-drive bay.
- 4 Pull the optical-drive assembly out of the optical-drive bay.




- 1 optical-drive assembly
- 2 palm rest
- 3 plastic scribe
- **5** Carefully pry the optical-drive bezel off the optical drive.

6 Remove the screws that secure the optical-drive bracket to the optical drive.



NOTE: Note the orientation of the optical-drive bracket so that you can replace it correctly.

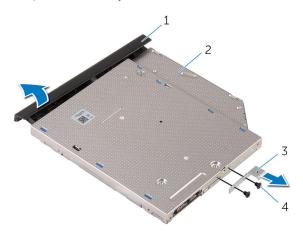

- 1 optical-drive bezel
- 3 optical-drive bracket
- 2 optical drive
  - screws (2)

# Replacing the optical drive



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

1 Align the screw holes on the optical-drive bracket with the screw holes on the optical drive.



NOTE: You must correctly align the optical-drive bracket to ensure that the optical drive can be properly secured to the computer. For correct orientation, see step 6 in "Removing the optical drive".

- 2 Replace the screws that secure the optical-drive bracket to the optical drive
- 3 Align the tabs on the optical-drive bezel with the slots on the optical drive and snap the optical-drive bezel into place.
- 4 Slide the optical-drive assembly into the optical-drive bay.
- 5 Close the display and turn the computer over.
- 6 Replace the screw that secures the optical-drive assembly to the computer base.

- 1 Replace the keyboard.
- 2 Replace the battery.

# Removing the computer base



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- **5** Remove the keyboard.
- **6** Follow the procedure from step 1 to step 4 in "Removing the optical drive".

### **Procedure**

1 Lift the latch and disconnect the optical-drive cable from the system board.


2 Remove the screws that secure the computer base to the palm-rest assembly.



1 screws (4)

- 2 connector latch
- 3 optical-drive cable
- **3** Close the display and turn the computer over.
- 4 Disconnect the speaker cable from the system board.
- **5** Remove the antenna cables from the routing guides on the computer base.

**6** Remove the screws that secure the computer base to the palm-rest assembly.

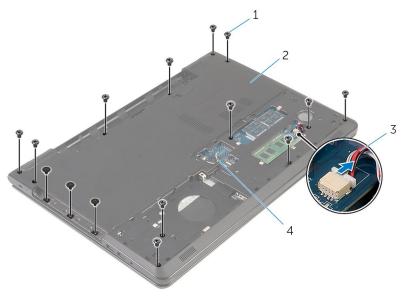

- 1 screws (15)
- 3 speaker cable

- 2 computer base
- 4 antenna cables (2)

7 Using your fingertips, starting from the rear, pry the computer base off the palm-rest assembly.



NOTE: Ensure the antenna cables are completely removed from the routing guides on the computer base.



1 computer base

- Turn the computer base over. 8
- Remove the optical-drive interposer. 9

#### **10** Remove the <u>speakers</u>.



1 computer base

# Replacing the computer base



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Replace the optical-drive interposer.
- 2 Replace the speakers.
- 3 Slide the antenna cables and speaker cable through their respective slots on the computer base.
- 4 Align the tabs on the computer base with the slots on the palm-rest assembly and snap the computer base into place.
- 5 Replace the screws that secure the computer base to the palm-rest assembly.
- **6** Connect the speaker cable to the system board.
- 7 Turn the computer over and open the display.
- **8** Replace the screws that secure the computer base to the palm-rest assembly.
- **9** Slide the optical-drive cable into the connector on the system board and press down on the latch to secure the cable.

- 1 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- 2 Replace the keyboard.
- **3** Replace the wireless card.
- **4** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 5 Replace the <u>base cover</u>.
- 6 Replace the battery.

# Removing the speakers




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the keyboard.
- **6** Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- 7 Follow the procedure from step 1 to step 7 in "Removing the computer base".

#### **Procedure**

1 Note the speaker-cable routing on the computer base and release the cable from the routing guides. 2 Lift the speakers, along with the cable, off the computer base.

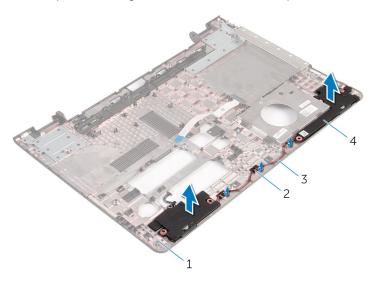

- 1 computer base
- 3 speaker cable

- 2 routing guides
- 4 speakers (2)

# Replacing the speakers



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Using the alignment posts, align and place the speakers on the computer base
- 2 Route the speaker cable through the routing guides on the computer base.

- 1 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 2 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **3** Replace the keyboard.
- 4 Replace the wireless card.
- 5 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 6 Replace the base cover.
- **7** Replace the battery.

# Removing the optical-drive interposer




WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- **5** Remove the keyboard.
- **6** Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- 7 Follow the procedure from step 1 to step 7 in "Removing the computer base".

#### **Procedure**

Release the optical-drive interposer from the tabs on the computer base.

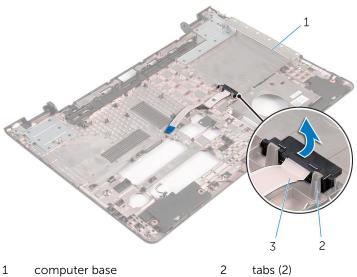

computer base 

- optical-drive interposer

# Replacing the optical-drive interposer



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

Align the optical-drive interposer with the tabs on the computer base and snap it into place.

- Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 2 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **3** Replace the keyboard.
- 4 Replace the wireless card.
- 5 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 6 Replace the base cover.
- **7** Replace the <u>battery</u>.

# Removing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- **5** Remove the keyboard.
- **6** Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- 7 Follow the procedure from step 1 to step 6 in "Removing the computer base".

#### **Procedure**

- 1 Remove the screw that secures the I/O board to the palm-rest assembly.
- 2 Lift the I/O board and turn it over.

3 Lift the latch and disconnect the I/O-board cable from the I/O board.

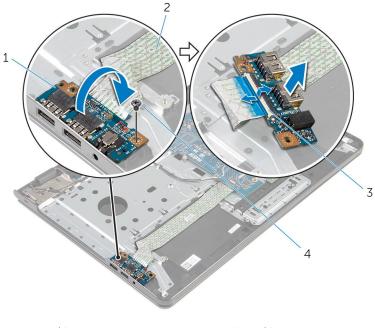

- 1 I/O board
- 3 latch

- 2 I/O-board cable
- 4 screw

# Replacing the I/O board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <a href="Before working">Before working inside your computer</a>. After working inside your computer, follow the instructions in <a href="After working inside your computer">After working inside your computer</a>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Slide the I/O-board cable into the I/O-board cable connector and press down the latch to secure the cable
- 2 Turn the I/O board over and align the screw hole on the I/O board with the screw hole on the palm-rest assembly.
- **3** Replace the screw that secures the I/O board to the palm-rest assembly.

- 1 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 2 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **3** Replace the keyboard.
- 4 Replace the wireless card.
- 5 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 6 Replace the base cover.
- **7** Replace the <u>battery</u>.

# Removing the heat-sink assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



MARNING: The heat sink may become not during.

Allow sufficient time for the heat sink to cool before you touch it. WARNING: The heat sink may become hot during normal operation.



CAUTION: For maximum cooling of the processor, do not touch the heat transfer areas on the heat sink. The oils in your skin can reduce the heat transfer capability of the thermal grease.


## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- 3 Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the keyboard.
- Follow the procedure from step 1 to step 4 in "Removing the optical
- 7 Follow the procedure from step 1 to step 6 in "Removing the computer base".

#### **Procedure**

- 1 Disconnect the fan cable from the system board.
- 2 In sequential order, as indicated on the heat-sink assembly, loosen the captive screws that secure the heat-sink assembly to the system board.
- 3 Remove the screws that secure the heat-sink assembly to the system board.

4 Lift the heat-sink assembly off the system board.

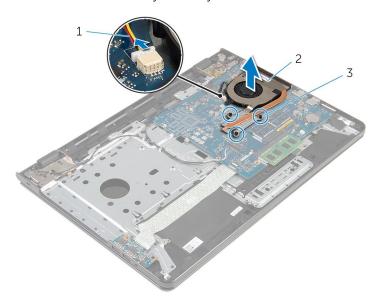

- 1 fan cable
- 3 captive screws (3)
- 2 heat-sink assembly

# Replacing the heat-sink assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



CAUTION: Incorrect alignment of the heat sink can cause damage to the system board and processor.



**NOTE:** The original thermal grease can be reused if the original system board and fan are reinstalled together. If either the system board or the fan is replaced, use the thermal pad provided in the kit to ensure that thermal conductivity is achieved.

#### **Procedure**



NOTE: The original thermal grease can be reused, if the original system board and fan are reinstalled together. If either the system board or the fan is replaced, use the thermal pad provided in the kit to make sure that thermal conductivity is achieved.

- Align the screw holes on the heat-sink assembly with the screw holes on 1 the system board.
- 2 In sequential order, as indicated on the heat-sink assembly, tighten the captive screws that secure the heat-sink assembly to the system board.
- 3 Replace the screws that secure the heat-sink assembly to the system board.
- 4 Connect the fan cable to the system board.

- Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 2 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".

- **3** Replace the <u>keyboard</u>.
- 4 Replace the <u>wireless card</u>.
- **5** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **6** Replace the <u>base cover</u>.
- **7** Replace the <u>battery</u>.

# Removing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.



**NOTE:** Before disconnecting the cables from the system board, note the location of the connectors so that you can reconnect them correctly after you replace the system board.

## **Prerequisites**

- 1 Remove the <u>battery</u>.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- 6 Remove the coin-cell battery.
- 7 Remove the keyboard.
- **8** Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **9** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 10 Remove the I/O board.
- 11 Remove the heat-sink assembly.


#### **Procedure**

- 1 Turn the computer over and open the display as far as possible.
- 2 Lift the connector latches and disconnect the power-button board cable and the touchpad cable from the system board.



- 1 power-button board cable
- 2 touchpad cable
- **3** Close the display and turn the computer over.
- 4 Lift the latch and disconnect the display cable from the system board.
- **5** Remove the screw that secures the system board to the palm-rest assembly.

**6** Peel the I/O board cable off the palm-rest assembly.

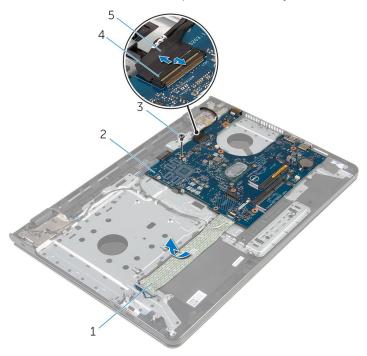

- 1 I/O board cable
- 3 screw
- 5 display cable


- 2 system board
- 4 connector latch
- 7 Carefully lift the system board from the inner edge to release the system board from the system-board connector on the palm-rest assembly.

8 Turn the system board over.



1 system board

- 2 palm-rest assembly
- **9** Disconnect the power-adapter port cable from the system board.
- **10** Lift the latch and disconnect the I/O-board cable from the system board.

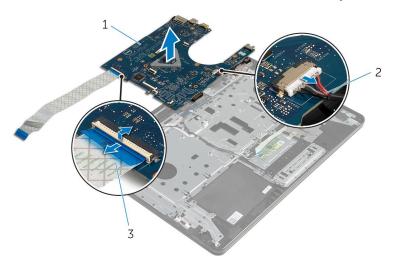

- 1 system board
- 3 I/O-board cable

2 power-adapter port cable

Lift the system board off the computer base.

# Replacing the system board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.



**NOTE:** Your computer's Service Tag is stored in the system board. You must enter the Service Tag in the BIOS setup program after you replace the system board.



**NOTE:** Replacing the system board removes any changes you have made to the BIOS using the BIOS setup program. You must make the desired changes again after you replace the system board.

#### **Procedure**



CAUTION: To avoid damaging the system board, ensure that no cables are placed under it.

- 1 Connect the power-adapter port cable to the system board.
- 2 Slide the I/O-board cable into the connector and press down the latch to secure the cable.
- **3** Turn the system board over.
- 4 Slide the ports on the system board into the slots on the palm-rest assembly.
- 5 Align the screw hole on the system board with the screw hole on the palm-rest assembly.
- **6** Replace the screw that secures the system board to the palm-rest assembly.
- 7 Adhere the I/O board cable to the palm-rest assembly.
- 8 Slide the display cable into the connector and press down the latch to secure the cable to the system board.
- **9** Turn the computer over and open the display.
- Slide the power-button board cable and touchpad cable into the respective connectors and press down the latches to secure the cables.

- **1** Replace the <u>heat-sink assembly</u>.
- 2 Replace the <u>I/O board</u>.
- **3** Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **4** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **5** Replace the <u>keyboard</u>.
- **6** Replace the <u>coin-cell battery</u>.
- 7 Replace the memory modules.
- 8 Replace the wireless card.
- **9** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 10 Replace the base cover.
- **11** Replace the <u>battery</u>.

# Removing the batteryconnector board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.

#### **Procedure**

- 1 Peel off the tapes that secure the antenna cable to the palm-rest assembly.
- 2 Remove the antenna cable from the routing guides on the batteryconnector board
- **3** Remove the screws that secure the battery-connector board to the palm-rest assembly.

4 Lift the battery-connector board off the palm-rest assembly.

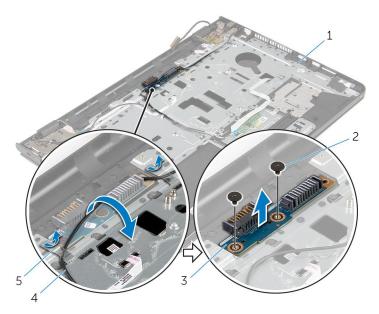

- 1 palm-rest assembly
- 3 battery-connector board
- 5 tapes (2)

- 2 screws (2)
- 4 antenna cable

# Replacing the batteryconnector board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Align the screw holes on the battery-connector board with the screw holes on the palm-rest assembly.
- 2 Replace the screws that secure the battery-connector board to the palm-rest assembly.
- **3** Route the antenna cable through the routing guides on the battery-connector board.
- **4** Adhere the tapes that secure the antenna cable to the palm-rest assembly.

- 1 Replace the system board.
- 2 Replace the <u>heat-sink assembly</u>.
- 3 Replace the I/O board.
- 4 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 5 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **6** Replace the <u>keyboard</u>.
- 7 Replace the memory modules.
- 8 Replace the wireless card.
- **9** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 10 Replace the base cover.
- 11 Replace the battery.

# Removing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- 6 Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.

#### **Procedure**

- 1 Note the power-adapter-port cable routing and remove it from the routing guides on the palm-rest assembly.
- 2 Remove the screw that secures the power-adapter port to the palm-rest assembly.
- **3** Peel off the tape that secures the power-adapter port to the palm-rest assembly.

4 Lift the power-adapter port, along with its cable, off the palm-rest assembly.

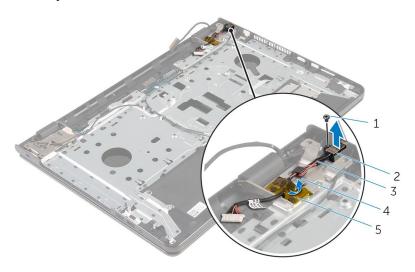

- 1 screw
- 3 power-adapter port cable
- 5 tape

- 2 power-adapter port
- 4 routing guide

# Replacing the power-adapter port



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Slide the power-adapter port into the slot on the palm-rest assembly.
- **2** Replace the screw that secures the power-adapter port to the palm-rest assembly.
- **3** Route the power-adapter-port cable through the routing guides on the palm-rest assembly.
- **4** Adhere the tape that secures the power-adapter port to the palm-rest assembly.

- 1 Replace the system board.
- 2 Replace the heat-sink assembly.
- 3 Replace the I/O board.
- 4 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 5 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **6** Replace the keyboard.
- 7 Replace the memory modules.
- 8 Replace the wireless card.
- **9** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **10** Replace the <u>base cover</u>.
- **11** Replace the battery.

# Removing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the <u>power-adapter port</u>.

#### **Procedure**

1 Note the antenna cable routing and remove the cable from its routing guides.


2 Peel off the tapes that secure the antenna cables to the palm-rest assembly.

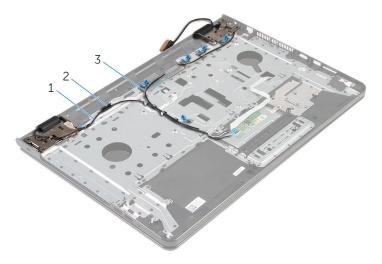

- 1 antenna cables (2)
- 2 routing guide

- 3 tapes (5)
- **3** Open the display at an angle of 90 degrees.
- 4 Place the computer on the edge of a table so that the palm-rest assembly is on the table and the display assembly extends past the table edge with the display hinges facing up.
- **5** Remove the screws that secure the display hinges to the palm-rest assembly.

**6** Lift the display assembly off the palm-rest assembly.

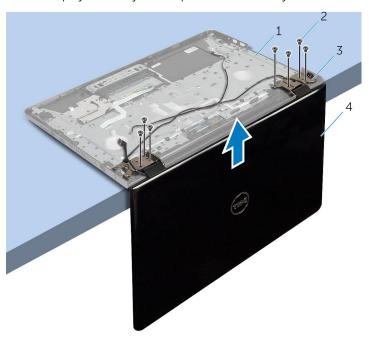

- 1 palm-rest assembly
- 3 display hinges (2)

- 2 screws (7)
- 4 display assembly

# Replacing the display assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Place the palm-rest assembly at the edge of a table with the display hinges facing up.
- 2 Align the screw holes on the display hinges with the screw holes on the palm-rest assembly.
- **3** Replace the screws that secure the display hinges to the palm-rest assembly.
- 4 Close the display and turn the computer over.
- 5 Route the antenna cable through the routing guides on the palm-rest assembly.
- **6** Adhere the tapes that secure the display cable and the antenna cables to the palm-rest assembly.

- **1** Replace the <u>power-adapter port</u>.
- 2 Replace the system board.
- 3 Replace the <u>heat-sink assembly</u>.
- 4 Replace the I/O board.
- 5 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **6** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- 7 Replace the <u>keyboard</u>.
- **8** Replace the <u>memory modules</u>.
- **9** Replace the <u>wireless card</u>.
- 10 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".

- **11** Replace the <u>base cover</u>.
- **12** Replace the <u>battery</u>.

# Removing the power-button board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.


## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the <u>power-adapter port</u>.
- 13 Remove the display assembly.

#### **Procedure**

- 1 Remove the screw that secures the power-button board to the palm-rest assembly.
- 2 Peel off the tape that secures the power-button board to the palm rest.
- 3 Peel off the power-button board cable from the palm rest.
- 4 Slide the power-button board from under the tabs on the palm rest.

Lift the power-button board, along with its cable, off the palm-rest assembly.

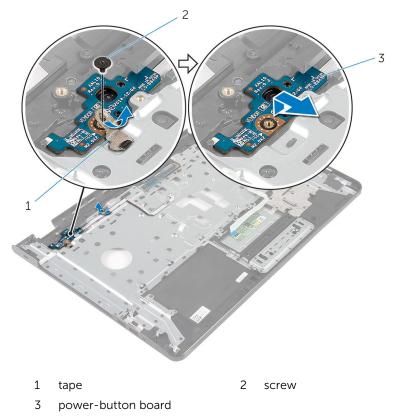

# Replacing the power-button board



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Slide the power-button board under the tabs on the palm rest and align the screw hole on the power-button board with the screw hole on the palm-rest assembly.
- 2 Replace the screw that secures the power-button board to the palm-rest assembly.
- **3** Adhere the power-button board cable to the palm-rest assembly.
- **4** Adhere the tape that secures the power-button board to the palm-rest assembly.

- 1 Replace the display assembly.
- 2 Replace the <u>power-adapter port</u>.
- **3** Replace the <u>system board</u>.
- 4 Replace the heat-sink assembly.
- 5 Replace the I/O board.
- 6 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 7 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **8** Replace the <u>keyboard</u>.
- **9** Replace the memory modules.
- 10 Replace the wireless card.
- 11 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".

- **12** Replace the <u>base cover</u>.
- **13** Replace the <u>battery</u>.

# Removing the palm-rest assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the power-adapter port.
- 13 Remove the display assembly.
- 14 Remove the power-button board.

#### **Procedure**

After performing all the prerequisites, we are left with the palm-rest assembly.



1 palm-rest assembly

# Replacing the palm-rest assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

Place the palm-rest assembly on a flat surface.

- 1 Replace the <u>power-button board</u>.
- 2 Replace the display assembly.
- **3** Replace the <u>power-adapter port</u>.
- 4 Replace the system board.
- 5 Replace the heat-sink assembly.
- 6 Replace the I/O board.
- 7 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **8** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **9** Replace the keyboard.
- 10 Replace the memory modules.
- 11 Replace the wireless card.
- 12 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **13** Replace the <u>base cover</u>.
- 14 Replace the battery.

# Removing the display bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**




**NOTE:** These instructions are only applicable for laptop with non-touchscreen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the <u>memory modules</u>.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the power-adapter port.
- 13 Remove the display assembly.

#### **Procedure**

**1** Using your fingertips, carefully pry up the inside edge of the display bezel.

#### 2 Remove the display bezel off the display back-cover.

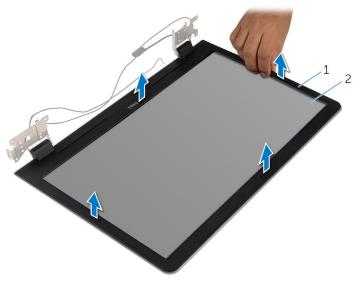

1 display bezel

2 display back-cover

# Replacing the display bezel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**



**NOTE:** These instructions are only applicable for laptops with non-touchscreen display.

Align the display bezel with the display back-cover and gently snap the display bezel into place.

- 1 Replace the display assembly.
- 2 Replace the power-adapter port.
- **3** Replace the <u>system board</u>.
- 4 Replace the heat-sink assembly.
- 5 Replace the I/O board.
- **6** Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- 7 Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **8** Replace the <u>keyboard</u>.
- **9** Replace the memory modules.
- 10 Replace the wireless card.
- 11 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 12 Replace the base cover.
- 13 Replace the battery.

# Removing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

### **Prerequisites**




**NOTE:** These instructions are applicable only for laptops with a non-touch screen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- **6** Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "<u>Removing the optical</u> drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the power-adapter port.
- 13 Remove the display assembly.
- 14 Remove the display bezel.

#### **Procedure**


1 Remove the screws that secure the display panel to the display backcover.

#### 2 Gently lift the display panel and turn it over.

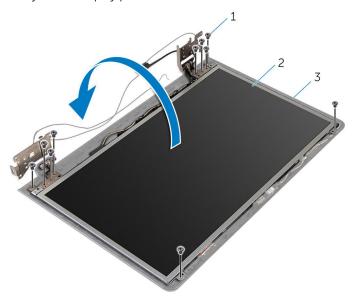


- 1 screws (10)
- 3 display back-cover
- 2 display panel

Gently peel the display cable, then lift the latch and disconnect the display cable from the display-cable connector.

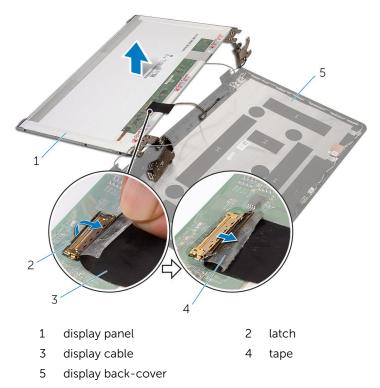

4 Lift the display panel off the display back-cover.

#### **5** Remove the <u>display hinges</u>.

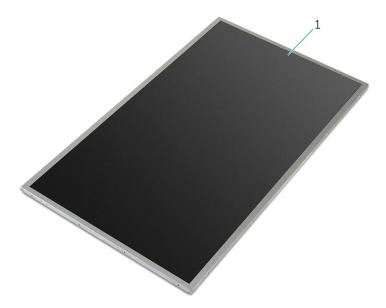

1 display panel

# Replacing the display panel



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**



**NOTE:** These instructions are only applicable for laptop with non-touchscreen display.

- 1 Replace the display hinges.
- 2 Slide the display cable into the display-panel cable connector and press down the latch to secure the cable.
- **3** Adhere the display cable over the display-panel cable connector.
- 4 Gently place the display panel on the display back-cover and align the screw holes on the display panel with the screw holes on the display back-cover.
- 5 Replace the screws that secure the display panel to the display backcover.

- 1 Replace the <u>display bezel</u>.
- 2 Replace the display assembly.
- **3** Replace the <u>power-adapter port</u>.
- 4 Replace the system board.
- 5 Replace the heat-sink assembly.
- 6 Replace the I/O board.
- **7** Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **8** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **9** Replace the <u>keyboard</u>.

- 10 Replace the memory modules.
- **11** Replace the <u>wireless card</u>.
- 12 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- **13** Replace the <u>base cover</u>.
- **14** Replace the <u>battery</u>.

# Removing the display hinges



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**




**NOTE:** These instructions are applicable only for laptops with a non-touchscreen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the <u>memory modules</u>.
- 6 Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the power-adapter port.
- 13 Remove the display assembly.
- 14 Remove the display bezel.
- **15** Remove the display panel.

#### **Procedure**

1 Remove the screws that secure the display hinges to the display panel.

#### 2 Lift the display hinges off the display panel.

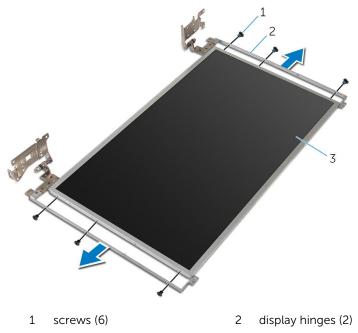

3 display panel

# Replacing the display hinges



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**



**NOTE:** These instructions are only applicable for laptop with non-touchscreen display.

- Align the screw holes on the display hinges with the screw holes on the display panel.
- **2** Replace the screws that secure the display hinges to the display panel.

- 1 Replace the <u>display panel</u>.
- 2 Replace the display bezel.
- **3** Replace the display assembly.
- 4 Replace the power-adapter port.
- **5** Replace the system board.
- 6 Replace the <u>heat-sink assembly</u>.
- 7 Replace the <u>I/O board</u>.
- **8** Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **9** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- 10 Replace the keyboard.
- 11 Replace the memory modules.
- 12 Replace the wireless card.
- 13 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 14 Replace the base cover.
- **15** Replace the <u>battery</u>.

# Removing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**




**NOTE:** These instructions are applicable only for laptops with a non-touchscreen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- 6 Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "<u>Removing the optical</u> drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the power-adapter port.
- 13 Remove the display assembly.
- 14 Remove the display bezel.

#### **Procedure**

1 Disconnect the camera cable from the camera module.

2 Using a plastic scribe, gently pry the camera off the display back-cover.

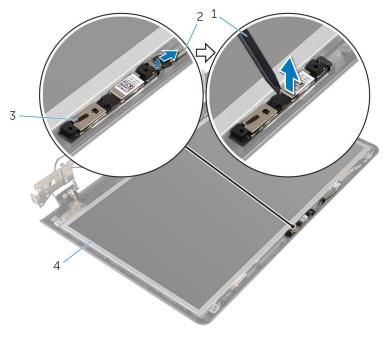

- 1 plastic scribe
- 3 camera

- 2 camera cable
- 4 display back-cover

# Replacing the camera



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**



**NOTE:** These instructions are only applicable for laptop with non-touchscreen display.

- 1 Using the alignment post, adhere the camera to the display back-cover.
- **2** Connect the camera cable to the camera connector.

- 1 Replace the <u>display bezel</u>.
- 2 Replace the display assembly.
- **3** Replace the <u>power-adapter port</u>.
- 4 Replace the system board.
- 5 Replace the <u>heat-sink assembly</u>.
- 6 Replace the <u>I/O board</u>.
- 7 Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **8** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **9** Replace the <u>keyboard</u>.
- 10 Replace the memory modules.
- 11 Replace the wireless card.
- 12 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 13 Replace the base cover.
- 14 Replace the battery.

# Removing the display cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**




**NOTE:** This chapter is applicable only for laptops with a non-touchscreen display.

- 1 Remove the <u>battery</u>.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the <u>memory modules</u>.
- **6** Remove the <u>keyboard</u>.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the <u>heat-sink assembly</u>.
- 11 Remove the system board.
- 12 Remove the power-adapter port.
- 13 Remove the display assembly.
- 14 Remove the display bezel.
- **15** Remove the display panel.
- **16** Remove the camera.

#### **Procedure**

Peel off the tapes that secure the camera cable to the display back-cover.

- 2 Note the display cable routing and remove the display cable from the routing guides on the display back-cover.
- 3 Note the camera cable routing and remove the camera cable from the display back-cover.

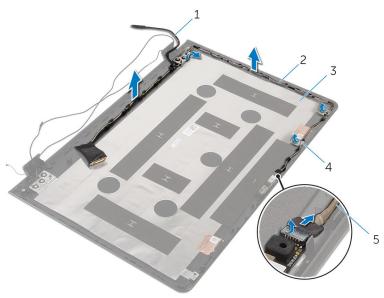

- 1 display cable
- 3 display back-cover
- 5 camera cable

- 2 routing guides
- 4 tape

# Replacing the display cable



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

- 1 Route the display cable through the routing guides on the display backcover
- 2 Adhere the tapes that secure the display cable to the display back-cover.

- 1 Replace the <u>camera</u>.
- 2 Replace the display panel.
- **3** Replace the display bezel.
- 4 Replace the display assembly.
- 5 Replace the power-adapter port.
- **6** Replace the system board.
- 7 Replace the heat-sink assembly.
- 8 Replace the I/O board.
- **9** Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **10** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- **11** Replace the keyboard.
- 12 Replace the memory modules.
- **13** Replace the wireless card.
- 14 Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 15 Replace the base cover.
- **16** Replace the <u>battery</u>.

# Removing the display backcover and antenna assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in <a href="Before working">Before working inside your computer</a>. After working inside your computer, follow the instructions in <a href="After working">After working inside your computer</a>. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

## **Prerequisites**




**NOTE:** These instruction are applicable only for laptops with a non-touchscreen display.

- 1 Remove the battery.
- 2 Remove the base cover.
- **3** Follow the procedure from step 1 to step 3 in "Removing the hard drive".
- 4 Remove the wireless card.
- 5 Remove the memory modules.
- 6 Remove the keyboard.
- 7 Follow the procedure from step 1 to step 4 in "Removing the optical drive".
- **8** Follow the procedure from step 1 to step 6 in "Removing the computer base".
- 9 Remove the I/O board.
- 10 Remove the heat-sink assembly.
- 11 Remove the system board.
- **12** Remove the power-adapter port.
- 13 Remove the display assembly.
- 14 Remove the display bezel.
- **15** Remove the camera.
- 16 Remove the display panel.
- 17 Remove the display cable.

### **Procedure**

After performing all the prerequisites, we are left with the display back-cover and antenna assembly.

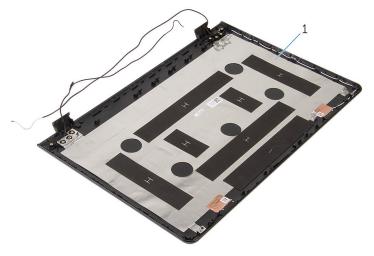

1 display back-cover and antenna assembly

# Replacing the display backcover and antenna assembly



WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in Before working inside your computer. After working inside your computer, follow the instructions in After working inside your computer. For more safety best practices, see the Regulatory Compliance home page at dell.com/regulatory\_compliance.

#### **Procedure**

Place the display back-cover and antenna assembly on a flat surface.

- **1** Replace the <u>display cable</u>.
- 2 Replace the display panel.
- **3** Replace the <u>camera</u>.
- 4 Replace the display bezel.
- 5 Replace the display assembly.
- **6** Replace the power-adapter port.
- 7 Replace the system board.
- 8 Replace the heat-sink assembly.
- **9** Replace the I/O board.
- Follow the procedure from step 3 to step 8 in "Replacing the computer base".
- **11** Follow the procedure from step 4 to step 7 in "Replacing the optical drive".
- 12 Replace the keyboard.
- **13** Replace the <u>memory modules</u>.
- 14 Replace the wireless card.
- **15** Follow the procedure from step 4 to step 6 in "Replacing the hard drive".
- 16 Replace the base cover.
- 17 Replace the battery.

# Flashing the BIOS

You may need to flash (update) the BIOS when an update is available or when you replace the system board. To flash the BIOS:

- **1** Turn on the computer.
- 2 Go to dell.com/support.
- 3 Click Product Support, enter the Service Tag of your laptop and click Submit.
  - **NOTE:** If you do not have the Service Tag, use the auto-detect feature or manually browse for your computer model.
- 4 Click Drivers & downloads.
- 5 Scroll down the page and select **BIOS** from the **Category** drop-down list.
  - **NOTE:** In the **Change OS** drop-down list, select the operating system installed on your computer.
- **6** Expand **BIOS** to view the available BIOS files.
- 7 Click **Download File** to download the latest version of the BIOS for your computer.
- **8** Save the file and once the download is complete, navigate to the folder where you saved the BIOS update file.
- **9** Double-click the BIOS update file icon and follow the instructions on the screen.

# Getting help and contacting Dell

## Self-help resources

You can get information and help on Dell products and services using these online self-help resources:

Self-Help Information	Self-Help Options
Accessing Windows Help	Windows 8.1—Open the Search charm, type Help and Support in the search box, and press Enter.  Windows 7—Click Start → Help and Support.
Information about Dell products and services	See <b>dell.com</b> .
Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on	See dell.com/support.
Information about Microsoft Windows 8.1	See dell.com/windows8.
Information about Microsoft Windows 7	Click Start $\rightarrow$ All Programs $\rightarrow$ Dell Help Documentation.
Learn about your operating system, setting up and using your computer, data backup, diagnostics, and so on.	See Me and My Dell at dell.com/support/manuals.

# **Contacting Dell**

To contact Dell for sales, technical support, or customer service issues, see dell.com/contactdell.



**NOTE:** Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.