


# DENON

## AV SURROUND RECEIVER

# AVR-4802R

## OPERATING INSTRUCTIONS

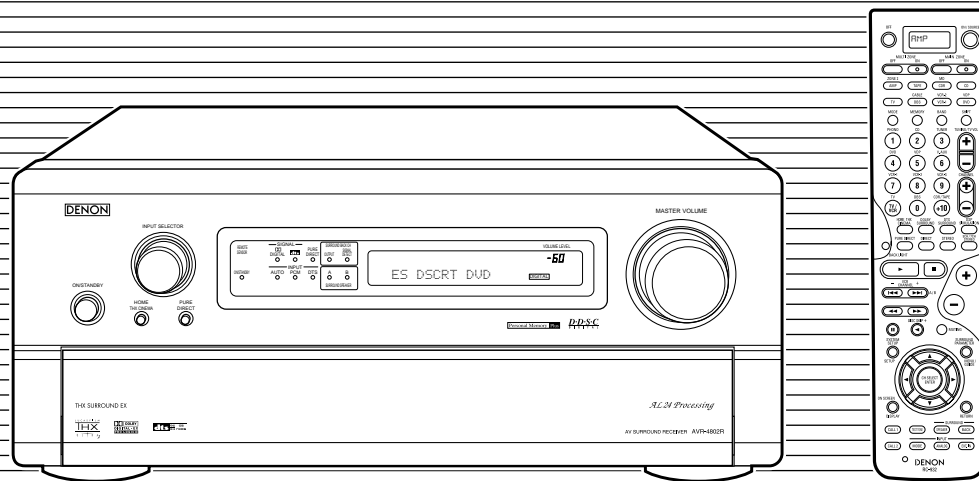

- We greatly appreciate your purchase of the AVR-4802R.
- To be sure you take maximum advantage of all the features the AVR-4802R has to offer, read these instructions carefully and use the set properly. Be sure to keep this manual for future reference should any questions or problems arise.

"SERIAL NO. \_\_\_\_\_"

PLEASE RECORD UNIT SERIAL NUMBER ATTACHED TO THE REAR OF THE  
CABINET FOR FUTURE REFERENCE"

## ■ SAFETY PRECAUTIONS



**CAUTION**  
**RISK OF ELECTRIC SHOCK**  
**DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

### CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

### ATTENTION


POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU' AU FOND.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.


## ■ NOTE ON USE / OBSERVATIONS RELATIVES A L'UTILISATION

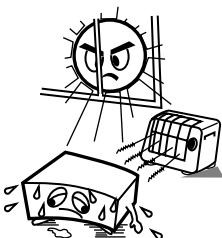


- Avoid high temperatures. Allow for sufficient heat dispersion when installed on a rack.
- Éviter des températures élevées. Tenir compte d'une dispersion de chaleur suffisante lors de l'installation sur une étagère.

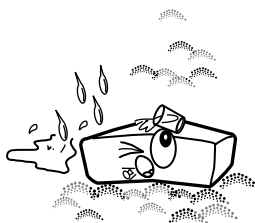

- Keep the set free from moisture, water, and dust.
- Protéger l'appareil contre l'humidité, l'eau et la poussière.

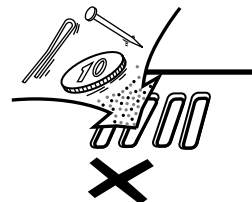


- Do not let foreign objects in the set.
- Ne pas laisser des objets étrangers dans l'appareil.

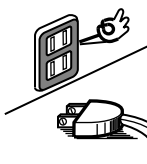


- Unplug the power cord when not using the set for long periods of time.
- Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.



- Do not let insecticides, benzene, and thinner come in contact with the set.
- Ne pas mettre en contact des insecticides, du benzène et un diluant avec l'appareil.

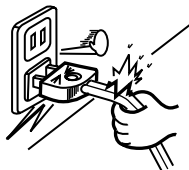


- Handle the power cord carefully. Hold the plug when unplugging the cord.
- Manipuler le cordon d'alimentation avec précaution. Tenir la prise lors du débranchement du cordon.

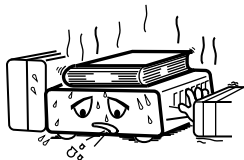

\* (For sets with ventilation holes)


- Do not obstruct the ventilation holes.
- Ne pas obstruer les trous d'aération.

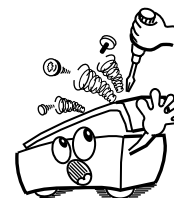

- Never disassemble or modify the set in any way.
- Ne jamais démonter ou modifier l'appareil d'une manière ou d'une autre.

# SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Heed Warnings – All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Cleaning – Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
6. Attachments – Do not use attachments not recommended by the product manufacturer as they may cause hazards.
7. Water and Moisture – Do not use this product near water – for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
8. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
10. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
11. Power Sources – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
12. Grounding or Polarization – This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

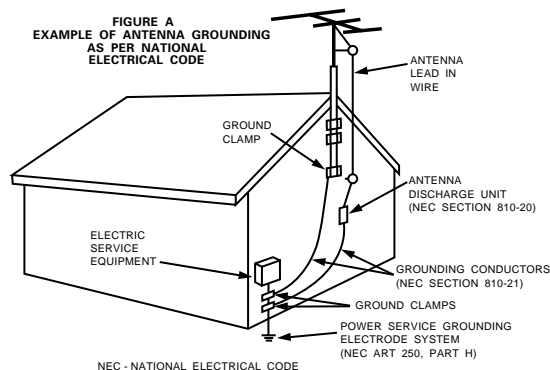

13. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
15. Outdoor Antenna Grounding – If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
16. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
17. Power Lines – An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
18. Overloading – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
19. Object and Liquid Entry – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
20. Servicing – Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
21. Damage Requiring Service – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
  - a) When the power-supply cord or plug is damaged,
  - b) If liquid has been spilled, or objects have fallen into the product,
  - c) If the product has been exposed to rain or water,
  - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - e) If the product has been dropped or damaged in any way, and
  - f) When the product exhibits a distinct change in performance – this indicates a need for service.
22. Replacement Parts – When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
23. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
24. Wall or Ceiling Mounting – The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
25. Heat – The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## ■ INTRODUCTION

Thank you for choosing the DENON AVR-4802R Digital Surround A / V receiver. This remarkable component has been engineered to provide superb surround sound listening with home theater sources such as DVD, as well as providing outstanding high fidelity reproduction of your favorite music sources.

As this product is provided with an immense array of features, we recommend that before you begin hookup and operation that you review the contents of this manual before proceeding.


## TABLE OF CONTENTS

1 Before Using .....	4	10 Surround.....	56~67
2 Cautions on Installation .....	4	11 DENON Original Surround Modes .....	68~72
3 Cautions on Handling .....	5	12 Listening to the Radio .....	73~75
4 Features.....	5	13 Last Function Memory .....	75
5 Connections .....	6~13	14 Initialization of the Microprocessor.....	75
6 Part Names and Functions .....	14, 15	15 Troubleshooting.....	76
7 Setting up the system .....	16~32	16 Additional Information .....	77~88
8 Remote Control Unit.....	33~45	17 Specifications .....	89
9 Operation .....	46~55		

## ■ ACCESSORIES

Check that the following parts are included in addition to the main unit:

- |                                |   |                              |                              |
|--------------------------------|---|------------------------------|------------------------------|
| ① Operating instructions.....1 | ② Warranty ( for North America model only ).....1 | ③ Service station list ..... | ④ List of preset codes ..... |
| ⑤ AC cord .....1               | ⑥ Remote control unit (RC-932) .....1             | ⑦ R6P/AA batteries .....3    | ⑧ AM loop antenna.....1      |
|                                |   |                              | ⑨ FM indoor antenna .....1   |

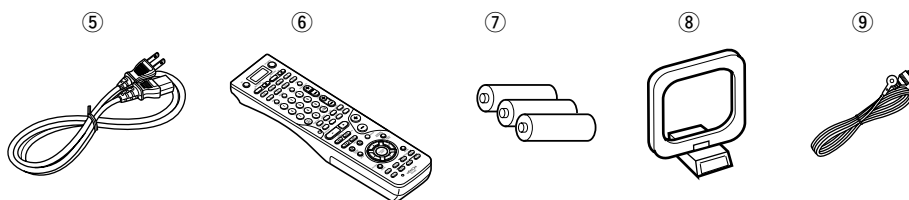

## 1 BEFORE USING

Pay attention to the following before using this unit:

- **Moving the set**  
To prevent short circuits or damaged wires in the connection cords, always unplug the power cord and disconnect the connection cords between all other audio components when moving the set.
- **Before turning the power switch on**  
Check once again that all connections are proper and that there are not problems with the connection cords. Always set the power switch to the standby position before connecting and disconnecting connection cords.

- **Store this instructions in a safe place.**  
After reading, store this instructions along with the warranty in a safe place.
- **Note that the illustrations in this instructions may differ from the actual set for explanation purposes.**


## 2 CAUTIONS ON INSTALLATION

Noise or disturbance of the picture may be generated if this unit or any other electronic equipment using microprocessors is used near a tuner or TV.

If this happens, take the following steps:

- Install this unit as far as possible from the tuner or TV.
- Set the antenna wires from the tuner or TV away from this unit's power cord and input/output connection cords.
- Noise or disturbance tends to occur particularly when using indoor antennas or 300  $\Omega$ /ohms feeder wires. **We recommend using outdoor antennas and 75  $\Omega$ /ohms coaxial cables.**

**For heat dispersal, leave at least 10 cm of space between the top, back and sides of this unit and the wall or other components.**

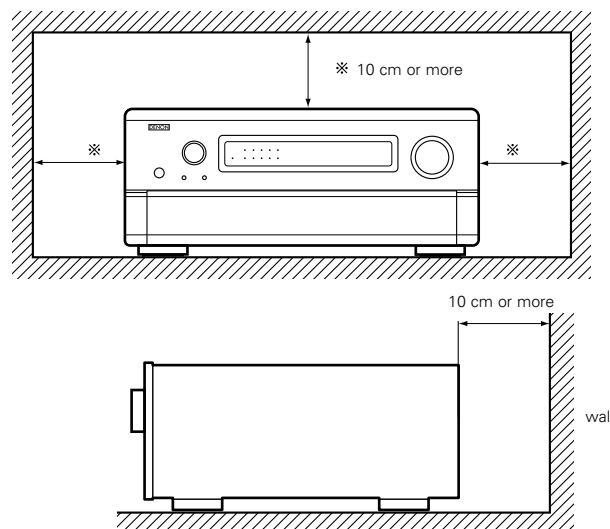

## 3 CAUTIONS ON HANDLING

- **Switching the input function when input jacks are not connected**

A clicking noise may be produced if the input function is switched when nothing is connected to the input jacks. If this happens, either turn down the MASTER VOLUME control or connect components to the input jacks.

- **Muting of PRE OUT jacks and SPEAKER terminals**

The PRE OUT jacks and SPEAKER terminals include a muting circuit. Because of this, the output signals are greatly reduced for

several seconds after the power switch is turned on or input function, surround mode or any other set-up is changed. If the volume is turned up during this time, the output will be very high after the muting circuit stops functioning. Always wait until the muting circuit turns off before adjusting the volume.

- **Whenever the AVR-4802R is in the STANDBY state, the apparatus is still connected on AC line voltage. Please be sure to unplug the cord when you leave home for, say, a vacation.**

## 4 FEATURES

### 1. Digital Surround Sound Decoding

Featuring dual 32 bit high speed DSP processors, operating entirely in digital domain, surround sound from digital sources such as DVD, DTV and satellite are faithfully re-created.

### 2. Dolby Digital

Using advanced digital processing algorithms, Dolby Digital provides up to 5.1 channels of wide-range, high fidelity surround sound. Dolby Digital is the default digital audio delivery system for North American DVD and DTV, and is available on laser discs as well as some digital satellite direct-to-home services.

### 3. Dolby Digital EX decoder system

Dolby Digital EX is a 6.1-channel surround format proposed by Dolby Laboratories that allows users to enjoy in their homes the "DOLBY DIGITAL SURROUND EX" audio format jointly developed by Dolby Laboratories and Lucas Films and first used for the movie "Star Wars Episode 1 – Phantom Menace". The 6.1 channels of sound, including surround back channels, provide improved sound positioning and expression of space.

### 4. DTS (Digital Theater Systems)

DTS provides up to 5.1 channels of wide-range, high fidelity surround sound, from sources such as laser disc, DVD and specially-encoded music discs.

### 5. Lucasfilm THX Ultra2 Certified

Home THX is the unique collaboration between Lucasfilm Ltd. and audio equipment manufacturers. THX Ultra2 certification is the highest performance level, and provides a rigorous set of performance standards, along with proprietary surround sound post-processing technologies, designed to enhance the surround soundtrack playback experience in the home theater.

In addition to improvements to the power amplifier with respect to previous THX Ultra standards, two surround modes have been added: the THX Ultra2 Cinema mode and the THX Music mode.

### 6. THX Surround EX

The AVR-4802R is fully compatible with THX Surround EX, the latest surround format.

### 7. DTS-ES Extended Surround and DTS Neo:6

The AVR-4802R is compatible with DTS-ES Extended Surround, a new multi-channel format developed by Digital Theater Systems Inc.

The AVR-4802R is also compatible with DTS Neo:6, a surround mode allowing 6.1-channel playback of regular stereo sources.

### 8. DTS 96/24 compatibility

The AVR-4802R is compatible with sources recorded in DTS 96/24, a new multi-channel digital signal format developed by Digital Theater Systems Inc.

DTS 96/24 sources can be played in the multi-channel mode on the AVR-4802R with high sound quality of 96 kHz/24 bits or 88.2 kHz/24 bits.

### 9. Dolby Pro Logic II decoder

Dolby Pro Logic II is a new format for playing multichannel audio signals that offers improvements over conventional Dolby Pro Logic. It can be used to decode not only sources recorded in Dolby Surround but also regular stereo sources into five channels (front left/right, center and surround left/right). In addition, various parameters can be set according to the type of source and the contents, so you can adjust the sound field with greater precision.

### 10. Wide screen mode for a 7.1-channel sound even with 5.1-channel sources

DENON has developed a wide screen mode with a new design which recreates the effects of the multi surround speakers in

movie theaters. The result is 7.1-channel sound taking full advantage of surround back speakers, even with Dolby Pro Logic or Dolby Digital/DTS 5.1-channel signals.

### 11.24 bit D/A Conversion

All eight channels, including the seven main channels and the low frequency effects (LFE) channel benefit from reference ANALOG DEVICES DACs, for optimum high fidelity reproduction of music and movie soundtracks.

### 12. Dual Surround Speaker Mode

Provides for the first time the ability to optimize surround sound reproduction using two different types of surround sound speakers as well as two different surround speaker positions:

#### (1) Movie Surround

Motion picture soundtracks use the surround channel(s) to provide the ambient elements of the acoustic environment they want the audience to realize. This is best accomplished by the use of specially-designed surround speakers that offer a wide diffusion pattern (bipolar dispersion) or by using surround speakers that provide broad dispersion with a minimum of on-axis localization (dipolar dispersion). Side wall mounting (closer to the ceiling) of the surround speakers provides the greatest envelopment, minimizing localization of direct sound from the speakers.

#### (2) Music Surround

With full range discrete surround channels, as well as three discrete full range front channels, digital formats such as Dolby and DTS offer thrilling surround sound music listening. Producers of multi-channel discrete digital music recordings almost always favor the use of direct radiating (monopolar) surround speakers, placed in the rear corners of the room, since that is how they configure their studios during the mixing/creation process.

The DENON AVR-4802R provides the ability to connect two different sets of surround speakers, and place them in the appropriate locations in your home theater room, so that you can enjoy both movie soundtracks and music listening, with optimum results and no compromise.

### 13. Component Video Switching

In addition to composite video and "S" video switching, the AVR-4802R provides 3 sets of component video (Y, Pr/Cr, Pb/Cb) inputs for the DVD, TV and DBS/SAT inputs, and one set of component video outputs to the television, for superior picture quality.

### 14. Video Select Function

Allow you to watch one source (visual) while listening to another source (audio).

### 15. Seven Identical Power Amplifiers

Featuring discrete high current power transistors, the power amp section is THX Ultra certified for top performance with the widest range of speaker systems. Rated at 125 watts into 8  $\Omega$ /ohms, the amp channels feature additional low impedance drive capability.

### 16. Future Sound Format Upgrade Capability via Eight Channel Inputs & Outputs

For future multi-channel audio format(s), the AVR-4802R is provided with 7.1 channel (seven main channels, plus one low frequency effects channel) inputs, along with a full set of 7.1 channel pre-amp outputs, controlled by the 8 channel master volume control. This assures future upgrade possibilities for any future multi-channel sound format.


## 5 CONNECTIONS

- Do not plug in the AC cord until all connections have been completed.
- Be sure to connect the left and right channels properly (left with left, right with right).
- Insert the plugs securely. Incomplete connections will result in the generation of noise.
- **Use the AC OUTLETS for audio equipment only. Do not use them for hair driers, etc.**

- Note that binding pin plug cords together with AC cords or placing them near a power transformer will result in generating hum or other noise.
- Noise or humming may be generated if a connected audio equipment is used independently without turning the power of this unit on. If this happens, turn on the power of the this unit.


### Connecting the audio components

- When making connections, also refer to the operating instructions of the other components.

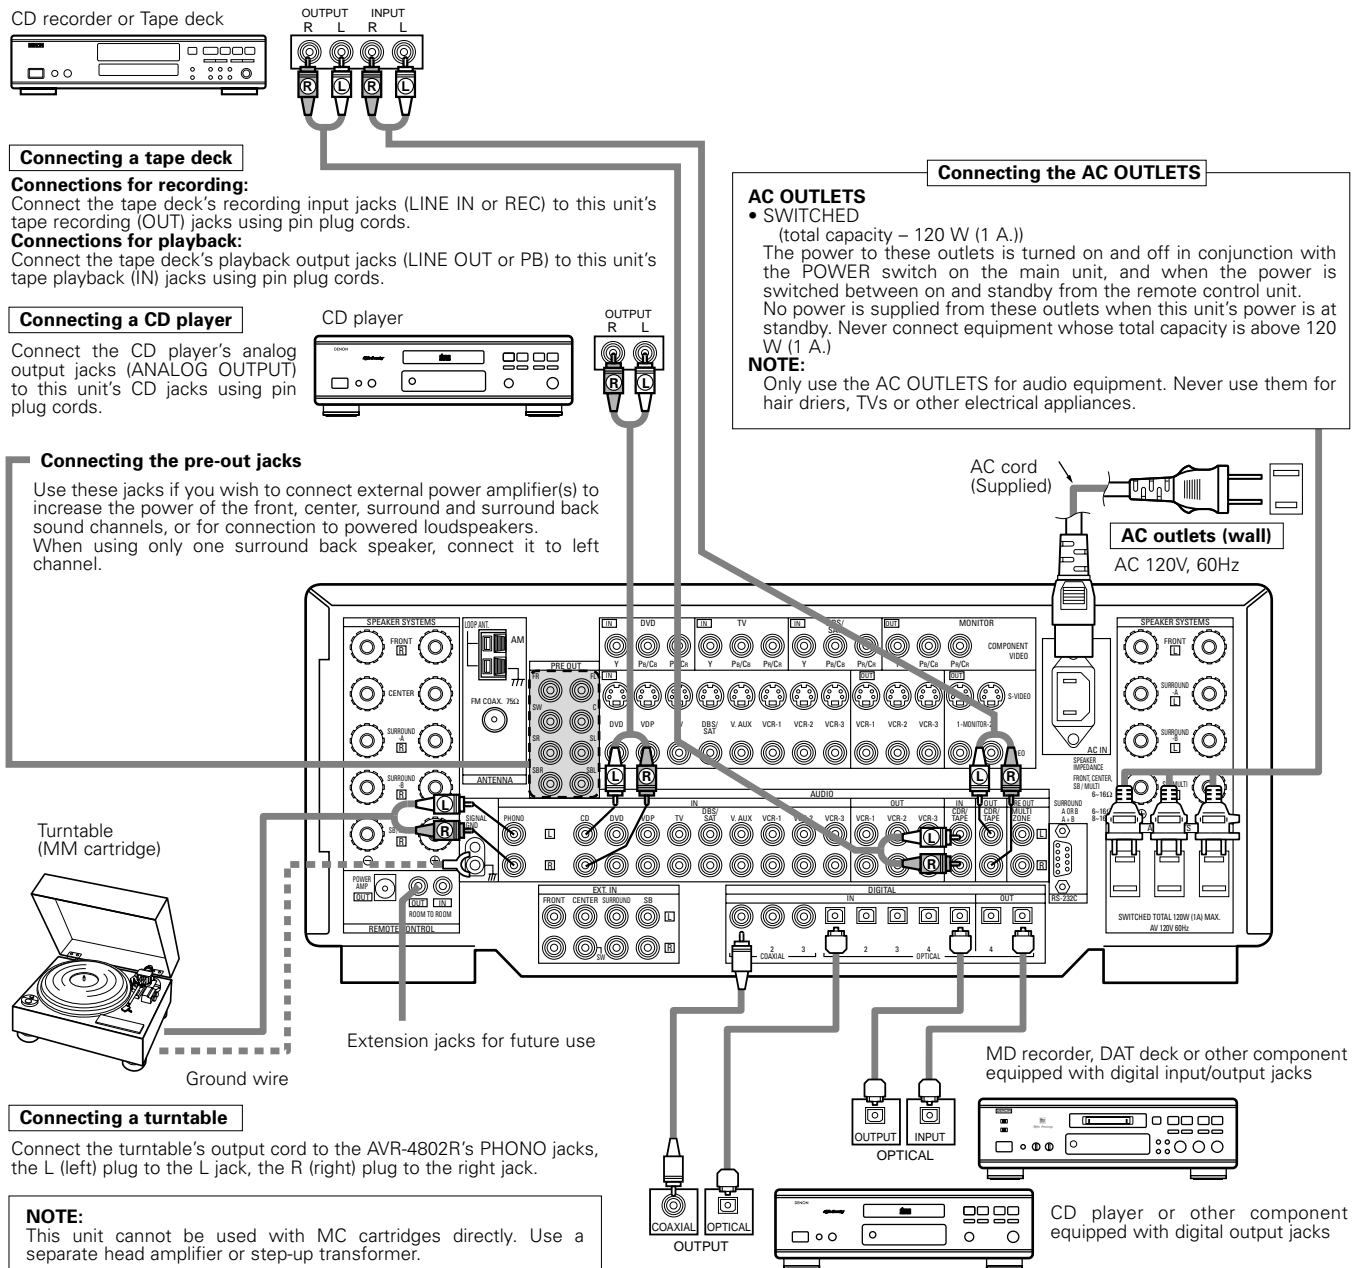

## Connecting video components

- To connect the video signal, connect using a 75  $\Omega$ /ohms video signal cable cord. Using an improper cable can result in a drop in picture quality.
- When making connections, also refer to the operating instructions of the other components.

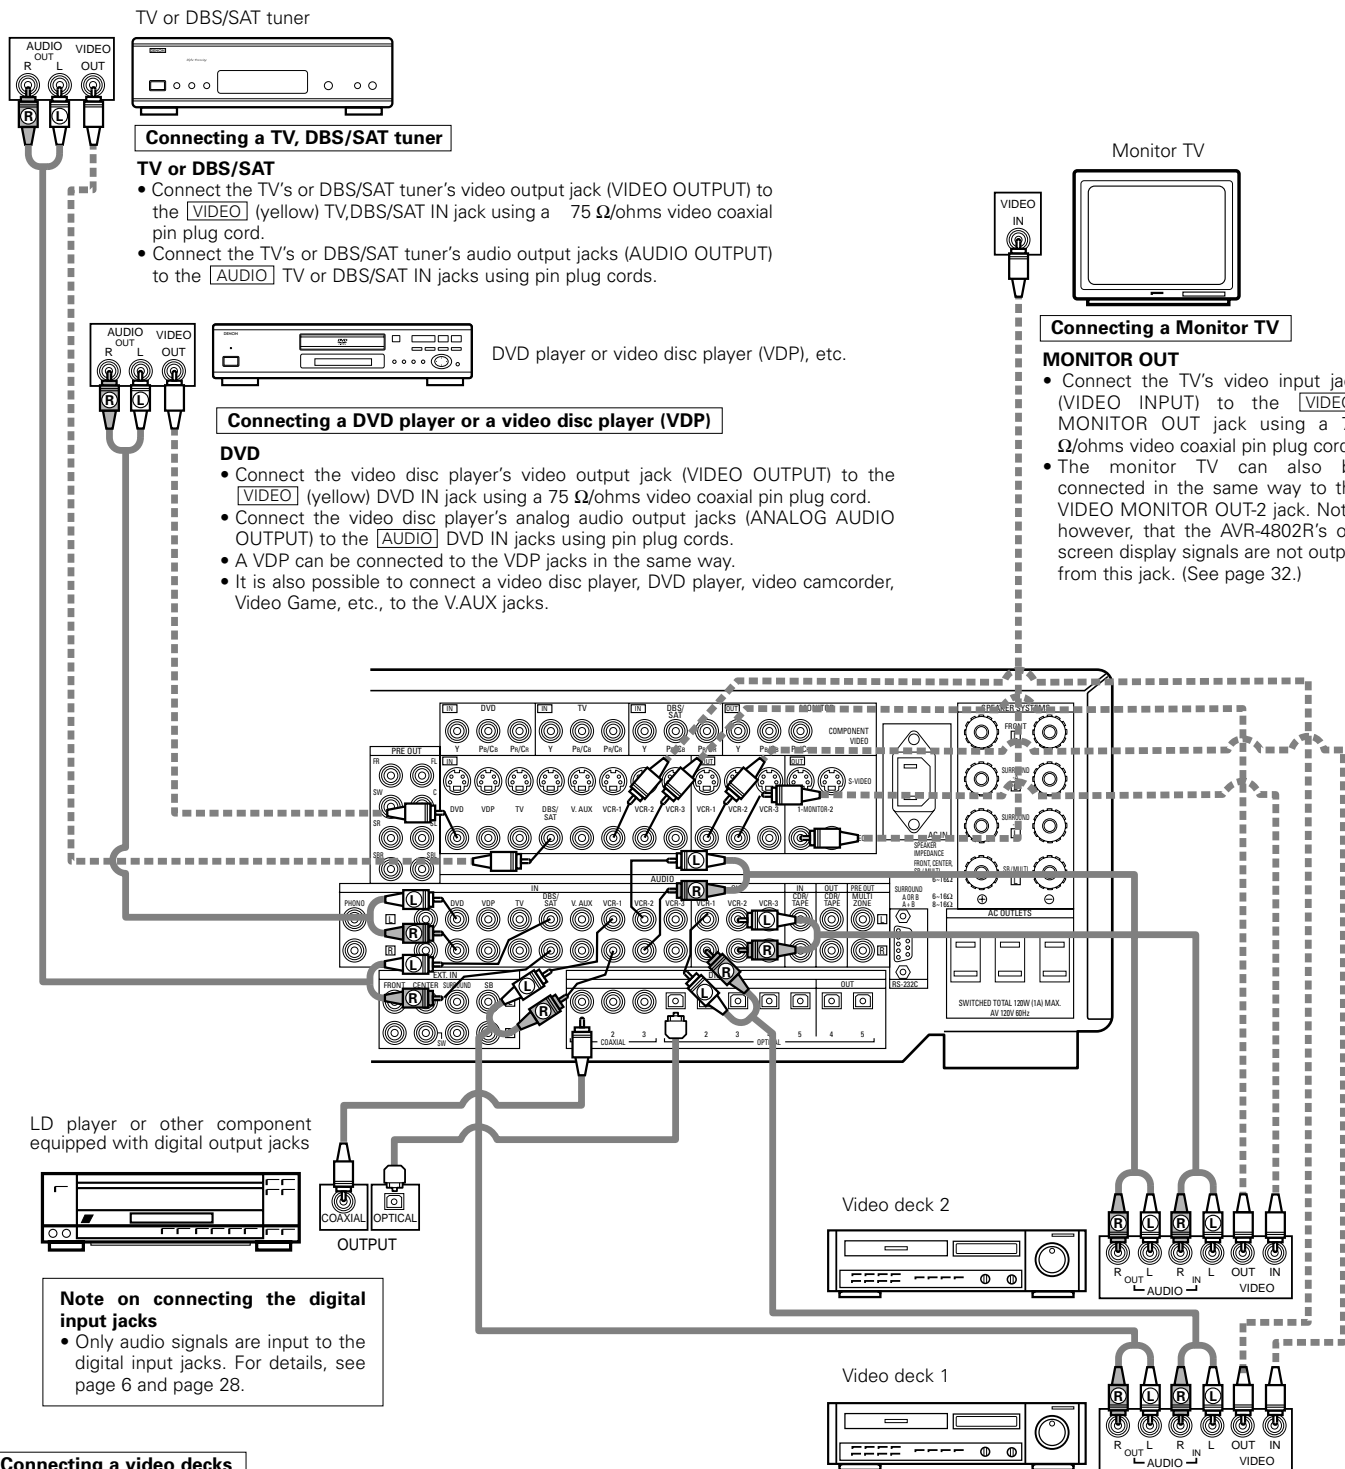

### Connecting a video decks

- There are three sets of video deck (VCR) jacks, so three video decks can be connected for simultaneous recording or video copying.

#### Video input/output connections:

- Connect the video deck's video output jack (VIDEO OUT) to the **VIDEO** (yellow) VCR-1 IN jack, and the video deck's video input jack (VIDEO IN) to the **VIDEO** (yellow) VCR-1 OUT jack using 75  $\Omega$ /ohms video coaxial pin plug cords.

#### Connecting the audio output jacks

- Connect the video deck's audio output jacks (AUDIO OUT) to the **AUDIO** VCR-1 IN jacks, and the video deck's audio input jacks (AUDIO IN) to the **AUDIO** VCR-1 OUT jacks using pin plug cords.

※ Connect the another video deck to the VCR-2 or VCR-3 jacks in the same way.

## Connecting a video component equipped with S-Video jacks

- When making connections, also refer to the operating instructions of the other components.


- A note on the S input jacks**

The input selectors for the S inputs and pin jack inputs work in conjunction with each other.

- Precaution when using S-jacks**

This unit's S-jacks (input and output) and video pin jacks (input and output) have independent circuit structures, so that video signals input from the S-jacks are only output from the S-jack outputs and video signals input from the pin jacks are only output from the pin jack outputs.

When connecting this unit with equipment that is equipped with S-jacks, keep the above point in mind and make connections according to the equipment's instruction manuals.

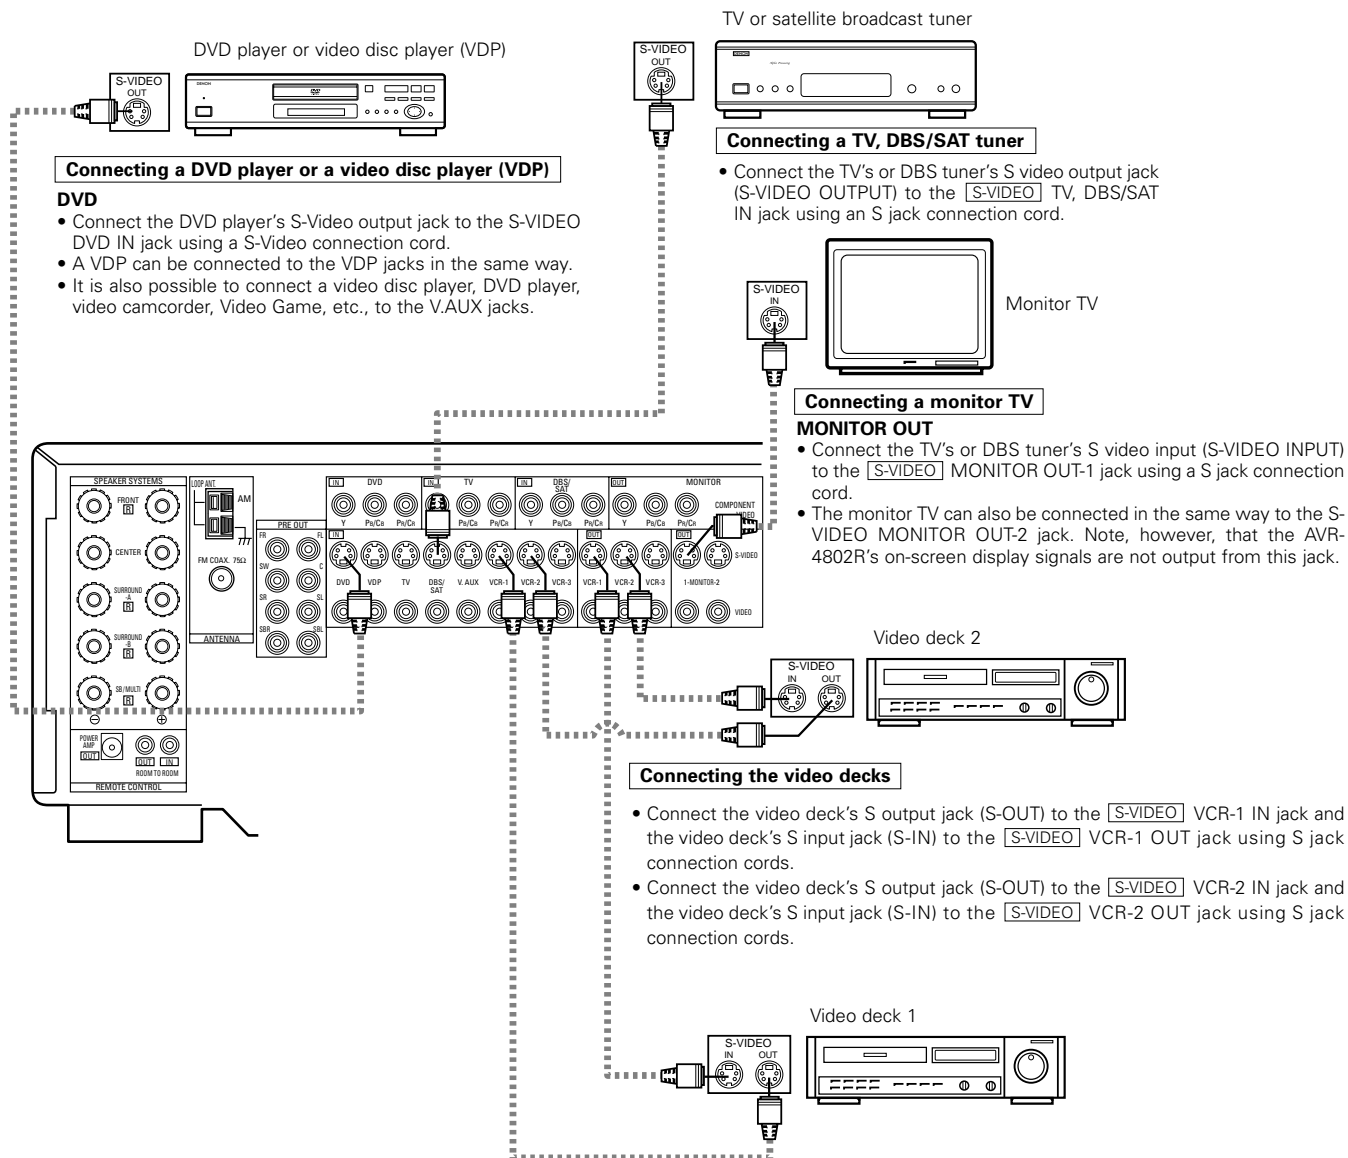

Connect the components' audio inputs and outputs as described on page 6.


### NOTES:

- The on-screen display signals are not output from the video signal MONITOR OUT-2 (yellow) or S-Video signal MONITOR OUT-2 jack.
- The MONITOR OUT-2 output switches together with the input function selected with the REC/MULTI button. To use as the monitor output, set "SOURCE" as the REC/MULTI input function.



## Connecting a Video Component Equipped with Color Difference (Component - Y, Pb/Cb, Pr/Cr) Video Jacks (DVD Player)

- When making connections, also refer to the operating instructions of the other components.
- The signals input to the color difference (component) video jacks are not output from the VIDEO output jack (yellow) or the S-Video output jack. In addition, the video signals input to the VIDEO input (yellow) and S-Video input jacks are not output to the color difference (component) video jacks.
- The AVR-4802R's on-screen display signals are not output from the color difference (component) video output jacks (MONITOR OUT).
- Some video sources with component video outputs are labelled Y, Pb, Pr, or Y, Cb, Cr, or Y, R-Y, B-Y. These terms all refer to component video color difference output.

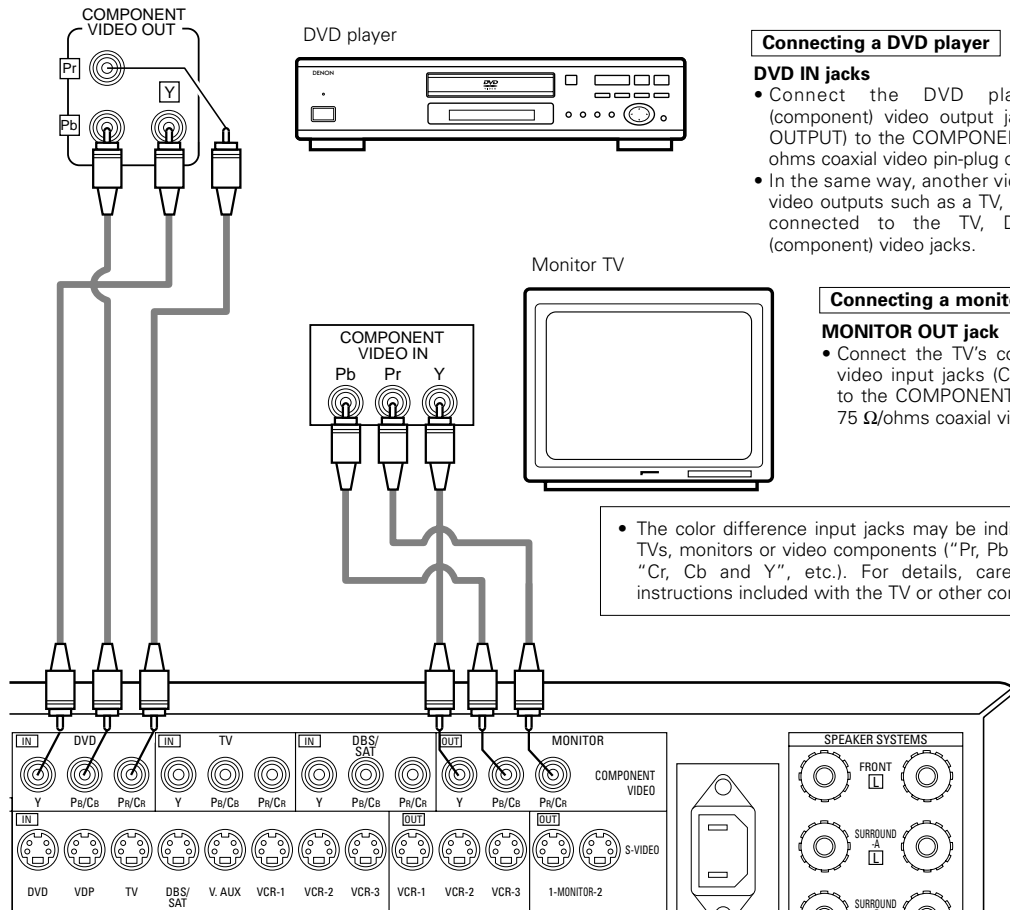

### Connecting a DVD player

#### DVD IN jacks

- Connect the DVD player's color difference (component) video output jacks (COMPONENT VIDEO OUTPUT) to the COMPONENT DVD IN jack using 75  $\Omega$ /ohms coaxial video pin-plug cords.
- In the same way, another video source with component video outputs such as a TV, DBS/SAT tuner, etc., can be connected to the TV, DBS/SAT color difference (component) video jacks.


### Connecting a monitor TV

#### MONITOR OUT jack


- Connect the TV's color difference (component) video input jacks (COMPONENT VIDEO INPUT) to the COMPONENT MONITOR OUT jack using 75  $\Omega$ /ohms coaxial video pin-plug cords.

- The color difference input jacks may be indicated differently on some TVs, monitors or video components ("Pr, Pb and Y", "R-Y, B-Y and Y", "Cr, Cb and Y", etc.). For details, carefully read the operating instructions included with the TV or other component.

## Connecting the antenna terminals

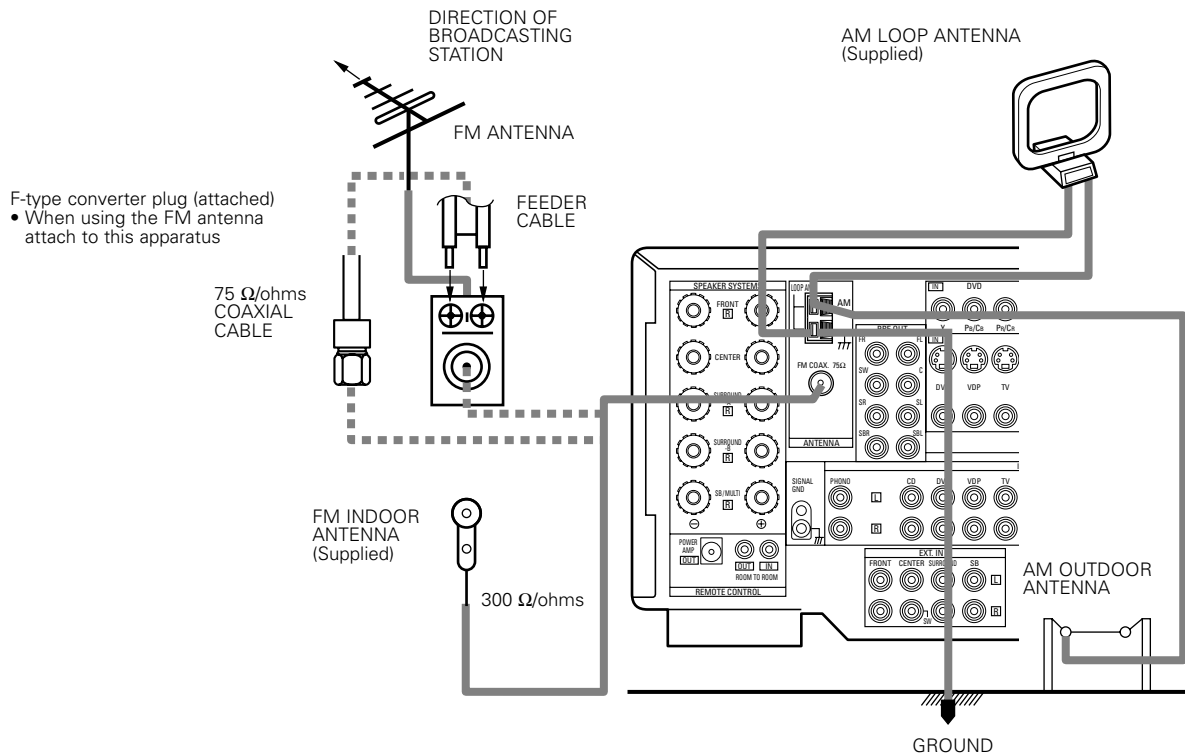


### AM loop antenna assembly

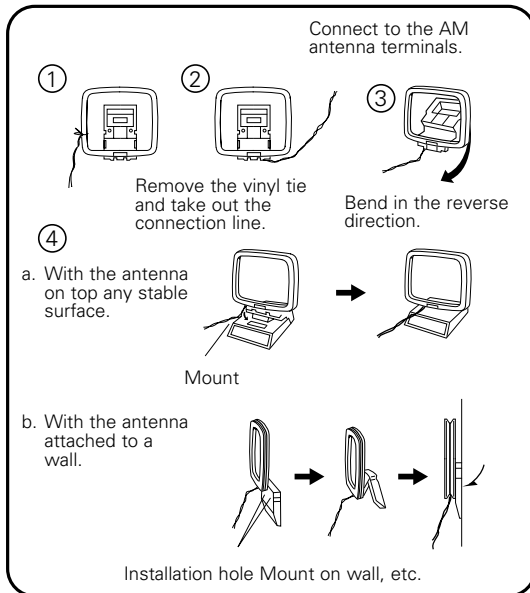

### Connection of AM antennas

1. Loosen by turning counterclockwise.
2. Insert the cord.
3. Tighten by turning clockwise.



#### Note to CATV system installer:


This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC which provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

#### Notes:

- Do not connect two FM antennas simultaneously.
- Even if an external AM antenna is used, do not disconnect the AM loop antenna.
- Make sure AM loop antenna lead terminals do not touch metal parts of the panel.

## Connecting the external input (EXT. IN) jacks


- These jacks are for inputting multi-channel audio signals from an outboard decoder, or a component with a different type of multi-channel decoder, such as a Super Audio DVD player, or a multi-channel SACD player, or other future multi-channel sound format decoder.
- When making connections, also refer to the operating instructions of the other components.

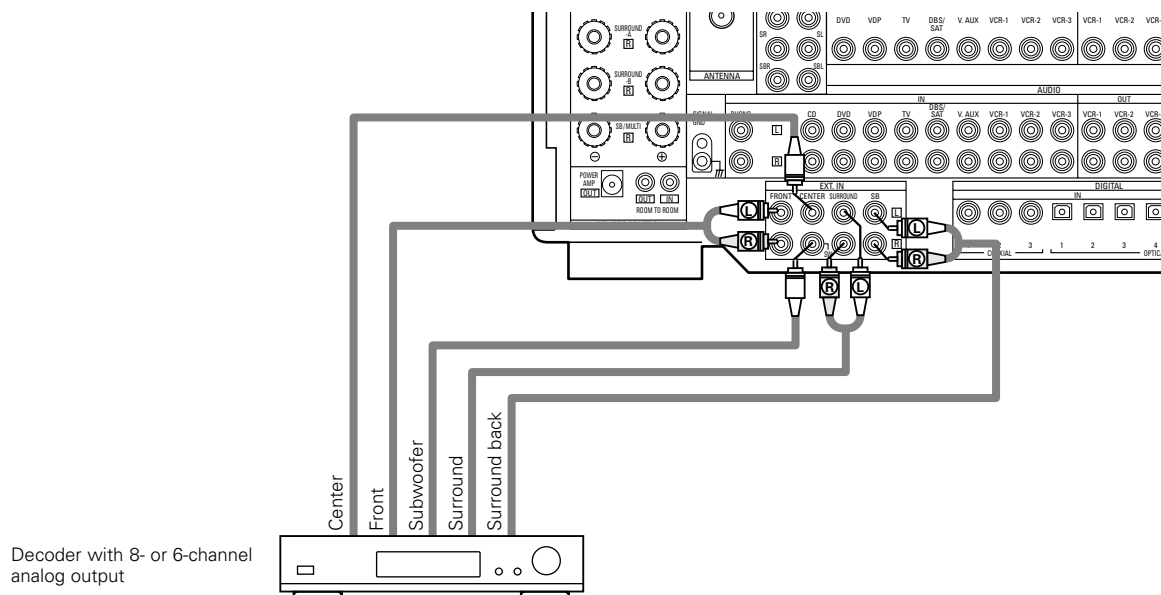

※ For instructions on playback using the external input (EXT. IN) jacks, see page 49.

## Connecting the MULTI SOURCE jacks

- If another amplifier is connected, the multi-source jacks can be used to play a different program source in another room at the same time. (See page 54.)

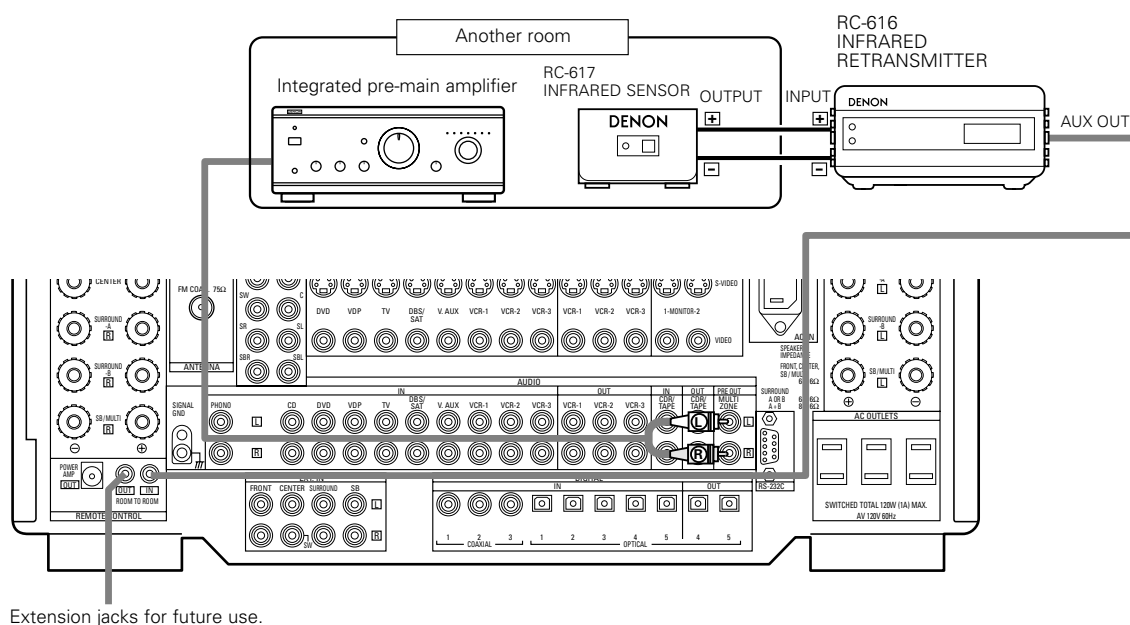

※ For instructions on operations using the MULTI SOURCE jacks, see page 53.

## Speaker system connections

- Connect the speaker terminals with the speakers making sure that like polarities are matched (  $\oplus$  with  $\oplus$  ,  $\ominus$  with  $\ominus$  ). Mismatching of polarities will result in weak central sound, unclear orientation of the various instruments, and the sense of direction of the stereo being impaired.
- When making connections, take care that none of the individual conductors of the speaker cord come in contact with adjacent terminals, with other speaker cord conductors, or with the rear panel.

### NOTE:

**NEVER touch the speaker terminals when the power is on. Doing so could result in electric shocks.**

### Speaker Impedance

- Speakers with an impedance of from 6 to 16  $\Omega$ /ohms can be connected for use as front and center speakers.
- Speakers with an impedance of 6 to 16  $\Omega$ /ohms can be connected for use as surround speakers.
- The protector circuit may be activated if the set is played for long periods of time at high volumes when speakers with an impedance lower than the specified impedance are connected.


### Connecting the speaker cords

1. Loosen by turning counterclockwise.


2. Insert the cord.

3. Tighten by turning clockwise.

Either tightly twist or terminate the core wires.



### Connecting banana plugs

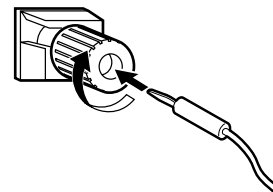

Turn clockwise to tighten, then insert the banana plug.

## Protector circuit

- This unit is equipped with a high-speed protection circuit. The purpose of this circuit is to protect the speakers under circumstances such as when the output of the power amplifier is inadvertently short-circuited and a large current flows, when the temperature surrounding the unit becomes unusually high, or when the unit is used at high output over a long period which results in an extreme temperature rise.

When the protection circuit is activated, the speaker output is cut off and the power supply indicator LED flashes. Should this occur, please follow these steps: be sure to switch off the power of this unit, check whether there are any faults with the wiring of the speaker cables or input cables, and wait for the unit to cool down if it is very hot. Improve the ventilation condition around the unit and switch the power back on.

If the protection circuit is activated again even though there are no problems with the wiring or the ventilation around the unit, switch off the power and contact a DENON service center.


## Note on speaker impedance

- The protector circuit may be activated if the set is played for long periods of time at high volumes when speakers with an impedance lower than the specified impedance (for example speakers with an impedance of lower than 4  $\Omega$ /ohms) are connected. If the protector circuit is activated, the speaker output is cut off. Turn off the set's power, wait for the set to cool down, improve the ventilation around the set, then turn the power back on.

## Connections

- When making connections, also refer to the operating instructions of the other components.

Connection jack for subwoofer with built-in amplifier (super woofer), etc.

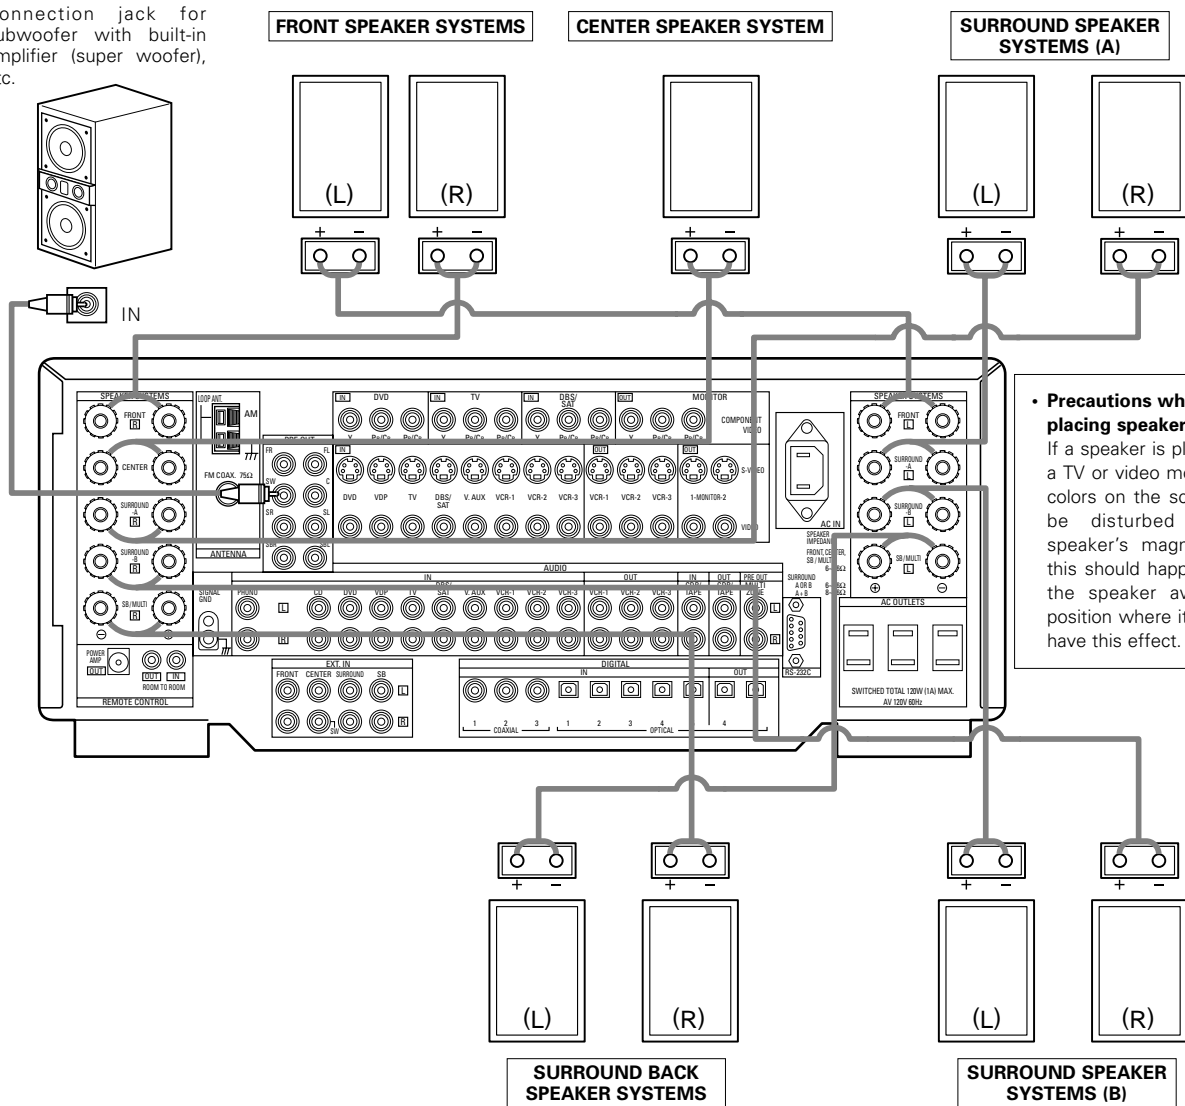


### NOTE:

When using only one surround back speaker, connect it to left channel.

## 6 PART NAMES AND FUNCTIONS

### Front Panel


- For details on the functions of these parts, refer to the pages given in parentheses ( ).

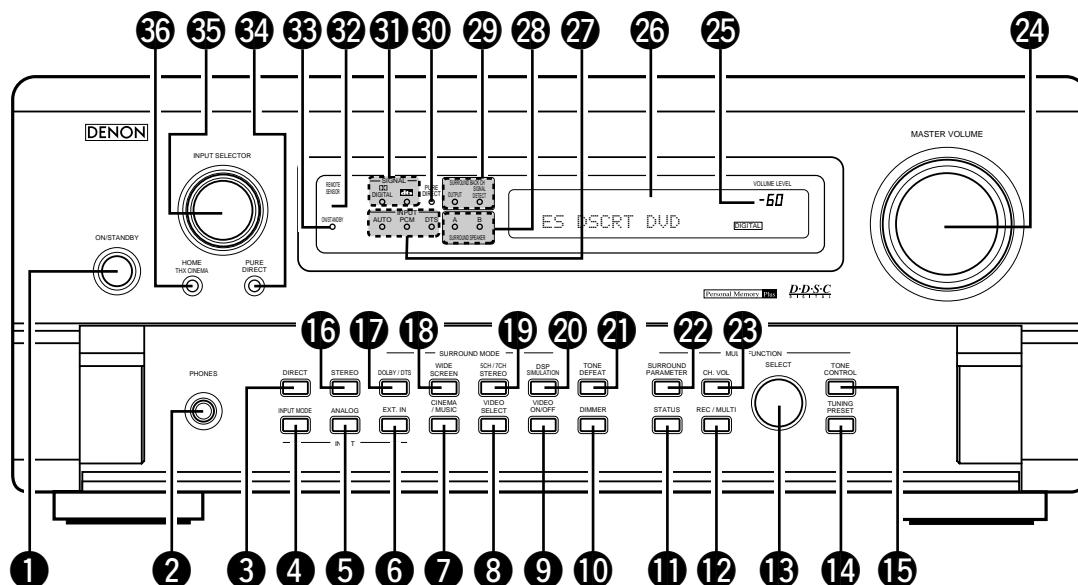

- |  |  |
|--|--|
| 1 Power ON/STANDBY switch .....(18, 46)                    | 19 5CH/7CH STEREO button .....(69)                                       |
| 2 Headphones jack (PHONES).....(51)                        | 20 DSP SIMULATION button .....(69)                                       |
| 3 DIRECT button .....(50, 52, 75)                          | 21 TONE DEFEAT button .....(50)  |
| 4 INPUT MODE selector button .....(47, 49, 52, 59, 62, 67) | 22 SURROUND PARAMETER button.....(59)                                    |
| 5 ANALOG button .....(47, 49)                              | 23 Channel Volume button (CH VOL) .....(56)                              |
| 6 EXT. IN button .....(47, 49)                             | 24 MASTER VOLUME control.....(48)  |
| 7 CINEMA/MUSIC button.....(64)                             | 25 Master volume indicator (VOLUME LEVEL) .....(48)                      |
| 8 VIDEO SELECT button .....(51)                            | 26 Display   |
| 9 VIDEO ON/OFF button .....(50)                            | 27 Input mode indicators (INPUT MODE) .....(48)                          |
| 10 DIMMER button .....(51)                                 | 28 Surround speaker system indicators<br>(SURROUND SPEAKER A/B).....(51) |
| 11 STATUS button .....(51)                                 | 29 Surround back ch indicators .....(61)                                 |
| 12 REC/MULTI button.....(52, 53)                           | 30 PURE DIRECT indicator .....(49)                                       |
| 13 SELECTOR dial<br>(SELECTOR) .....(50, 52, 56, 59, 74)   | 31 Digital signal indicators (SIGNAL) .....(48)                          |
| 14 TUNING PRESET button.....(74)                           | 32 Remote control sensor (REMOTE SENSOR) .....(33)                       |
| 15 TONE CONTROL button.....(50)                            | 33 Power indicator.....(46)  |
| 16 STEREO button .....(50, 52, 75)                         | 34 PURE DIRECT button .....(49)  |
| 17 DOLBY/DTS button.....(62)                               | 35 Input source selector dial<br>(INPUT SELECTOR) .....(47)              |
| 18 WIDE SCREEN button.....(69)                             | 36 HOME THX CINEMA button .....(59)                                      |


## Remote control unit

- For details on the functions of these parts, refer to the pages given in parentheses ( ).

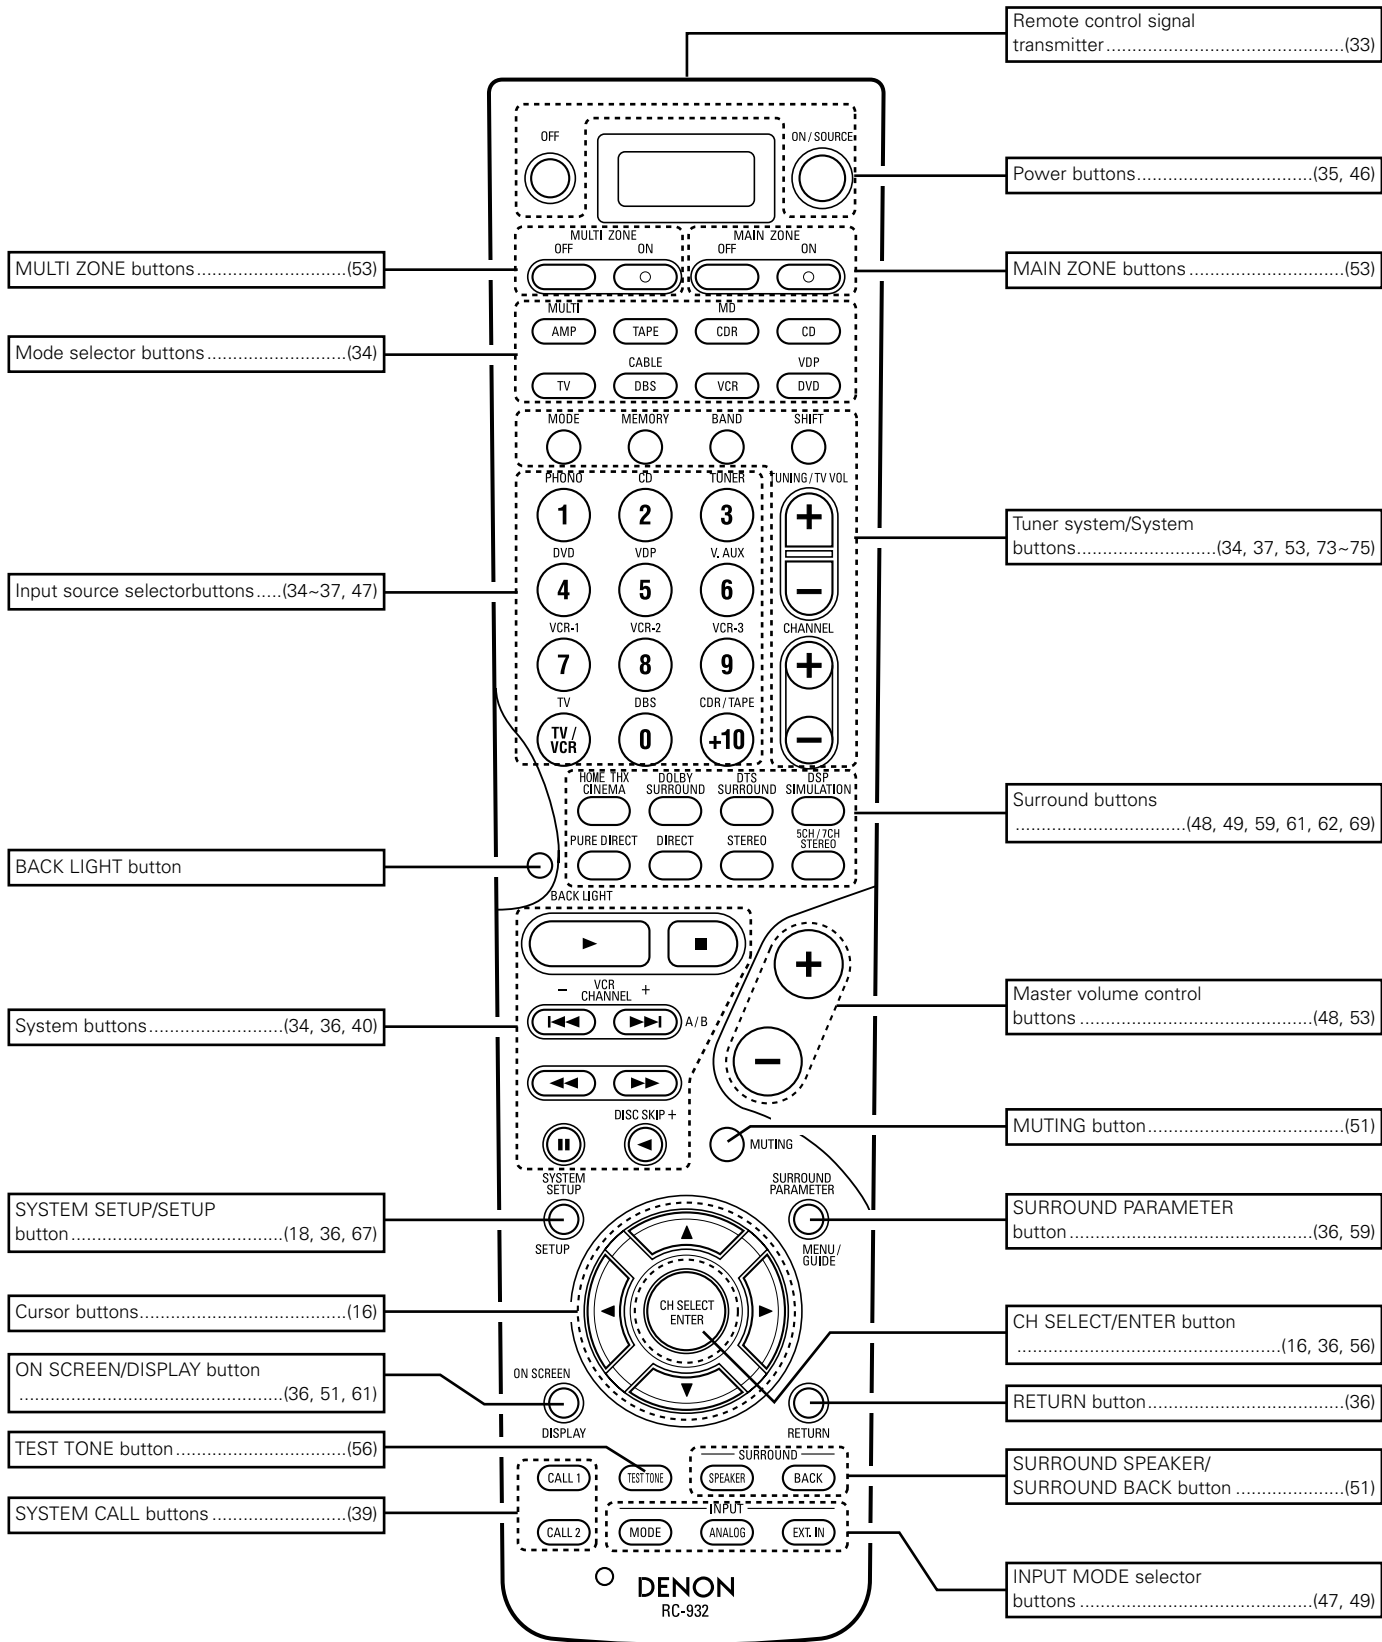

## 7 SETTING UP THE SYSTEM

- Once all connections with other AV components have been completed as described in "CONNECTIONS" (see pages 6 to 13), make the various settings described below on the monitor screen using the AVR-4802R's on-screen display function.  
These settings are required to set up the listening room's AV system centered around the AVR-4802R.
- Use the following buttons to set up the system:
- Check that the remote control unit is set to AMP mode.

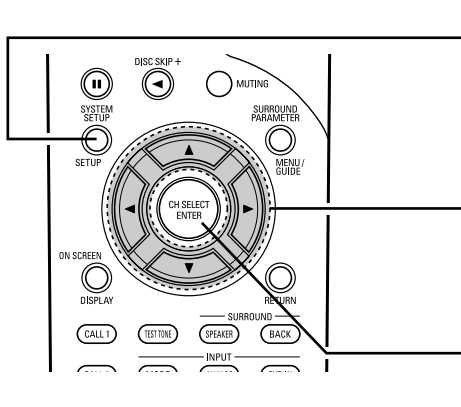

**SYSTEM SETUP button**  
Press this to display the system setup menu.

**CURSOR buttons**  
◀ and ▶: Use these to move the cursors (◀ and ▶) to the left and right on the screen.  
▲ and ▼: Use these to move the cursors (▲ and ▼) to the up and down on the screen.

**ENTER button**  
Press this to switch the display.  
Also use this button to complete the setting.

- System setup items and default values (set upon shipment from the factory)

System setup				Default settings											
①	Speaker Configuration	Input the combination of speakers in your system and their corresponding sizes (Small for regular speakers, Large for full-size, full-range) to automatically set the composition of the signals output from the speakers and the frequency response.		Front Sp.		Center Sp.		Subwoofer		Surround Sp.		Surround Back Sp.			
	Surround Speaker Setting	Use this function when using multiple surround speaker combinations for more ideal surround sound. Once the combinations of surround speakers to be used for the different surround modes are preset, the surround speakers are selected automatically according to the surround mode.	Surround mode	DOLBY/ DTS SURROUND	THX / THX 5.1	WIDE SCREEN	5CH/7CH STEREO	DSP SIMULATION	EXT. IN	—	—				
			Surround speaker	A	A	A	A	A	A	—	—				
	Crossover Frequency	Set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer.		FIXED —THX—											
	Subwoofer mode	This selects the subwoofer speaker for playing deep bass signals. (see page 20)		LFE —THX—											
	②	Delay Time	This parameter is for optimizing the timing with which the audio signals are produced from the speakers and subwoofer according to the listening position.		Front L & R		Center	Subwoofer	Surround L & R		SBL & SBR				
③	Channel Level	This adjusts the volume of the signals output from the speakers and subwoofer for the different channels in order to obtain optimum effects.		12 ft (3.6 m)		12 ft (3.6 m)	12 ft (3.6 m)	10 ft (3.0 m)		10 ft (3.0 m)					
				Front L	Front R	Center	Surround L	Surround R	Surround Back L	Surround Back R	Subwoofer				
④	THX Audio Setup	Boundary Gain compensation	When using a THX Ultra2 compatible subwoofer, set the subwoofer's frequency response.	THX Ultra2 Subwoofer = NO											
		Surround Back Speaker Position	When using two surround back speakers, set the distance of the two speakers.	The Distance Between SBL/SBR = 0 ft to 1 ft											
⑤	Subwoofer Peak Limit Lev	This parameter is for detecting the maximum level of the low bass signals output from the subwoofer channel in order to protect the subwoofer from damage and prevent unpleasant distorted sounds from being produced.		Peak Limiter = OFF											
⑥	Digital In Assignment	This assigns the digital input jacks for the different input sources.		Input source	CD	DVD	VDP	TV	DBS/SAT	VCR-1	VCR-2	VCR-3	TAPE	V. AUX	—
				Digital Inputs	COAXIAL 1	COAXIAL 2	COAXIAL 3	OPTICAL 1	OPTICAL 2	OPTICAL 3	OPTICAL 4	OFF	OPTICAL 5	OFF	—
⑦	Multi Zone Control	Power AMP Assignment	Set this to switch the surround back channel's power amplifier for use for multi-zone 2.	Surround Back											
		Multi Zone-1 vol. Level	This sets the output level for the multi-zone 1 output jacks.	Variable											
⑧	Audio Delay	Adjust the time delay of the video and audio signals. (see page 30)		Audio Delay = 0 ms											
⑨	On Screen Display	This sets whether or not to display the on-screen display that appears on the monitor screen when the controls on the remote control unit or main unit are operated (from MONITOR 1 outputs only).		On Screen Display = ON											
⑩	Auto Tuner Presets	FM stations are received automatically and stored in the memory.		A1 ~ A8	87.5/89.1/98.1/107.9/90.1/90.1/90.1 MHz										
				B1 ~B8	520/600/1000/1400/1500/1710 kHz/90.1/90.1 MHz										
				C1 ~C8	90.1 MHz										
				D1 ~D8	90.1 MHz										
				E1 ~E8	90.1 MHz										
⑪	Setup Lock	Set whether or not to lock the system setup settings so that they cannot be changed.		Setup Lock = OFF											




#### NOTES:

- The on-screen display signals are not output from the MONITOR OUT-2 output jack or the color difference (component) video signal (MONITOR OUT) jacks.
- The on-screen display signals are output with priority to the S-VIDEO MONITOR OUT jack during playback of a video component. For example, if the TV monitor is connected to both the AVR-4802R's S-Video and video monitor output jacks and signals are input to the AVR-4802R from a video source (VDP, etc.) connected to both the S-Video and video input jacks, the on-screen display signals are output with priority to the S-Video monitor output. If you wish to output the signals to the video monitor output jack, do not connect a cord to the S-VIDEO MONITOR OUT jack. (For details, see page 32.)
- The AVR-4802R's on-screen display function is designed for use with high resolution monitor TVs, so it may be difficult to read small characters on TVs with small screens or low resolutions.
- The setup menu is not displayed when headphones are being used.

#### • Speaker system layout

Basic system layout (For a THX Surround EX system)

- The following is an example of the basic layout for a system consisting of eight speaker systems and a television monitor:

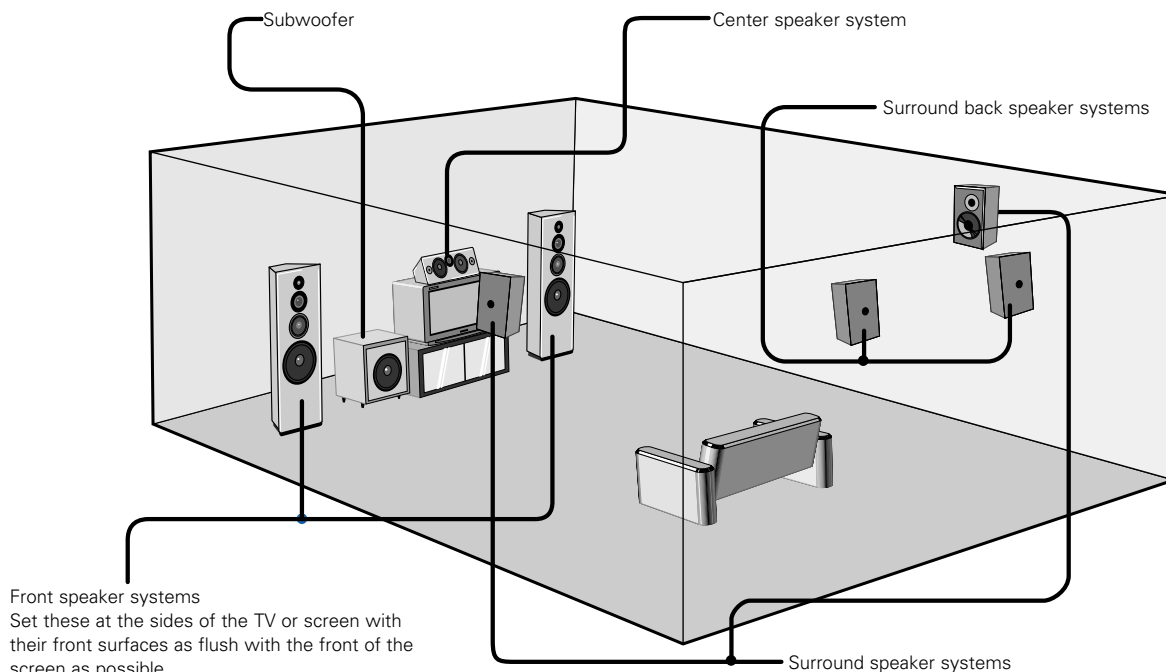


Two surround back speakers are required to use the THX Ultra2 Cinema and THX Music modes.

Set the surround back speakers so that the distance to the listening point is the same for both the left and right speakers. It is also recommended that the deviations of the distance from the listening position to L and R channel speakers (front left (FL) and front right (FR), surround left (SL) and surround right (SR), surround back left (SBL) and surround back right (SBR)) is less than 2 ft (60 cm).


With the AVR-4802R it is also possible to use the surround speaker selector function to choose the best layout for a variety of sources and surround modes.

#### • Surround speaker selector function

This function makes it possible to achieve the optimum sound fields for different sources by switching between two systems of surround speakers (A and B). The settings of the different speakers (A only, B only or A+B) are stored in the memory for the different surround modes, so they are set automatically when the surround mode is selected.

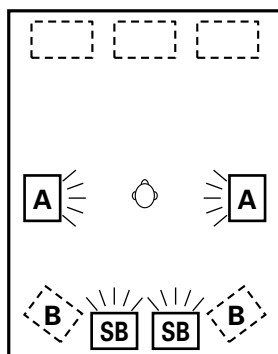


Using A only  
(Multi surround speaker system)

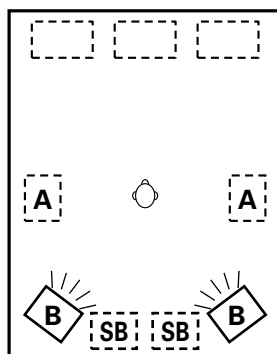

Using B only  
(Single surround speaker system)

(SB: Surround Back Speakers)

## Before setting up the system

- 1  Check that all the connections are correct, then turn on the main unit's power.


(Main unit)

- 2 Display the System Setup Menu.



### System Setup Menu


- Speaker Configuration
- Delay Time
- Channel Level
- THX Audio Setup
- Subwoofer Peak Limit Lev.
- Digital In Assignment

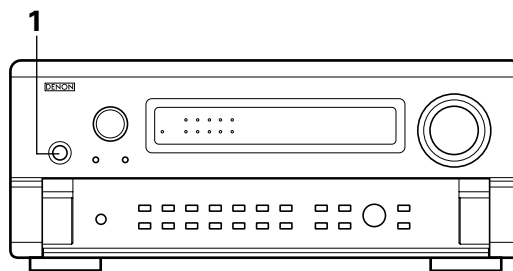

## Setting the type of speakers

- The composition of the signals output to the different channels and the frequency response are adjusted automatically according to the combination of speakers actually being used.

- 1 At the System Setup Menu select "Speaker Configuration".

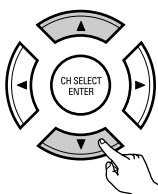

### System Setup Menu

- Speaker Configuration
- Delay Time
- Channel Level
- THX Audio Setup
- Subwoofer Peak Limit Lev.
- Digital In Assignment




- 2 Switch to the speaker configuration screen.



- 3 Set whether or not speakers are connected and, if so, their size parameters.

- To select the speaker

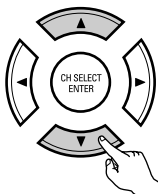



### Speaker Configuration

- Front Sp. Large Small
- Center Sp. Small None
- Subwoofer Yes No

### Speaker Configuration

- Surround Sp. A Small None
- Sp. B Small None
- Sp. Back Small None
- 2spkr 1spkr

- To select the parameter

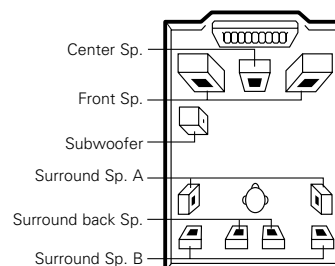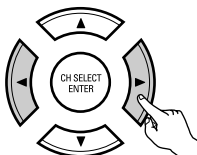

- 4 Enter the setting.



- If no surround speakers are used (if "None" is set for both A and B):  
The Crossover Frequency screen reappears.
- If both surround speakers A and B are used (if either "Large" or "Small" is set for both A and B):  
The surround speaker setting screen appears.
- When "Front" is set to "Large" and "Subwoofer" is set to "Yes", the subwoofer mode screen reappears.
- If "None" is set for surround speakers A:  
"None" is automatically set for surround speakers B and surround back speaker.

**NOTE:**

- Select “Large” or “Small” not according to the actual size of the speaker but according to the speaker’s capacity for playing low frequency (bass sound below frequency set for the Crossover Frequency mode and below) signals. If you do not know, try comparing the sound at both settings (setting the volume to a level low enough so as not to damage the speakers) to determine the proper setting.

- **Parameters**

Large .....Select this when using speakers that have sufficient performance for reproducing bass sound below the frequency set for the Crossover Frequency mode.

Small .....Select this when using speakers that do not have sufficient performance for reproducing bass sound below the frequency set for the Crossover Frequency mode. When this is set, bass sound with a frequency below the frequency set for the Crossover Frequency mode is sent to the subwoofer or main speakers selected “Large”.

None.....Select this when no speakers are installed.

Yes/No.....Select “Yes” when a subwoofer is installed, “No” when a subwoofer is not installed.


2spkr/1spkr.....Select the number of speakers to be used for the surround back channel.

- ※ If the subwoofer has sufficient low frequency playback capacity, good sound can be achieved even when “Small” is set for the front, center and surround speakers.
- ※ To take full advantage of the performance of the Home THX certified speaker systems, set the front, center and surround speaker size parameters to “Small” and the subwoofer to “Yes”.
- ※ For the majority of speaker system configurations, using the Small setting for all five main speakers and Subwoofer On with a connected subwoofer will yield the best results.
- ※ When “Front” is set to “Small”, “Subwoofer” is automatically set to “Yes”, and when “Subwoofer” is set to “No”, “Front” is automatically set to “Large”.

## Selecting the surround speakers for the different surround modes

- At this screen preset the surround speakers to be used in the different surround modes.


# 1

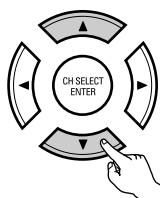

When either “Large” or “Small” has been set for both speakers A and B on the System Setup Menu (when using both A and B surround speakers), the surround speaker setting screen appears.

Select the surround speakers to be used in the different surround modes.

- To select the surround mode

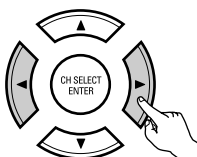

- To select the surround speaker

A: When using surround speakers A

B: When using surround speakers B

A+B: When using both surround speakers A and B

Surround	Sp	Setting
DOLBY/DTS SURROUND	A+B	A+B
THX/THX5.1	A B	A+B
WIDE SCREEN	A B	A+B
5/7CH STEREO	A B	A+B
DSP	A B	A+B
SIMULATION		
EXT. IN	A B	A+B

# 2



Enter the setting.

- When “Subwoofer” is set to “Yes” or “other speakers” is set to “Small”, the set switches to the Crossover Frequency mode.
- When “Front” is set to “Large” and “Subwoofer” is set to “Yes”, the set switches to the subwoofer mode. (See page 20.)

- ※ Speaker type setting when using both surround speakers A and B


If “Small” is set for either surround speakers A or B, the output is the same as when “Small” is set for both A and B.

- ※ For the “WIDE SCREEN” and “5/7CH STEREO” DSP simulation modes, the surround speakers can be set separately.


## Setting the Crossover Frequency

Set the crossover frequency mode according to the speaker system being used.



1

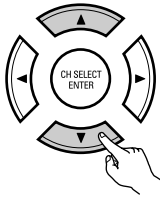

Select the Crossover Frequency mode.

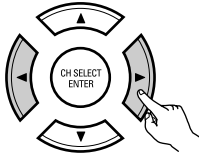

To select the Crossover Frequency.

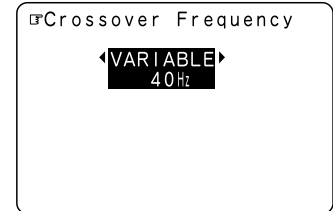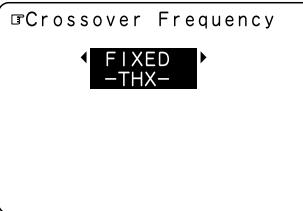

2



Enter the setting.  
The System Setup Menu reappears.

### Crossover frequency

- Set the frequency (Hz) below which the bass sound of each main speakers is to output from the subwoofer or from speakers which are set to "Large" (when not using a subwoofer) (crossover frequency).
- For speakers set to "Small", sound with a frequency below the crossover frequency is cut, and instead the cut bass sound is output from the subwoofer or speakers which are set to "Large".
- This crossover frequency mode is valid when "Subwoofer" is set to "Yes" at "Speaker Configuration Setting" or when speakers are set to "Small".

#### FIXED -THX-:

Set to the THX rated 80 Hz crossover frequency.

#### VARIABLE 40, 60, 80, 100, 120 Hz:

Set as desired according to your speakers' bass playback ability.

#### NOTES:


- The crossover frequency is set to 80 Hz in the HOME THX CINEMA mode.
- We recommend using with the crossover frequency set to "FIXED -THX-", but depending on the speaker, setting it to a different frequency may improve frequency response near the crossover frequency.

## Setting the Subwoofer mode



This setting is displayed when "Front" is set to "Large" and "Subwoofer" is set to "Yes".

1

Select the subwoofer mode.

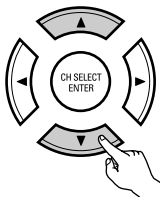

Select the setting.

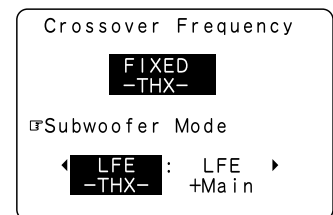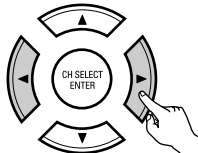

2



Enter the setting.  
The System Setup Menu reappears.

## NOTES:

### — Assignment of low frequency signal range —

- The only signals produced from the subwoofer channel are LFE signals (during playback of Dolby Digital or DTS signals) and the low frequency signal range of channels set to “Small” in the setup menu. The low frequency signal range of channels set to “Large” are produced from those channels.

### — Subwoofer mode —

- The subwoofer mode functions only when the input signal is Dolby Digital or a DTS digital signal.
- The subwoofer mode setting is only valid when “Large” is set for the front speakers and “Yes” is set for the subwoofer in the “Speaker Configuration” settings (see page 18).
- When the “LFE+Main” playback mode is selected, the low frequency signal range of channels set to “Large” are produced simultaneously from those channels and the subwoofer channel.  
In this playback mode, the low frequency range expand more uniformly through the room, but depending on the size and shape of the room, interference may result in a decrease of the actual volume of the low frequency range.
- Selection of the “LFE - THX” play mode will play the low frequency signal range of the channel selected with “Large” from that channel only. Therefore, the low frequency signal range that are played from the subwoofer channel are only the low frequency signal range of LFE (only during Dolby Digital or DTS signal playback) and the channel specified as “Small” in the setup menu. THX is recommended in this play mode so that bass interference is less likely to occur in the room.
- Select the play mode that provides bass reproduction with body.


## Setting the delay time

- Input the distance between the listening position and the different speakers to set the delay time for the surround mode.
- The delay time can be set separately for surround speakers A and B.
- Two surround back speakers are required to use the THX Ultra2 Cinema and THX Music modes.  
Set the surround back speakers so that the distance to the listening point is the same for both the left and right speakers.  
It is also recommended that the deviations of the distance from the listening position to L and R channel speakers (front left (FL) and front right (FR), surround left (SL) and surround right (SR), surround back left (SBL) and surround back right (SBR)) is less than 2 ft (60 cm).


### Preparations:

Measure the distances between the listening position and the speakers (L1 to L6 on the diagram at the right).


- L1: Distance between center speaker and listening position
- L2: Distance between front speakers and listening position
- L3: Distance between surround speakers and listening position
- L4: Distance between surround back speakers and listening position
- L5: Distance between subwoofer and listening position
- L6: Distance between surround back L and surround back R

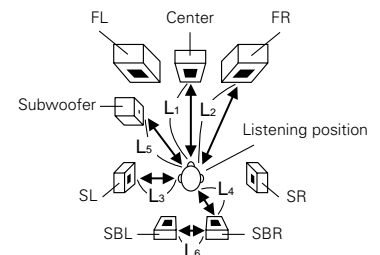

1

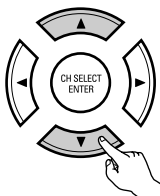


At the System Setup Menu select “Delay Time”.

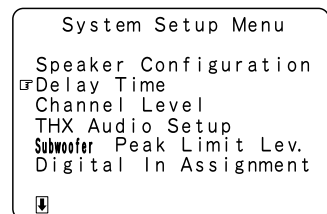


2



Switch to the Delay Time screen.

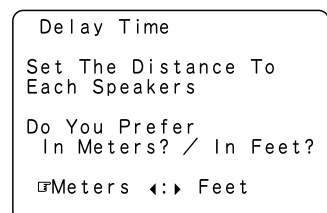

3

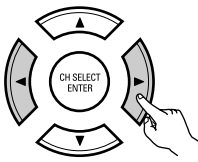

Select the desired unit, feet or meters.  
Select (darken) the desired units, "Feet" or "Meters".

Delay Time

Set The Distance To  
Each Speakers



Do You Prefer  
In Meters? / In Feet?

☐ Meters ☒ Feet


Example: When "Feet" is selected

4

Once "Feet" or "Meter" is selected in Step 3, the Delay Time screen appears automatically.

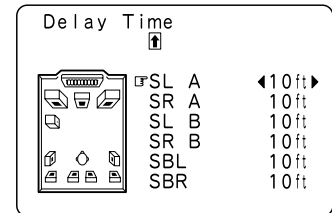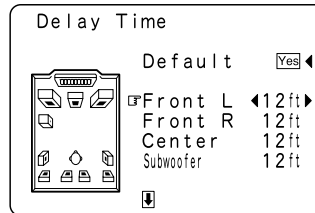


5

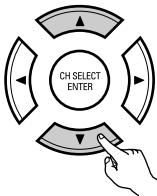



Select the speaker to be set.

6

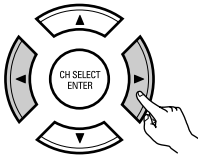

Set the distance between the center speaker and listening position.


The distance changes in units of 1 foot (0.1 meters) each time the button is pressed. Select the value closest to the measured distance.

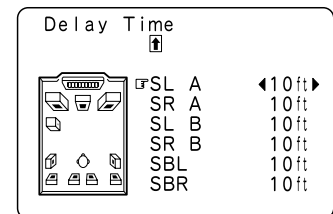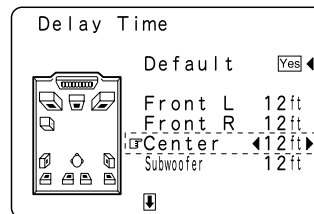

Example: When the distance is set to 12 feet for the center speaker

※ If "Yes" is selected for "Default", the settings are automatically reset to the default values.

Please note that the difference of distance for every speaker should be 20 ft (6.0 m) or less. If you set an invalid distance, a CAUTION notice, such as screen right will appear. In this case, please relocate the blinking speaker(s) so that its distance is no larger than the value shown in highlighted line.

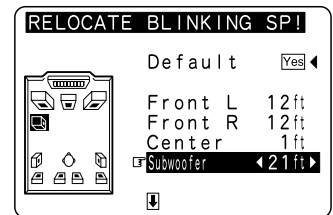

7




Enter the setting.  
The System Setup Menu reappears.  
The AVR-4802R automatically sets the optimum surround delay time for the listening room.

## Setting the channel level


- Use this setting to adjust so that the playback level between the different channels is equal.
- From the listening position, listen to the test tones produced from the speakers to adjust the level.
- The level can also be adjusted directly from the remote control unit. (For details, see page 56.)
- When using both surround speakers A and B, their playback levels can be adjusted separately.

- At the System Setup Menu select "Channel Level".

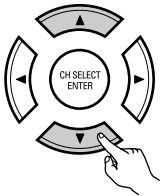


System Setup Menu


  - Speaker Configuration
  - Delay Time
  - Channel Level**
  - THX Audio Setup
  - Subwoofer Peak Limit Lev.
  - Digital In Assignment
- Switch to the Channel Level screen.



Channel Level

  - Test Tone **Auto** ◀ ▶ Manual
  - Surr. Sp. **A** ▶ B A+B
  - Test Tone Start **Yes** ◀
  - Level Clear **Yes** ◀
- Select "Test Tone Mode".

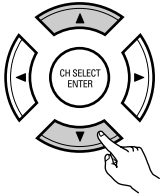
- Select the mode.  
Select "Auto" or "Manual".

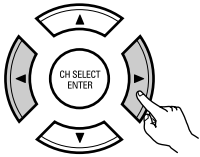  - Auto:  
Adjust the level while listening to the test tones produced automatically from the different speakers.
  - Manual:  
Select the speaker from which you want to produce the test tone to adjust the level.


Channel Level


  - Test Tone **Auto** ◀ ▶ Manual
  - Surr. Sp. **A** ▶ B A+B
  - Test Tone Start **Yes** ◀
  - Level Clear **Yes** ◀

Example: When the "Auto" mode is selected
- Select "Surr. Sp.", then select the surround speaker(s) from which you want to produce the test tone (A, B or A+B).

  - Surr. Sp.: A  
Adjusts the balance of the playback level between the channels when using surround speaker A.
  - Surr. Sp.: B  
Adjusts the balance of the playback level between the channels when using surround speaker B.
  - Surr. Sp.: A+B  
Adjusts the balance of the playback level between the channels when using surround speakers A and B at the same time.

※ The "Surr. Sp." can only be selected when both surround speakers A and B have been selected at the "Speaker Configuration" (when both A and B have been set to "Large" or "Small").

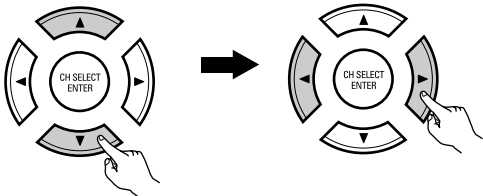

- Select "Test Tone Start".

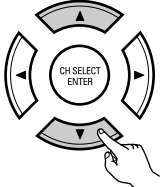

7




Select "Yes".

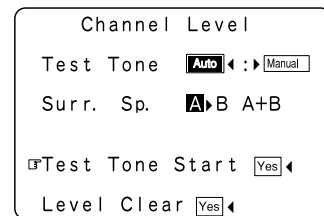


8

a. If the "Auto" mode is selected:


Test tones are automatically emitted from the different speakers. The test tones are emitted from the different speakers in the following order, at 4-second intervals the first time and second time around, 2-second intervals the third time around and on:



Flashing


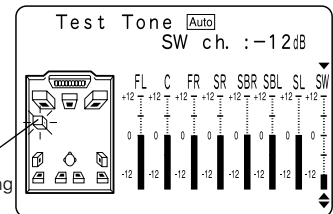


Example: When the volume is set to -12 dB while the test tone is being produced from the subwoofer

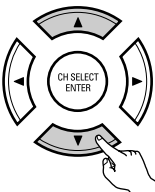

※ When the surround back speaker setting is set to "1spkr" for "Speaker Configuration", this is set to "SB".


Use the CURSOR up and down buttons to adjust all the speakers to the same volume. The volume can be adjusted between -12 dB and +12 dB in units of 1 dB.

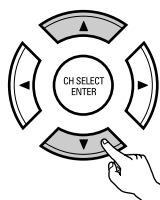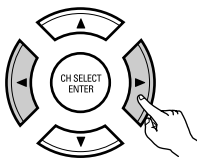

b. When the "Manual" mode is selected

Use the CURSOR left and right to select the speaker for which you want to output test tones, then use the CURSOR up and down to adjust so that the volume of the test tones from the various speakers is the same.

Flashing

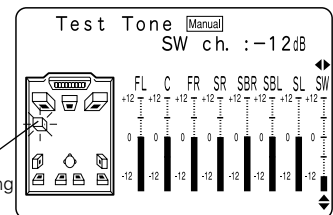

Example: When the volume is set to -12 dB while the subwoofer is selected

9



After the above settings are completed, press the ENTER button again. The "Channel Level" screen reappears.

※ To cancel the settings, select "Level Clear" and "Yes" on the "Channel Level" screen, then make the settings again.

The level of each channel should be adjusted to 75 dB (C-weighted, slow meter mode) on a sound level meter at the listening position.

If a sound level meter is not available adjust the channels by ear so the sound levels are the same. Because adjusting the subwoofer level test tone by ear is difficult, use a well known music selection and adjust for natural balance.

**NOTE:** When adjusting the level of an active subwoofer system, you may also need to adjust the subwoofer's own volume control.


- ※ When you adjust the channel levels while in the SYSTEM SETUP CHANNEL LEVEL mode, the channel level adjustments made will affect ALL surround modes. Consider this mode a Master Channel Level adjustment mode.
- ※ After you have completed the SYSTEM SETUP CHANNEL LEVEL adjustments, you can then activate the individual surround modes and adjust channel levels that will be remembered for each of those modes. Then, whenever you activate a particular surround sound mode, your preferred channel level adjustments for just that mode will be recalled. Check the instructions for adjusting channel levels within each surround mode on Page 56.
- ※ You can adjust the channel levels for each of the following surround modes: PURE DIRECT/DIRECT, STEREO, 5CH/7CH STEREO, DOLBY/DTS SURROUND, HOME THX CINEMA, WIDE SCREEN, SUPER STADIUM, ROCK ARENA, JAZZ CLUB, CLASSIC CONCERT, MONO MOVIE, and MATRIX.
- ※ When using either surround speakers A or B, or when using surround speakers A and B at the same time, be sure to adjust the balance of playback levels between each channel for the various selections of "A or B" and "A and B".




## Settings for using a THX Ultra2 compatible subwoofer

Make these settings when "Yes" is selected for the subwoofer in the Speaker Configuration settings.  
There is not displayed when "No" selected. (page 18)

1

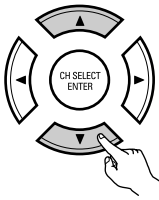

Select "THX Audio Setup" on the System Setup Menu screen.

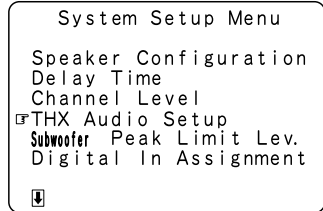


2




Press the ENTER button to switch to the THX Audio Setup screen.

3

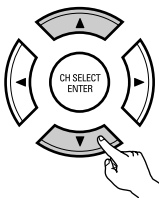




Select "Boundary Gain Compensation", then press the ENTER button.

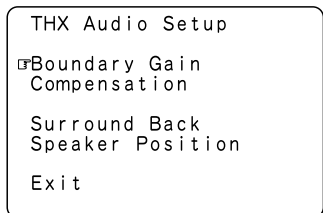


4



When using a THX Ultra2 compatible subwoofer or subwoofer that frequency response extends to 20 Hz, select "Yes". Otherwise select "No".

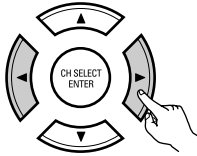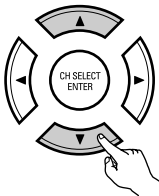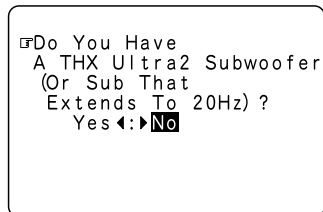

- When "Yes" is selected "Boundary Gain Compensation" can be selected and the compensation set to "OFF".
- If the bass sound seems too strong Set "Boundary Gain Compensation" to "ON". This activates a circuit that cuts the low frequencies of 55 Hz and under. Select "ON" or "OFF" according to how strong you like the bass sound to be.

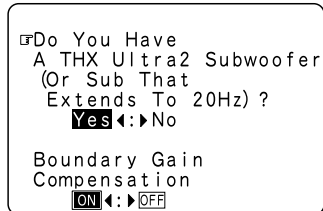

5




Press the ENTER button to return to the THX Audio Setup screen.

## Surround Back Speaker Position settings

- When two surround back speakers have been set in the Speaker Configuration settings (page 18), set the distance of the speakers. There is not displayed when "1spkr" selected.
- This setting is necessary to achieve the optimum effect in the THX Surround EX, THX Ultra2 Cinema and THX Music modes. It is recommended that SBL/SBR speakers are placed together as close as possible.

**1**

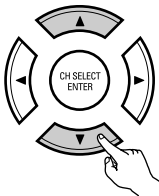

Select "Surround Back Speaker Position" on the THX Audio Setup screen, then press the ENTER button.

THX Audio Setup


Boundary Gain Compensation

☒ Surround Back Speaker Position

Exit

---

**2**

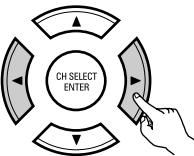


Select the settings according to the distances of the two surround back speakers. (page 21)

Set The Distance Between SBL/SBR

◀ 0ft to 1ft ▶  
(0m to 0.3m)

---


**3**

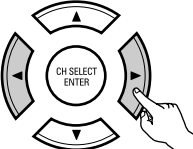

Press the ENTER button to return to the THX Audio Setup screen.

---

**4**

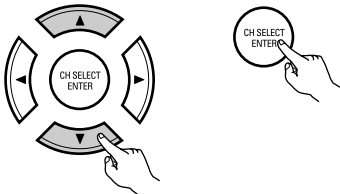

Select "Exit" then press the ENTER button to return to the System Setup Menu screen.

THX Audio Setup

Boundary Gain Compensation


Surround Back Speaker Position

☒ Exit

## Subwoofer peak limit level setting

- This unit features a subwoofer peak limit control which prevents distortion and damage in the loudspeaker system by controlling the maximum bass volume level. With this feature you may set the maximum bass level for the system.
- This feature operates with or without a subwoofer in the system.
- In case of THX Ultra2 compatible subwoofer setup, there is not displayed when "Yes" selected.

**1**

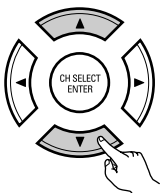

At the System Setup Menu select "Subwoofer Peak Limit Lev."

System Setup Menu

Speaker Configuration

Delay Time

Channel Level


THX Audio Setup

☒ Subwoofer Peak Limit Lev.

Digital In Assignment

---

**2**



Switch to the Subwoofer Peak Limit Level Setting screen.

Subwoofer Peak Limit Level Setting

Find The Level When Distortion Begins.


☒ Peak Limiter ON ◀ ▶ OFF

3




Select "ON" for Peak Limiter.


4

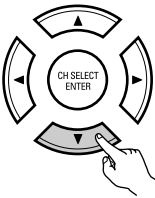


The screen switches. Select "Setting Start", then select "Yes".  
The screen switches and a test noise is produced from the speaker system.

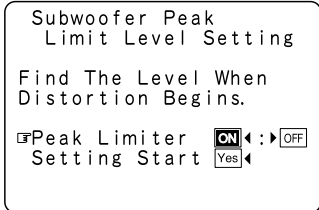

5



Increase the master volume level until the test noise is distorted.  
The test noise (bass sound) is distorted when it sounds as if the input is excessively high (when the sound crackles).

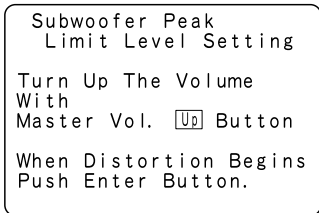

6



Press the ENTER button at the point where the test noise starts sounding distorted.  
The AVR-4802R automatically sets the subwoofer peak limit level.  
This prevents future inadvertent subwoofer overload due to excessively strong bass content when the master volume control is at a high level.


※ To cancel the setting, use the cursor buttons on the "Subwoofer Peak Limit Level Setting" screen after step 2 to select "OFF" for "Peak Limiter".

#### CAUTION!

- The master volume is set to "-30 dB" when test tones are output.
- The test tones are for confirming the low frequency playback limits and are played at an extremely high level. When using a low output subwoofer, be very careful about irregular operations exceeding clipping by for example turning down the subwoofer's attenuator before starting then slowly turning the attenuator up to the listening level.
- Also, when the subwoofer is set to "No" in the speaker configuration, the test tones are output from the front speakers. When using front speakers with low input resistance, check that the sound is not clipped at sections where the signal is strong on the CD music source before starting the peak limit setting. The peak limit setting should not be performed if the music source cannot be played with the master volume set at "-15". Set the front speakers to "Small" and the subwoofer to "Yes" in the speaker configuration. When this is done, the low frequencies are cut, so the effect is insufficient. We strongly recommend adding a subwoofer.
- If the test tone is clipped when it is set to "-18 dB", set the peak limit to "-18 dB". In this case, the input resistance of the subwoofer or front speakers is insufficient so clipping may occur when playing music. We recommend switching to a subwoofer with a higher input resistance.


## Setting the Digital In Assignment

- This setting assigns the digital input jacks of the AVR-4802R for the different input sources.

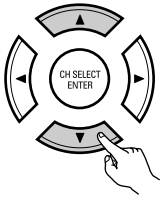- 



At the System Setup Menu select "Digital In Assignment".

System Setup Menu

  - Speaker Configuration
  - Delay Time
  - Channel Level
  - THX Audio Setup
  - Subwoofer Peak Limit Lev.
  - Digital In Assignment**
- 

Switch to the Digital In Assignment screen.


Digital In Assignment

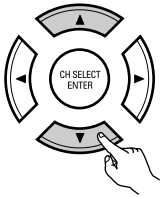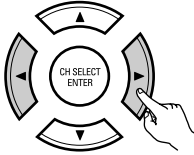CD: <COAX1>	TAPE: OPT5
DVD: COAX2	V.AUX: OFF
VDP: COAX3	
TV: OPT1	
DBS: OPT2	
VCR-1: OPT3	Default Yes
VCR-2: OPT4	
VCR-3: OFF	
- 


Select the digital input jack to be assigned to the input source.

  - To select the input source
  - To select the digital input jack

Select "OFF" for input sources for which no digital input jacks are used.

※ If "Yes" is selected for "Default", the settings are automatically reset to the default values.
- 

Enter the setting.  
The System Setup Menu reappears.

### NOTES:

- The OPTICAL 4 and 5 jacks on the AVR-4802R's rear panel are equipped with an optical digital output jack for recording digital signals on a DAT deck, MD recorder or other digital recorder. Use this for digital recording between a digital audio source (stereo - 2 channel) and a digital audio recorder.
- Do not connect the output of the component connected to the OPTICAL 4 OUT jack on the AVR-4802R's rear panel to any jack other than the OPTICAL 4 IN jack.
- Do not connect the output of the component connected to the OPTICAL 5 OUT jack on the AVR-4802R's rear panel to any jack other than the OPTICAL 5 IN jack.
- "PHONO" and "TUNER" cannot be selected on the Digital In Assignment screen.

## Setting the Multi Zone Control


Multi-zone is a pre-output with an output level adjustment function.

Using the power amplifier assignment function described below, it is also possible to connect speakers to the SB/MULTI speaker terminals.

### [1] Power amplifier assignment function setting

Make this setting to switch the power amplifier for the surround back channel to Multi-zone.


- 1

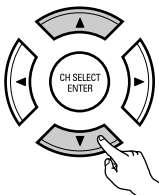

At the System Setup Menu, select "Multi Zone Control".

System Setup Menu


  - Multi Zone Control
  - On Screen Display
  - Auto Tuner Presets
  - Setup Lock
- 2



Press the "ENTER" button to switch to the "Multi Zone Control" screen.


Multi Zone Control

  - Power Amp Assignment
  - Multi Zone Vol. Level
  - Exit
- 3

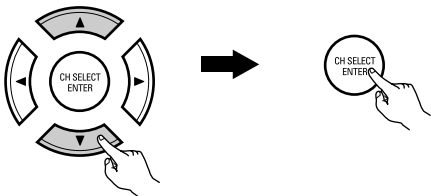


Select "Power Amp Assignment" then press the "ENTER" button.
- 4

Select "Surround Back" to use as the surround back channel, "Multi" to use as multi-zone, then press the "ENTER" button.

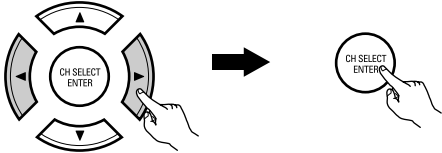


Power Amp Assignment

◀ SurroundBack : Multi ▶



Power Amp Assignment

◀ SurroundBack : Multi ▶

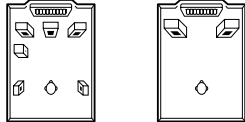


When "Surround Back" is selected

When "Multi" is selected

### [2] Setting the multi-zone level

- 1

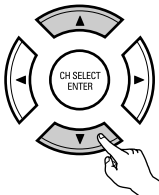

At the System Setup Menu, select "Multi Zone Control".

System Setup Menu

  - Multi Zone Control
  - On Screen Display
  - Auto Tuner Presets
  - Setup Lock

2




Press the "ENTER" button to switch to the "Multi Zone Control" screen.

**NOTE:** The multi zone volume level is not displayed when "Multi" is selected at the "Power Amp Assignment" setting.


Multi Zone Control  
Power Amp Assignment  
Multi Zone Vol. Level  
Exit

3

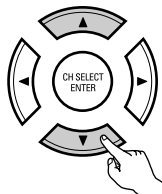

Select "Multi Zone Vol. Level" then press the "ENTER" button.

4

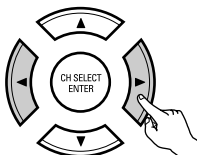

Select the desired setting, then press the "ENTER" button.

Multi Zone Vol. Level  
  
Variable ▶ -40dB 0dB

**Variable:**

The level can be adjusted freely using the buttons on the remote control unit.

**-40 dB, 0 dB:**

The output level is fixed at the set level and the volume can no longer be adjusted.


## Adjusting the audio delay

This function allows you to adjust the time delay of the video and audio signals and store these settings for the different input sources. The setting is made while watching a DVD or other software, so it is not made here. By default, this is not displayed when no digital signals are being input. For instructions on making the setting, refer to page 67.

## Setting the on-screen display (OSD)

- Use this to turn the on-screen display (messages other than the menu screens) on or off.

1

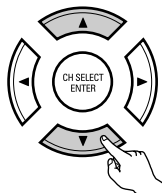

At the System Setup Menu select "On Screen Display".

System Setup Menu  
Multi Zone Control  
On Screen Display  
Auto Tuner Presets  
Setup Lock


2



Switch to the On Screen Display screen.

On Screen Display

ON : OFF

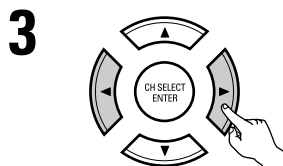

Select "ON" or "OFF".




Enter the setting.  
The System Setup Menu reappears.

## Auto tuner presets

Use this to automatically search for FM broadcasts and store up to 40 stations at preset channels A1 to 8, B1 to 8, C1 to 8, D1 to 8 and E1 to 8.

### NOTES:

- If an FM station cannot be preset automatically due to poor reception, use the "Manual tuning" operation to tune in the station, then preset it using the manual "Preset memory" operation.

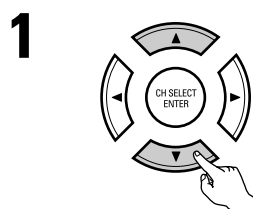


At the System Setup Menu select "Auto Tuner Presets".

System Setup Menu  
☐ Multi Zone Control  
☐ On Screen Display  
☒ Auto Tuner Presets  
☐ Setup Lock



Switch to the Auto Preset Memory screen.


Auto Preset Memory  
 Auto Tuning &  
 Preset Station Memory  
 Storing Preset Memory  
☒ Start ☐ Yes ☐ Search

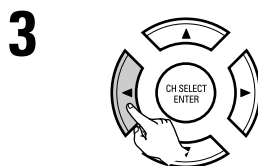

Select "Yes" for Start.  
 "Search" flashes on the screen and searching begins.  
 "Completed" appears once searching is completed.  
 The display automatically switches to System Setup Menu screen.

## Protecting the settings

The system setup settings can be locked so that they cannot be changed easily.

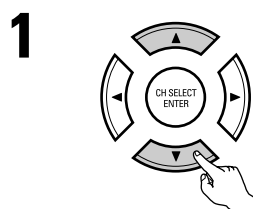

Select "Setup Lock" on the System Setup Menu screen.

System Setup Menu  
☐ Multi Zone Control  
☐ On Screen Display  
☐ Auto Tuner Presets  
☒ Setup Lock

2



Press the ENTER button to switch to the Setup Lock screen.

3



Select "ON", to lock the system setup settings.



4



Press the ENTER button to finalize the setting and exit the system setup mode.

When the setup lock function is activated, the settings listed below cannot be changed, and "Setup Locked" is displayed when related buttons are operated.

- System setup settings
- Surround parameter settings
- Tone control settings
- Channel level settings (including test tones)


To unlock, press the System Setup button again and display the Setup Lock screen, then select "OFF" and press the ENTER button.

※ **System setup is complete. Once these settings are made, there is no need to change them unless different AV components are connected or the speakers are repositioned.**

## After completing system setup

This button can be pressed at any time during the system setup process to complete the process.

1



At the System Setup Menu, press the SYSTEM SETUP button.

※ The changed settings are entered and the on-screen display turns off.

### • On-screen display signals

	Signals input to the AVR-4802R		On-screen display signal output	
	VIDEO signal input jack (yellow)	S-video signal input jack	VIDEO MONITOR OUT-1 video signal output jack (yellow)	S-video MONITOR OUT-1 video signal output jack
1	×	×	○	○
2	○	×	○	×
3	×	○	×	○
4	○	○	×	○

(○: Signal    ×: No signal)

(○: On-screen signals output    ×: On-screen signals not output)

#### NOTES:

- The on-screen display signals are not output from the video signal MONITOR OUT-2 (yellow) or S-Video signal MONITOR OUT-2 jacks.
- The on-screen display signals are not output from the color difference (component) video signal MONITOR OUT jacks.
- For 4 above, the on-screen display signals are output to the VIDEO MONITOR OUT-1 video signal output jack (yellow) if the monitor TV is not connected to the S-video MONITOR OUT-1 video signal output jack.




## 8 REMOTE CONTROL UNIT


- The included remote control unit (RC-932) can be used to operate not only the AVR-4802R but other remote control compatible DENON components as well. In addition, the memory contains the control signals for other remote control units, so it can be used to operate non-Denon remote control compatible products.

### Inserting the batteries


- Remove the remote control unit's rear cover.

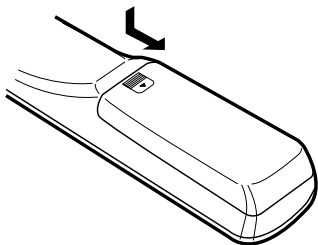

- Set three R6P/AA batteries in the battery compartment in the indicated direction.

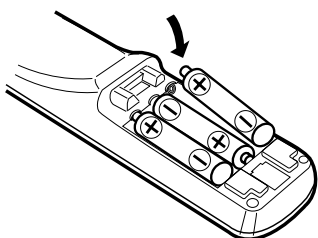


- Put the rear cover back on.

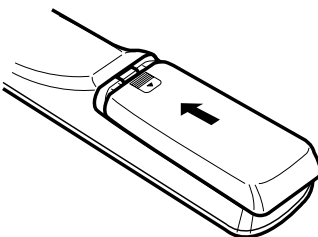

#### Notes on Batteries

- Use R6P/AA batteries in the remote control unit.
- The batteries should be replaced with new ones approximately once a year, though this depends on the frequency of usage.
- Even if less than a year has passed, replace the batteries with new ones if the set does not operate even when the remote control unit is operated nearby the set. (The included battery is only for verifying operation. Replace it with a new battery as soon as possible.)
- When inserting the batteries, be sure to do so in the proper direction, following the “+” and “-” marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
  - Do not use a new battery together with an old one.
  - Do not use two different types of batteries.
  - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries from the remote control unit when you do not plan to use it for an extended period of time.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

### Using the remote control unit

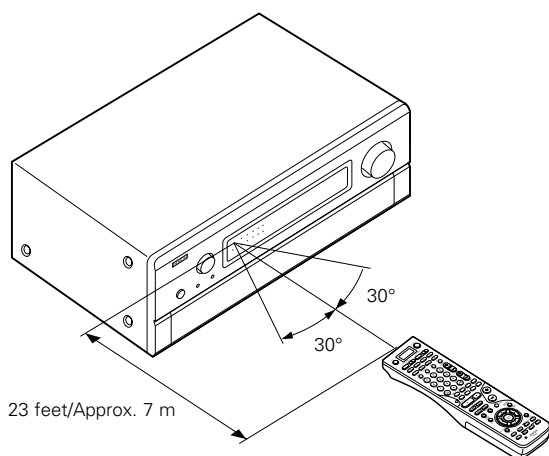

- Point the remote control unit at the remote sensor on the main unit as shown on the diagram.
- The remote control unit can be used from a straight distance of approximately 23 feet / 7 meters from the main unit, but this distance will be shorter if there are obstacles in the way or if the remote control unit is not pointed directly at the remote sensor.
- The remote control unit can be operated at a horizontal angle of up to 30 degrees with respect to the remote sensor.

#### NOTES:

- It may be difficult to operate the remote control unit if the remote sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and remote control unit simultaneously. Doing so may result in malfunction.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

## Operating DENON audio components


**1** Use the mode selector buttons to select the component you want to operate.

※ The function switches as shown below each time one of the mode buttons is pressed.


AMP/MULTI : AMP, MULTI ZONE  
 CDR/MD : CDR, MD  
 DBS/CABLE : DBS, CABLE  
 VCR : VCR1, VCR2  
 DVD/VDP : DVD, VDP

**2** Operate the audio component.

- For details, refer to the component's operating instructions.
- ※ It may not be possible to operate some models.

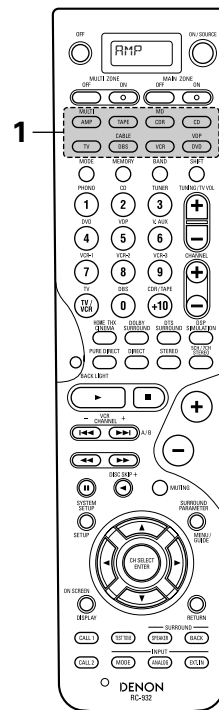


### 1. CD player (CD) system buttons

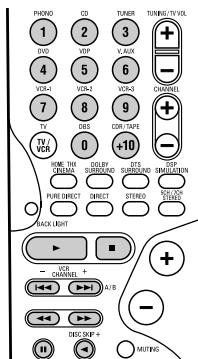


◀◀, ▶▶ : Manual search (forward and reverse)  
 ■ : Stop  
 ▶ : Play  
 ◀◀◀, ▶▶▶ : Auto search (to beginning of track)  
 || : Pause  
 DISC SKIP +: (for CD changers only)  
 0~9, +10 : 10 key

### 2. Tape deck (TAPE) system buttons

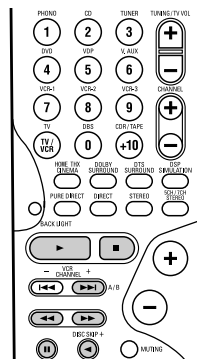


◀◀ : Rewind  
 ▶▶ : Fast forward  
 ■ : Stop  
 ▶ : Forward play  
 || : Pause  
 ◀ : Reverse play  
 A/B : Switch between sides A and B

### 3. MD recorder (MD), CD recorder (CDR) system buttons

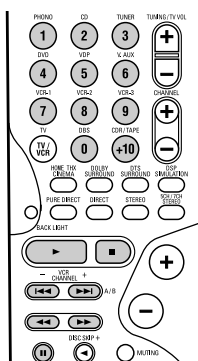

◀◀, ▶▶ : Manual search (forward and reverse)  
 ■ : Stop  
 ▶ : Play  
 ◀◀◀, ▶▶▶ : Auto search (to beginning of track)  
 || : Pause  
 0~9, +10 : 10 key

### 4. Tuner system buttons

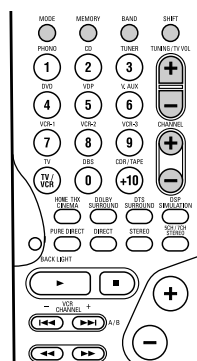

TUNING +, - : Tuning up/down  
 BAND : Switch between AM and FM bands  
 MODE : Switch between AUTO and MANUAL  
 MEMORY : Preset memory  
 SHIFT : Switch preset channel range  
 CHANNEL +, - : Preset channel up/down

※ The tuner can be operated in the amplifier (AMP, CD, CDR/MD, or TAPE) mode.

## Preset memory

The included remote control unit can be used to operate devices of different brands by registering the preset number corresponding to the brand of your device.

For some models the remote control unit or the device may not operate properly. In this case, use the learning function (page 38) to store your device's remote control signals in the included remote control unit.

For instructions on resetting the preset memory, see page 41.


- 1 Press the power ON/SOURCE button and the OFF button at the same time.

- "PRE" appears on the remote control unit's display.




- 2 Use the ▲ and ▼ cursor buttons to display "PRE" on the remote control unit, then press the ENTER button.

- ※ The remote control unit's display switches as follows each time the ▲ and ▼ cursor buttons are pressed.

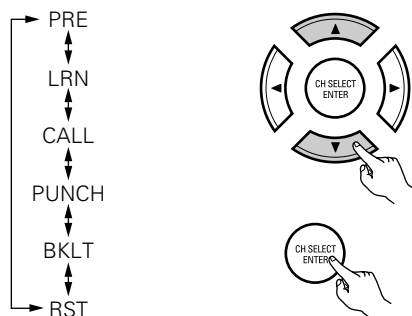


- 3 The "SEL" indicator flashes and the device selection mode is set.



Use the ▲ and ▼ cursor buttons to display the mode you want to preset, then press the ENTER button.

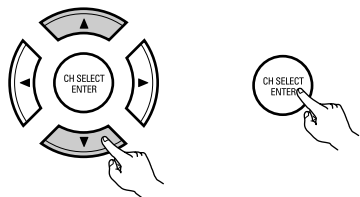

- ※ The display switches as shown below each time the ▲ and ▼ cursor buttons are pressed.



It is also possible to select the mode directly using the mode buttons.

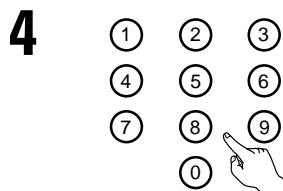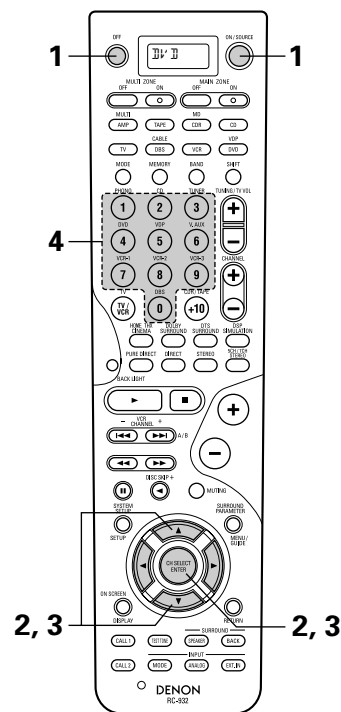

Referring to the included List of Preset Codes, use the number buttons to input the preset code (a 4-digit number) for the manufacturer of the component whose signals you want to store in the memory.

- 5 "OK" is displayed when the signals are registered and the mode is terminated.

- 6 To store the codes of another component in the memory, repeat steps 1 to 5.

### NOTES:


- Depending on the model and year of manufacture, this function cannot be used for some models, even if the your device is listed on the included list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and check it out.
- For the CDR/MD, DBS/CABLE, VCR1/VCR2 and DVD/VDP modes, the unused mode can be deleted.  
To delete an unused mode, select the mode to be deleted when registering the preset memory, input preset number "9999", then press the ENTER button.  
For example, when the MD mode is deleted, only the CDR mode is displayed when the CDR/MD button is pressed.  
This setting can be cancelled by resetting the preset memory or registering another preset signal.

The preset codes are as follows upon shipment from the factory and after resetting:

TV, VCR1 ..... HITACHI  
CD, MD, TAPE, CDR, VDP, DVD ..... DENON  
VCR2, DBS ..... SONY  
CABLE ..... ABC


## Operating a component stored in the preset memory

- 1 Press the mode selector button for the component you want to operate.



### NOTE:

- For the DVD player remote control buttons, function names may differ according to manufacturer. Compare with the remote control operation of the various components.

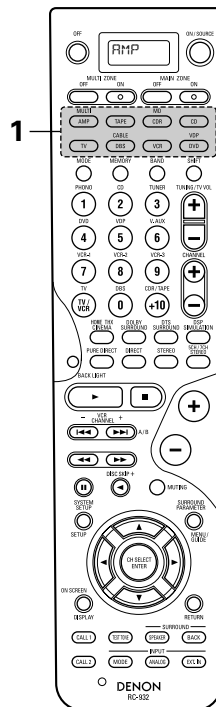


- 2 Operate the component.
  - For details, refer to the component's operating instructions.
  - ※ Some models cannot be operated with this remote control unit.

### 1. Digital video disc player (DVD, DVD SETUP) system buttons


- POWER : Power on/standby (ON/SOURCE)
- OFF : Power off
- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶▶ : Auto search (to beginning of track)
- ⏸ : Pause
- 0 ~ 9, +10 : 10 key
- DISC SKIP + : Disc skip (for DVD changer only)
- DISPLAY : Display
- MENU : Menu
- RETURN : Return
- SETUP : Setup
- ▲, ▼, ◀, ▶ : Cursor up, down, left and right
- ENTER : Enter

DVD preset codes	0000	0001
DENON Model No.	DVD-900 DVD-1000 DVD-1500 DVD-2800 DVD-2800II DVD-3800 DVD-9000 DVM-1800 DVM-4800	DVD-800 DVD-1600 DVD-2000 DVD-2500 DVD-3000 DVD-3300

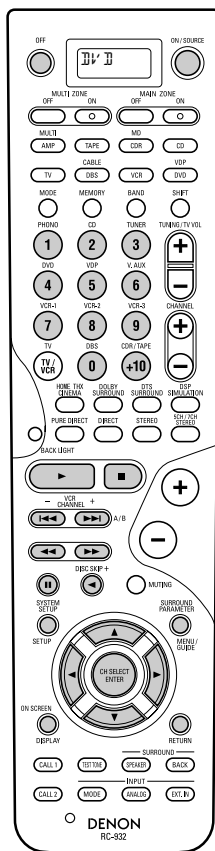


### 2. Video disc player (VDP) system buttons

- POWER : Power on/standby (ON/SOURCE)
- ◀▶▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶▶ : Auto search (cue)
- ⏸ : Pause
- 0 ~ 9, +10 : 10 key

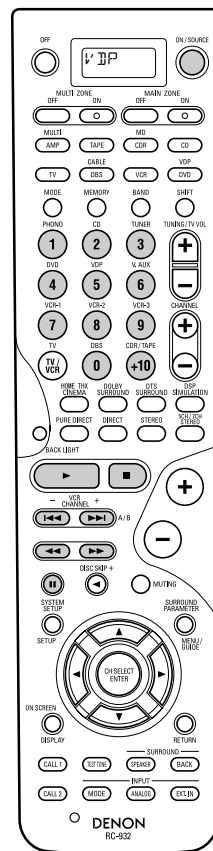


### 3. Video deck (VCR1/VCR2) system buttons

- POWER : Power on/standby  
(ON/SOURCE)
- ◀◀, ▶▶ : Manual search  
(forward and reverse)
- : Stop
- ▶ : Play
- ⏸ : Pause
- Channel +, - : Channels

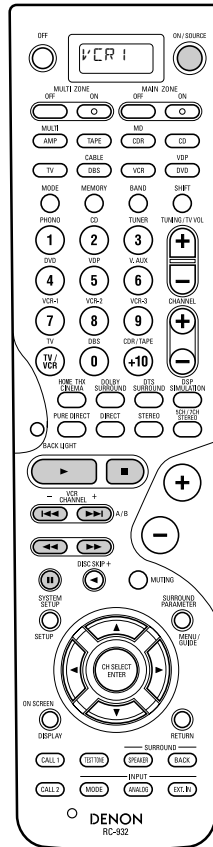

### 4. Monitor TV (TV), digital broadcast satellite (DBS) tuner and cable (CABLE) system buttons

- POWER : Power on/standby  
(ON/SOURCE)
- MENU : Menu
- ▲, ▼, ◀, ▶ : Cursor up, down, left and right
- ENTER : Enter
- CHANNEL : Switch channels
- +, - : Channels
- 0~9, +10 : Channels
- TV/VCR : Switch between TV and video player
- TV VOL +, - : Volume up/down
- DISPLAY : Switch display
- RETURN : Return

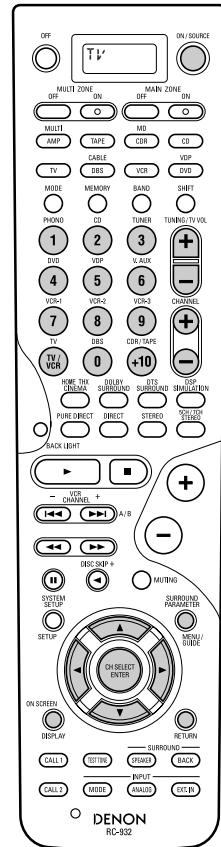

## Learning function

If your AV component is not a Denon product or if it cannot be operated using the preset memory, it can be controlled with the accessorial remote control unit by storing its remote control signals in the remote control unit.

For some remote control signals it is not possible to "learn" the signals or the device will not operate properly. In such cases use the remote control unit included with the device to operate it.


- 1** Press the power ON/SOURCE button and the OFF button simultaneously.

- "PRE" appears on the remote control unit's display.




- 2** Use the ▲ and ▼ cursor buttons to display "LRN" on the remote control unit's display, then press the ENTER button.

- "SEL" is displayed.

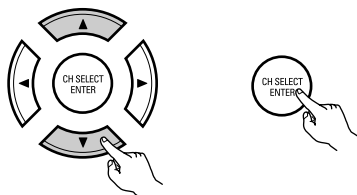

- 3** Use the ▲ and ▼ cursor buttons to select the mode for the button to be "learned", then press the ENTER button.

- "KEY" is displayed.


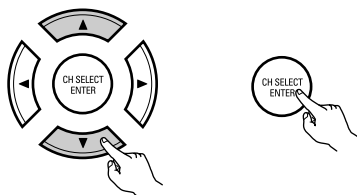


- 4** Press the button to be "learned" while "KEY" is displayed. "START" appears.

- "AGAIN" is displayed if a button that cannot be "learned" is pressed.
- To cancel, press the power ON/SOURCE button and the OFF button simultaneously.



- 5** Point the remote control units directly at each other and press and hold in the button on the other remote control unit which you want to "learn".

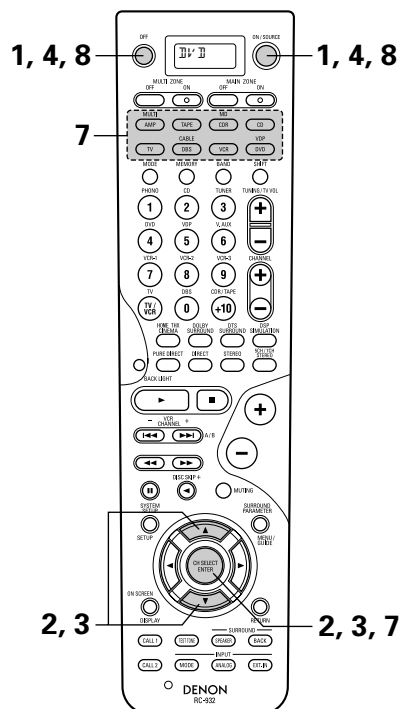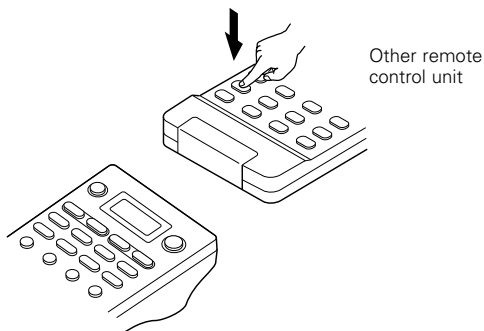


- 6** "OK" appears on the remote control unit's display and learning is completed.

- "KEY" is displayed. Other keys can be "learned" by repeating steps 4 to 6.

- 7** The mode can be switched by pressing a mode button while the "KEY" indicator is lit.

When the "ENTER" button is pressed, the "KEY" display reappears and the learning standby mode is set.



- 8** To cancel the learning mode, press the power ON/SOURCE button and the OFF button simultaneously again.

Registering is not possible in the receiver mode.




## System call

The accessorious remote control unit is equipped with "system call" function allowing a series of remote control signals to be transmitted by pressing a single button.

This function can be used for example to turn on the receiver's power, select the input source, turn on the monitor TV's power, turn on the source component's power and set the source to the play mode, all at a signal button.

### (1) System call buttons

Up to 10 signals each can be stored at the "CALL1" and "CALL2" buttons.

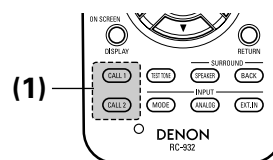

### (2) Storing system call signals


**1** Press the power ON/SOURCE button and the OFF button at the same time.

- "PRE" appears on the remote control unit's display.




**2** Use the ▲ and ▼ cursor buttons to display "CALL" on the remote control unit, then press the ENTER button.

- Display "SEL" on the remote control unit's display.

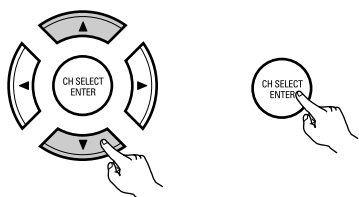


**3** Use the ▲ and ▼ cursor buttons to display the name of the device you want to register at the system call button, then press the ENTER button.

- Display "KEY" on the remote control unit's display.

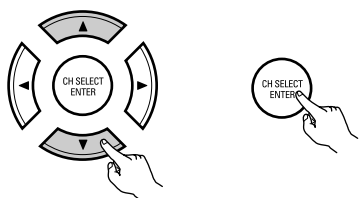


※ The display switches as shown below each time the ▲ and ▼ cursor buttons are pressed.



It is also possible to select the mode directly using the mode buttons.


**4** Press the button you want to register. "SET" is displayed and the button is registered.

- Once the button is registered, the "KEY" indicator reappears and the next button can be registered.

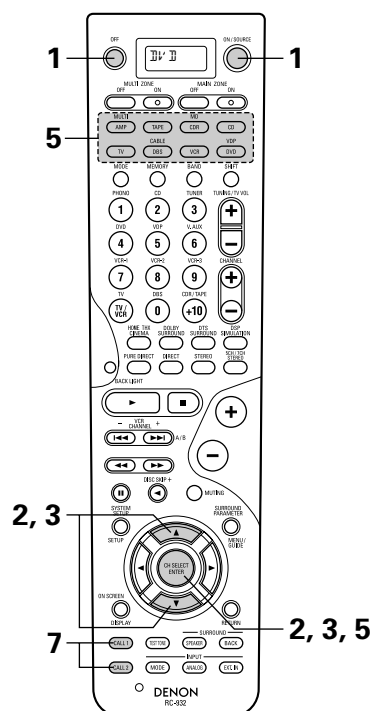

**5** The mode can be switched by pressing a mode button while the "KEY" indicator is lit.

Press the ENTER button to turn the "KEY" indicator back on, setting the registration standby mode.



**6** Repeat steps 4 and 5 to register the desired buttons. When settings are stored at all 10 keys, "FULL" is displayed and no more settings can be stored.

**7** Press the "CALL1" or "CALL2" button while the "KEY" or "FULL" indicator is lit to register the signals at the system call button.

- "OK" is displayed and the set returns to the normal operating mode.

**NOTE:**

- If you exceed the number of signals that can be registered, "FULL" appears on the remote control unit's display and only the number of signals that can be registered are registered (up to 10 operations).

**(3) Using the system call function****1**

- Press the button at which the system call signals have been stored.
- The stored signals are transmitted successively.

**Punch Through****(1) Punch through button**

Buttons used in the CD, CDR, MD, TAPE, DVD, VDP, VCR1 and VCR2 modes can be assigned to the buttons shown on the diagram at the right which are not normally used in the AMP, TV, DBS and CABLE modes.


For example, when the CD mode is set to the punch through mode in the AMP mode, the CD mode's PLAY, STOP, MANUAL SEARCH, AUTO SEARCH, PAUSE and DISC SKIP buttons' signals are sent in the AMP mode.

**(2) Making the punch through setting****1**


- Press the power ON/SOURCE button and the OFF button at the same time.
- "PRE" appears on the remote control unit's display.

**2**


- Use the ▲ and ▼ cursor buttons to display "PUNCH" on the remote control unit, then press the ENTER button.
- "SEL" appears on the remote control unit's display.

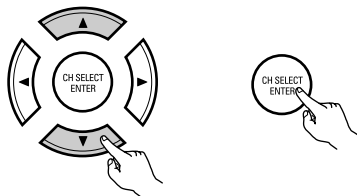**3**


- Use the ▲ and ▼ cursor buttons to display the mode for which you want to make the punch through setting, then press the ENTER button.
- "SEL" appears on the remote control unit's display.

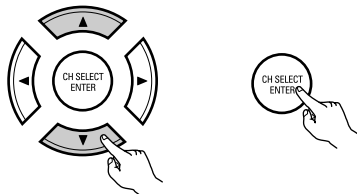


- ※ The display switches as shown below each time the ▲ and ▼ cursor buttons are pressed.




It is also possible to select the mode directly using the mode buttons.

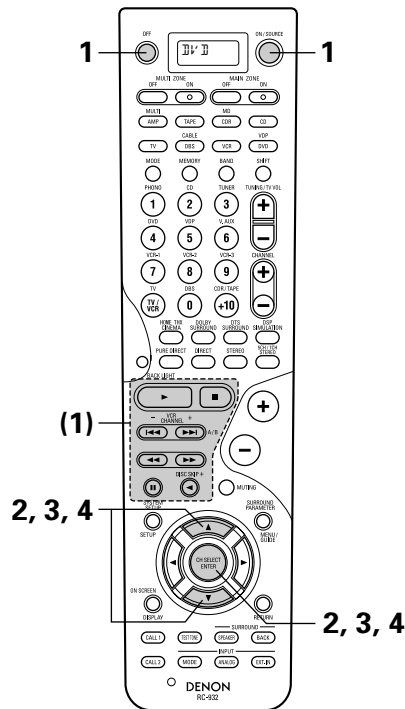**4**

- Use the ▲ and ▼ cursor buttons to display the mode you want to punch through, then press the ENTER button.
- "OK" is displayed and the punch through is set.

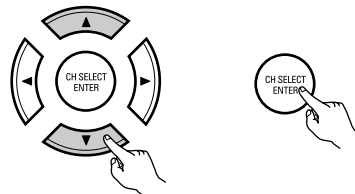

- ※ The display switches as shown below each time the ▲ and ▼ cursor buttons are pressed.



It is also possible to select the mode directly using the mode buttons.



## Setting the back light's lighting time


- 1 Press the power ON/SOURCE button and the OFF button at the same time.

- "PRE" appears on the remote control unit's display.





- 2 Use the ▲ and ▼ cursor buttons to display "BKLT" on the remote control unit, then press the ENTER button.

- "05SEC" appears on the remote control unit's display.

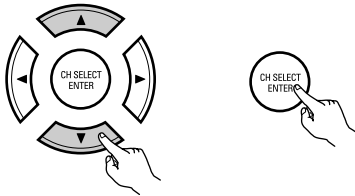

- 3 Use the ▲ and ▼ cursor buttons to adjust the lighting time (3 sec ~ 30 sec), then press the ENTER button.

- "OK" is displayed and that lighting time is set.

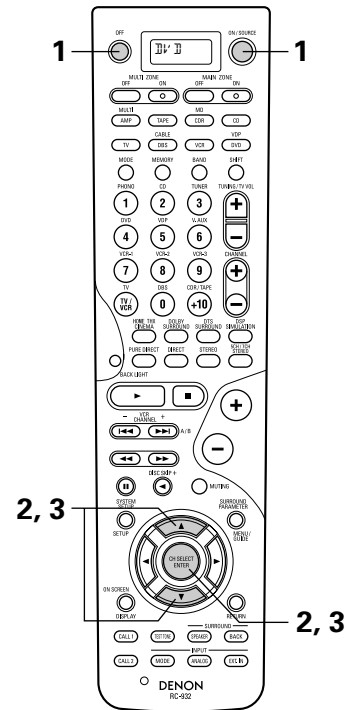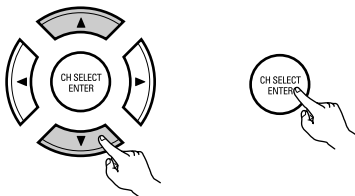

## Resetting



### (1) Resetting the preset memory

- 1 Press the power ON/SOURCE button and the OFF button at the same time.


- "PRE" appears on the remote control unit's display.




- 2 Use the ▲ and ▼ cursor buttons to display "RST" on the remote control unit, then press the ENTER button.

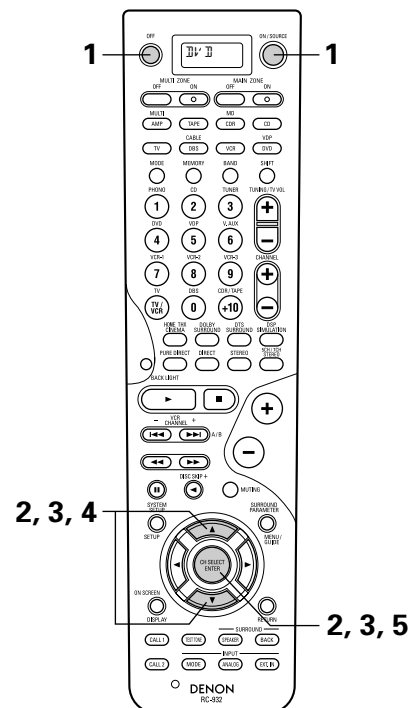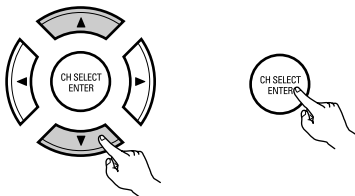

- 3** Use the ▲ and ▼ cursor buttons to display “PRE” on the remote control unit, then press the ENTER button.
- After “SEL” is displayed on the remote control unit’s display, the registered preset memory is displayed on the remote control unit’s display.

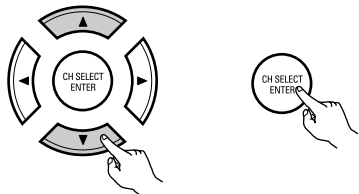

- 4** Use the ▲ and ▼ cursor buttons to select the mode to be reset.

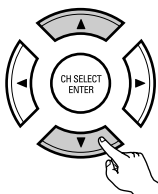


## (2) Resetting “learned” buttons


- 1** Press the power ON/SOURCE button and the OFF button at the same time.
- “PRE” appears on the remote control unit’s display.




- 2** Use the ▲ and ▼ cursor buttons to display “RST” on the remote control unit’s display, then press the ENTER button.
- “PRE” is displayed.

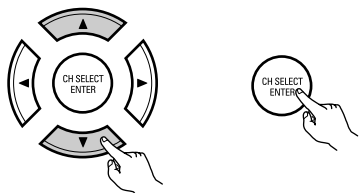


- 3** Use the ▲ and ▼ cursor buttons to display “LRN” on the remote control unit’s display, then press the ENTER button.
- “SEL” is displayed.

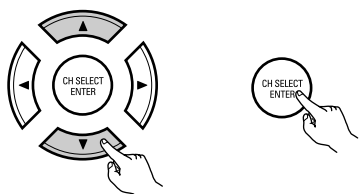

- 5** When the mode you want to reset is shown on the remote control unit’s display, press the ENTER button to reset the preset memory.
- The LCD’s back light flashes during the resetting operation, and when the operation is completed, “OK” is displayed and the set returns to the normal operating mode.

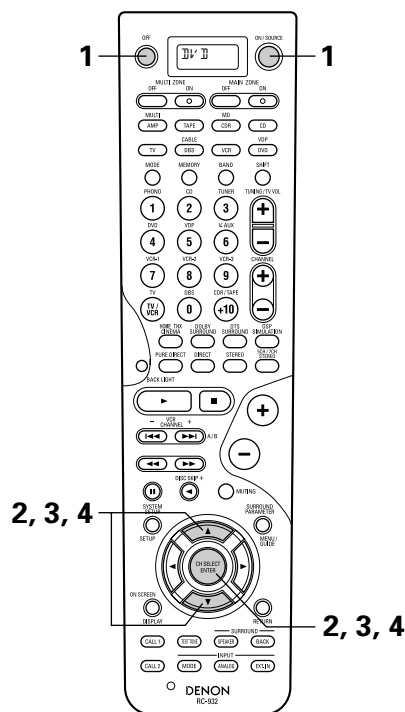

- 4** Use the ▲ and ▼ cursor buttons to select the mode of the button to be reset, then press the ENTER button.
- The LCD’s back light flashes during the resetting operation, and when the operation is completed, “OK” is displayed and the set returns to the normal operating mode.

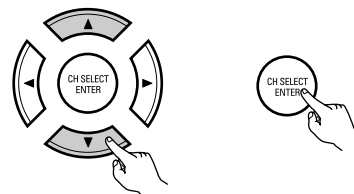

### (3) Resetting the system call buttons


- 1** Press the power ON/SOURCE button and the OFF button at the same time.

- “PRE” appears on the remote control unit’s display.




- 2** Use the ▲ and ▼ cursor buttons to display “RST” on the remote control unit, then press the ENTER button.

- “PRE” appears on the remote control unit’s display.

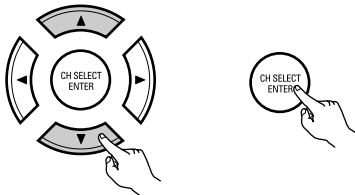


- 3** Use the ▲ and ▼ cursor buttons to display “CALL” on the remote control unit, then press the ENTER button.


- “SEL” appears on the remote control unit’s display.

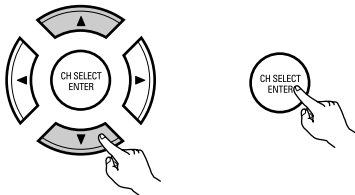

- 4** Press the ▲ and ▼ cursor buttons to select the system call setting to be reset.

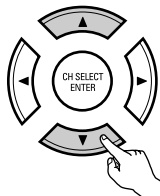


※ The remote control unit’s display switches as shown below each time the ▲ and ▼ cursor buttons are pressed.



- 5** To reset CALL 1 or CALL 2, select “CALL 1” or CALL 2”, then press the ENTER button.

- The LCD’s back light flashes during the resetting operation, and when the operation is completed, “OK” is displayed and the set returns to the normal operating mode.

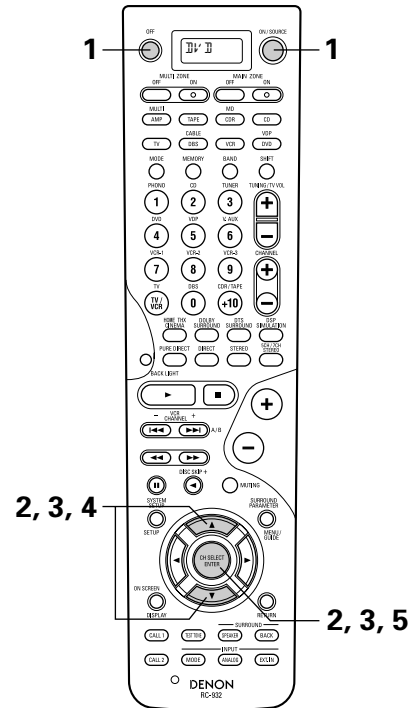


#### (4) Resetting the punch through setting

- 1 Press the power ON/SOURCE button and the OFF button at the same time.

- “PRE” appears on the remote control unit’s display.




- 2 Use the ▲ and ▼ cursor buttons to display “RST” on the remote control unit, then press the ENTER button.

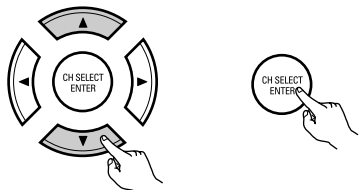


- 3 Use the ▲ and ▼ cursor buttons to display “PUNCH” on the remote control unit, then press the ENTER button.

- “SEL” appears on the remote control unit’s display.

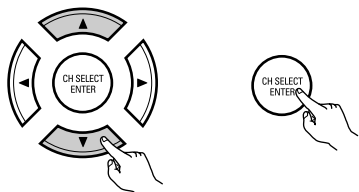

- 4 Use the ▲ and ▼ cursor buttons to display the mode whose punch through setting you want to cancel, then press the ENTER button.


- The LCD’s back light flashes during the resetting operation, and when the operation is completed, “OK” is displayed and the set returns to the normal operating mode.

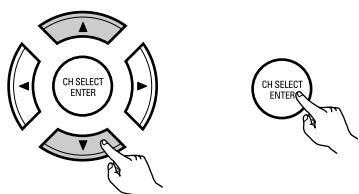

- ※ The display switches as shown below each time the ▲ and ▼ cursor buttons are pressed.



It is also possible to select the mode directly using the mode buttons.

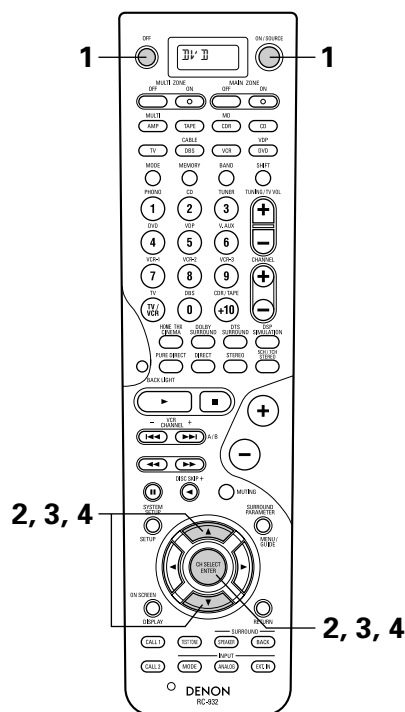


### (5) All reset function

- This function is for resetting all the settings to the factory defaults.

**1** Press the power ON/SOURCE button and the OFF button at the same time. "PRE" appears on the remote control unit's display.





**2** Use the ▲ and ▼ cursor buttons to display "RST" on the remote control unit, then press the ENTER button.

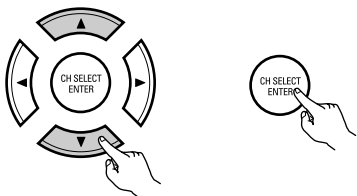

**3** Use the ▲ and ▼ cursor buttons to display "ALL" on the remote control unit, then press the ENTER button.

- The LCD's back light flashes during the resetting operation, and when the operation is completed, "OK" is displayed and the set returns to the normal operating mode.

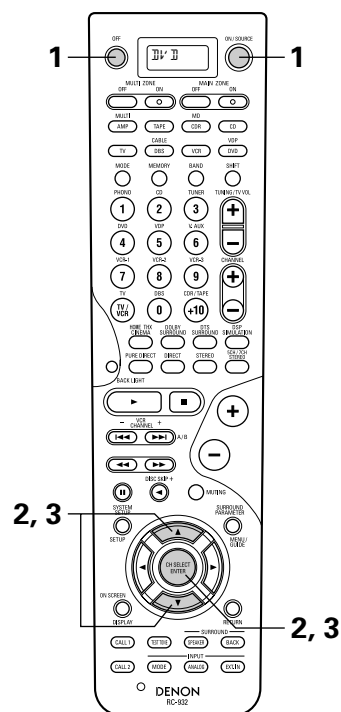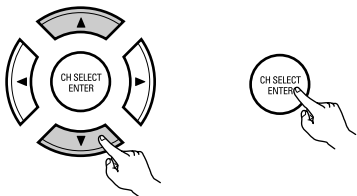


## 9 OPERATION

### Before operating

**1** Refer to "CONNECTIONS" (pages 6 to 13) and check that all connections are correct.

**2** Select "AMP" using the AMP button.  
(only when operating with the remote control unit)



(Remote control unit)


**3** Turn on the power.  
Press the POWER switch (button).





(Main unit)




(Remote control unit)



- When pressed, the power turns on and the display lights. The sound is muted for several seconds, after which the unit operates normally.
- When pressed again, the power turns off, the standby mode is set and the display turns off.
- Whenever the ON/STANDBY button is in the STANDBY state, the apparatus is still connected on AC line voltage. Please be sure to unplug the cord when you leave home for, say, a vacation.

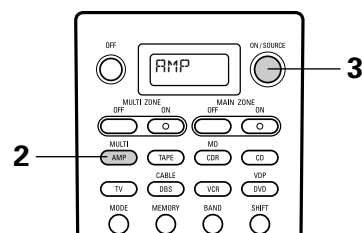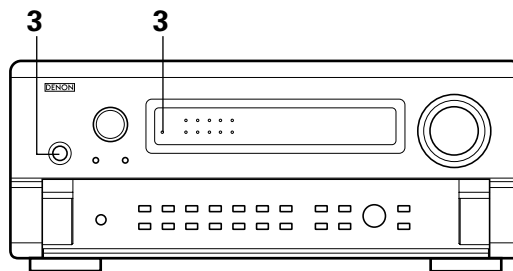


## Playing the input source

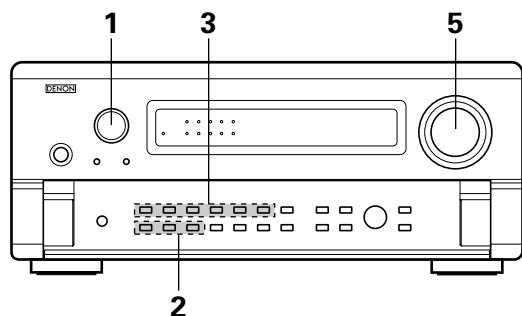


**1** Select the input source to be played.

**Example: CD**



(Main unit)



(Remote control unit)

**2** Select the input mode.

- Selecting the analog mode  
Press the ANALOG button to switch to the analog input.

ANALOG



(Main unit)



(Remote control unit)

- Selecting the external input (EXT. IN) mode  
Press the EXT. IN (on the EXT. IN button on the remote control unit) to switch the external input.

EXT. IN



(Main unit)



(Remote control unit)

- Selecting the AUTO, PCM and DTS modes  
The mode switches as shown below each time the INPUT MODE button is pressed.

AUTO → PCM → DTS


INPUT MODE



(Main unit)



(Remote control unit)

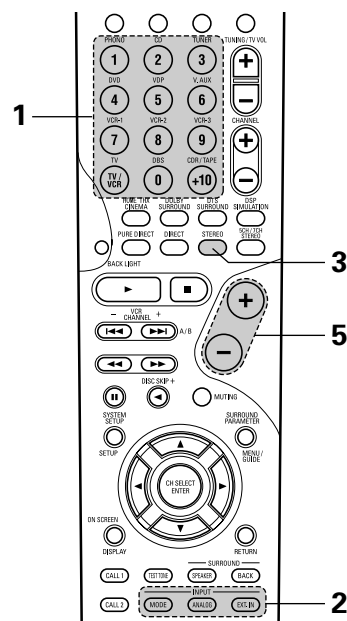

### Input mode selection function

Different input modes can be selected for the different input sources. The selected input modes for the separate input sources are stored in the memory.

#### ① AUTO (auto mode)

In this mode, the types of signals being input to the digital and analog input jacks for the selected input source are detected and the program in the AVR-4802R's surround decoder is selected automatically upon playback. This mode can be selected for all input sources other than PHONO and TUNER.

The presence or absence of digital signals is detected, the signals input to the digital input jacks are identified and decoding and playback are performed automatically in DTS, Dolby Digital or PCM (2 channel stereo) format. If no digital signal is being input, the analog input jacks are selected.

Use this mode to play Dolby Digital signals.

#### ② PCM (exclusive PCM signal playback mode)

Decoding and playback are only performed when PCM signals are being input.

Note that noise may be generated when using this mode to play signals other than PCM signals.

#### ③ DTS (exclusive DTS signal playback mode)

Decoding and playback are only performed when DTS signals are being input.

#### ④ ANALOG (exclusive analog audio signal playback mode)

The signals input to the analog input jacks are played.

#### ⑤ EXT. IN (external decoder input jack selection mode)

The signals being input to the external decoder input jacks are played without passing through the surround circuitry.

### NOTE:


- Note that noise will be output when CDs or LDs recorded in DTS format are played in the "PCM" (exclusive PCM signal playback) or "ANALOG" (exclusive PCM signal playback) mode. Select the AUTO or DTS mode when playing signals recorded in DTS from a laser disc player or CD player.

### Note on playing a source encoded with DTS

- Noise may be generated at the beginning of playback and while searching during DTS playback in the AUTO mode. If so, play in the DTS mode.

### 3 Select the play mode.

**Example: Stereo**

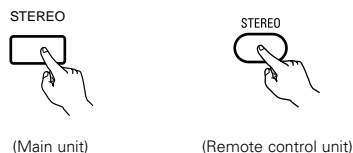


(Main unit)

(Remote control unit)

### 4 Start playback on the selected component.

- For operating instructions, refer to the component's manual.

### 5 Adjust the volume.

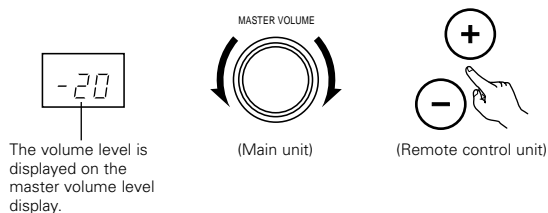

(Main unit)

(Remote control unit)

- ※ The volume can be adjusted within the range of -70 to 0 to 18 dB, in steps of 1 dB. However, when the channel level is set as described on page 23 or page 56, if the volume for any channel is set at +1 dB or greater, the volume cannot be adjusted up to 18 dB. (In this case the maximum volume adjustment range is "18 dB — (Maximum value of channel level)".)

#### Input mode when playing DTS sources

- Noise will be output if DTS-compatible CDs or LDs are played in the "ANALOG" or "PCM" mode. When playing DTS-compatible sources, be sure to connect the source component to the digital input jacks (OPTICAL/COAXIAL) and set the input mode to "AUTO" or "DTS".

#### Input mode display

- In the AUTO mode



- In the PCM mode



- In the DTS mode



- In the ANALOG mode





#### Input signal display

- DOLBY DIGITAL



- DTS

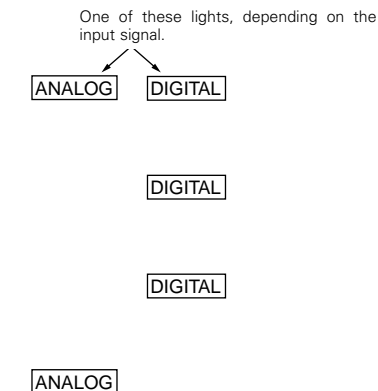

- ※ The **DIGITAL** indicator lights when digital signals are being input properly. If the **DIGITAL** indicator does not light, check whether the digital input component setup (page 28) and connections are correct and whether the component's power is turned on.


#### NOTE:

- The **DIGITAL** indicator will light when playing CD-ROMs containing data other than audio signals, but no sound will be heard.





## Playback using the external input (EXT. IN) jacks

- Set the external input (EXT. IN) mode.  
Press the EXT. IN (or the EXT. IN button on the remote control unit) to switch the external input.

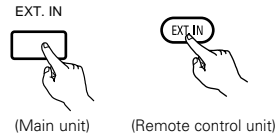


Once this is selected, the input signals connected to the FRONT-L, FRONT-R, CENTER, SURR.-L (surround left), SURR.-R (surround right) SB-L (surround back left) and SB-R (surround back right) channels of the EXT. IN jacks are output directly to the front (left and right), center, surround (left and right) and surround back (left and right) speaker systems as well as the pre-out jacks without passing through the surround circuitry.

In addition, the signal input to the SW (subwoofer) jack is output to the PRE OUT SW (subwoofer) jack.

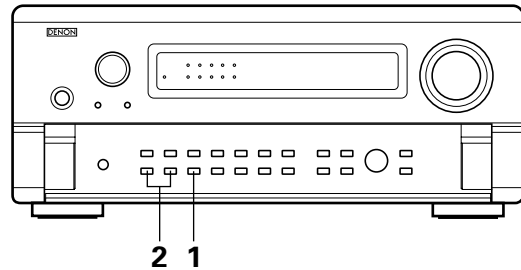

- Cancelling the external input mode  
To cancel the external input (EXT. IN) setting, press the INPUT MODE or ANALOG button to switch to the desired input mode.

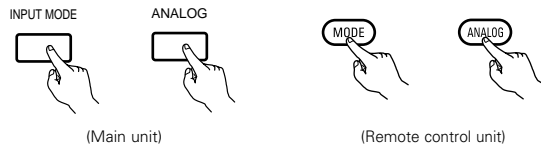

- When the input mode is set to the external input (EXT. IN), the play mode (DIRECT, STEREO, DOLBY/DTS SURROUND, HOME THX CINEMA, WIDE SCREEN, 5CH/7CH STEREO or DSP SIMULATION) cannot be set.


### NOTES:

- In play modes other than the external input mode, the signals connected to these jacks cannot be played. In addition, signals cannot be output from channels not connected to the input jacks.
- The external input mode can be set for any input source. To watch video while listening to sound, select the input source to which the video signal is connected, then set this mode.

## Playing audio sources (CDs and DVDs)

The AVR-4802R is equipped with three 2-channel playback modes exclusively for music. Select the mode to suit your tastes.



- PURE DIRECT mode**  
In this mode, the music is played with an extremely high level of sound quality.  
When this mode is set, all the video-related circuits are turned off so that music signals can be reproduced with high quality. When an analog mode is selected, the digital processing circuitry is also turned off to achieve analog sound with even higher purity.

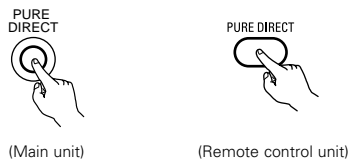

PURE DIRECT display lights.




※ The display is off in the PURE DIRECT mode.

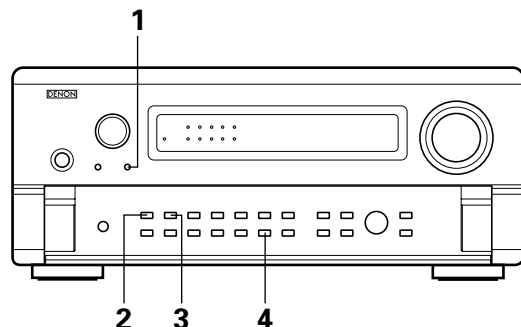

## 2 DIRECT mode

Use this mode to achieve good quality 2-channel sound while watching images. In this mode, the audio signals bypass such circuits as the tone circuit and are transmitted directly, resulting in good quality sound.



(Main unit)



(Remote control unit)

## 3 STEREO mode

Use this mode to adjust the tone and achieve the desired sound while watching images.



(Main unit)



(Remote control unit)

## 4 VIDEO ON/OFF button

When no video signals of a DVD, etc., are connected to the AVR-4802R and the DVD, etc., are connected directly to a TV, etc., the unneeded video circuitry can be turned off by selecting the "VIDEO OFF" setting.



(Main unit)

### NOTES:

- The system setup function cannot be used when the PURE DIRECT mode is set or the "VIDEO OFF" setting is selected. To use the system setup function, cancel the PURE DIRECT mode or select the "VIDEO ON" setting.
- The channel level and surround parameters in the PURE DIRECT mode are the same as in the DIRECT mode.
- When the PURE DIRECT button is pressed while in the PURE DIRECT mode, the PURE DIRECT mode is cancelled and the DIRECT mode is set.
- The crossover frequency setting must be set to "FIXED-THX-" in the system setup in order to turn off the digital circuit when in the analog input mode in the PURE DIRECT mode. (See page 20.)

## After starting playback

### [1] Adjusting the sound quality (tone control)

The tone control function will not work in the DIRECT, PURE DIRECT and Home THX Cinema mode.


- 1 The tone switches as follows each time the TONE CONTROL button is pressed.

BASS  
↕  
TREBLE



(Main unit)

- 2 With the name of the volume to be adjusted selected, turn the SELECT knob to adjust the level.



(Main unit)


- To increase the bass or treble: Turn the control clockwise. (The bass or treble sound can be increased to up to +12 dB in steps of 2 dB.)
- To decrease the bass or treble: Turn the control clockwise. (The bass or treble sound can be decreased to up to -12 dB in steps of 2 dB.)

- 3 If you do not want the bass and treble to be adjusted, turn on the tone defeat mode.

※ The signals do not pass through the bass and treble adjustment circuits, providing higher quality sound.



(Main unit)

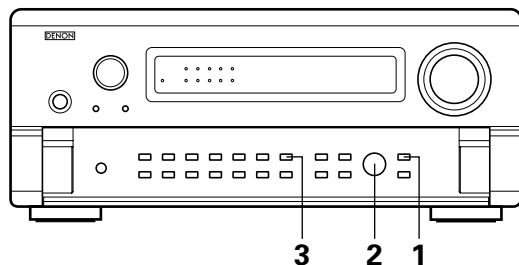

## [2] Listening over headphones


Plug the headphones' plug into the jack.

※ Connect the headphones to the PHONES jack.

The pre-out output (including the speaker output) is automatically turned off when headphones are connected.

### NOTE:

To prevent hearing loss, do not raise the volume level excessively when using headphones.

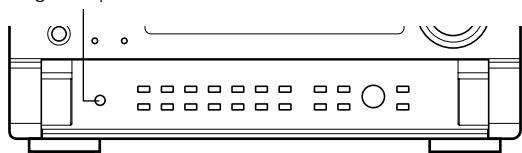

## [3] Turning the sound off temporarily (muting)




- 1 Use this to turn off the audio output temporarily. Press the MUTE button.  
※ Cancelling MUTING mode. Press the MUTE button again.



(Remote control unit)

## [4] Combining the currently playing sound with the desired image

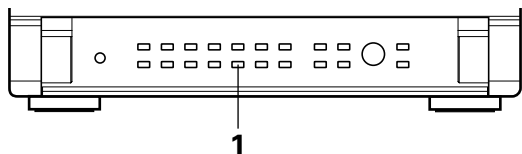

- 1 Simulcast playback  
Use this switch to monitor a video source other than the audio source.  
Press the VIDEO SELECT button until the desired image appears.




(Main unit)

Display

IN=V SOURCE

- ※ Cancelling simulcast playback.
- Select "SOURCE" using the video select button.
  - Switch the program source to the component connected to the video input.


## [5] Checking the currently playing program source, etc.

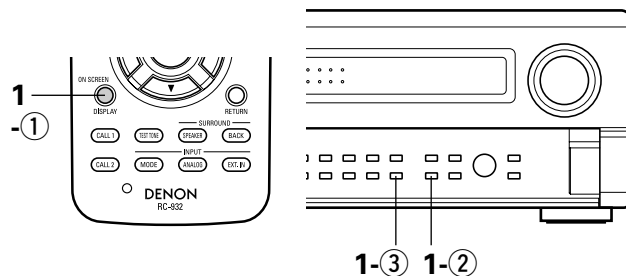


- 1 ① On screen display
  - Each time an operation is performed, a description of that operation appears on the display connected to the unit's VIDEO MONITOR OUT jack. Also, the unit's operating status can be checked during playback by pressing the remote control unit's ON SCREEN/DISPLAY button.

Such information as the position of the input selector and the surround parameter settings is output in sequence.
- ② Front panel display
  - Descriptions of the unit's operations are also displayed on the front panel display. In addition, the display can be switched to check the unit's operating status while playing a source by pressing the STATUS button.
- ③ Using the dimmer function
  - Use this to change the brightness of the display. The display brightness changes in four steps (bright, medium, dim and off) by pressing the DIMMER button repeatedly.


※ The brightness changes in 3 steps each time the button is pressed, and finally the display turns off.

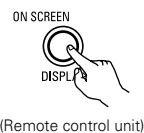

(Remote control unit)




(Main unit)




(Main unit)

## [6] Switching the surround speakers

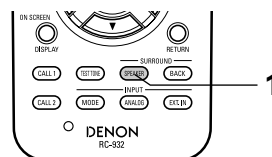

- 1 The surround speakers switch as shown below each time the SPEAKER button is pressed.






(Remote control unit)



※ This operation is possible when the setting for using both surround speakers A and B is made at "Speaker Configuration" in the System Setup Menu.

## Multi-source recording/playback

With the exception of the case in [2] below, only the signal connected to the analog input jacks are output from the REC OUT and multi-room output jacks.

### [1] Playing one source while recording another (REC OUT mode)

- 1 Press the REC/MULTI button until "REC OUT SOURCE" appears on the set's display.  
  
 (Main unit)
- 2 Select the source you want to record appears on the set's display.  
  - The indicator for the selected program source lights.  
 (Main unit)
- 3 Set the recording mode.  
  - For operating instructions, refer to the manual of the component on which you want to record.
- 4 To cancel, press the REC/MULTI button and select "SOURCE".  
  
 (Main unit)


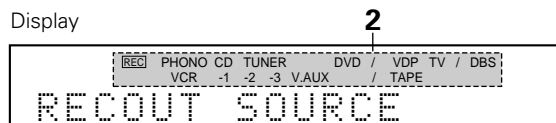
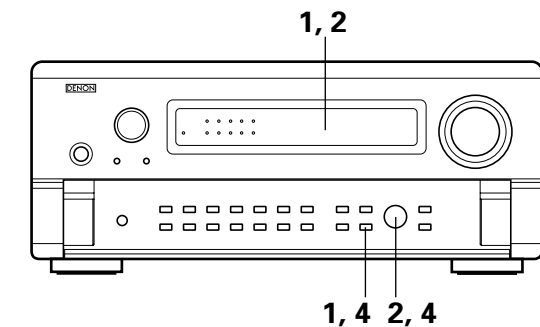




#### NOTES:

- Recording sources other than digital inputs selected in the REC OUT mode are also output to the multi source audio/video output jacks.
- Digital signals are not output from the MULTI ZONE audio output jacks.

### [2] Recording Dolby Digital and DTS multichannel sources




- With this set it is possible to record Dolby Digital and DTS multichannel signals converted into 2-channel analog signals.
- The recording signals are output to the MULTI ZONE OUT, TAPE and VCR output terminals.


- 1 Press the REC/MULTI button until "REC OUT SOURCE" appears on the display.  
  
 (Main unit)
- 2 Set the input mode according to the source to be played.  
  
 (Main unit)
- 3 Set the surround mode by pressing the DIRECT or STEREO button.  
  - The multichannel digital signals are down-mixed and output to the TAPE and VCR output terminals.  
 (Main unit) (Remote control unit)

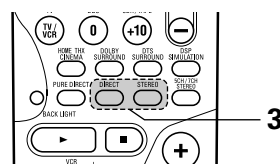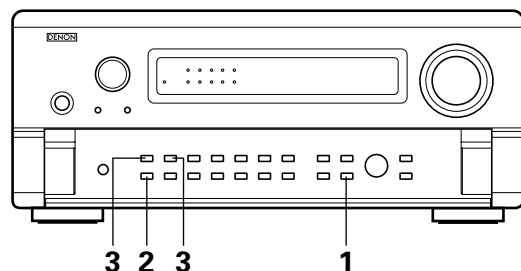

- 4 Set the recording mode.

### [3] Outputting a program source to an amplifier, etc., in a different room (MULTI mode)

- 1 Press the REC/MULTI button until "M-ZONE SOURCE" appears on the set's display.  
  
 (Main unit)
- 2 Select the source you want to record appears on the set's display.
  - The MULTI indicator lights.
  - The indicator for the selected program source light.
  - When the AVR-4802R is in the REC OUT mode, the source cannot be output using the "MULTI" mode on the remote control unit.  
 (Main unit)
- 3 Start playing the source to be output.
  - For operating instructions, refer to the manuals of the respective components.
- 4 To cancel, press the REC/MULTI button and select "SOURCE".  
  
 (Main unit)

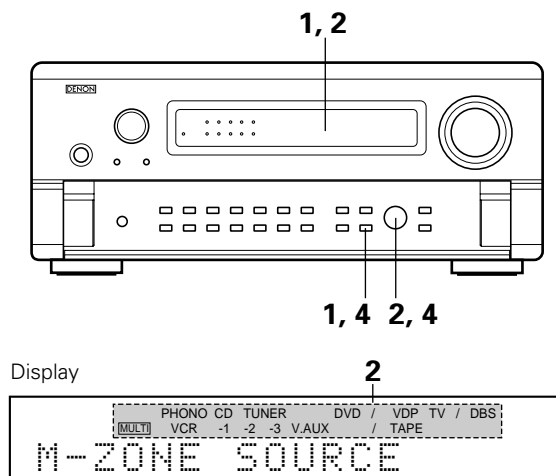

When "Multi" is selected for the system setup's multi-zone setting, the source selected here is output from the SB/MULTI speaker terminals.




The volume can be adjusted and input source can be selected using the VOLUME + (up) and - (down) buttons on the remote control unit's "MULTI" mode.

#### NOTES:


- The signals of the source selected in the Multi mode are also output from the TAPE and VCR recording output terminals.
- Digital signals are not output from the MULTI ZONE audio output jacks.

### [4] Remote control unit operations during multi-source playback (selecting the input source)


This operation is possible when MULTI mode is selected.  
 This operation is not possible in the REC OUT mode.

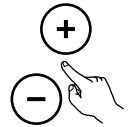- 1 Select "MULTI" using the AMP button.  
  
 (Remote control unit)
- 2 Press the MULTI ZONE "ON" button.
  - ※ To cancel the MULTI mode. Press the MULTI ZONE "OFF" button.  
 (Remote control unit)
- 3 Press the input source button
  - The MULTI ZONE source switches directly.
- 4 The output level of the MULTI ZONE OUT terminals can be controlled using the VOLUME + (up) and - (down) buttons on the remote control unit. The output level of MULTI ZONE vol. level is set "Variable" at Multi Zone Control in System Setup Menu. (See page 29)  
  
 (Remote control unit)
 

※ DEFAULT SETTING (ZONE2 VOLUME LEVEL) :  
 --- dB (MINIMUM)

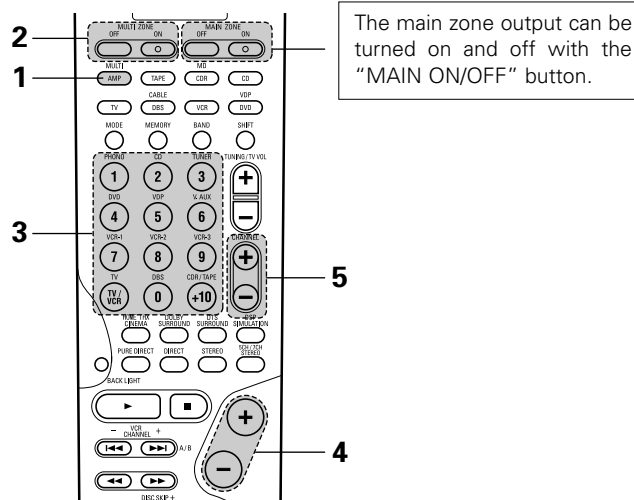

- 5 When the MULTI ZONE SOURCE function is set to TUNER, the preset channel can be selected using the CHANNEL + (up) and - (down) buttons on the remote control unit.

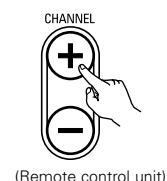

## Multi-source and multi-zone playback

### MULTI ROOM MUSIC ENTERTAINMENT SYSTEM

- When the outputs of the MULTI SOURCE AUDIO OUT terminals are wired and connected to integrated amplifiers installed in other rooms, different sources can be played in rooms other than the main room in which this unit and the playback devices are installed. (Refer to ANOTHER ROOM on the diagram below.)
- When a sold separately room-to-room remote control unit (DENON RC-616, 617 or 618) is wired and connected between the main room and another room, the remote-controllable devices in the main room can be controlled from another room using the remote control unit.
- ※ To control playback devices other than the ones above, either use that device's remote control unit or preset a separately sold programmable remote control unit.

#### NOTES:


- For the AUDIO output, use high quality pin-plug cords and wire in such a way that there is no humming or noise.
- For instructions on installation and operation of separately sold devices, refer to the devices' operating instructions.

### MULTI ROOM MUSIC ENTERTAINMENT SYSTEM


#### [1] When the MULTI ZONE terminal output is set to "Variable".

The AVR-4802R is equipped with audio pre-out terminals for which the volume is adjustable.

A separately sold stereo power amplifier (POA-T10) can be connected to enjoy multi-zone playback.

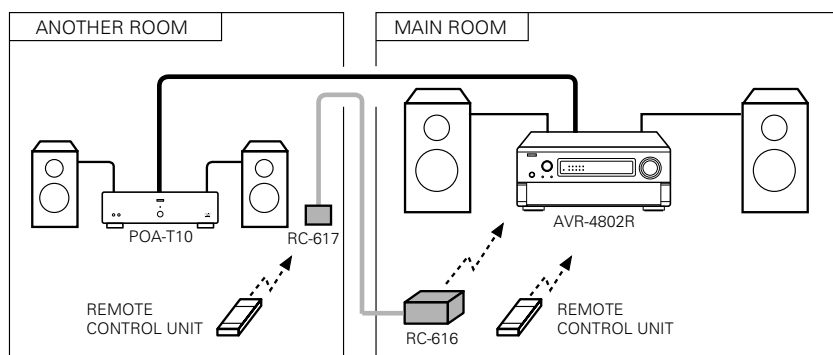


When connected as shown on the diagram below using connection cords included with Denon power amplifiers, the power amplifier's power can be turned on and off using the "MULTI ZONE ON/OFF" button on the remote control unit.

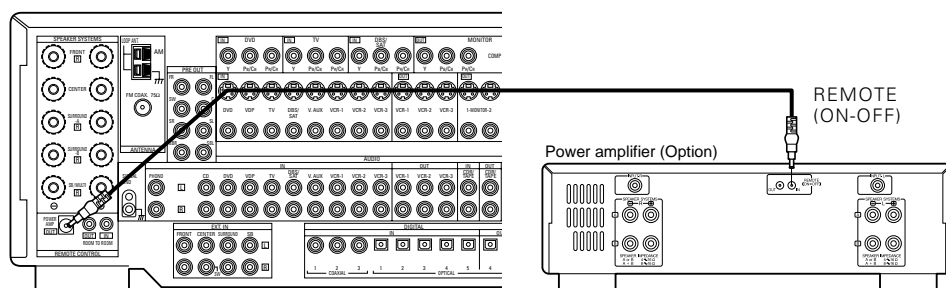

## [2] When using the SB/MULTI speaker terminals

Settings can be made at the system setup menu so that the same source as the MULTI ZONE pre-out terminals can be played from the speakers connected to the MULTI speaker terminals.

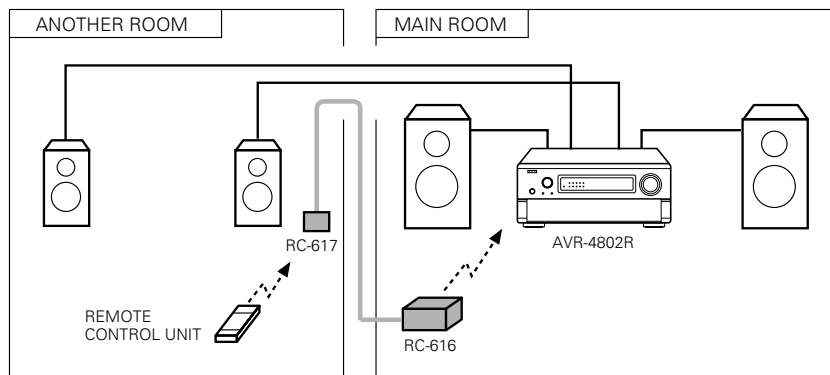

### NOTE:

When the main unit is set to the recording output mode, remote control unit keys indicated "MULTI" mode cannot be operated. (See page 53.)

### Room to Room Remote Control jacks

- The OUT jack is an extension jack for future use.
- When the OUT jack is connected, the signals input to the IN jack are output from the OUT jack directly. (Example: RC616 signals are output.)
- Do not connect only the OUT jack.


(The signals from the AVR-4802R's remote sensor are not output to this jack.)

## 10 SURROUND


### Before playing with the surround function

- Before playing with the surround function, be sure to use the test tones to adjust the playback level from the different speakers. This adjustment can be performed with the system setup (see page 23) or from the remote control unit, as described below.
- Adjusting with the remote control unit using the test tones is only possible in the "Auto" mode and only effective in the DOLBY/DTS SURROUND and HOME THX CINEMA modes. The adjusted levels for the different modes are automatically stored in the memory.


- 1** Press the TEST TONE button.




(Remote control unit)
- 2** Test tones are output from the different speakers. Use the channel volume adjust buttons to adjust so that the volume of the test tones is the same for all the speakers.

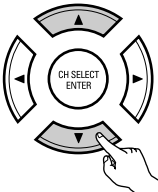

(Remote control unit)
- 3** After completing the adjustment, press the TEST TONE button again.




(Remote control unit)

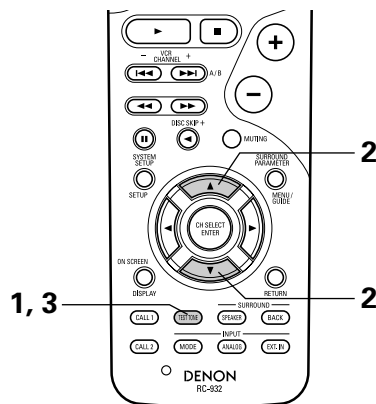

- After adjusting using the test tones, make the desired settings for each surround mode to be played, then use the procedure described below to adjust the levels of the various channels.


- 1 MAIN UNIT:**  
Press the CH VOL button and select "CH VOL".




(Main unit)

**REMOTE CONTROL UNIT:**  
Select the speaker whose level you want to adjust.


The channel switches in the following order each time the button is pressed:



(Remote control unit)

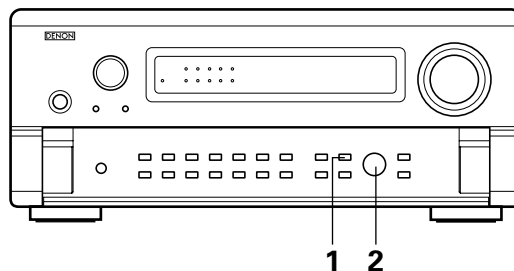


- 2 MAIN UNIT:**  
Turn the SELECT knob to adjust the level of the selected speaker.




(Main unit)

**REMOTE CONTROL UNIT:**  
Adjust the level of the selected speaker.

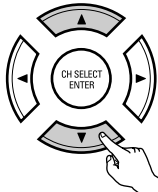

(Remote control unit)

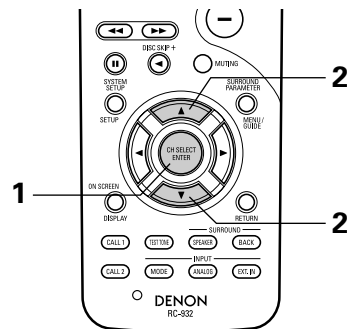


※ When the surround back speaker setting is set to "1spkr" for "Speaker Configuration", this is set to "SB".



## Fader function

- This function makes it possible to lower the volume of the front channels (FL, C and FR) or the rear channels (SL, SR, SBL and SBR) together. Use it for example to adjust the balance of the sound from the different positions when playing multi-channel music sources.




**1 MAIN UNIT:**  
Press the CH VOL button, and select "FADER".




**REMOTE CONTROL UNIT:**  
Select "FADER".




The channel switches in the order shown below each time this button is pressed.

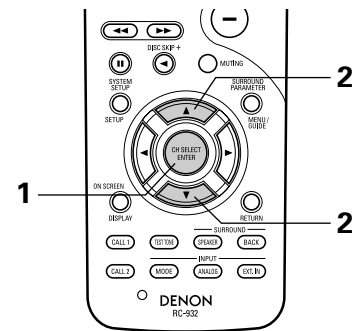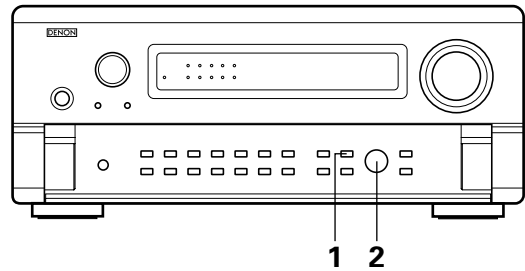


**2 MAIN UNIT:**  
Turn the SELECT knob clockwise to adjust the volume of the surround side collectively. Turn the CONTROL knob counterclockwise to adjust the volume of the front side collectively.

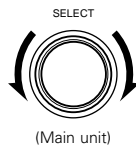

**REMOTE CONTROL UNIT:**  
Press the ▼ button to reduce the volume of the front channels, the ▲ button to reduce the volume of the rear channels.

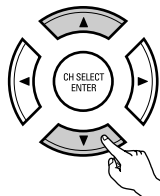

※ The fader function does not affect the SW channel.

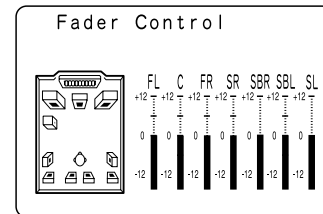


This is only displayed when setting the fader control.

- ※ The channel whose channel level is adjusted lowest can be faded to -12 dB using the fader function.
- ※ If the channel levels are adjusted separately after adjusting the fader, the fader adjustment values are cleared, so adjust the fader again.

## Playing modes for different sources

The AVR-4802R is equipped with many surround modes. We recommend using the surround modes as described below in order to achieve the maximum effect for the specific signal source.

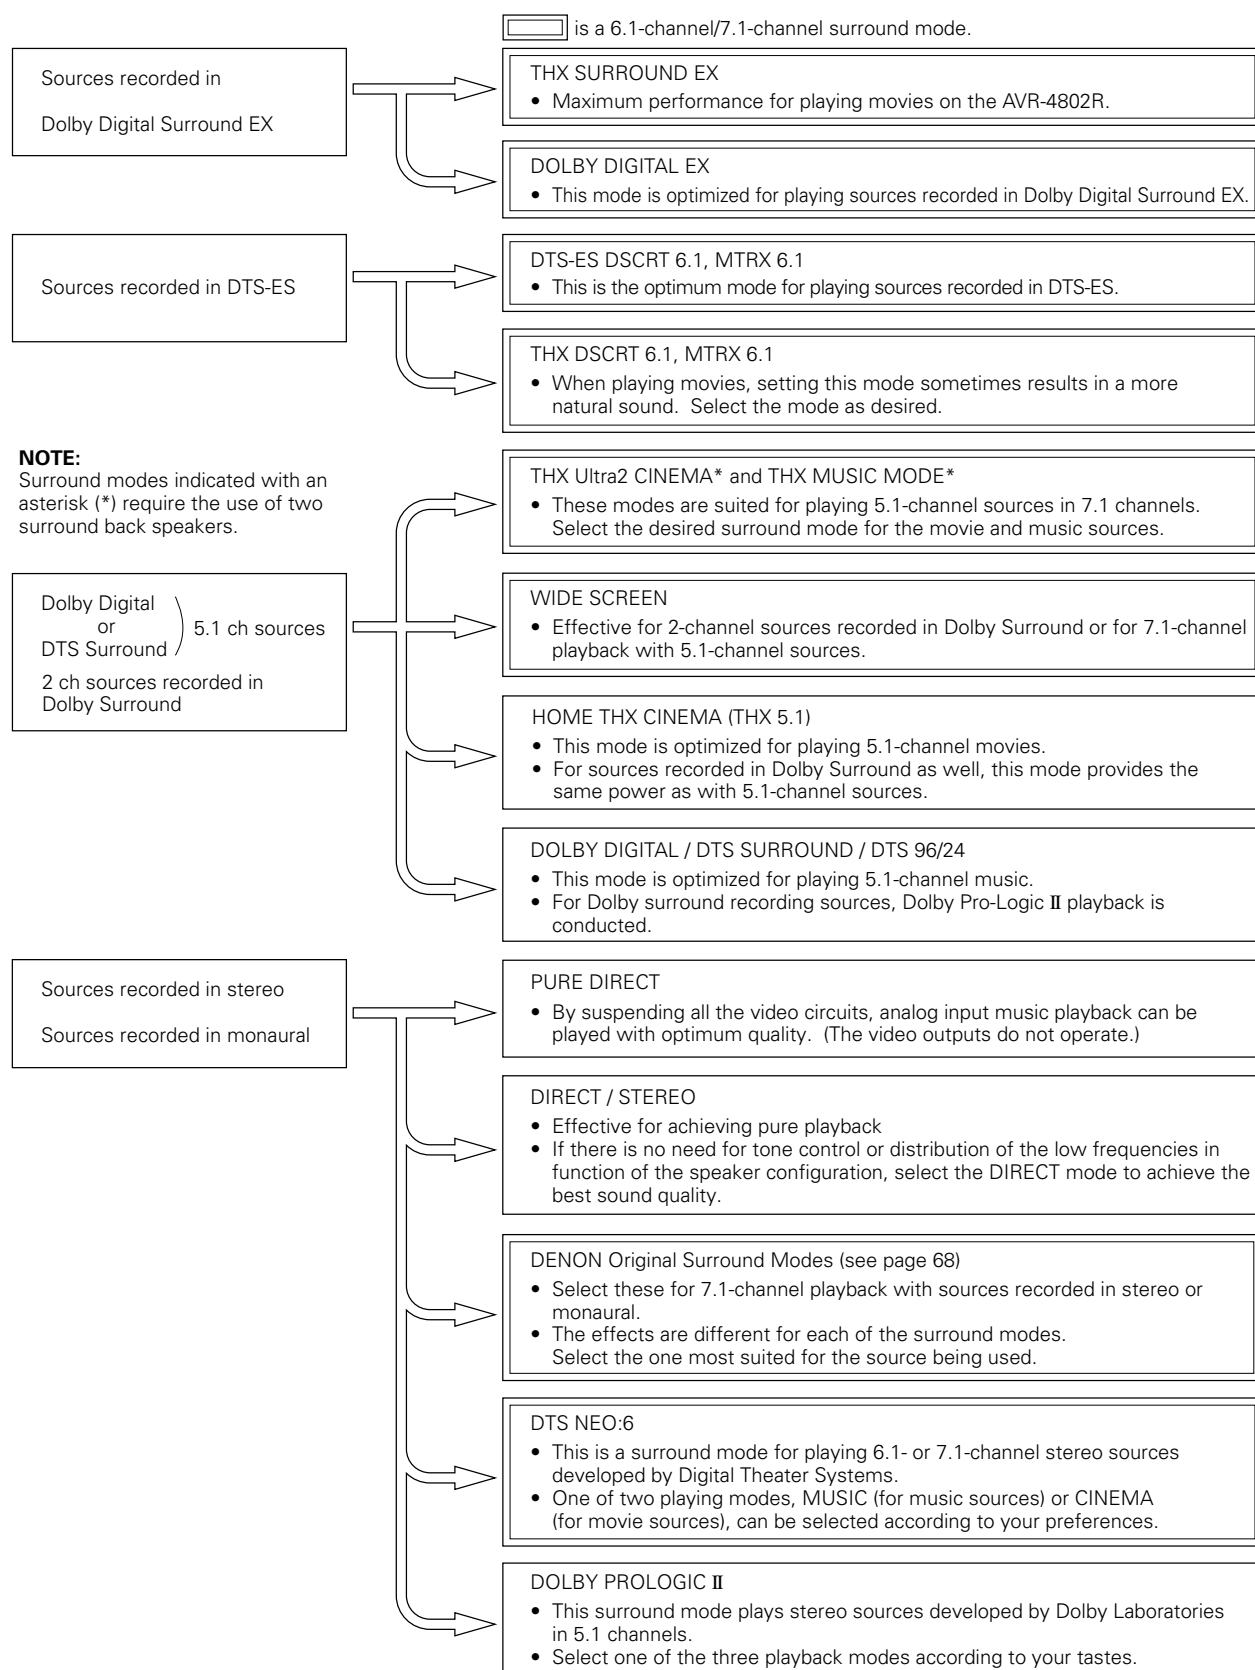

• Though we recommend selecting the surround mode as described above, other surround modes can also be selected.


## THX Surround EX / Home THX Cinema mode

When the HOME THX CINEMA button is pressed, the surround mode is set as follows according to the signal that is played:


- ① THX Surround EX (THX Ultra2 Cinema)
- ② Home THX CINEMA
- ③ THX 5.1
- ④ THX DSCRT 6.1, THX MTRX 6.1


When the HOME THX CINEMA mode is set when a DVD is played, check the DVD player's digital output setting and change the setting to one for which Dolby Digital and DTS bit stream signals can be output ("bit stream", for example).

### [1] Playing sources recorded in Dolby Surround in the Home THX Cinema surround mode


- 1** ① Select the program source.
- 

(Main unit)





(Remote control unit)
- ② Set the input mode to "AUTO".
- 

(Main unit)




(Remote control unit)

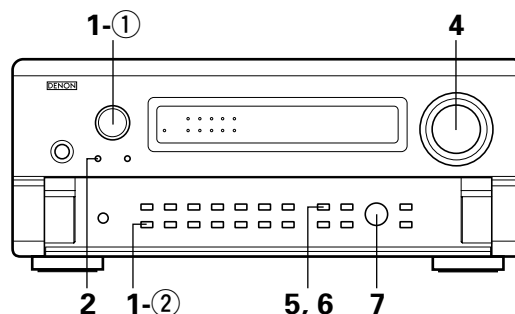



- 2** Select the Home THX mode.
- 

(Main unit)




(Remote control unit)


- 3** Play a program source with the  **DOLBY SURROUND** mark.
- For operating instructions, refer to the manuals of the respective components.

- 4** Adjust the volume.
- 


(Main unit)

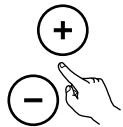


(Remote control unit)

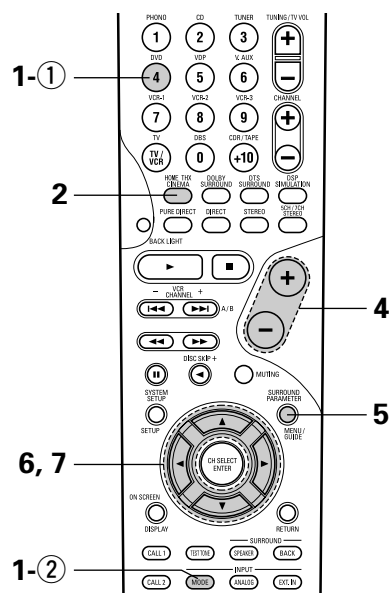


- 5** Display the Surround Parameter screen and set the parameters according to the source.


- 

(Main unit)




(Remote control unit)

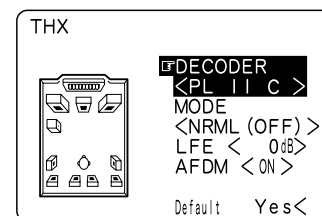


- 6** Select the parameter.
- 


(Main unit)

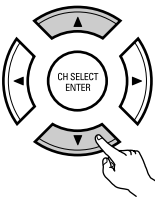

(Remote control unit)

- 7** Select the setting.
- 

(Main unit)

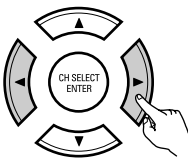

(Remote control unit)

## Surround parameters ①

### DECODER:

Select the decoder to be used when playing 2-channel sources in the Home THX Cinema mode.

PL II C.....The signals are decoded in the Dolby Pro Logic II Cinema mode before undergoing THX processing.

DOLBY PL....The signals are decoded in the Dolby Pro Logic emulation mode before undergoing THX processing.

NEO:6 C.....The signals are decoded in the NEO:6 Cinema mode before undergoing THX processing.

### MODE/SB CH OUT:

Select the surround back channel playback method or mode.

NON MTRX.....The same signals as those of the surround channels are output from the surround back channels.

MTRX ON .....The surround channel signals undergo digital matrix processing and are output from the surround back channels.

SB OFF (OFF) .....No signal is played from the surround back channels.

THX Surround EX.....Dolby Digital signals are played in the THX Surround EX mode.

Ultra2 Cinema.....The signals are played in the THX Ultra2 Cinema mode.

Music Mode .....The signals are played in the THX Music mode.

ES MTRX .....When playing DTS signals, the surround back signals undergo digital matrix processing for playback.

ES DSCRT.....When a signal identifying the source as a discrete 6.1-channel source is included in the DTS signals, the surround back signals included in the source are played.

NORMAL (ON).....This is the recommended play mode for using the surround back channel when DTS NEO:6 is selected.

NORMAL (OFF) .....This is the recommended play mode when Dolby Pro Logic II is selected. The surround back channel is not played.

### AFDM (Auto Flag Detect Mode):

ON.....This function only works with software on which a special identification signal is recorded. This software is scheduled to go on sale in the future.

This is a function for automatically playing in the 6.1-channel mode using the surround back speakers if the software is recorded in THX Surround EX or DTS-ES or in the normal 5.1-channel mode without using the surround back speakers when the software is not recorded in THX Surround EX or DTS-ES.

OFF .....Set the "OFF" mode to perform 6.1-channel playback with conventional 5.1-channel sources or sources on which the identification signal described below is not recorded.

## [2] To play in the THX Surround EX/Home THX Cinema Surround mode for sources recorded in Dolby Digital or DTS

- 1 Select the program source.  

Selecting a digital input source

  
 Perform step 1 under "Dolby Digital mode and DTS Surround" (page 62).

- 2 Select the Home THX Cinema mode.





(Main unit)



(Remote control unit)


- 3 Play a program source with the mark.  
 For operating instructions, refer to the manuals of the respective components.  
 The channel status information during playback of Dolby Digital and DTS sources can be checked using the "STATUS" button on the main unit.

- OUTPUT** The surround back indicator lights green when playing in the THX SURROUND EX mode.
- DIGITAL** The Dolby Digital indicator lights when playing Dolby Digital sources.
- DTS** When playing DTS sources, the DTS indicator lights.

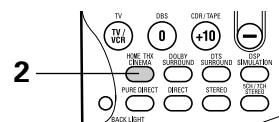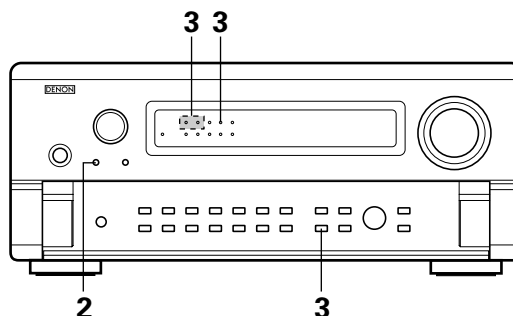

### Checking the input signal

The input signal can be checked by pressing the remote control unit's ON SCREEN button. (See page 51.)



(Remote control unit)

- SIGNAL:** Displays the type of signal (DTS, DOLBY DIGITAL, PCM, etc.).
- fs:** Displays the input signal's sampling frequency.
- FORMAT:** Displays the input signal's number of channels.  
 "Number of front channels/Number of surround channels/LFE on/off"  
 "SURROUND" is displayed for 2-channel signal sources recorded in Dolby Surround.
- OFFSET:** Displays the dialog normalization offset value. (See page 63.)
- FLAG:** Displays the special identification signal recorded in the input signal. (See page 60.)  
 "MATRIX" is displayed when matrix processing is conducted on the surround back channel, "DISCRETE" is displayed when discrete processing is conducted.  
 Not displayed when no identification signal is recorded.

In addition, screen information is displayed in the following order when the ON SCREEN button is pressed repeatedly:

- OSD-1 Input signal
- OSD-2 Input/output
- OSD-3 Surround parameter
- OSD-4 Tone control
- OSD-5 Surround mode
- OSD-6 Surround mode
- OSD-7 Digital in assignment
- OSD-8 ~ 12 Tuner preset station

#### NOTE:

OSD-3: Not displayed in surround modes without surround parameters.

OSD-4: Not displayed in surround modes in which the tone cannot be controlled.

**Mode:** Dolby Digital EX

**SIGNAL:** DOLBY DIGITAL

**fs:** : 48kHz

**FORMAT:** 3/2/. 1

**OFFSET:** +4dB

**OSD-1**

**Mode:** DTS ES DSCRT6. 1

**SIGNAL:** DTS

**fs:** : 48kHz

**FORMAT:** 3/3/. 1

**FLAG:** : DISCRETE

**OSD-1**


## Dolby Digital mode (only with digital input) and DTS Surround (only with digital input)

1

Select the input source.

Playback with digital input

- ① Select an input source set to digital (COAXIAL/OPTICAL) (see page 28).

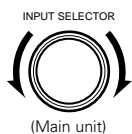


(Main unit)




(Remote control unit)


- ② Set the input mode to "AUTO".



(Main unit)




(Remote control unit)

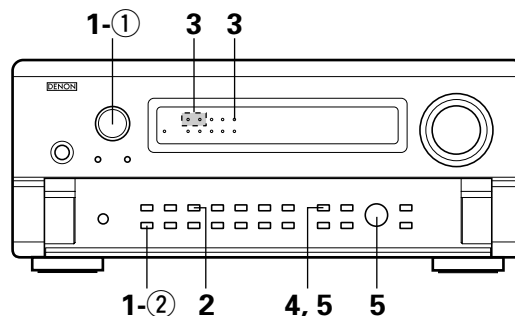


2

Select the Surround mode.




(Main unit)



(Remote control unit)

3


Play a program source with the , mark.



Light




Light



Light

- The Dolby Digital indicator lights when playing Dolby Digital sources.
- The DTS indicator lights when playing DTS sources.
- The SIGNAL DETECT indicator lights when playing sources on which a special identification signal is recorded.

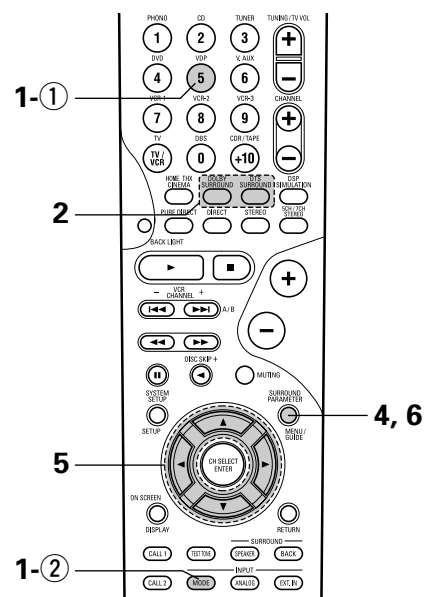

4



Display the surround parameter menu.



(Main unit)



(Remote control unit)

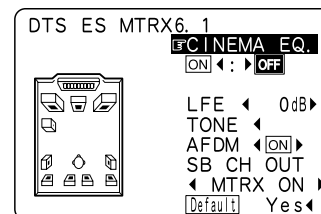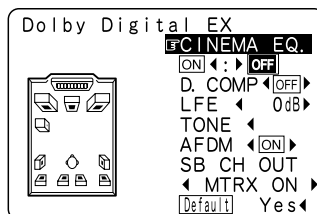


5

① Select the various parameters.




(Main unit)

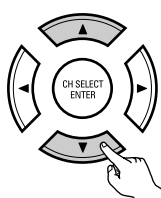


(Remote control unit)

② Adjust the parameter settings.

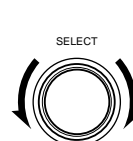

(Main unit)

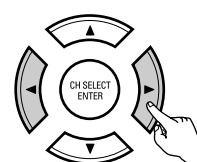

(Remote control unit)

6



(Remote control unit)

Press the SURROUND PARAMETER button to complete the setting.

※ When operation is by a main unit button, there will be a return to the regular display several seconds after the operation is stopped.

**NOTE:**

- The on-screen display (OSD) will differ for operation by main unit button and operation by remote control button.
- When "Default" is selected and the ◀ cursor button is pressed, "CINEMA EQ." and "D.COMP." are automatically turned off, "SB CH OUT" is reset, "CHANNEL LEVEL" and the tone is set to the default value.

**Surround parameters ②****CINEMA EQ. (Cinema Equalizer):**

The Cinema EQ function gently decreases the level of the extreme high frequencies, compensating for overly-bright sounding motion picture soundtracks. Select this function if the sound from the front speakers is too bright.

This function only works in the Dolby Pro Logic, Dolby Digital, DTS Surround and Wide Screen modes.

**D.COMP. (Dynamic Range Compression):**

Motion picture soundtracks have tremendous dynamic range (the contrast between very soft and very loud sounds). For listening late at night, or whenever the maximum sound level is lower than usual, the Dynamic Range Compression allows you to hear all of the sounds in the soundtrack (but with reduced dynamic range). (This only works when playing program sources recorded in Dolby Digital or DTS.) Select one of the four parameters ("OFF", "LOW", "MID" (middle) or "HI" (high)). Set to OFF for normal listening.

This parameter is displayed only when playing compatible sources in DTS mode.

**LFE (Low frequency Effect):**

This sets the level of the LFE (Low Frequency Effect) sounds included in the source when playing program sources recorded in Dolby Digital or DTS.

If the sound produced from the subwoofer sounds distorted due to the LFE signals when playing Dolby Digital or DTS sources when the peak limiter is turned off with the subwoofer peak limit level setting (system setup menu), adjust the level as necessary.

Program source and adjustment range

1. Dolby Digital: -10 dB to 0 dB
2. DTS Surround: -10 dB to 0 dB

※ **When DTS encoded movie software is played, it is recommended that the LFE LEVEL be set to 0 dB for correct DTS playback.**

※ **When DTS encoded music software is played, it is recommended that the LFE LEVEL be set to -10 dB for correct DTS playback.**

**TONE:**

This adjusts the tone control. (See page 70.)

**■ Dialogue Normalization**

The dialogue normalization function is activated automatically when playing Dolby Digital program sources.

Dialogue normalization is a basic function of Dolby Digital which automatically normalizes the dialog level (standard level) of the signals which are recorded at different levels for different program sources, such as DVD, DTV and other future formats that will use Dolby Digital.

When this function is activated, the following message appears on the main unit's display:

DIAL. NORM




OFFSET + 4dB

The number indicates the normalization level when the currently playing program is normalized to the standard level.

## Dolby Surround Pro Logic II mode

- Select the function to which the component you want to play is connected.


EX: DVD

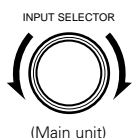

(Main unit)




(Remote control unit)

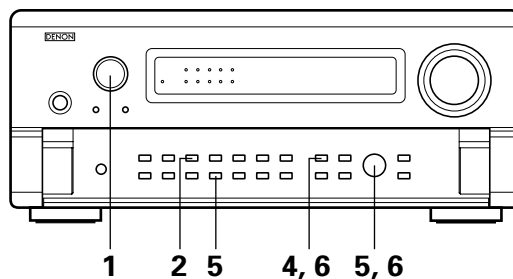

- Select the Dolby Surround Pro Logic II mode.

Select the DOLBY PRO LOGIC II mode using the SELECT buttons.





(Main unit)

The surround mode switches when the SURROUND MODE button is pressed. Select the DOLBY PRO LOGIC II mode.



(Remote control unit)

- The Dolby Pro Logic indicator lights.

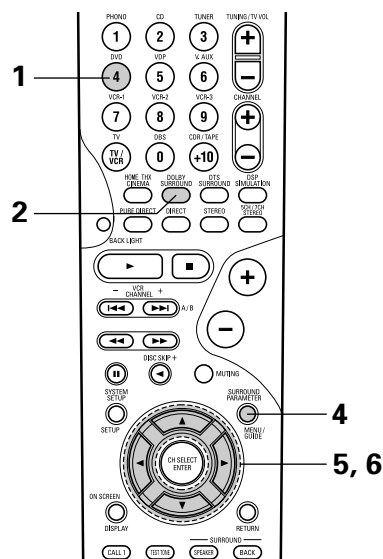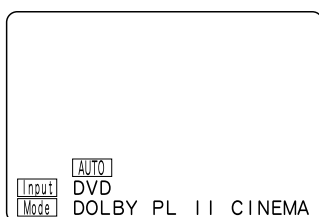

- Play a program source with the **PRO LOGIC** mark.

- For operating instructions, refer to the manuals of the respective components.


- Select the surround parameter mode.




(Main unit)




(Remote control unit)

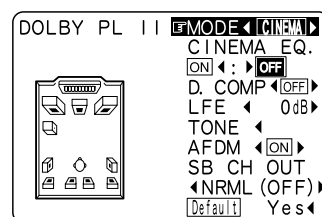

- Select the optimum mode for the source.



(Main unit)

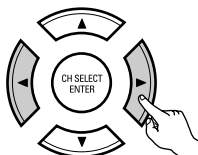


(Remote control unit)

The CINEMA, MUSIC and PL modes can be selected directly using the CINEMA/MUSIC button on the main unit's panel.




(Main unit)


DOLBY PL II CINEMA

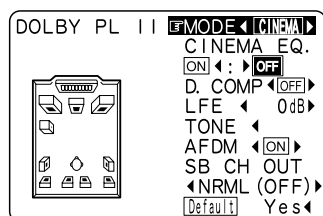

DOLBY PL II MUSIC

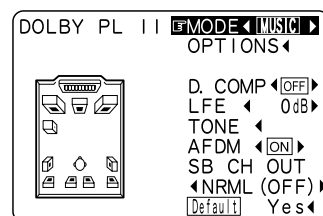


DOLBY PRO LOGIC

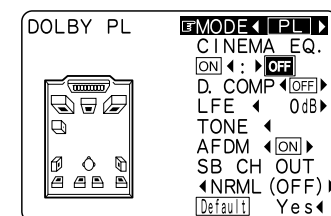




## 6 Set the surround parameters according to the mode.

① Select the parameter.

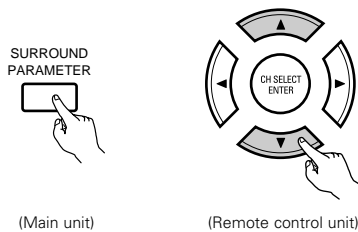


② Select the setting.

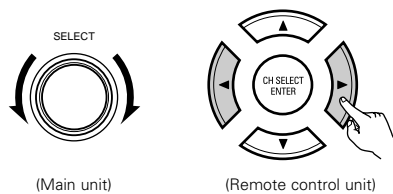

## 7 Set the various surround parameters.


### • CINEMA EQ setting

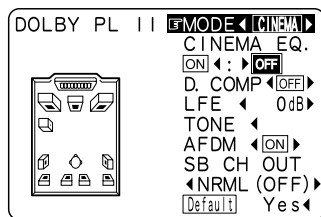


#### NOTE:

- When making parameter settings, the display will return to the regular condition several seconds after the last button was pressed and the setting will be completed.

### • PANORAMA/DIMENSION/CENTER WIDTH setting

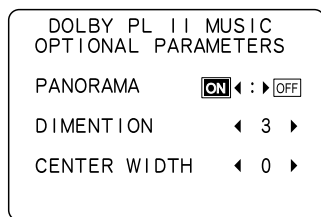

### • DEFAULT setting

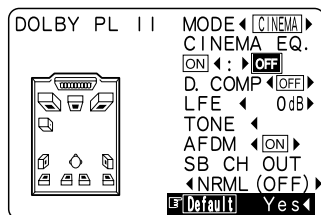

### Surround parameters ③

#### Pro Logic II Mode:

The Cinema mode is for use with stereo television shows and all programs encoded Dolby Surround.

The Music mode is recommended as the standard mode for autosound music systems (no video), and is optional for A/V systems.

The Pro Logic mode offers the same robust surround processing as original Pro Logic in case the source contents is not of optimum quality.

Select one of the modes ("Cinema", "Music" or "PL").

#### Panorama Control:

This mode extends the front stereo image to include the surround speakers for an exciting "wraparound" effect with side wall imaging.

Select "OFF" or "ON".

#### Dimension Control:

This control gradually adjust the soundfield either towards the front or towards the rear.

The control can be set in 7 steps from 0 to 6.

#### Center Width Control:

This control adjust the center image so it may be heard only from the center speaker; only from the left/right speakers as a phantom image; or from all three front speakers to varying degrees.



The control can be set in 8 steps from 0 to 7.

※ Stop pressing buttons (main unit) once you have completed setting the surround parameters. After several seconds the normal display reappears and the settings you have made are automatically set.

## DTS Neo:6 mode




Surround playback can be conducted for the analog input and PCM digital input 2-channel signals.

### 1 Select the DTS NEO:6 mode.



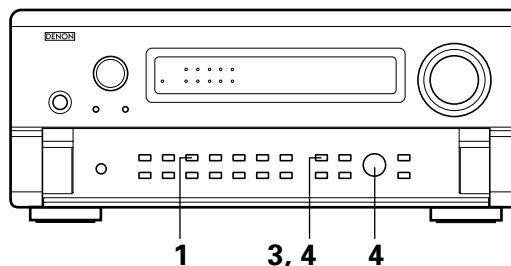
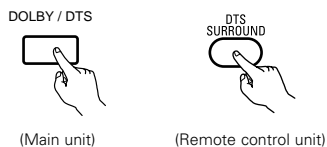


### 2 Play a program source.

### 3 Display the Surround Parameter Menu.

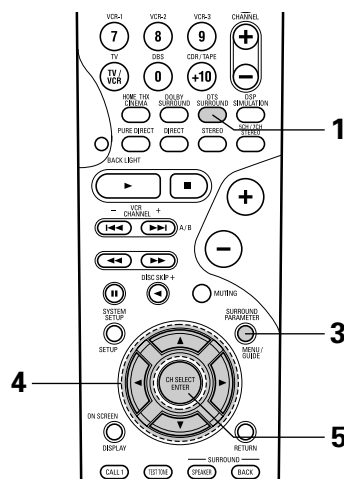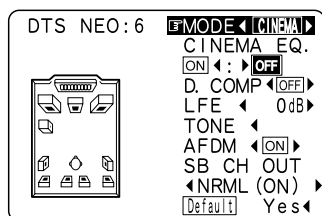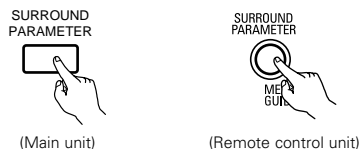


### 4 Set the various surround parameters.

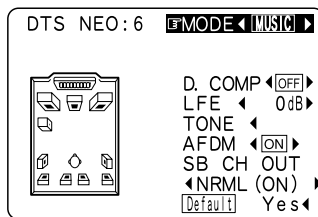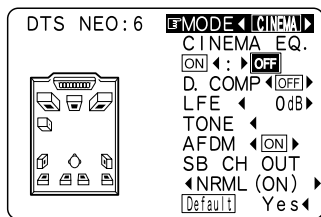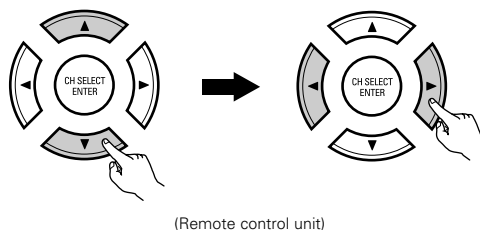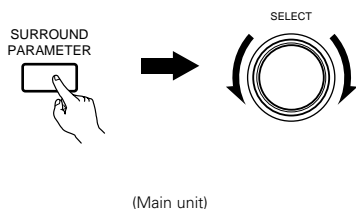

- Select CINEMA or MUSIC. (CINEMA is optimum for movies, MUSIC is optimum for music software.)

### 5 Enter the setting.

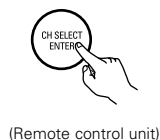

#### NOTES:


- When "Default" is selected and the ◀ cursor button is pressed, "MODE" and "TONE" are automatically set to the default value.
- In addition, "CINEMA EQ." is set to OFF.

## Adjusting the Audio Delay

When watching a DVD or other video source, the picture on the monitor may seem delayed with respect to the sound. In this case, adjust the audio delay to delay the sound and synchronize it with the picture. The audio delay setting is stored separately for each input function.

# 1

① Select the input source.




(Main unit)




(Remote control unit)

② Set the input mode to "AUTO".




(Main unit)




(Remote control unit)

③ Select the Dolby/DTS Surround.



(Main unit)



(Remote control unit)


④ Play a program source (DVD, etc.).

# 2

Press the SYSTEM SETUP button and display the System Setup Menu screen.




(Remote control unit)

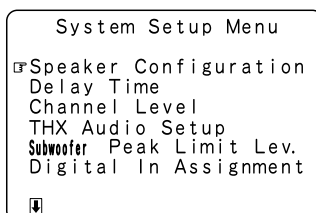


# 3

Select "Audio Delay" on the System Setup Menu screen.

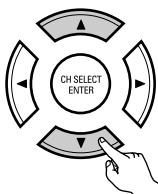

(Remote control unit)



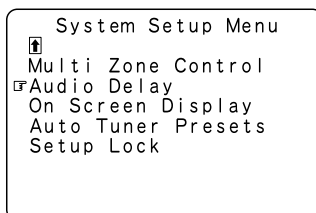


# 4

Switch to the Audio Delay adjustment screen.




(Remote control unit)

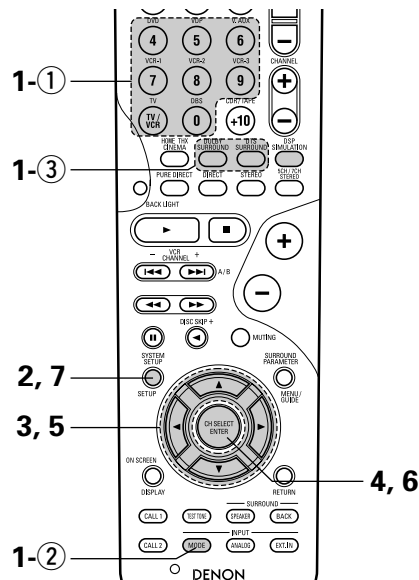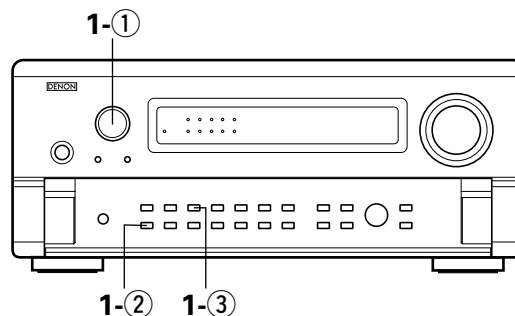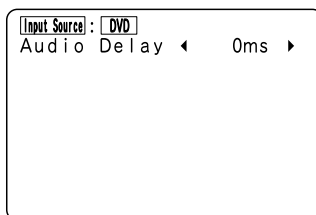


# 5

Set the delay time. (0 ms ~ 200 ms)

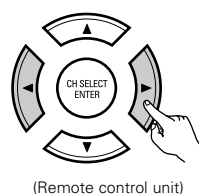

(Remote control unit)

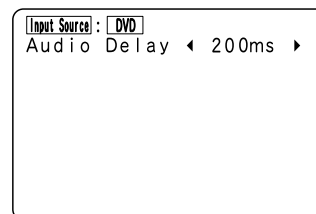

With a movie source, for example, adjust so that the movement of the actors' lips is synchronized with the sound.

# 6

Enter the setting.  
The System Setup Menu reappears.



(Remote control unit)

# 7

Press the SYSTEM SETUP button to complete the setting.

### NOTE:

The audio delay setting does not apply when playing in the EXT. IN mode or in the analog input direct mode or stereo mode (only when the crossover frequency is set to "FIXED - THX" or front speaker is set to "Large").

## 11 DENON ORIGINAL SURROUND MODES

- The AVR-4802R is equipped with a built-in high performance DSP (digital signal processor) that uses digital processing to recreate sound fields artificially. Select one of the eight provided surround modes according to the program source you want to play and adjust the parameters to achieve a more real, powerful sound field.

### Surround modes and their features

1	WIDE SCREEN	Select this to achieve an atmosphere like that of a movie theater with a large screen. In this mode, all signal sources are played in the 7.1-channel mode, including Dolby Pro Logic and Dolby Digital 5.1-channel sources. Effects simulating the multi surround speakers of movie theaters are added to the surround channels.
2	SUPER STADIUM	Select this when watching baseball or soccer programs to achieve a sound as if you were actually at the stadium. This mode provides the longest reverberation signals.
3	ROCK ARENA	Use this mode to achieve the feeling of a live concert in an arena with reflected sounds coming from all directions.
4	JAZZ CLUB	This mode creates the sound field of a live house with a low ceiling and hard walls. This mode gives jazz a very vivid realism.
5	CLASSIC CONCERT	Select this for the sound of a concert hall rich in reverberations.
6	MONO MOVIE (NOTE 1)	Select this when watching monaural movies for a greater sense of expansion.
7	MATRIX	Select this to emphasize the sense of expansion for music sources recorded in stereo. Signals consisting of the difference component of the input signals (the component that provides the sense of expansion) processed for delay are output from the surround channel.
8	5CH/7CH STEREO	The front left channel signals are output to the surround and surround back signal left channels, the front right channel signals are output to the surround and surround back signal right channels, and the in-phase component of the left and right channels is output to the center channel. Use this mode to enjoy stereo sound.

※ Depending on the program source being played, the effect may not be very noticeable.  
In this case, try other surround modes, without worrying about their names, to create a sound field suited to your tastes.

NOTE 1: When playing sources recorded in monaural, the sound will be one-sided if signals are only input to one channel (left or right), so input signals to both channels. If you have a source component with only one audio output (monophonic camcorder, etc.) obtain a "Y" adaptor cable to split the mono output to two outputs, and connect to the L and R inputs.


#### Personal Memory Plus

This set is equipped with a personal memorize function that automatically memorizes the surround modes and input modes selected for the input different sources. When the input source is switched, the modes set for that source last time it was used are automatically recalled.


※ The surround parameters, tone control settings and playback level balance for the different output channels are memorized for each surround mode.

## DSP surround simulation


- 1** Select the surround mode for the input channel.

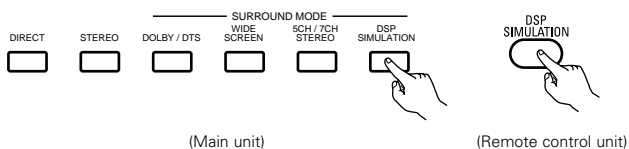




The surround mode switches in the following order each time the DSP SIMULATION button is pressed:




※ “WIDE SCREEN” is not displayed when the operation is performed with the buttons on the main unit.

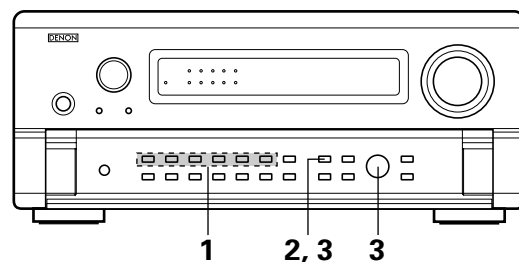


- 2** Display the surround parameter screen on the monitor.  
 ※ The screen for the selected surround mode appears.

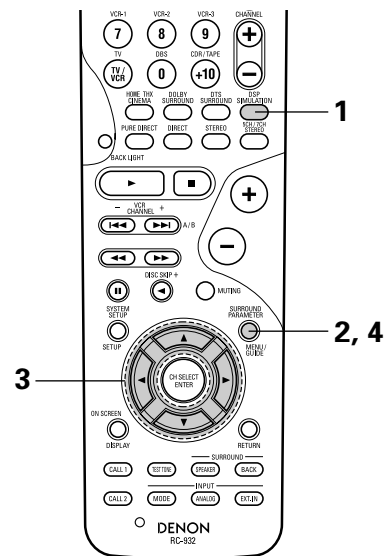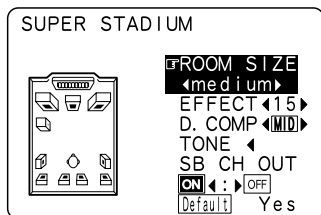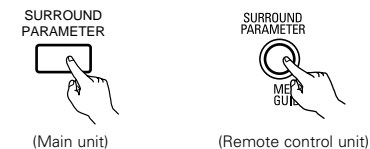

- 3** Set the parameters.

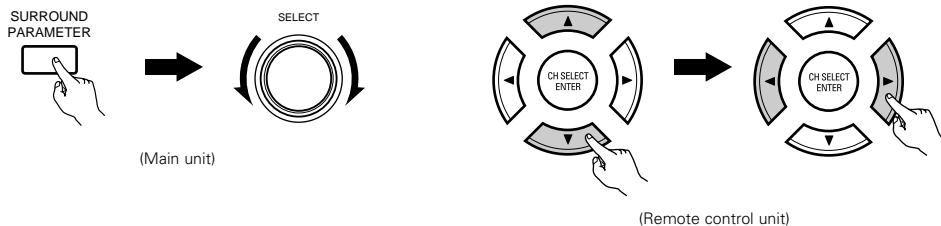

- 4** Press the SURROUND PARAMETER button to complete the setting.

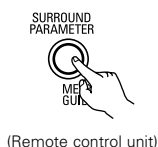

※ Stop pressing buttons (main unit) once you have completed setting the surround parameters. After several seconds the normal display reappears and the settings you have made are automatically set.


### NOTES:

- When “Default” is selected and the ◀ cursor button is pressed, “CINEMA EQ.” and “D. COMP.” are automatically set to “OFF”. In addition, “ROOM SIZE” is set to “medium”, “EFFECT LEVEL” to “10” and “DELAY TIME” to “30ms”.
- The “ROOM SIZE” expresses the expansion effect for the different surround modes in terms of the size of the sound field, not the actual size of the listening room.

## Tone control setting

- Use the tone control setting to adjust the bass and treble as desired.

**1**




(Remote control unit)

Display the surround parameter screen on the monitor.

※ The screen for the selected surround mode appears. "TONE" cannot be selected in the Direct, Pure Direct and Home THX Cinema mode.

SUPER STADIUM



ROOM SIZE  
medium

EFFECT 15

D. COMP MID


TONE

SB CH OUT

ON OFF

Default Yes


**2**

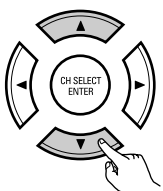

(Remote control unit)

Select "TONE".

SUPER STADIUM



ROOM SIZE  
medium

EFFECT 15

D. COMP MID


TONE

SB CH OUT

ON OFF

Default Yes

**3**



(Remote control unit)

Switch to the Tone Control screen.

Tone Control


Tone Deafat ON OFF

Bass -6dB


Treble +10dB

**4**

◎ To select Bass or Treble.

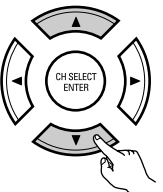


◎ To set the level.

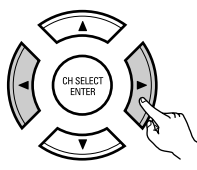


(Remote control unit)

※ If you do not want the tone to be adjusted, set "Tone Deafat" to "ON". (See page 50.)



(Remote control unit)


**5**



(Remote control unit)

Enter the setting.  
The surround menu screen re-appears.

**6**




(Remote control unit)

Press the SURROUND PARAMETER button to complete the setting.

- To operate the tone control from the main unit.

**1**




(Main unit)

The tone switches as follows each time the TONE CONTROL button is pressed.

BASS ← → TREBLE

**2**



(Main unit)

With the name of the volume to be adjusted selected, turn the SELECT knob to adjust the level.

- To increase the bass or treble:  
Turn the control clockwise. (The bass or treble sound can be increased to up to +12 dB in steps of 2 dB.)
- To decrease the bass or treble:  
Turn the control clockwise. (The bass or treble sound can be decreased up to -12 dB in steps of 2 dB.)

## Surround parameters ④

### EFFECT:

This parameter turns the effect signals with multi surround mode speaker effects on and off in the WIDE SCREEN mode. When this parameter is turned off, the SBL and SBR channel signals are equivalent to the SL and SR channels, respectively.

### LEVEL:

This parameter sets the strength of the effect signals in the WIDE SCREEN mode. It can be set in 15 steps, from "1" to "15". Set this to a low level if the positioning or phase of the surround signals sounds unnatural.

### SB CH OUT:

"ON" .....Playback is conducted using the surround back speaker.

"OFF" .....Playback is conducted without using the surround back speaker.

### ROOM SIZE:

This sets the size of the sound field.

There are five settings: "small", "med.s" (medium-small), "medium", "med.l" (medium-large) and "large". "small" recreates a small sound field, "large" a large sound field.

### EFFECT LEVEL:

This sets the strength of the surround effect.

The level can be set in 15 steps from 1 to 15. Lower the level if the sound seems distorted.

### DELAY TIME:

In the matrix mode only, the delay time can be set within the range of 0 to 300 ms.

### STONE CONTROL:

This can be set individually for the separate surround modes other than Direct, Pure Direct and Home THX Cinema.

## ■ Surround modes and parameters

Mode	Signals and adjustability in the different modes								
	Channel output					Parameter (default values are shown in parentheses)			
	FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	SUB-WOOFER	When playing Dolby Digital and DTS signals			SB CH OUT (MODE)
PURE DIRECT, DIRECT	○	×	×	×	⊗	○ (OFF)	○ (0dB)	×	×
STEREO	○	×	×	×	⊗	○ (OFF)	○ (0dB)	×	×
EXTERNAL INPUT	○	⊗	⊗	⊗	⊗	×	×	×	×
WIDE SCREEN	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
HOME THX CINEMA	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DOLBY PRO LOGIC II	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DOLBY DIGITAL	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DTS SURROUND	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DTS NEO:6	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
5/7CH STEREO	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
SUPER STADIUM	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
ROCK ARENA	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
JAZZ CLUB	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
CLASSIC CONCERT	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
MONO MOVIE	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
MATRIX	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○

○ : Signal / Adjustable  
× : No signal / Not adjustable  
⊗ : Turned on or off by speaker configuration setting

○ : Able  
× : Unable

Mode	Signals and adjustability in the different modes								
	Parameter (default values are shown in parentheses)								
	TONE CONTROL	CINEMA EQ.	MODE	SURROUND PARAMETER			PRO LOGIC II MUSIC MODE ONLY		
				ROOM SIZE	EFFECT LEVEL	DELAY TIME	PANORAMA	DIMENSION	CENTER WIDTH
PURE DIRECT, DIRECT	×	×	×	×	×	×	×	×	×
STEREO	○ (0dB)	×	×	×	×	×	×	×	×
EXTERNAL INPUT	○ (0dB)	×	×	×	×	×	×	×	×
WIDE SCREEN	○ (0dB)	○ (OFF)	×	×	○ (ON, 10)	×	×	×	×
HOME THX CINEMA	×	×	○ (CINEMA)	×	×	×	×	×	×
DOLBY PRO LOGIC II	○ (0dB)	○ (OFF)	○ (CINEMA)	×	×	×	○ (OFF)	○ (3)	○ (3)
DOLBY DIGITAL	○ (0dB)	○ (OFF)	×	×	×	×	×	×	×
DTS SURROUND	○ (0dB)	○ (OFF)	×	×	×	×	×	×	×
DTS NEO:6	○ (0dB)	○ (OFF)	○ (CINEMA)	×	×	×	×	×	×
5/7CH STEREO	○ (0dB)	×	×	×	×	×	×	×	×
SUPER STADIUM	○ (Note 1)	×	×	○ (Medium)	○ (10)	×	×	×	×
ROCK ARENA	○ (Note 2)	×	×	○ (Medium)	○ (10)	×	×	×	×
JAZZ CLUB	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×
CLASSIC CONCERT	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×
MONO MOVIE	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×
MATRIX	○ (0dB)	×	×	×	×	○ (30msec)	×	×	×

(Note 1) BASS: +6 dB, TREBLE: 0 dB  
 (Note 2) BASS: +8 dB, TREBLE: 4 dB

○ : Adjustable  
 × : Not adjustable

## ■ Differences in surround mode names depending on the input signals

Surround Mode	Input signals						
	ANALOG	LINEAR PCM	DTS			DOLBY DIGITAL	
			DTS (5.1 ch)	DTS 96/24 (5.1 ch)	DTS (6.1 ch)	D. D. (2 ch)	D. D. (5.1 ch)
PURE DIRECT, DIRECT	○	○	○	○	○	○	○
STEREO	○	○	○	○	○	○	○
HOME THX CINEMA	THX	THX	*ES MTRX6.1 + THX THX Ultra2 Cinema THX Music Mode THX5.1	*ES MTRX6.1 + THX THX Ultra2 Cinema THX Music Mode THX5.1	© ES DSCRT6.1 + THX ES MTRX6.1 + THX	THX	*THX SURROUND EX THX Ultra2 Cinema THX Music Mode THX5.1
DTS SURROUND	×	×	*DTS ES MTRX DTS SURROUND	*DTS ES MTRX DTS 96/24	© DTS ES DSCRT6.1 DTS MTRX6.1	×	×
DTS NEO:6	DTS NEO:6	DTS NEO:6	×	×	×	DTS NEO:6	×
DOLBY DIGITAL	×	×	×	×	×	×	*DOLBY DIGITAL EX DOLBY DIGITAL
DOLBY PRO LOGIC II	DOLBY PRO LOGIC II	DOLBY PRO LOGIC II	×	×	×	DOLBY PRO LOGIC II	×
DSP SIMULATION	○	○	○	○	○	○	○

○ : Selectable

\* : The surround mode name differs depending on the "MODE/SB CH OUT" surround parameter setting.

© : The surround mode name differs depending on the input signal.

× : Not selectable




## 12 LISTENING TO THE RADIO


- Check that the remote control unit is set to AMP.

### Auto tuning


- Set the input function to "TUNER".



INPUT SELECTOR  
(Main unit)




TUNER  
(Remote control unit)
- Watching the display, press the BAND button to select the desired band (AM or FM).



BAND  
(Remote control unit)

Watching the display, press the BAND button to select the desired band (AM or FM).
- Press the MODE button to set the auto tuning mode.

"Auto" appears on the display.




MODE  
(Remote control unit)

Press the MODE button to set the auto tuning mode.

"Auto" appears on the display.
- Press the TUNING + (up) or - (down) button.

Automatic searching begins, then stops when a station is tuned in.





TUNING / TV VOL  
(Remote control unit)

Press the TUNING + (up) or - (down) button.


Automatic searching begins, then stops when a station is tuned in.

If tuning does not stop at the desired station, use to the "Manual tuning" operation.

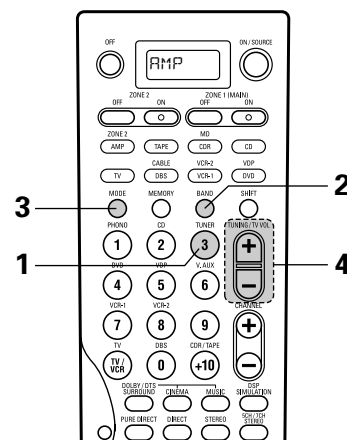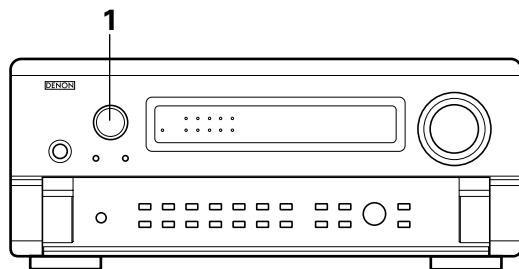


### Manual tuning


- Set the input function to "TUNER".



INPUT SELECTOR  
(Main unit)




TUNER  
(Remote control unit)
- Watching the display, press the BAND button to select the desired band (AM or FM).



BAND  
(Remote control unit)

Watching the display, press the BAND button to select the desired band (AM or FM).
- Press the MODE button to set the manual tuning mode.

Check that the display's "AUTO" indicator turns off.




MODE  
(Remote control unit)

Press the MODE button to set the manual tuning mode.

Check that the display's "AUTO" indicator turns off.

- Press the TUNING + (up) or - (down) button to tune in the desired station.

The frequency changes continuously when the button is held in.



TUNING / TV VOL  
(Remote control unit)

Press the TUNING + (up) or - (down) button to tune in the desired station.


The frequency changes continuously when the button is held in.

#### NOTES:

- When in the auto tuning mode on the FM band, the "STEREO" indicator lights on the display when a stereo broadcast is tuned in. At open frequencies, the noise is muted and the "TUNED" and "STEREO" indicators turn off.
- When the manual tuning mode is set, FM stereo broadcasts are received in monaural and the "STEREO" indicator turns off.

## Preset memory

- 1 Use the "Auto tuning" or "Manual tuning" operation to tune in the station to be preset in the memory.

- 2  Press the MEMORY button.  
(Remote control unit)

- 3 **Main unit:**  
Press the TUNER PRESET button.

**Remote control unit:**



Press the SHIFT button and select the desired memory block (A to E).




- 4 **Main unit:**  
Select the desired preset channel (1 to 8).



**Remote control unit:**

Press the CHANNEL + (up) or - (down) button to select the desired preset channel (1 to 8).

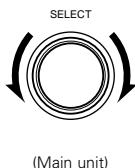

- 5  Press the MEMORY button again to store the station in the preset memory.  
(Remote control unit)



To preset other channels, repeat steps 2 to 5.  
A total of 40 broadcast stations can be preset — 8 stations (channels 1 to 8) in each of blocks A to E.

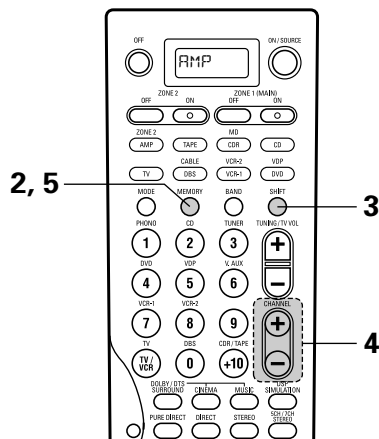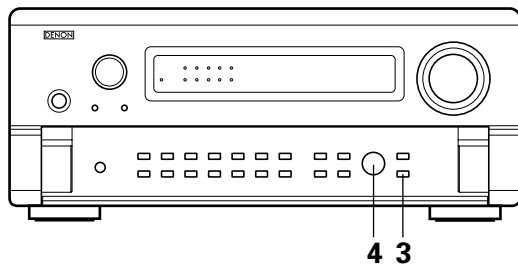

## Checking the preset stations

- The preset (broadcast) stations can be checked on the on screen display.

- 1 Press the ON SCREEN/DISPLAY button repeatedly until the "Tuner Preset Stations" screen appears on the OSD.

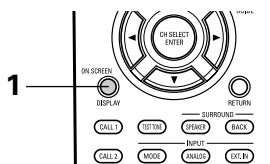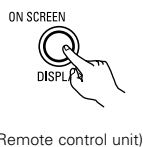


Tuner Preset Stations	
A1FM	87.50MHz
A2FM	89.10MHz
A3FM	98.10MHz
A4FM	107.90MHz
A5FM	90.10MHz
A6FM	90.10MHz
A7FM	90.10MHz
A8FM	90.10MHz


OSD-8

## Recalling preset stations


- Recalling preset stations from the remote control unit.

**1**  Watching the display, press the SHIFT button to select the preset memory block.


(Remote control unit)

**2**  Watching the display, press the CHANNEL + (up) or - (down) button to select the desired preset channel.


(Remote control unit)

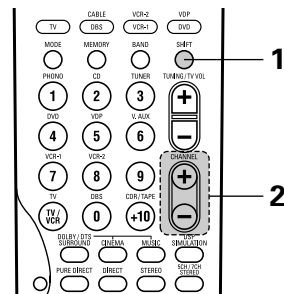


- Recalling preset stations from the main unit's panel.

**1**  Press the TUNING PRESET button.

(Main unit)

**2**  Turn the SELECT knob and select the desired preset channel.

(Main unit)

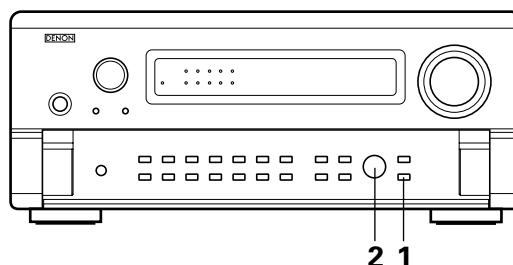

## 13 LAST FUNCTION MEMORY

- This unit is equipped with a last function memory which stores the input and output setting conditions as they were immediately before the power is switched off. This function eliminates the need to perform complicated resettings when the power is switched on.
- The unit is also equipped with a back-up memory. This function provides approximately one week of memory storage when the main unit's power switch is off and with the power cord disconnected.

## 14 INITIALIZATION OF THE MICROPROCESSOR

When the indication of the display is not normal or when the operation of the unit does not shows the reasonable result, the initialization of the microprocessor is required by the following procedure.


**1** Switch off the unit and remove the AC cord from the wall outlet.

**2** Press and hold the DIRECT buttons and STEREO buttons, and at the same time, plug in the AC cord.

**3** Check that the entire display is flashing with an interval of about 1 second, and release your fingers from the 2 buttons and the microprocessor will be initialized.

### NOTES:

- If step 3 does not work, start over from step 1.
- If the microprocessor has been reset, all the button settings are reset to the default values (the values set upon shipment from the factory).

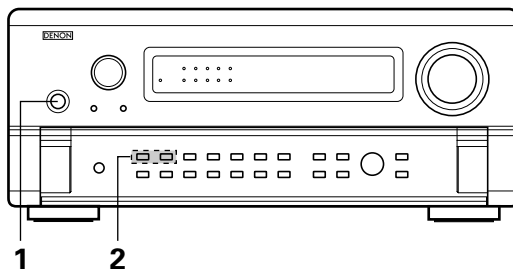

## 15 TROUBLESHOOTING

If a problem should arise, first check the following.

1. Are the connections correct ?

2. Have you operated the receiver according to the Operating Instructions ?

3. Are the speakers, turntable and other components operating properly ?

If this unit is not operating properly, check the items listed in the table below. Should the problem persist, there may be a malfunction.

Disconnect the power immediately and contact your store of purchase.

Symptom	Cause	Measures	Page
DISPLAY not lit and sound not produced when power switch set to on.	<ul style="list-style-type: none"> <li>Power cord not plugged in securely.</li> </ul>	<ul style="list-style-type: none"> <li>Check the insertion of the power cord plug.</li> </ul>	6
DISPLAY lit but sound not produced.	<ul style="list-style-type: none"> <li>Speaker cords not securely connected.</li> <li>Input source selector button position is not appropriate.</li> <li>Volume control set to minimum.</li> <li>MUTING is on.</li> <li>No digital signal is being input.</li> <li>Speaker A or B button is set to "OFF".</li> </ul>	<ul style="list-style-type: none"> <li>Connect securely.</li> <li>Switch to the proper position.</li> <li>Turn volume up to suitable level.</li> <li>Switch off MUTING.</li> <li>Properly select a digital signal input source.</li> <li>Set the button for the connected speaker terminals to "ON".</li> </ul>	12, 13 47 48 51 28, 47 18
Nothing is displayed on monitor.	<ul style="list-style-type: none"> <li>AVR-4802R's video output jacks and monitor's input jacks are not properly connected.</li> <li>Monitor TV's input setting is wrong.</li> <li>Connections of the various component's video signals are not unified.</li> <li>VIDEO OFF mode is set.</li> <li>PURE DIRECT mode is set.</li> </ul>	<ul style="list-style-type: none"> <li>Check that the connections are correct.</li> <li>Set the TV's input selector to the jacks to which video signals are connected.</li> <li>Unify to composite or S jack.</li> <li>VIDEO ON mode is set.</li> <li>Mode other than PURE DIRECT mode is set.</li> </ul>	7 ~ 9 7 ~ 9 7 ~ 9 50 49
Ultra2 Cinema/THX MusicMode cannot be set.	<ul style="list-style-type: none"> <li>Surround back speaker set to 1.</li> </ul>	<ul style="list-style-type: none"> <li>Connect two surround back speakers.</li> </ul>	21, 59
No dts sound is produced.	<ul style="list-style-type: none"> <li>DVD player's audio output setting is not set to bit stream.</li> <li>DVD player is not dts-compatible.</li> <li>AVR-4802R's input setting is set to analog.</li> </ul>	<ul style="list-style-type: none"> <li>Make the DVD player's initial settings.</li> <li>Use a dts-compatible player.</li> <li>Set to AUTO or dts.</li> </ul>	— — 47
Copying from DVD to VCR is not possible.	<ul style="list-style-type: none"> <li>Mode video software contains copy prohibit signals.</li> </ul>	<ul style="list-style-type: none"> <li>Copying is not possible.</li> </ul>	—
No sound is produced from subwoofer.	<ul style="list-style-type: none"> <li>Subwoofer's power is not on.</li> <li>Subwoofer's initial setting is set to "NO".</li> <li>Subwoofer's output is not connected.</li> </ul>	<ul style="list-style-type: none"> <li>Turn on the power.</li> <li>Set the setting to "YES".</li> <li>Connect properly.</li> </ul>	— 18 13
No test tones are produced.	<ul style="list-style-type: none"> <li>Surround mode is set to a mode other than Dolby Surround.</li> </ul>	<ul style="list-style-type: none"> <li>Set to Dolby Surround.</li> </ul>	—
No sound is produced from surround speakers.	<ul style="list-style-type: none"> <li>Surround mode is set to "STEREO".</li> </ul>	<ul style="list-style-type: none"> <li>Set to a mode other than "STEREO".</li> </ul>	—
This unit does not operate properly when remote control unit is used.	<ul style="list-style-type: none"> <li>Batteries dead.</li> <li>Remote control unit too far from this unit.</li> <li>Obstacle between this unit and remote control unit.</li> <li>Different button is being pressed.</li> <li>⊕ and ⊖ ends of battery inserted in reverse.</li> </ul>	<ul style="list-style-type: none"> <li>Replace with new batteries.</li> <li>Move closer.</li> <li>Remove obstacle.</li> <li>Press the proper button.</li> <li>Insert batteries properly.</li> </ul>	33 33 — — 33

## 16 ADDITIONAL INFORMATION

### Optimum surround sound for different sources

There are currently various types of multi-channel signals (signals or formats with more than two channels).

#### ■ Types of multi-channel signals


Dolby Digital (EX), Dolby Pro Logic, DTS (ES), high definition 3-1 signals (Japan MUSE Hi-Vision audio), DVD-Audio, SACD (Super Audio CD), MPEG multi-channel audio, etc.

“Source” here does not refer to the type of signal (format) but the recorded content. Sources can be divided into two major categories.

#### ■ Types of sources

##### • Movie audio


Signals created to be played in movie theaters. In general sound is recorded to be played in movie theaters equipped with multiple surround speakers, regardless of the format (Dolby Digital, DTS, etc.).

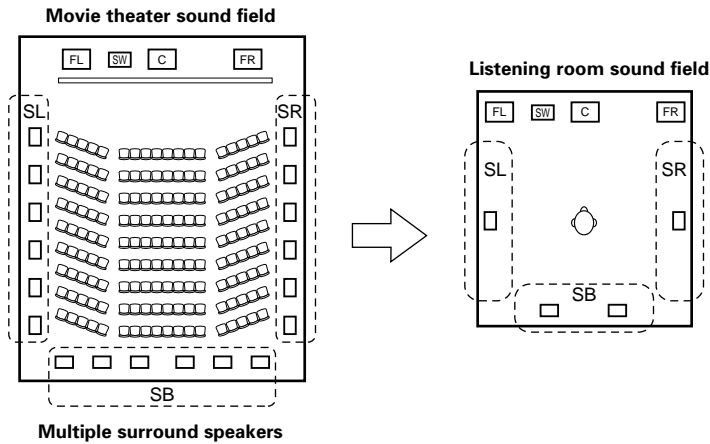

In this case it is important to achieve the same sense of expansion as in a movie theater with the surround channels. To do so, in some cases the number of surround speakers is increased (to four or eight) or speakers with bipolar or dipolar properties are used.

( SL: Surround L channel  
SR: Surround R channel  
SB: Surround B (back) channel

- **Other types of audio** These signals are designed to recreate a 360° sound field using three to five speakers.

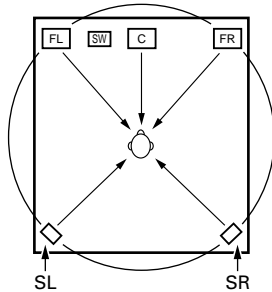

In this case the speakers should surround the listener from all sides to create a uniform sound field from 360°. Ideally the surround speakers should function as “point” sound sources in the same way as the front speakers.


These two types of sources thus have different properties, and different speaker settings, particularly for the surround speakers, are required in order to achieve the ideal sound.

The AVR-4802R's surround speaker selection function makes it possible to change the settings according to the combination of surround speakers being used and the surrounding environment in order to achieve the ideal surround sound for all sources. This means that you can connect a pair of bipolar or dipolar surround speakers (mounted on either side of the prime listening position), as well as a separate pair of direct radiating (monopolar) speakers placed at the rear corners of the listening room.

## Surround back speakers


The THX Surround EX format adds new “Surround Back” (SB) channels to the conventional 5.1-channel system. This makes it easy to achieve sound positioned directly behind the listener, something that was previously difficult with sources designed for conventional multi surround speakers. In addition, the acoustic image extending between the sides and the rear is narrowed, thus greatly improving the expression of the surround signals for sounds moving from the sides to the back and from the front to the point directly behind the listening position.

**Change of positioning and acoustic image with 5.1-channel systems**

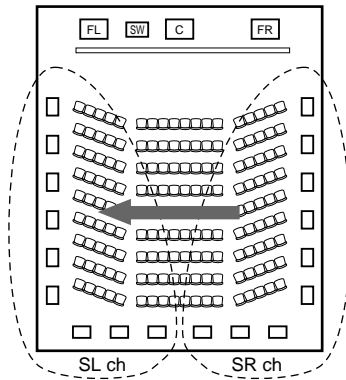

**Movement of acoustic image from SR to SL**

**Change of positioning and acoustic image with THX Surround EX system**

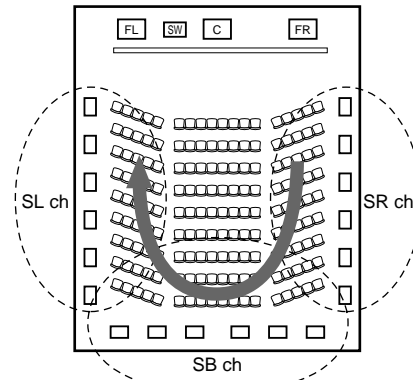

**Movement of acoustic image from SR to SB to SL**

Speaker(s) for one or two channels are required in order to achieve a THX Surround EX system with the AVR-4802R. Adding these, however, allows you to achieve stronger surround effects not only with sources recorded in THX Surround EX, but also with conventional 2- to 5.1-channel sources. The WIDE SCREEN mode is a mode for achieving surround sound with up to 7.1 channels using surround back speakers, for sources recorded in conventional Dolby Surround as well as Dolby Digital 5.1-channel and DTS Surround 5.1-channel sources. Furthermore, all the Denon original surround modes (see page 68) are compatible with 7.1-channel playback, so you can enjoy 7.1-channel sound with any signal source.

### ■ Number of surround back speakers

With THX Surround EX, the surround back channel consists of one channel of playback signals, but we recommend using two speakers. Two speakers must be used when playing in the THX Ultra2 Cinema mode and THX Music mode.

### ■ Placement of the surround left and right channels when using surround back speakers

Using surround back speakers greatly improves the positioning of the sound at the rear. Because of this, the surround left and right channels play an important role in achieving a smooth transition of the acoustic image from the front to the back. As shown on the diagram above, in a movie theater the surround signals are also produced from diagonally in front of the listeners, creating an acoustic image as if the sound were floating in space.

To achieve these effects, we recommend placing the speakers for the surround left and right channels slightly more towards the front than with conventional surround systems. Doing so sometimes increases the surround effect when playing conventional 5.1-channel sources in the THX Surround EX mode. Check the surround effects of the various modes before selecting the surround mode.


## Speaker setting examples

Here we describe a number of speaker settings for different purposes. Use these examples as guides to set up your system according to the type of speakers used and the main usage purpose.


### 1. For THX Surround EX systems (using surround back speakers)

#### (1) Basic setting for primarily watching movies

This is recommended when mainly playing movies and using regular single way or 2-way speakers for the surround speakers.

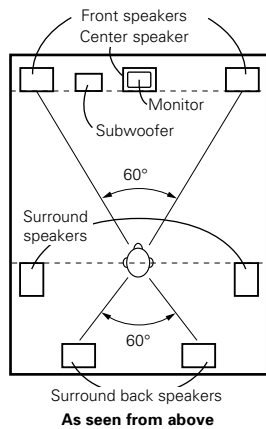


- Set the front speakers with their front surfaces as flush with the TV or monitor screen as possible. Set the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Consult the owner's manual for your subwoofer for advice on placing the subwoofer within the listening room.
- If the surround speakers are direct-radiating (monopolar) then place them slightly behind and at an angle to the listening position and parallel to the walls at a position 60 to 90 cm (2 to 3 feet) above ear level at the prime listening position.
- When using two surround back speakers, set them at the back facing front and with both speakers at the same distance from the listening point. When using one surround back speaker, place it at the rear center facing the front at a slightly higher position (0 to 20 cm) than the surround speakers.
- We recommend installing the surround back speaker(s) at a slightly downward facing angle. This effectively prevents the surround back channel signals from reflecting off the monitor or screen at the front center, resulting in interference and making the sense of movement from the front to the back less sharp.
- Connect the surround speakers to the surround speaker A jacks on the AVR-4802R and set all settings on the setup menu to "A". (This is the factory default setting. For details, see page 16.)

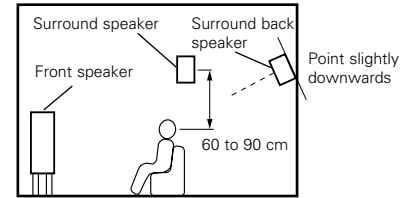

#### (2) Setting for primarily watching movies using diffusion type speakers for the surround speakers


For the greatest sense of surround sound envelopment, diffuse radiation speakers such as bipolar types, or dipolar (THX) types, provide a wider dispersion than is possible to obtain from a direct radiating speaker (monopolar). Place these speakers at either side of the prime listening position, mounted above ear level.

Path of the surround sound from the speakers to the listening position

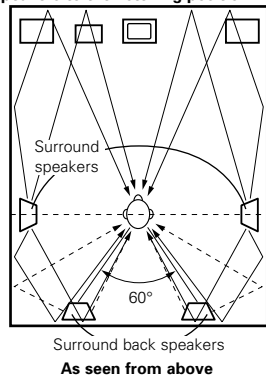


- Set the front speakers, center speaker and subwoofer in the same positions as in example (1).
- It is best to place the surround speakers directly at the side or slightly to the front of the viewing position, and 60 to 90 cm (2 to 3 feet) above the ears.
- Same as surround back speaker installation method (1).
- Connect the surround speakers to the surround speaker A jacks on the AVR-4802R and set all settings on the setup menu to "A". (This is the factory default setting. For details, see page 16.)
- The signals from the surround channels reflect off the walls as shown on the diagram at the left, creating an enveloping and realistic surround sound presentation.

For multi-channel music sources however, the use of bipolar or dipolar speakers mounted at the sides of the listening position may not be satisfactory in order to create a coherent 360 degree surround sound field. Connect another pair of direct radiating speakers as described in example (3) and place them at the rear corners of the room facing towards the prime listening position.

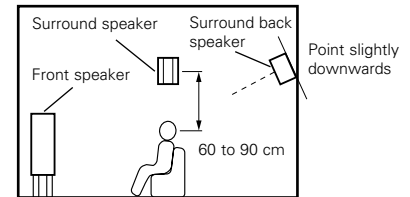

### (3) When using different surround speakers for movies and music


To achieve more effective surround sound for both movies and music, use different sets of surround speakers and different surround modes for the two types of sources.

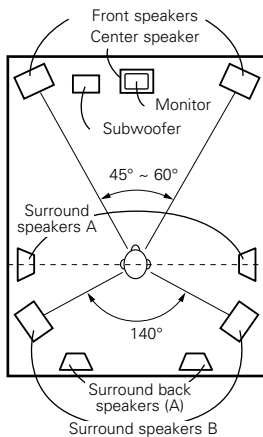

As seen from above

- Set the front speakers slightly wider apart than the setup for watching movies only and point them toward the listening position in order to assure clear positioning of the sound.
- Set the center speaker in the same positions as in example (1).
- Set surround speakers A for watching movies in the positions described in example (1) or (2), depending on the types of speakers used.
- Set surround speakers B for playing multi-channel music at the same height as the front speakers and slightly at an angle to the rear of the listening position, and point them toward the listening position.
- Connect the surround speakers for watching movies to the surround speaker A jacks on the AVR-4802R, the surround speakers for playing multi-channel music to the surround speaker B jacks. Set the surround speaker selection on the setup menu. (For instructions, see page 19.)
- To activate the appropriate speakers for movies and music, we suggest that during setup, choose Dolby Digital/DTS with THX and Surround Speakers A (the bipolar or dipolar speakers mounted at the sides of the listening position). Choose Dolby Digital/DTS without THX and Surround Speakers B (the direct radiating speakers mounted at the rear corners of the listening room). Then, by simply activating the THX function (used during movie playback, the Surround A speakers are automatically activated. For multi-channel music listening (Dolby Digital or DTS music programs), turn off the THX enhancements by touching the THX button on the remote control, and the Surround B speakers will be automatically activated.


Example: Movie sources (Dolby, DTS surround, etc.)  
 "THX" or "THX 5.1" mode: Speakers A  
 Music sources (DVD video, DTS CD, etc.)  
 "Dolby/DTS surround": Speakers B

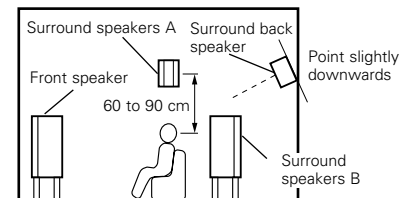

As seen from the side


※ The speakers can be switched at the touch of a button by turning HOME THX CINEMA on when playing movies and off when playing multi-channel music.

## 2. When not using surround back speakers

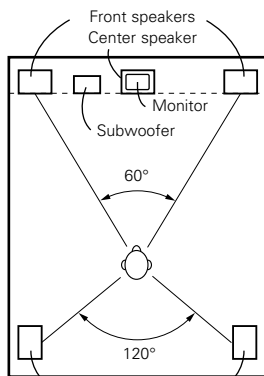

As seen from above

- Set the front speakers with their front surfaces as flush with the TV or monitor screen as possible. Set the center speaker between the front left and right speakers and no further from the listening position than the front speakers.
- Consult the owner's manual for your subwoofer for advice on placing the subwoofer within the listening room.
- If the surround speakers are direct-radiating (monopolar) then place them slightly behind and at an angle to the listening position and parallel to the walls at a position 60 to 90 centimeters above ear level at the prime listening position.
- Connect the surround speakers to the surround speaker A jacks on the AVR-4802R and set all settings on the setup menu to "A". (This is the factory default setting. For details, see page 16.)

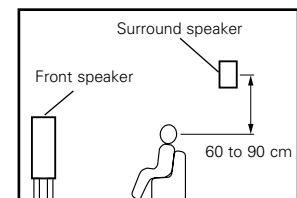

As seen from the side

The surround speakers can be switched freely during playback with the surround parameter adjustment. (For instructions, see page 51.)



## Surround

The AVR-4802R is equipped with a digital signal processing circuit that lets you play program sources in the surround mode to achieve the same sense of presence as in a movie theater.

### (1) Dolby Surround

#### ① Dolby Digital

Dolby Digital is the multi-channel digital signal format developed by Dolby Laboratories.

Dolby Digital consists of up to "5.1" channels - front left, front right, center, surround left, surround right, and an additional channel exclusively reserved for additional deep bass sound effects (the Low Frequency Effects – LFE – channel, also called the ".1" channel, containing bass frequencies of up to 120 Hz).

Unlike the analog Dolby Pro Logic format, Dolby Digital's main channels can all contain full range sound information, from the lowest bass, up to the highest frequencies – 22 kHz. The signals within each channel are distinct from the others, allowing pinpoint sound imaging, and Dolby Digital offers tremendous dynamic range from the most powerful sound effects to the quietest, softest sounds, free from noise and distortion.

#### ■ Dolby Digital and Dolby Pro Logic

Comparison of home surround systems	Dolby Digital	Dolby Pro Logic
No. recorded channels (elements)	5.1 ch	2 ch
No. playback channels	5.1 ch	4 ch
Playback channels (max.)	L, R, C, SL, SR, SW	L, R, C, S (SW - recommended)
Audio processing	Digital discrete processing Dolby Digital encoding/decoding	Analog matrix processing Dolby Surround
High frequency playback limit of surround channel	20 kHz	7 kHz

#### ■ Dolby Digital compatible media and playback methods

Marks indicating Dolby Digital compatibility: .

The following are general examples. Also refer to the player's operating instructions.

Media	Dolby Digital output jacks	Playback method (reference page)
LD (VDP)	Coaxial Dolby Digital RF output jack ※ 1	Set the input mode to "AUTO". (Page 47)
DVD	Optical or coaxial digital output (same as for PCM) ※ 2	Set the input mode to "AUTO". (Page 47)
Others (satellite broadcasts, CATV, etc.)	Optical or coaxial digital output (same as for PCM)	Set the input mode to "AUTO". (Page 47)

※ 1 Please use a commercially available adapter when connecting the Dolby Digital RF output jack of the LD player to the digital input jack.

Please refer to the instruction manual of the adapter when making connection.

※ 2 Some DVD digital outputs have the function of switching the Dolby Digital signal output method between "bit stream" and "(convert to) PCM". When playing in Dolby Digital surround on the AVR-4802R, switch the DVD player's output mode to "bit stream". In some cases players are equipped with both "bit stream + PCM" and "PCM only" digital outputs. In this case connect the "bit stream + PCM" jacks to the AVR-4802R.

## ② Dolby Pro Logic II

- Dolby Pro-Logic II is a new multi-channel playback format developed by Dolby Laboratories using feedback logic steering technology and offering improvements over conventional Dolby Pro Logic circuits.
- Dolby Pro Logic II can be used to decode not only sources recorded in Dolby Surround (※) but also regular stereo sources into five channels (front left, front right, center, surround left and surround right) to achieve surround sound.
- Whereas with conventional Dolby Pro Logic the surround channel playback frequency band was limited, Dolby Pro Logic II offers a wider band range (20 Hz to 20 kHz or greater). In addition, the surround channels were monaural (the surround left and right channels were the same) with previous Dolby Pro Logic, but Dolby Pro Logic II they are played as stereo signals.
- Various parameters can be set according to the type of source and the contents, so it is possible to achieve optimum decoding (see page 64).

### ※ Sources recorded in Dolby Surround

These are sources in which three or more channels of surround have been recorded as two channels of signals using Dolby Surround encoding technology.

Dolby Surround is used for the sound tracks of movies recorded on DVDs, LDs and video cassettes to be played on stereo VCRs, as well as for the stereo broadcast signals of FM radio, TV, satellite broadcasts and cable TV.


Decoding these signals with Dolby Pro Logic II makes it possible to achieve multi-channel surround playback. The signals can also be played on ordinary stereo equipment, in which case they provide normal stereo sound.

There are two types of DVD Dolby surround recording signals.

- ① 2-channel PCM stereo signals
- ② 2-channel Dolby Digital signals

When either of these signals is input to the AVR-4802R, the surround mode is automatically set to Dolby Pro Logic II when the "DOLBY/DTS SURROUND" mode is selected.

### ■ Sources recorded in Dolby Surround are indicated with the logo mark shown below.

Dolby Surround support mark: 

Manufactured under license from Dolby Laboratories.

"Dolby", "Pro Logic" and the double-D symbol are trademarks of Dolby Laboratories.

## (2) DTS Digital Surround

DTS Digital Surround (also called simply DTS) is a multi-channel digital signal format developed by Digital Theater Systems.

DTS offers the same "5.1" playback channels as Dolby Digital (front left, front right and center, surround left and surround right) as well as the stereo 2-channel mode. The signals for the different channels are fully independent, eliminating the risk of deterioration of sound quality due to interference between signals, crosstalk, etc.



DTS features a relatively higher bit rate as compared to Dolby Digital (1234 kbps for CDs and LDs, 1536 kbps for DVDs) so it operates with a relatively low compression rate. Because of this the amount of data is great, and when DTS playback is used in movie theaters, a separate CD-ROM synchronized with the film is played.

With LDs and DVDs, there is of course no need for an extra disc; the pictures and sound can be recorded simultaneously on the same disc, so the discs can be handled in the same way as discs with other formats.

There are also music CDs recorded in DTS. These CDs include 5.1-channel surround signals (compared to two channels on current CDs). They do not include picture data, but they offer surround playback on CD players that are equipped with digital outputs (PCM type digital output required).

DTS surround track playback offers the same intricate, grand sound as in a movie theater, right in your own listening room.

### ■ DTS compatible media and playback methods

Marks indicating DTS compatibility:  and .

The following are general examples. Also refer to the player's operating instructions.

Media	DTS Digital output jacks	Playback method (reference page)
CD	Optical or coaxial digital output (same as for PCM) ※ 2	Set the input mode to "AUTO" or "DTS" (page 47). Never set the mode to "ANALOG" or "PCM". ※ 1
LD (VDP)	Optical or coaxial digital output (same as for PCM) ※ 2	Set the input mode to "AUTO" or "DTS" (page 47). Never set the mode to "ANALOG" or "PCM". ※ 1
DVD	Optical or coaxial digital output (same as for PCM) ※ 3	Set the input mode to "AUTO" or "DTS" (page 47).

- ※ 1 DTS signals are recorded in the same way on CDs and LDs as PCM signals. Because of this, the un-decoded DTS signals are output as random “hissy” noise from the CD or LD player’s analog outputs. If this noise is played with the amplifier set at a very high volume, it may possibly cause damage to the speakers. To avoid this, be sure to switch the input mode to “AUTO” or “DTS” before playing CDs or LDs recorded in DTS. Also, never switch the input mode to “ANALOG” or “PCM” during playback. The same holds true when playing CDs or LDs on a DVD player or LD/DVD compatible player. For DVDs, the DTS signals are recorded in a special way so this problem does not occur.
- ※ 2 The signals provided at the digital outputs of a CD or LD player may undergo some sort of internal signal processing (output level adjustment, sampling frequency conversion, etc.). In this case the DTS-encoded signals may be processed erroneously, in which case they cannot be decoded by the AVR-4802R, or may only produce noise. Before playing DTS signals for the first time, turn down the master volume to a low level, start playing the DTS disc, then check whether the DTS indicator on the AVR-4802R (see page 61) lights before turning up the master volume.
- ※ 3 A DVD player with DTS-compatible digital output is required to play DTS DVDs. A DTS Digital Output logo is featured on the front panel of compatible DVD players. Recent DENON DVD player models feature DTS-compatible digital output – consult the player’s owner’s manual for information on configuring the digital output for DTS playback of DTS-encoded DVDs.

Manufactured under license from Digital Theater Systems, Inc. US Pat. No. 5,451,942, 5,956,674, 5,974,380, 5,978,762 and other world-wide patents issued and pending. “DTS”, “DTS-ES Extended Surround” and “Neo:6” are trademarks of Digital Theater Systems, Inc. Copyright 1996, 2000 Digital Theater Systems, Inc. All Rights Reserved.

### (3) DTS-ES Extended Surround™

DTS-ES Extended Surround is a new multi-channel digital signal format developed by Digital Theater Systems Inc. While offering high compatibility with the conventional DTS Digital Surround format, DTS-ES Extended Surround greatly improves the 360-degree surround impression and space expression thanks to further expanded surround signals. This format has been used professionally in movie theaters since 1999.

In addition to the 5.1 surround channels (FL, FR, C, SL, SR and LFE), DTS-ES Extended Surround also offers the SB (Surround Back, sometimes also referred to as “surround center”) channel for surround playback with a total of 6.1 channels. DTS-ES Extended Surround includes two signal formats with different surround signal recording methods, as described below.

#### ■ DTS-ES™ Discrete 6.1

DTS-ES Discrete 6.1 is the newest recording format. With it, all 6.1 channels (including the SB channel) are recorded independently using a digital discrete system. The main feature of this format is that because the SL, SR and SB channels are fully independent, the sound can be designed with total freedom and it is possible to achieve a sense that the acoustic images are moving about freely among the background sounds surrounding the listener from 360 degrees.

Though maximum performance is achieved when sound tracks recorded with this system are played using a DTS-ES decoder, when played with a conventional DTS decoder the SB channel signals are automatically down-mixed to the SL and SR channels, so none of the signal components are lost.

#### ■ DTS-ES™ Matrix 6.1

With this format, the additional SB channel signals undergo matrix encoding and are input to the SL and SR channels beforehand. Upon playback they are decoded to the SL, SR and SB channels. The performance of the encoder used at the time of recording can be fully matched using a high precision digital matrix decoder developed by DTS, thereby achieving surround sound more faithful to the producer’s sound design aims than with conventional 5.1- or 6.1-channel systems.

In addition, the bit stream format is 100% compatible with conventional DTS signals, so the effect of the Matrix 6.1 format can be achieved even with 5.1-channel signal sources. Of course it is also possible to play DTS-ES Matrix 6.1 encoded sources with a DTS 5.1-channel decoder.

When DTS-ES Discrete 6.1 or Matrix 6.1 encoded sources are decoded with a DTS-ES decoder, the format is automatically detected upon decoding and the optimum playing mode is selected. However, some Matrix 6.1 sources may be detected as having a 5.1-channel format, so the DTS-ES Matrix 6.1 mode must be set manually to play these sources. (For instructions on selecting the surround mode, see page 60.)

The DTS-ES decoder includes another function, the DTS Neo:6 surround mode for 6.1-channel playback of digital PCM and analog signal sources.

#### ■ DTS Neo:6™ surround

This mode applies conventional 2-channel signals to the high precision digital matrix decoder used for DTS-ES Matrix 6.1 to achieve 6.1-channel surround playback. High precision input signal detection and matrix processing enable full band reproduction (frequency response of 20 Hz to 20 kHz or greater) for all 6.1 channels, and separation between the different channels is improved to the same level as that of a digital discrete system.

DTS Neo:6 surround includes two modes for selecting the optimum decoding for the signal source.

##### • DTS Neo:6 Cinema

This mode is optimum for playing movies. Decoding is performed with emphasis on separation performance to achieve the same atmosphere with 2-channel sources as with 6.1-channel sources.

This mode is effective for playing sources recorded in conventional surround formats as well, because the in-phase component is assigned mainly to the center channel (C) and the reversed phase component to the surround (SL, SR and SB channels).

##### • DTS Neo:6 Music

This mode is suited mainly for playing music. The front channel (FL and FR) signals bypass the decoder and are played directly so there is no loss of sound quality, and the effect of the surround signals output from the center (C) and surround (SL, SR and SB) channels add a natural sense of expansion to the sound field.

#### (4) DTS 96/24

The sampling frequency, number of bits and number of channels used for recording of music, etc., in studios has been increasing in recent years, and there are a growing number of high quality signal sources, including 96 kHz/24 bit 5.1-channel sources.

For example, there are high picture/sound quality DVD video sources with 96 kHz/24 bit stereo PCM audio tracks.

However, because the data rate for these audio tracks is extremely high, there are limits to recording them on two channels only, and since the quality of the pictures must be restricted it is common to only include still pictures.

In addition, 96 kHz/24 bit 5.1-channel surround is possible with DVD audio sources, but DVD audio players are required to play them with this high quality.

DTS 96/24 is a multi-channel digital signal format developed by Digital Theater Systems Inc. in order to deal with this situation.

Conventional surround formats used sampling frequencies of 48 or 44.1 kHz, so 20 kHz was about the maximum playback signal frequency. With DTS 96/24, the sampling frequency is increased to 96 or 88.2 kHz to achieve a wide frequency range of over 40 kHz.

In addition, DTS 96/24 has a resolution of 24 bits, resulting in the same frequency band and dynamic range as 96 kHz/24 bit PCM.

As with conventional DTS Surround, DTS 96/24 is compatible with a maximum of 5.1 channels, so sources recorded using DTS 96/24 can be played in high sampling frequency, multiple channel audio with such normal media as DVD videos and CDs.

Thus, with DTS 96/24, the same 96 kHz/24 bit multi-channel surround sound as with DVD-Audio can be achieved while viewing DVD-Video images on a conventional DVD-Video player (\*1). Furthermore, with DTS 96/24 compatible CDs, 88.2 kHz/24 bit multi-channel surround can be achieved using normal CD/LD players (\*1).

Even with the high quality multi-channel signals, the recording time is the same as with conventional DTS surround sources.

What's more, DTS 96/24 is fully compatible with the conventional DTS surround format, so DTS 96/24 signal sources can be played with a sampling frequency of 48 kHz or 44.1 kHz on conventional DTS or DTS-ES surround decoders (\*2).

\*1: A DVD player with DTS digital output capabilities (for CD/LD players, a player with digital outputs for conventional DTS CDs/LDs) and a disc recorded in DTS 96/24 are required.

\*2: The resolution is 24 or 20 bits, depending on the decoder.

#### (5) Home THX Cinema Surround

THX is an exclusive set of standards and technologies established by the world-renowned film production company, Lucasfilm Ltd. THX grew from George Lucas' personal desire to make your experience of the film soundtrack, in both movie theaters and in your home theater, as faithful as possible to what the director intended.

Movie soundtracks are mixed in special movie theaters called dubbing stages and are designed to be played back in movie theaters with similar equipment and conditions. The soundtrack created for movie theaters is then transferred directly onto Laserdisc, VHS tape, DVD, etc., and is not changed for playback in a small home theater environment.

THX engineers developed patented technologies to accurately translate the sound from the movie theater environment into the home, correcting the tonal and spatial errors that occur. On the AVR-4802R, when the Home THX Cinema mode is on, THX processing is automatically added after the Dolby Pro Logic, Dolby Digital or DTS decoder:

##### **Re-Equalization™**

The tonal balance of a film soundtrack will be excessively bright and harsh when played back over audio equipment in the home because film soundtracks are designed to be played back in large movie theaters using very different professional equipment. Re-Equalization restores the correct tonal balance for watching a movie soundtrack in a small home environment.

##### **Timbre Matching™**

The human ear changes our perception of a sound depending on the direction from which the sound is coming. In a movie theater, there is an array of surround speakers so that the surround information is all around you. In a home theater, only two speakers located to the side of your head are used. The Timbre Matching feature filters the information going to the surround speakers so that they more closely match the tonal characteristics of the sound coming from the front speakers. This ensures seamless panning between the front and surround speakers.

##### **Adaptive Decorrelation™**

In a movie theater, a large number of surround speakers help create an enveloping surround sound experience, while in a home theater there are usually only two speakers. This can make the surround speakers sound like headphones that lack spaciousness and envelopment. The surround sounds will also collapse into the closest speaker as you move away from the middle seating position. Adaptive Decorrelation slightly changes one surround channel's time and phase relationship with respect to the other surround channel. This expands the listening position and creates—with only two speakers—the same spacious surround experience as in a movie theater.

##### **THX Ultra2™**

Before any home theater component can be THX Ultra2 certified, it must incorporate all the features above and also pass a rigorous series of quality and performance tests. Only then can a product feature the THX Ultra2 logo, which is your guarantee that the Home Theater products you purchase will give you superb performance for many years to come. THX Ultra2 requirements cover every aspect of the product including power amplifier performance, pre-amplifier performance and operation, as well as hundreds of other parameters in both the digital and analog domain.

In addition to improvements to the power amplifier with respect to previous THX Ultra standards, two surround modes have been added: the THX Ultra2 Cinema mode and the THX Music mode.

### **THX Ultra2 Cinema**

THX Ultra2 Cinema mode plays 5.1 movies using all 8 speakers giving you the best possible movie watching experience. In this mode, new THX processing blends the side surround speakers and back surround speakers providing the optimal mix of ambient and directional surround sounds.

DTS-ES (Matrix and 6.1 Discrete) and Dolby Digital Surround EX encoded soundtracks will be automatically detected in Ultra2 Cinema mode if the appropriate flag has been encoded.

Some Dolby Digital Surround EX soundtracks are missing the digital flag that allows automatic switching. If you know that the movie that you are watching is encoded in Surround EX, you can manually select the THX Surround EX playback mode, otherwise THX Ultra2 Cinema mode will apply processing to provide optimum replay.

### **THX Music Mode**

For the replay of 5.1 multi-channel music the THX Music Mode should be selected. In this mode new THX processing is applied to the surround channels of all 5.1 encoded music sources such as DTS and Dolby Digital to provide a wide stable rear soundstage.

Lucasfilm, THX, Home THX, Re-Equalization, Timbre Matching, Adaptive Decorrelation and THX Ultra are trademarks of Lucasfilm Ltd.

## **(6) THX Surround EX**

In 1999, a new surround system was launched simultaneously with the release of the movie "Star Wars Episode I". "Dolby Digital Surround EX" is a new movie sound track that greatly enhances the sense of spatial expression and the positioning of the surround channel sound. The result is 360 degrees of movement and moving sound effects that seem to pass right over the listener's head.

This system was developed jointly by Lucasfilm THX and Dolby Laboratories, fusing Lucasfilm's idea of improving spatial expression and achieving a uniform 360 degree sound positioning with Dolby Laboratories' matrix encoding technology. Emphasis was placed on compatibility with the existing system Dolby Digital 5.1-channel, and the new "surround back (SB) channel" was added to achieve improvements over the conventional 5.1-channel system in terms of the positioning of the sound at the rear, the acoustic image of sound moving from the two sides to the back as well as sound moving from the front to the center rear with the multi surround speaker systems used in movie theaters, thereby enabling various types of surround sound.

The surround back channel signal is a matrix-encoded signal inserted into both the Dolby Digital SL (surround left) and SR (surround right) channels. Upon playback, the signals are decoded by a high precision digital matrix decoder within the Dolby Digital decoder into the SL, SR and SB channels and output as 6.1 channels of signals. With the AVR-4802R, the signals further undergo Home THX Cinema processing to achieve a THX Surround EX system.

Even without the proper environment for playing the SB channel, Dolby Digital Surround EX signals are 100% compatible with existing 5.1-channel playback systems, so they can be played as such. In this case, the SB channel signal is produced as a monaural signal from both the SL and SR channels, so none of the signal components are missing. The effects specific to THX Surround EX (the sense of spatial expression and the positioning of the sound), however, are the same as with conventional 5.1-channel surround systems.

©Lucasfilm Ltd. & TM. All Rights Reserved. Surround EX is a jointly developed technology of THX and Dolby Laboratories, and is a trademark of Dolby Laboratories. Used under authorization.

## System setup items and default values (set upon shipment from the factory)

System setup				Default settings											
①	Speaker Configuration	Input the combination of speakers in your system and their corresponding sizes (Small for regular speakers, Large for full-size, full-range) to automatically set the composition of the signals output from the speakers and the frequency response.		Front Sp.		Center Sp.		Subwoofer		Surround Sp.		Surround Back Sp.			
	Surround Speaker Setting	Use this function when using multiple surround speaker combinations for more ideal surround sound. Once the combinations of surround speakers to be used for the different surround modes are preset, the surround speakers are selected automatically according to the surround mode.	Surround mode	DOLBY/DTS SURROUND	THX / THX 5.1	WIDE SCREEN	5CH/7CH STEREO	DSP SIMULATION	EXT. IN	—	—				
			Surround speaker	A	A	A	A	A	A	—	—				
	Crossover Frequency	Set the frequency (Hz) below which the bass sound of the various speakers is to be output from the subwoofer.		FIXED —THX—											
	Subwoofer mode	This selects the subwoofer speaker for playing deep bass signals. (see page 20)		LFE —THX—											
	②	Delay Time	This parameter is for optimizing the timing with which the audio signals are produced from the speakers and subwoofer according to the listening position.		Front L & R		Center	Subwoofer		Surround L & R		SBL & SBR			
				12 ft (3.6 m)		12 ft (3.6 m)	12 ft (3.6 m)		10 ft (3.0 m)		10 ft (3.0 m)				
③	Channel Level	This adjusts the volume of the signals output from the speakers and subwoofer for the different channels in order to obtain optimum effects.		Front L	Front R	Center	Surround L	Surround R	Surround Back L	Surround Back R	Subwoofer				
				0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB	0 dB				
④	THX Audio Setup	Boundary Gain compensation	When using a THX Ultra2 compatible subwoofer, set the subwoofer's frequency response.	THX Ultra2 Subwoofer = NO											
		Surround Back Speaker Position	When using two surround back speakers, set the distance of the two speakers.	The Distance Between SBL/SBR = 0 ft to 1 ft											
⑤	Subwoofer Peak Limit Lev	This parameter is for detecting the maximum level of the low bass signals output from the subwoofer channel in order to protect the subwoofer from damage and prevent unpleasant distorted sounds from being produced.		Peak Limiter = OFF											
⑥	Digital In Assignment	This assigns the digital input jacks for the different input sources.		Input source	CD	DVD	VDP	TV	DBS/SAT	VCR-1	VCR-2	VCR-3	TAPE	V. AUX	—
				Digital Inputs	COAXIAL 1	COAXIAL 2	COAXIAL 3	OPTICAL 1	OPTICAL 2	OPTICAL 3	OPTICAL 4	OFF	OPTICAL 5	OFF	—
⑦	Multi Zone Control	Power AMP Assignment	Set this to switch the surround back channel's power amplifier for use for multi-zone 2.	Surround Back											
		Multi Zone-1 vol. Level	This sets the output level for the multi-zone 1 output jacks.	Variable											
⑧	Audio Delay	Adjust the time delay of the video and audio signals. (see page 30)		Audio Delay = 0 ms											
⑨	On Screen Display	This sets whether or not to display the on-screen display that appears on the monitor screen when the controls on the remote control unit or main unit are operated (from MONITOR 1 outputs only).		On Screen Display = ON											
⑩	Auto Tuner Presets	FM stations are received automatically and stored in the memory.		A1 ~ A8	87.5/89.1/98.1/107.9/90.1/90.1/90.1 MHz										
				B1 ~B8	520/600/1000/1400/1500/1710 kHz/90.1/90.1 MHz										
				C1 ~C8	90.1 MHz										
				D1 ~D8	90.1 MHz										
				E1 ~E8	90.1 MHz										
⑪	Setup Lock	Set whether or not to lock the system setup settings so that they cannot be changed.		Setup Lock = OFF											

## Surround modes and parameters

Mode	Signals and adjustability in the different modes								
	Channel output					Parameter (default values are shown in parentheses)			
	FRONT L/R	CENTER	SURROUND L/R	SURROUND BACK L/R	SUB-WOOFER	When playing Dolby Digital and DTS signals			SB CH OUT (MODE)
PURE DIRECT, DIRECT	○	×	×	×	⊗	○ (OFF)	○ (0dB)	×	×
STEREO	○	×	×	×	⊗	○ (OFF)	○ (0dB)	×	×
EXTERNAL INPUT	○	⊗	⊗	⊗	⊗	×	×	×	×
WIDE SCREEN	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
HOME THX CINEMA	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DOLBY PRO LOGIC II	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DOLBY DIGITAL	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DTS SURROUND	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
DTS NEO:6	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	○	○
5/7CH STEREO	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
SUPER STADIUM	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
ROCK ARENA	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
JAZZ CLUB	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
CLASSIC CONCERT	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
MONO MOVIE	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○
MATRIX	○	⊗	⊗	⊗	⊗	○ (OFF)	○ (0dB)	×	○

○ : Signal / Adjustable  
 × : No signal / Not adjustable  
 ⊗ : Turned on or off by speaker configuration setting

○ : Able  
 × : Unable

Mode	Signals and adjustability in the different modes								
	Parameter (default values are shown in parentheses)								
	TONE CONTROL	CINEMA EQ.	MODE	SURROUND PARAMETER			PRO LOGIC II MUSIC MODE ONLY		
				ROOM SIZE	EFFECT LEVEL	DELAY TIME	PANORAMA	DIMENSION	CENTER WIDTH
PURE DIRECT, DIRECT	×	×	×	×	×	×	×	×	×
STEREO	○ (0dB)	×	×	×	×	×	×	×	×
EXTERNAL INPUT	○ (0dB)	×	×	×	×	×	×	×	×
WIDE SCREEN	○ (0dB)	○ (OFF)	×	×	○ (ON, 10)	×	×	×	×
HOME THX CINEMA	×	×	○ (CINEMA)	×	×	×	×	×	×
DOLBY PRO LOGIC II	○ (0dB)	○ (OFF)	○ (CINEMA)	×	×	×	○ (OFF)	○ (3)	○ (3)
DOLBY DIGITAL	○ (0dB)	○ (OFF)	×	×	×	×	×	×	×
DTS SURROUND	○ (0dB)	○ (OFF)	×	×	×	×	×	×	×
DTS NEO:6	○ (0dB)	○ (OFF)	○ (CINEMA)	×	×	×	×	×	×
5/7CH STEREO	○ (0dB)	×	×	×	×	×	×	×	×
SUPER STADIUM	○ (Note 1)	×	×	○ (Medium)	○ (10)	×	×	×	×
ROCK ARENA	○ (Note 2)	×	×	○ (Medium)	○ (10)	×	×	×	×
JAZZ CLUB	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×
CLASSIC CONCERT	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×
MONO MOVIE	○ (0dB)	×	×	○ (Medium)	○ (10)	×	×	×	×
MATRIX	○ (0dB)	×	×	×	×	○ (30msec)	×	×	×

(Note 1) BASS: +6 dB, TREBLE: 0 dB  
 (Note 2) BASS: +8 dB, TREBLE: 4 dB

○ : Adjustable  
 × : Not adjustable

## ■ Differences in surround mode names depending on the input signals

Surround Mode	Input signals						
	ANALOG	LINEAR PCM	DTS			DOLBY DIGITAL	
			DTS (5.1 ch)	DTS 96/24 (5.1 ch)	DTS (6.1 ch)	D. D. (2 ch)	D. D. (5.1 ch)
PURE DIRECT, DIRECT	○	○	○	○	○	○	○
STEREO	○	○	○	○	○	○	○
HOME THX CINEMA	THX	THX	*ES MTRX6.1 + THX THX Ultra2 Cinema THX Music Mode THX5.1	*ES MTRX6.1 + THX THX Ultra2 Cinema THX Music Mode THX5.1	© ES DSCRT6.1 + THX ES MTRX6.1 + THX	THX	*THX SURROUND EX THX Ultra2 Cinema THX Music Mode THX5.1
DTS SURROUND	×	×	*DTS ES MTRX DTS SURROUND	*DTS ES MTRX DTS 96/24	© DTS ES DSCRT6.1 DTS MTRX6.1	×	×
DTS NEO:6	DTS NEO:6	DTS NEO:6	×	×	×	DTS NEO:6	×
DOLBY DIGITAL	×	×	×	×	×	×	*DOLBY DIGITAL EX DOLBY DIGITAL
DOLBY PRO LOGIC II	DOLBY PRO LOGIC II	DOLBY PRO LOGIC II	×	×	×	DOLBY PRO LOGIC II	×
DSP SIMULATION	○	○	○	○	○	○	○

○ : Selectable

\* : The surround mode name differs depending on the "MODE/SB CH OUT" surround parameter setting.

© : The surround mode name differs depending on the input signal.

× : Not selectable



## 17 SPECIFICATIONS

### ■ Audio section

#### • Power amplifier

**Rated output:**

Front:	125 W + 125 W	(8 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
	150 W + 150 W	(6 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
Center:	125 W + 125 W	(8 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
	150 W + 150 W	(6 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
Surround:	125 W + 125 W	(8 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
	150 W + 150 W	(6 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
Surround Back	125 W + 125 W	(8 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)
/Multi:	150 W + 150 W	(6 $\Omega$ /ohms, 20 Hz ~ 20 kHz with 0.05% T.H.D.)

**Dynamic power:**

170 W x 2 ch	(8 $\Omega$ /ohms)
270 W x 2 ch	(4 $\Omega$ /ohms)
350 W x 2 ch	(2 $\Omega$ /ohms)

**Output terminals:**

Front/Center/Surround Back:	6 ~ 16 $\Omega$ /ohms
Surround:	A or B 6 ~ 16 $\Omega$ /ohms
	A + B 8 ~ 16 $\Omega$ /ohms

#### • Analog

**Input sensitivity / input impedance:**

200 mV / 47 k $\Omega$ /kohms

**Frequency response:**

10 Hz ~ 100 kHz: +0, -3 dB (DIRECT mode)

**S/N:**

105 dB (DIRECT mode)

**Distortion:**

0.005% (20 Hz ~ 20 kHz) (DIRECT mode)

**Rated output:**

1.2 V

#### • Digital

**D/A output:**

Rated output — 2 V (at 0 dB playback)

Total harmonic distortion — 0.005% (1 kHz, at 0 dB)

S/N ratio — 110 dB

Dynamic range — 108 dB

Format — Digital audio interface

**Digital input:**

#### • Phono equalizer (PHONO input — REC OUT)

**Input sensitivity:**

2.5 mV

**RIAA deviation:**

$\pm 1$  dB (20 Hz to 20 kHz)

**Signal-to-noise ratio:**

74 dB (A weighting, with 5 mV input)

**Rated output / Maximum output:**

150 mV / 8 V

**Distortion factor:**

0.03% (1 kHz, 3 V)

### ■ Video section

#### • Standard video jacks

**Input / output level and impedance:**

1 Vp-p, 75  $\Omega$ /ohms

**Frequency response:**

5 Hz ~ 10 MHz — +0, -3 dB

#### • S-video jacks

**Input / output level and impedance:**

Y signal — 1 Vp-p, 75  $\Omega$ /ohms

C signal — 0.286 Vp-p, 75  $\Omega$ /ohms

**Frequency response:**

5 Hz ~ 10 MHz — +0, -3 dB

#### • Color component video terminal

**Input / output level and impedance:**

Y signal — 1 Vp-p, 75  $\Omega$ /ohms

PB/Cb signal — 0.7 Vp-p, 75  $\Omega$ /ohms

PR/Cr signal — 0.7 Vp-p, 75  $\Omega$ /ohms

DC ~ 50 MHz — +0, -3 dB

**Frequency response:**

### ■ Tuner section

**Receiving Range:**

**[FM]** (note:  $\mu$ V at 75  $\Omega$ /ohms, 0 dBf =  $1 \times 10^{-15}$  W)

87.5 MHz ~ 107.9 MHz

**[AM]**

520 kHz ~ 1710 kHz

**Usable Sensitivity:**

1.0  $\mu$ V (11.2 dBf)

18  $\mu$ V

**50 dB Quieting Sensitivity:**

MONO 1.6  $\mu$ V (15.3 dBf)

STEREO 23  $\mu$ V (38.5 dBf)

**Signal to Noise Ratio (IHF-A):**

MONO 79 dB

50 dB

STEREO 74 dB

MONO 0.15%

STEREO 0.3%

**Total Harmonic Distortion (at 1 kHz):**

### ■ General

**Power supply:**

AC 120 V, 60 Hz

**Power consumption:**

10.5 A

**Maximum external dimensions:**

434 (W) x 179 (H) x 485 (D) mm (17-3/32" x 7-3/64" x 19-3/32")

**Mass:**

20.5 kg (45 lbs 3.1 oz)

### ■ Remote control unit (RC-932)

**Batteries:**

R6P/AA Type (three batteries)

**External dimensions:**

58 (W) x 230 (H) x 37 (D) mm (2-9/32" x 9-1/16" x 1-29/64")

**Mass:**

230 g (Approx. 8 oz) (including batteries)

\* For purposes of improvement, specifications and design are subject to change without notice.

## **DENON,Ltd.**

16-11, YUSHIMA 3-CHOME, BUNKYOU-KU, TOKYO 113-0034, JAPAN  
Telephone: (03) 3837-5321